

DL Printer Installation Procedure Win3.x/95/98/98SE/ME/NT/2000/XP

Step A: Installing the DL Menu setup utility.

1. Connect the printer to the serial or parallel port of the PC.
2. Next power up the printer and then boot your PC.
3. Insert the DL Menu disk or create a new folder and copy it to your 'C' drive.
4. Open the disk or folder and locate 'Dlmenu.exe' and double click.
5. The DL menu program will open a DOS window with menu selections on the bottom. Use either the function buttons and/or your arrow keys to select an item.
6. If this is a new install then press the F9 key and then select 'Initial Installation' to select your printer model. **If this is a re-install then go to step B.**
7. After that select the printer port that you will be using on the next screen. If you will be using the serial (com) port instead of the parallel port then both the PC's and printer's baud rates/transfer protocols must be exactly the same.
8. After the system saves your configuration information arrow down to 'Run DL Menu' and press 'Enter.'
9. Select Menu 1 and press 'Enter.' Change the printer emulation and other settings here. To change the emulation mode only you can press the F4 function key. Menu 1 is the main configuration setup. After you select Menu 1, all items will be listed in the setup window. Make your changes using the arrow keys. Menu 2 is a separate configuration menu. Menu 2 can be configured different from Menu 1 for example if you occasionally print with letterhead your font or lines per inch may be different then normal reports being printed with Menu 1. When you change from standard paper to letterhead forms you can select Menu 2 thus eliminating the need to change the printer's configuration constantly.
10. Next press F9 Update Printer to send the new settings to the printer.
11. Press 'ESC' then right arrow over to 'Save' and press 'Enter.' When prompted enter a file name and description to save your new configuration to disk for later recall.
12. To exit select 'Exit' and press enter.

Step B: Re-installing or changing the printer setup.

1. To see/print the printer's current configuration press the right arrow until 'List' is highlighted and press Enter. This feature will print the printer's current configuration.
2. To change the emulation Press the F4 Emulation function key. The emulation window will come up on the screen. Then select the emulation mode you wish to use.
3. Next press F9 Update Printer to send the new settings to the printer.
4. Press 'ESC' then right arrow over to 'Save' and press 'Enter.' When prompted enter a file name and description to save your new configuration to disk for recall later.
5. To exit select 'Exit' and press enter.

Step C: Adding the printer in Windows.

1. Select Start, Settings, Printers.
2. Double click on add printer (you may need your Windows printers CD).
3. If you do not see the Fujitsu model printer under the Fujitsu manufacture, the best thing to do is to select one of the printer's emulation modes. This allows the printer to act as a different manufacturer's model (see users manual for emulations supported by your Fujitsu printer).
4. Follow the prompts to continue the printer installation process.
5. Then at the end run the print test to make sure you have connectivity between the printer and PC.

Congratulations! You have successfully installed your DL printer.