

TOUCH PANEL ACCESSORIES

Accessory for Resistive Touch Panels Controller Boards

■ FEATURES

- Small footprint PCB
- Supports all major OS types with Fujitsu Driver software
- A complete solution for quick prototype to production use or as a design tool to speed up application and compatibility testing

■ MAIN APPLICATIONS

- For use with any of the Fujitsu Resistive Touch Panels
- Point of Sale devices, Kiosks
- Access terminals
- Monitoring Systems and Data input terminals

■ CONSTRUCTION

- SMT PCB


■ PART NUMBERS

Part Number	Type	Interface
N16B-0558-B230	4-Wire	RS-232C
N16B-0558-B240	7-Wire	RS-232C
N16B-0558-B301	4-Wire	PS/2*
N16B-0558-B501	7-Wire	PS/2*
N16B-0558-B710	4-Wire	USB 1.1
N16B-0558-B720	7-Wire	USB 1.1

*Note: special order only

■ MORE INFO

- Click on partnumbers above

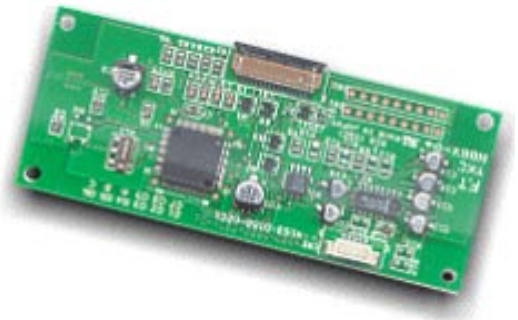

Fujitsu Components International Headquarter Offices

Japan

Fujitsu Component Limited
Gotanda-Chuo Building
3-5, Higashigotanda 2-chome, Shinagawa-ku
Tokyo 141, Japan
Tel: (81-3) 5449-7010
Fax: (81-3) 5449-2626
Email: promothq@ft.ed.fujitsu.com
Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc.
250 E. Caribbean Drive
Sunnyvale, CA 94089 U.S.A.
Tel: (1-408) 745-4900
Fax: (1-408) 745-4970
Email: marcom@fcai.fujitsu.com
Web: www.fcai.fujitsu.com

Europe

Fujitsu Components Europe B.V.
Diamantlaan 25
2132 WV Hoofddorp
Netherlands
Tel: (31-23) 5560910
Fax: (31-23) 5560950
Email: info@fceu.fujitsu.com
Web: www.fceu.fujitsu.com

Asia Pacific

Fujitsu Components Asia Ltd.
102E Pasir Panjang Road
#04-01 Citilink Warehouse Complex
Singapore 118529
Tel: (65) 375-8560
Fax: (65) 273-3021
Email: fcal@fcal.fujitsu.com
www.fcal.fujitsu.com