

## Notes on using the PRIMERGY BX600 S3/BX620 S4

Thank you for purchasing the PRIMERGY BX600 S3 / BX620 S4 from us. Before you start using your server, please carefully read the additional notes described below.

June 2007  
Fujitsu Limited

### 1. Updating of Management Blade firmware

When you install PRIMERGY BX620 S4 server blade into PRIMERGY BX600 S2 Chassis, you may need to update firmware of management blade on it. Referring to Fujitsu PRIMERGY homepage as following, you need to confirm correct revision of firmware and may need to download and update the firmware.

<http://www.fujitsu.com/global/services/computing/server/ia/>

Note) BX620 S4 server blade may not work correctly with older revision of management blade firmware.

### 2. Delayed release of FC Pass-Thru Blade

The FC Pass-Thru Blade (PG-FCB103) mentioned in the manuals of this product is not available at this time. Its release date is yet to be announced.

### 3. Cautions for Using ServerStart

To configure 1Gbit/s Ethernet I/O Module (PG-LND201), Connection Name and IP address aren't set in the [Network Protocol] window in OS Installation Wizard.

(The settings in the [Network Protocol] window are not reflected.)

After OS installation, please set the Connection Name and IP address.

### 4. Correction of miss description on "BX600 S3 Blade Server System Unit Hardware Guide" B7FH-4931-01EN-00

"PRIMERGY BX600 S3 Chassis Hardware Guide" which is included in the document & tool CD contains miss description as following.

Page 11 at "1.1 Server (Front View)" contains miss description.

Wrong : 11. Fibre Channel active link display

Correct : 11. Expansion card active link display