

Notes on using PRIMERGY BX620 S4 Server Blade

Thank you for purchasing our product. Before you start using your server, please carefully read the additional notes described below.

February 2008
FUJITSU LIMITED

1. Updating of Management Blade firmware

When you install PRIMERGY BX620 S4 server blade into PRIMERGY BX600 S2 Blade Server System Unit, you may need to update firmware of management blade on it. Referring to Fujitsu PRIMERGY site at the following URL, confirm the appropriate revision of firmware, and if necessary, download and update the firmware.

<http://www.fujitsu.com/global/services/computing/server/ia/>

Note) BX620 S4 server blade may not work correctly with older revision of management blade firmware.