

Note on using PRIMERGY BX600 FC Pass-Thru Blade (4Gbps)

Thank you for purchasing our product. Before you start using it, please read carefully the additional notes described below.

February 2008
FUJITSU LIMITED

1. Updating of Management Blade firmware

When you install PRIMERGY BX620 S4 server blade into PRIMERGY BX600 S3 Blade Server System Unit, you may need to update firmware of management blade on it. Referring to Fujitsu PRIMERGY site at the following URL, confirm the appropriate revision of firmware, and if necessary, download and update the firmware.

<http://www.fujitsu.com/global/services/computing/server/ia/>

Note) BX620 S4 server blade may not work correctly with older revision of management blade firmware.

2. Product Manual

For the handling of this product, refer to the manual attached to the PRIMERGY BX600 S3 Blade Server System Unit.

The latest information about the manual is available at:

<http://www.fujitsu.com/global/services/computing/server/ia/>