

## Note on using PRIMERGY TX120

Thank you for purchasing our product. The attached manual has included some errors. Please accept our apologies for any inconvenience this may cause. Before you start using your server, please read carefully the additional notes described below.

May 2008  
FUJITSU LIMITED

### 1. Update for PRIMERGY TX120 User's Guide : B7FH-5471-01EN

#### **Correction** A Server Specifications (P.200)

(Incorrect)

table: Server specifications

Item		Functions and specifications		
Product name		PRIMERGY TX120		
Product ID		PGUT1212A	PGUT1213A	
Chipset		Intel® 3000		
CPU	Standard	Intel® Xeon® 3040 Processor 1.86GHz / 2MB / Dual Core	Intel® Celeron® 430 Processor 1.80GHz / 512KB	
	Conversion kit	Intel® Xeon® 3070 Processor 2.66GHz / 4MB / Dual Core	Intel® Xeon® 3040 Processor 1.86GHz / 2MB / Dual Core	Intel® Xeon® 3070 Processor 2.66GHz / 4MB / Dual Core
	FSB	800MHz / 1066MHz		
	Number of multiplication	None		

(Correct)

table: Server specifications

Item		Functions and specifications		
Product name		PRIMERGY TX120		
Product ID		PGUT1213A		
Chipset		Intel® 3000		
CPU	Standard	Intel® Celeron® 430 Processor 1.80GHz / 512KB		
	Conversion kit	Intel® Xeon® 3040 Processor 1.86GHz / 2MB / Dual Core	Intel® Xeon® 3070 Processor 2.66GHz / 4MB / Dual Core	
	FSB	800MHz / 1066MHz		
	Number of multiplication	None		