



SPARC[®] Enterprise M4000/M5000 Servers Getting Started Guide

Accessing the Documentation Files

The documentation set for SPARC[®] Enterprise M4000/M5000 servers is available on the following websites.

Global Site

<http://www.fujitsu.com/sparcenterprise/manual/>

North American Site

<https://download.computers.us.fujitsu.com/>

Japanese Site

<http://primeserver.fujitsu.com/sparcenterprise/manual/>

Note – For late-breaking information about the SPARC Enterprise M4000/M5000 servers hardware, software, or documentation, refer to the *SPARC Enterprise M4000/M5000 Servers Product Notes* at:

<http://www.fujitsu.com/sparcenterprise/manual/notes/>

Adobe Reader can be downloaded from the following website for free:

<http://www.adobe.com/products/acrobat/readstep2.html>

SPARC Enterprise M4000/M5000 Servers Documentation



System Planning and Site Preparation

- SPARC Enterprise M4000/M5000 Servers Overview Guide
- SPARC Enterprise M4000/M5000 Servers Site Planning Guide
- SPARC Enterprise Equipment Rack Mounting Guide



System Installation

- SPARC Enterprise M4000/M5000 Servers Getting Started Guide
 - SPARC Enterprise M4000/M5000 Servers Installation Guide
- The above manuals are packaged with the server as printed material.
- SPARC Enterprise M4000/M5000 Servers Safety and Compliance Guide
 - SPARC Enterprise M4000/M5000/M8000/M9000 Servers Administration Guide
 - SPARC Enterprise M4000/M5000/M8000/M9000 Servers XSCF User's Guide



Administration

- SPARC Enterprise M4000/M5000/M8000/M9000 Servers XSCF Control Package (XCP) Release Notes
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers Administration Guide
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers XSCF User's Guide
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers XSCF Reference Manual
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers Dynamic Reconfiguration (DR) User's Guide



Repair and Troubleshooting

- SPARC Enterprise M4000/M5000 Servers Service Manual
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers Administration Guide



Globalization

- For SPARC Enterprise M4000/M5000 servers, the documents of English, French, Japanese, Korean, Simplified Chinese, and Traditional Chinese versions will be offered on the website:
<http://www.fujitsu.com/sparcenterprise/manual/>

Installation Task Map for SPARC Enterprise M4000/M5000 Servers



-
- Step 1** • Verify power, air conditioning, and floor area requirements. — Refer to the *SPARC Enterprise M4000/M5000 Servers Site Planning Guide* and.
-
- Step 2** • Set up the equipment rack. — Refer to the *SPARC Enterprise Equipment Rack Mounting Guide*.
-
- Step 3** • If your server was preinstalled in an equipment rack, proceed to Step 5 to connect your console to a server.
• If your server needs to be rackmounted in an equipment rack, proceed to Step 4.
-
- Step 4** • Mount the server in the equipment rack. — Refer to the *SPARC Enterprise Equipment Rack Mounting Guide*.
-
- Step 5** • Connect the console to a server. — Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 6** • Connect the power cables— Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 7** • Power on the power source (equipment rack). — Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 8** • Prepare information for hardware configuration. - Refer to the *SPARC Enterprise M4000/M5000/M8000/M9000 Servers XSCF User's Guide*.
-
- Step 9** • Power on the servers. Check that POST runs successfully on the eXtended system control facility unit (XSCFU) and confirm there are no errors.— Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 10** • Set up the XSCFU for network access. —Refer to the *SPARC Enterprise M4000/M5000/M8000/M9000 Servers Administration Guide*
-
- Step 11** • If additional hardware or peripheral devices are to be installed into your server, proceed to Step 12.
• If additional hardware or peripheral devices are not to be installed into the server, proceed to Step 16.
-
- Step 12** • Turn off the power source (equipment rack). —Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 13** • Install additional hardware or peripheral devices. Refer to the documentation that came with the hardware or peripheral devices for details.
-
- Step 14** • Turn on the power source (equipment rack). — Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 15** • Allow each domain to run through POST and confirm there are no errors.
-
- Step 16** • Check the network settings and connections. —Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 17** • Confirm operation by using SunVTS. — Refer to the *SPARC Enterprise M4000/M5000 Servers Installation Guide*.
-
- Step 18** • Make the initial settings for each domain. —Refer to the *SPARC Enterprise M4000/M5000/M8000/M9000 Servers Administration Guide*.
Notes:
We recommend you to install Enhanced System Facility (ESF) and apply PTF for safe operation of the system. See the following website for details.
<http://www.fujitsu.com/sparcenterprise/manual/>
-

Accessing Important Information for SPARC Enterprise Series Servers

Before you deploy your server, check for the Product Notes for your server and other important information on the following websites.

Global Site

<http://www.fujitsu.com/sparcenterprise/manual/notes/>

North American Site

<https://download.computers.us.fujitsu.com/>

Japanese Site

<http://primeserver.fujitsu.com/sparcenterprise/manual/notes/>

Accessing Documentation

The following websites provide the latest versions of SPARC Enterprise Series manuals:

Global Site

<http://www.fujitsu.com/sparcenterprise/manual/>

North American Site

<https://download.computers.us.fujitsu.com/>

Japanese Site

<http://primeserver.fujitsu.com/sparcenterprise/manual/>

Reader's Comments Regarding This Manual

If you have any comments or requests regarding this manual, or if you find any unclear statements in the manual, please state your points specifically, and forward it to the system engineer (SE) in charge, or your sales representative.

Copyright 2007 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

FUJITSU LIMITED provided technical input and review on portions of this material. This distribution may include materials developed by third parties. Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu Limited.

Sun, Sun Microsystems, the Sun logo, Java, Netra, Solaris, Sun Ray, Answerbook2, docs.sun.com, OpenBoot, SunVTS, and Sun Fire are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon architecture developed by Sun Microsystems, Inc. SPARC64 is a trademark of SPARC International, Inc., used under license by Fujitsu Microelectronics, Inc. and Fujitsu Limited. The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

FUJITSU LIMITED

Manual Code C120-E345-03EN
Part No. 819-7913-10
April 2007, Revision A