

Linux Drivers & Downloads

1. Driver Update

Please check the "Linux OS / Kernel Version Compatibility List" to confirm if your PRIMERGY model is applical to the driver before downloading it.

*Driver kits include installation/update procedure.

Red Hat Enterprise Linux 5 (for x86)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.1	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.2	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.3	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.4	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.5	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.6	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.7	-
Red Hat Enterprise Linux 5 (for x86)	Update	RHEL5.8	-

Red Hat Enterprise Linux 5 (for Intel64)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.2	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.3	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.4	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.5	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.6	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.7	-
Red Hat Enterprise Linux 5 (for Intel64)	Update	RHEL5.8	-

Red Hat Enterprise Linux AS / ES (v.4 for x86)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Update	RHEL4.5	-
Red Hat Enterprise Linux AS (v.4 for X86)	Update	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for X86)	Update	RHEL4.7	-
Red Hat Enterprise Linux AS (v.4 for X86)	Update	RHEL4.8	-
Red Hat Enterprise Linux AS (v.4 for X86)	Update	RHEL4.9	-
Red Hat Enterprise Linux ES (v.4 for x86)	Update	RHEL4.5	-
Red Hat Enterprise Linux ES (v.4 for x86)	Update	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for x86)	Update	RHEL4.7	-
Red Hat Enterprise Linux ES (v.4 for x86)	Update	RHEL4.8	-
Red Hat Enterprise Linux ES (v.4 for x86)	Update	RHEL4.9	-

Red Hat Enterprise Linux AS / ES (v.4 for EM64T)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for EM64T)	Update	Update 4	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Update	RHEL4.5	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Update	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Update	RHEL4.7	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Update	RHEL4.8	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Update	RHEL4.9	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Update	Update 4	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Update	RHEL4.5	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Update	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Update	RHEL4.7	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Update	RHEL4.8	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Update	RHEL4.9	-

Red Hat Enterprise Linux AS / ES (v.3 for x86)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Update	Update 8	-
Red Hat Enterprise Linux AS (v.3 for x86)	Update	RHEL3.9	-
Red Hat Enterprise Linux ES (v.3 for x86)	Update	Update 8	-
Red Hat Enterprise Linux ES (v.3 for x86)	Update	RHEL3.9	-

2. Driver Installation

BX620 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 3	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 3	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 1	Notes

BX620 S3

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

BX620 S4 (PGUX6243A)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 4	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 4	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 4	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 4	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

BX620 S4 (PGUX624CA, PGUX624CA2, PGUX624EA)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-

ECONEL100 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-

RX100 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 3	-

RX100 S3

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 1	Notes

RX100 S4

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 4	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 4	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

RX100 S5

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-

RX200 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 1	Notes

RX200 S3

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

RX200 S4

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-

RX300 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 1	Notes

RX300 S3

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

RX300 S4

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-

RX600 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 1	Notes

RX600 S3

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 3	-

RX600 S3 (SAS model)

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 4	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 4	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

RX600 S4

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for X86)	Install	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for X86)	Install	RHEL4.7	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	RHEL4.7	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.2	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.2	-

TX120

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 4	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 4	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

TX150 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 2	-

TX150 S4

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 1	Notes

TX150 S5

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

TX150 S6

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-

TX200 S2

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 5	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 1	Notes
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 1	Notes

TX200 S3

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux ES (v.3 for x86)	Install	Update 7	-
Red Hat Enterprise Linux AS (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	Update 3	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	Update 3	-
Red Hat Enterprise Linux 5 (for x86)	Install	General Availability	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	General Availability	-

TX300 S4

Distribution	Install / Update	Driver kit	Notes
Red Hat Enterprise Linux AS (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for x86)	Install	RHEL4.6	-
Red Hat Enterprise Linux AS (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux ES (v.4 for EM64T)	Install	RHEL4.6	-
Red Hat Enterprise Linux 5 (for x86)	Install	RHEL5.1	-
Red Hat Enterprise Linux 5 (for Intel64)	Install	RHEL5.1	-