


Cleaning Instructions for ScanSnap S510


BEFORE CLEANING

Open the ADF while pulling the cover open lever

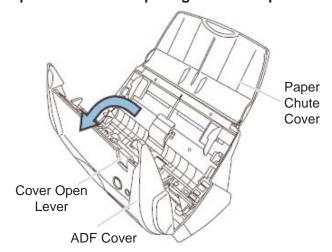

It is recommended that these items be cleaned EVERY 1,000 SCANS

Parts	Part Number
Consumables	
Pad	PA03360-0002
Pick Roller	PA03360-0001
Cleaning Kit	SC-CLE-KIT1

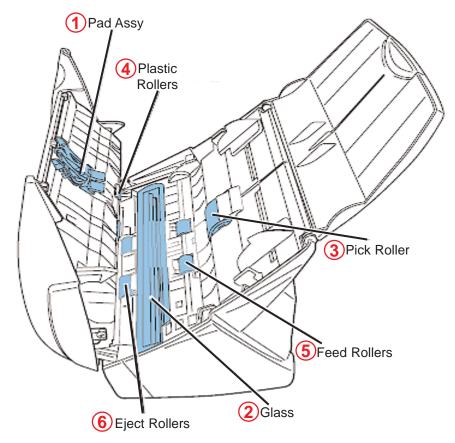

Turn the Scanner OFF while cleaning the following locations

Using cleaning paper moistened with F1 Cleaner

1 Pad Assy

Wipe downwards. When cleaning take care to prevent the cloth from catching on the metal parts.


② ADF Glass Surfaces x 2

Located on the ADF cover and opposite side. Clean lightly.

3 Pick Roller

Clean lightly taking care not to scratch the surface.

4 Plastic Rollers x 4

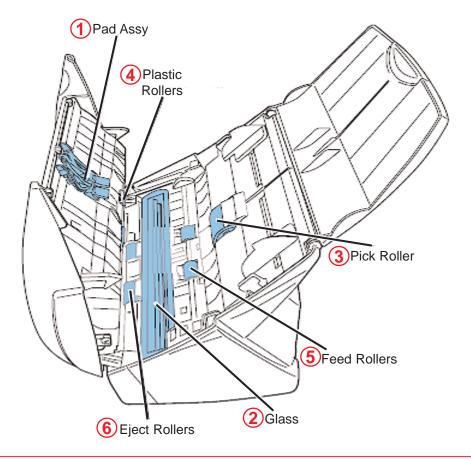

Turn the Scanner ON while cleaning the following locations

Using cleaning paper moistened with F1 Cleaner

To rotate the Feed and Eject Rollers, press the POWER button while holding down the SCAN button.

As a guideline, six presses of the POWER button make the rollers rotate one full turn.



While holding down the SCAN button (1)

Press the POWER button 2

Rollers will rotate

(5) Feed Rollers x 2

Clean lightly taking care not to roughen the surface.

6 Eject Rollers x 2

Clean lightly taking care not to roughen the surface.

For further information please refer to the ScanSnap S510 Image Scanner Operators Guide which can be found on our Website:

www.fel.fujitsu.com/scanner