



ActiveSync via IR Port

1. Install **ActiveSync 3.5** application from your Fujitsu Pocket LOOX Companion CD
2. Align the Infrared ports found on your Pocket LOOX and notebook, at the same time ensuring that the distance does not exceed 20cm
3. Execute **ActiveSync** on your desktop. Select File and click **Connection settings**, check box “**Allow Serial cable or Infrared connection to this COM port**” and select **Infrared Port (IR)** as shown below

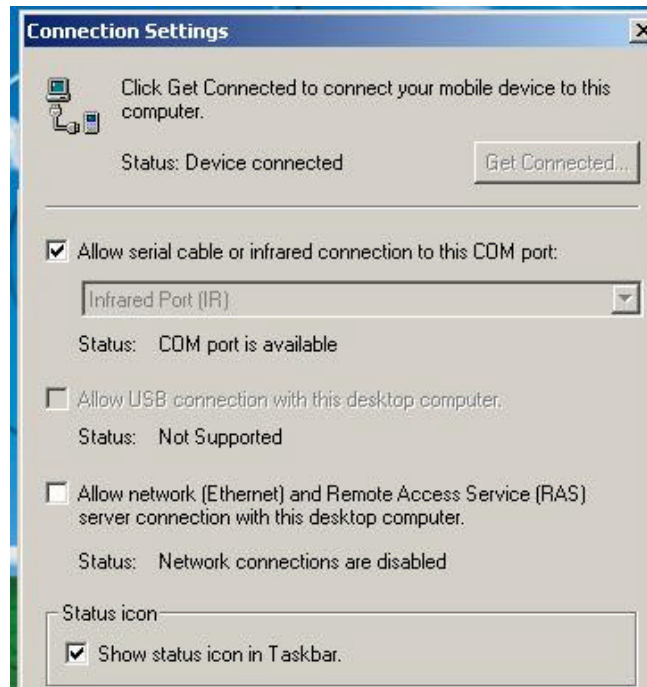

4. On your Pocket LOOX go to **Start @ ActiveSync**, click on **Tools** and then on **Connect via IR**

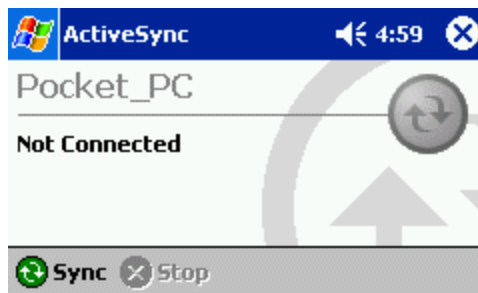

5. “**Connect to Infrared** appear and connection



Port” status will be established

ActiveSync via IR Port

