

24V DRIVE INTERFACE BOARD

FTP-621DCL003/013

FOR FTP-621/631/641MCL201/202/351/35

■ INTERFACE

1. Centronics standard

(1) Connector (CN10)

Connector part number : FCN-605Q030-G/M (Fujitsu Components) or equivalent

Mating connector part number : FCN-607B030-G/B (Fujitsu Components) or equivalent

(2) Connector pin assignment


No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	$\overline{\text{PRSTB}}$	I	Data strobe	2	$\overline{\text{PRSTB-RET}}$	—	Connected to logic GND
3	PRDT0	I	Data 0	4	PRDT0-RET	—	Connected to logic GND
5	PRDT1	I	Data 1	6	PRDT1-RET	—	Connected to logic GND
7	PRDT2	I	Data 2	8	PRDT2-RET	—	Connected to logic GND
9	PRDT3	I	Data 3	10	PRDT3-RET	—	Connected to logic GND
11	PRDT4	I	Data 4	12	PRDT4-RET	—	Connected to logic GND
13	PRDT5	I	Data 5	14	PRDT5-RET	—	Connected to logic GND
15	PRDT6	I	Data 6	16	PRDT6-RET	—	Connected to logic GND
17	PRDT7	I	Data 7	18	PRDT7-RET	—	Connected to logic GND
19	$\overline{\text{ACKNLG}}$	O	Data input acknowledge	20	$\overline{\text{ACKNLG-RET}}$	—	Connected to logic GND
21	BUSY	O	Busy	22	BUSY-RET	—	Connected to logic GND
23	RINF2	O	Printer status	24	$\overline{\text{INPRM-RET}}$	—	Connected to logic GND
25	$\overline{\text{SLCTIN}}$	I	Printer select	26	$\overline{\text{INPRM}}$	I	Reset
27	RINF1	O	Printer status	28	RINF3	O	Printer status
29	$\overline{\text{ATF}}$	I	Paper feed request	30	GND	—	Logic GND

Notes:


- Symbol “—” means a negative logic signal.
- “-RET” signal is a return signal of the twisted pair cable.
- “I” or “O” means a signal direction from the interface board side.

(3) Connector pin number

FCN-605Q030-G/M (Fujitsu Components) or equivalent

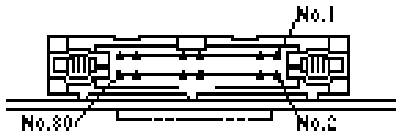

(4) Data input signal timing

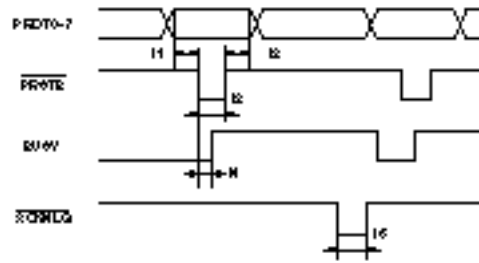

Data set time : 1150.0µsec
 PR0TE pulse : 1250.0µsec
 Data hold time : 1250.0µsec
 PR0TE to BU0V with t3 : 1150.0µsec
 SC0NLDG pulse : 1250.0µsec

DISCONTINUED

■ CONNECTOR PIN ASSIGNMENT

1. Connector for logic power supply (CN1)

Part number : B4B-XH-A-WHITE (J.S.T) or equivalent → P.C.B side

Mating connector part number : XHP-4 (J.S.T) or equivalent → Cable side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	V _{CC}	—	Power supply for logic (+5V)	2	GND	—	Logic ground
3	GND	—	Logic ground	4	V _{DD}	—	Power supply for head/motor (+24V)

2. Connector for thermal head and motor power supply (CN2)

Part number : B8B-XH-A-WHITE (J.S.T) or equivalent → P.C.B side

Mating connector part number : XHP-8 (J.S.T) or equivalent → Cable side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	V _{DD}	—	Power supply for head/motor (+24V)	2	V _{DD}	—	Power supply for head/motor (+24V)
3	V _{DD}	—	Power supply for head/motor (+24V)	4	V _{DD}	—	Power supply for head/motor (+24V)
5	GND	—	Head/motor ground	6	GND	—	Head/motor ground
7	GND	—	Head/motor ground	8	GND	—	Head/motor ground

3. Connector for thermal head drive (CN12, CN13)

Part number : B9B-XH-A (J.S.T) or equivalent → P.C.B side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	TMP	I	Temperature detection	2	V _{REF}	O	Temperature detection
3	$\overline{\text{ENB0}}$	O	Printing enable 0	4	$\overline{\text{ENB1}}$	O	Printing enable 1
5	$\overline{\text{ENB2}}$	O	Printing enable 2	6	$\overline{\text{ENB3}}$	O	Printing enable 3
7	HCLK	O	Power for head (+24V)	8	$\overline{\text{LAT}}$	O	Printing data latch
9	HD	O	Printing data output				

Part number : B10B-XH-A (J.S.T) or equivalent → P.C.B side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	V _{DD}	I	Power for head (+24V)	2	V _{DD}	O	Power for head (+24V)
3	V _{DD}	O	Power for head (+24V)	4	V _{DD}	O	Power for head (+24V)
5	GND	O	Head ground	6	GND	O	Head ground
7	GND	O	Head ground	8	GND	O	Head ground
9	GND	O	Head ground	10	V _{CC}	—	Power for logic (+5V)

Notes:

- Symbol “—” means a negative logic signal.
- “I” or “O” means a signal direction from the interface board side.

4. Connector for head-up/paper-out detection (CN4)

Part number : B5B-XH-A-WHITE (J.S.T) or equivalent → P.C.B side

Mating connector part number : XHP-5 (J.S.T) or equivalent → Cable side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	V _{CC}	—	Power supply for logic (+5V)	2	$\overline{\text{PES}}$	I	Paper-out detection
3	GND	—	Logic ground	4	V _{CC}	—	Power supply for logic (+5V)
5	HUP	I	Head-up detection				

5. Connector for paper near end detection (CN3)

Part number : B2B-XH-A-WHITE (J.S.T) or equivalent → P.C.B side

Mating connector part number : XHP-2 (J.S.T) or equivalent → Cable side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	Vcc	—	Power supply for logic (+5V)	2	NES	I	Paper near end detection

Note: The paper near end sensor to be set at the host system side.

6. Connector for stepping motor drive (CN5)

Part number : B6B-XH-A-WHITE (J.S.T) or equivalent → P.C.B side

Mating connector part number : XHP-6 (J.S.T) or equivalent → Cable side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	N.C.	—	Not connected	2	N.C.	—	Not connected
3	MT/A	O	Stepping motor coil excitation	4	MT/ \bar{A}	O	Stepping motor coil excitation
5	MT/B	O	Stepping motor coil excitation	6	MT/ \bar{B}	O	Stepping motor coil excitation

7. Connector for abnormal head temperature detection (CN7)

Part number : B3B-XH-A-WHITE (J.S.T) or equivalent → P.C.B side

Mating connector part number : XHP-3 (J.S.T) or equivalent → Cable side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	TMPER	O	Abnormal head temperature detection	2	N.C.	—	Not connected
3	GND	—	Logic ground				

Note: This signal detects the abnormal head temperature at hardware.

8. Connector for cutter drive (CN6)*1

Part number: B4B-EH (J.S.T) or equivalent → P.C.B side

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	SW1	I	Cutter position detection	2	GND	—	Logic ground
3	M+	O	Motor drive (+)	4	M-	O	Motor drive (-)

*1 Only for FTP-621DCL013

■ PRINTING COMMANDS (CENTRONICS STANDARD INTERFACE)

Name	Command	Contents
Line feed	LF	Prints buffer data and returns the line to left end of next line.
Form feed	FF	Prints buffer data and returns the line to left end of next form.
Carriage return	CR	Prints buffer data and returns the line to left end of next line.
Double width print set	SO	Sets the double width character.
Double width print reset	SI	Resets the double width character.
Black-white negative print set	RS	Sets the black-white negative printing.
Black-white negative print reset	US	Resets the black-white negative printing.
ESC sequence set	ESC	Indicates the start of an escape sequence formed by this code plus subsequent commands.
Double width print set	ESC SO	Sets the double width character.
Double width print reset	ESC SI	Resets the double width character.
Page length set in character line	ESC C + n	Sets the page length by character line.
Reverse print set	ESC R	Sets reverse printing.
Reverse print reset	ESC S	Resets reverse printing.
Bit image print set*	ESC V +n ₁ +n ₂ +d ₁ ~d _N	Sets the bit image printing.
Double width print set and reset	ESC W + n	Sets and resets the double width character.
Printing speed set	ESC s + n	Sets the printing speed.
Line feed length set in n/203 in.	ESC 3 + n	Sets the line feed length in n/203 in.
Character set 2 select	ESC 6	Selects the character set 2.
Character set 1 select	ESC 7	Selects the character set 1.
Download character register	ESC &+s+n+m+a+d ₁ ~d _N	Registers the download characters.
Registered download character select	ESC %+n+m	Selects the registered download characters.
Character set copy	ESC :+0+n+m	Copies the character set.
Bit image print set in high speed*	ESC *Å+a+n ₁ +n ₂ +d ₁ ~d _N	Sets the bit image printing in high speed.
International character set	ESC ^+n	Selects the international characters.
Printer reset	ESC @	Initializes the printer.
Line feed length set after mark detection	ESC w+n	Sets the line feed length after mark detection.
Mark detection	ESC FF	Feeds the paper to the marking position.

(Continued)

(Continued)

Name	Command	Contents
Paper feed set in normal direction	ESC J+n	Sets the paper feed in normal direction. (Feeding range: 1 to 255 dot lines)
Paper feed set in reverse direction	ESC j+n	Sets the paper feed in reverse direction. (Feeding range: 1 to 255 dot lines)
Left-end print position set	ESC l+n	Sets the left end of printing position.
Right-end print position set	ESC Q+n	Sets the left end of printing position.
FS sequence set	FS	Indicates the start of an FS sequence formed by this code plus subsequent commands.
4 times enlarged character set and reset	FS W + n	Sets and resets the 4 times enlarged characters.
Double height print set and reset	FS ! +n	Sets and resets the double height character.
Detecting function set	FS 9+n	Sets the detecting functions.
TOF mark detection	FS FF	Feeds the paper to the TOF mark position.
Printing quality set	FS x+n	Sets the printing quality conforming to selected paper.
Cutting* ¹	ESC c+n	Executes paper cutting.
Cutting type select* ¹	ESC y+n	Selects the cutting type: full, partial, etc.

*1 Only for FTP-621DCL013

■ OPTIONS

1. Cable

Name	Part number	Cable length
Thermal head connection cable with FTP-621	FTP-621Y001	150 mm (5.9 inch)
Thermal head connection cable with FTP-631 and FTP-641	FTP-621Y002 FTP-621Y003	150 mm (5.9 inch)
Interface cable	For Centronics	FTP-441Y201
	For Bus I/F	FTP-621Y203
Power supply cable (A): for logic motor	FTP-441Y401	300 mm (11.8 inch)
Power supply cable (B): for thermal head	FTP-441Y601	300 mm (11.8 inch)
Head abnormal temperature detection cable	FTP-621Y204	300 mm (11.8 inch)
Paper near-end detection cable	FTP-621Y401	300 mm (11.8 inch)

2. Paper holder

Name	Part number
Flange	FTP-040HF
Stand	FTP-040HS

Fujitsu Components International Headquarter Offices

<p>Japan Fujitsu Component Limited Gotanda-Chuo Building 3-5, Higashigotanda 2-chome, Shinagawa-ku Tokyo 141, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626 Email: promothq@ft.ed.fujitsu.com Web: www.fcl.fujitsu.com</p>	<p>Europe Fujitsu Components Europe B.V. Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910 Fax: (31-23) 5560950 Email: info@fceu.fujitsu.com Web: emea.fujitsu.com/components/</p>
<p>North and South America Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A. Tel: (1-408) 745-4900 Fax: (1-408) 745-4970 Email: components@us.fujitsu.com Web: http://us.fujitsu.com/printers/</p>	<p>Asia Pacific Fujitsu Components Asia Ltd. 102E Pasir Panjang Road #01-01 Citilink Warehouse Complex Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@fcal.fujitsu.com Web: http://www.fujitsu.com/sg/services/micro/components/</p>

©2007 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice.
Rev. August 14, 2007