

Fujitsu M10/SPARC M10 Systems

XSCF Reference Manual for XCP Version 209x

 FUJITSU

 ORACLE

Manual Code: C120-E684-07EN
December 2013

Copyright © 2007, 2013, Fujitsu Limited. All rights reserved.

Oracle and/or its affiliates provided technical input and review on portions of this material.

Oracle and/or its affiliates and Fujitsu Limited each own or control intellectual property rights relating to products and technology described in this document, and such products, technology and this document are protected by copyright laws, patents, and other intellectual property laws and international treaties.

This document and the product and technology to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of such product or technology, or of this document, may be reproduced in any form by any means without prior written authorization of Oracle and/or its affiliates and Fujitsu Limited, and their applicable licensors, if any. The furnishings of this document to you does not give you any rights or licenses, express or implied, with respect to the product or technology to which it pertains, and this document does not contain or represent any commitment of any kind on the part of Oracle or Fujitsu Limited or any affiliate of either of them.

This document and the product and technology described in this document may incorporate third-party intellectual property copyrighted by and/or licensed from the suppliers to Oracle and/or its affiliates and Fujitsu Limited, including software and font technology.

Per the terms of the GPL or LGPL, a copy of the source code governed by the GPL or LGPL, as applicable, is available upon request by the End User. Please contact Oracle and/or its affiliates or Fujitsu Limited. This distribution may include materials developed by third parties. Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California.

UNIX is a registered trademark of The Open Group.

Oracle and Java are registered trademarks of Oracle and/or its affiliates.

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu Limited.

SPARC Enterprise, SPARC64, SPARC64 logo and all SPARC trademarks are trademarks or registered trademarks of SPARC International, Inc. in the United States and other countries and used under license.

Other names may be trademarks of their respective owners.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:
U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

Disclaimer: The only warranties granted by Oracle and Fujitsu Limited, and/or any affiliate in connection with this document or any product or technology described herein are those expressly set forth in the license agreement pursuant to which the product or technology is provided.

EXCEPT AS EXPRESSLY SET FORTH IN SUCH AGREEMENT, ORACLE OR FUJITSU LIMITED, AND/OR THEIR AFFILIATES MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND (EXPRESS OR IMPLIED) REGARDING SUCH PRODUCT OR TECHNOLOGY OR THIS DOCUMENT, WHICH ARE ALL PROVIDED AS IS, AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID. Unless otherwise expressly set forth in such agreement, to the extent allowed by applicable law, in no event shall Oracle or Fujitsu Limited, and/or any of their affiliates have any liability to any third party under any legal theory for any loss of revenues or profits, loss of use or data, or business interruptions, or for any indirect, special, incidental or consequential damages, even if advised of the possibility of such damages.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright © 2007, 2013, Fujitsu Limited. Tous droits réservés.

Oracle et/ou ses affiliés ont fourni et vérifié des données techniques de certaines parties de ce composant.

Oracle et/ou ses affiliés et Fujitsu Limited détiennent et contrôlent chacun des droits de propriété intellectuelle relatifs aux produits et technologies décrits dans ce document. De même, ces produits, technologies et ce document sont protégés par des lois sur le droit d'auteur, des brevets, et d'autres lois sur la propriété intellectuelle et des traités internationaux.

Ce document, le produit et les technologies afférents sont exclusivement distribués avec des licences qui en restreignent l'utilisation, la copie, la distribution et la décompilation. Aucune partie de ce produit, de ces technologies ou de ce document ne peut être reproduite sous quelque forme que ce soit, par quelque moyen que ce soit, sans l'autorisation écrite préalable d'Oracle et/ou ses affiliés et de Fujitsu Limited, et de leurs éventuels concédants de licence. Ce document, bien qu'il vous ait été fourni, ne vous confère aucun droit et aucune licence, exprès ou tacites, concernant le produit ou la technologie auxquels il se rapporte. Par ailleurs, il ne confiert ni ne représente aucun engagement, de quelque type que ce soit, de la part d'Oracle ou de Fujitsu Limited, ou des sociétés affiliées de l'une ou l'autre entité.

Ce document, ainsi que les produits et technologies qu'il décrit, peuvent inclure des droits de propriété intellectuelle de parties tierces protégés par le droit d'auteur et/ou cédés sous licence par des fournisseurs à Oracle et/ou ses sociétés affiliées et Fujitsu Limited, y compris des logiciels et des technologies relatives aux politiques de caractères. Conformément aux conditions de la licence GPL ou LGPL, une copie du code source régi par la licence GPL ou LGPL, selon le cas, est disponible sur demande par l'utilisateur Final. Veuillez contacter Oracle et/ou ses affiliés ou Fujitsu Limited. Cette distribution peut comprendre des composants développés par des parties tierces. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'université de Californie.

UNIX est une marque déposée de The OpenGroup.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés.

Fujitsu et le logo Fujitsu sont des marques déposées de Fujitsu Limited.

SPARC Enterprise, SPARC64, le logo SPARC64 et toutes les marques SPARC sont utilisées sous licence et sont des marques déposées de SPARC International, Inc., aux Etats-Unis et dans d'autres pays.

Tout autre nom mentionné peut correspondre à des marques appartenant à leurs propriétaires respectifs.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

Avis de non-responsabilité : les seules garanties octroyées par Oracle et Fujitsu Limited et/ou toute société affiliée de l'une ou l'autre entité en rapport avec ce document ou tout produit ou toute technologie décrits dans les présentes correspondent aux garanties expressément stipulées dans le contrat de licence régissant le produit ou la technologie fournis.

SAUF MENTION CONTRAIRE EXPRESSEMENT STIPULEE AU DIT CONTRAT, ORACLE OU FUJITSU LIMITED ET/OU LES SOCIETES AFFILIÉES A L'UNE OU L'AUTRE ENTITÉ DECLINENT TOUT ENGAGEMENT OU GARANTIE, QUELLE QU'EN SOIT LA NATURE (EXPRESSE OU IMPLICITE) CONCERNANT CE PRODUIT, CETTE TECHNOLOGIE OU CE DOCUMENT, LESQUELS SONT FOURNIS EN L'ETAT. EN OUTRE, TOUTES LES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFACON, SONT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE. Sauf mention contraire expressément stipulée dans ce contrat, dans la mesure autorisée par la loi applicable, en aucun cas Oracle ou Fujitsu Limited et/ou l'une ou l'autre de leurs sociétés affiliées ne sauraient être tenues responsables envers une quelconque partie tierce, sous quelque théorie juridique que ce soit, de tout manque à gagner ou de perte de profit, de problèmes d'utilisation ou de perte de données, ou d'interruptions d'activités, ou de tout dommage indirect, spécial, secondaire ou consécutif, même si ces entités ont été préalablement informées d'une telle éventualité.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTE AUTRE CONDITION, DECLARATION ET GARANTIE, EXPRESSE OU TACITE, EST FORMELLEMENT EXCLUE, DANS LA MESURE AUTORISEE PAR LA LOI EN VIGUEUR, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFACON.

Contents

Preface ix

List of XSCF Commands 1

Intro 3

User Commands 11

exit 13

man 15

who 17

System Administration Commands 19

addboard 21

addcodactivation 27

addfru 31

addpowerschedule 33

adduser 39

applynetwork 41

clearremotepwrmgmt 57

clearstatus 59

console 65

deleteboard 69

deletecodactivation 75

deletepowerschedule 77

deleteuser 79

diagxbu 81
disableuser 87
dumpcodactivation 89
dumpconfig 91
enableuser 95
flashupdate 97
getflashimage 101
getremotepwrmgmt 105
initbb 109
ioxadm 113
nslookup 123
password 125
ping 129
poweroff 131
poweron 135
prtfru 139
rastest 143
rebootxscf 149
replacefru 151
reset 155
resetdateoffset 159
restorecodactivation 161
restoreconfig 163
restoredefaults 167
sendbreak 173
setad 175
setaltitude 183
setaudit 185
setautologout 191
setcod 193
setdate 195
setdomainconfig 197
setdualpowerfeed 201
setemailreport 205

sethostname 209
sethttps 213
setldap 219
setldapssl 223
setlocator 231
setloginlockout 233
setlookup 235
setnameserver 237
setnetwork 241
setntp 247
setpacketfilters 253
setpasswordpolicy 257
setpciboxdio 261
setpcl 265
setpowercapping 269
setpowerschedule 275
setpowerupdelay 279
setpparmode 281
setpparparam 291
setprivileges 295
setremotepwrmgmt 299
setroute 305
setservicetag 311
setsntp 313
setsnmp 317
setsnmpusm 323
setsnmpvacm 327
setsscp 331
setssh 341
settelnet 347
settimezone 349
setupfru 355
showad 357
showaltitude 361

showaudit 363
showautologout 367
showbbstatus 369
showboards 371
showcod 377
showcodactivation 379
showcodactivationhistory 383
showcodusage 385
showconsolepath 389
showdate 391
showdateoffset 393
showdomainconfig 395
showdomainstatus 397
showdualpowerfeed 401
showemailreport 403
showenvironment 405
showfru 415
showhardconf 419
showhostname 429
showhttps 431
showldap 435
showldapssl 437
showlocator 441
showloginlockout 443
showlogs 445
showlookup 459
showmonitorlog 461
shownameserver 463
shownetwork 465
showntp 469
showpacketfilters 473
showpasswordpolicy 475
showpciboxdio 477
showpcl 481

showpowercapping 485
showpowerschedule 487
showpowerupdelay 491
showpparinfo 493
showpparmode 499
showpparparam 503
showpparprogress 505
showpparstatus 511
showremotepwrmgmt 513
showresult 519
showroute 521
showservicetag 525
showsntp 527
showsntp 529
showsntp 531
showsntpvcam 533
showsscp 535
showssh 541
showstatus 545
showtelnet 547
showtimezone 549
showuser 553
snapshot 555
switchscf 563
tests 565
traceroute 571
unlockmaintenance 575
version 577
viewaudit 581

Functional Index 587

Preface

This manual describes the man pages for the XSCF firmware for SPARC M10 Systems from Oracle and Fujitsu.

Before reading this document, you should read the *Fujitsu M10/SPARC M10 Systems Quick Guide* and the *Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide*.

The XCP firmware which is described in this document might no longer be the latest available version, or the version now installed on your particular server. For the current firmware release, always refer to the Product Notes for the firmware installed and the one for the latest firmware release.

Fujitsu M10 is sold as SPARC M10 Systems by Fujitsu in Japan.
Fujitsu M10 and SPARC M10 Systems are identical products.

This preface includes the following sections:

- [Audience](#)
 - [Related Documentation](#)
 - [Text Conventions](#)
 - [Notes on Safety](#)
 - [Syntax of the Command-Line Interface \(CLI\)](#)
 - [Documentation Feedback](#)
-

Audience

This guide is written for experienced system administrators with working knowledge of computer networks and advanced knowledge of the Oracle Solaris.

Related Documentation

All documents for your server are available online at the following locations.

- Sun Oracle software-related manuals (Oracle Solaris, and so on)

<http://www.oracle.com/documentation/>

- Fujitsu documents

Japanese site:

<http://jp.fujitsu.com/platform/server/sparc/manual/>

Global site:

<http://www.fujitsu.com/global/services/computing/server/sparc/downloads/manual/>

The following table lists documents related to SPARC M10 Systems.

Related SPARC M10 Systems Documents(*1)

*Fujitsu M10/SPARC M10 Systems Getting Started Guide(*2)*

Fujitsu M10/SPARC M10 Systems Quick Guide

*Fujitsu M10/SPARC M10 Systems Important Legal and Safety Information(*2)*

Software License Conditions for Fujitsu M10/SPARC M10 Systems

Fujitsu M10/SPARC M10 Systems Safety and Compliance Guide

Fujitsu M10/SPARC M10 Systems Security Guide

Fujitsu M10/SPARC M10 Systems Installation Guide

Fujitsu M10-1/SPARC M10-1 Service Manual

Fujitsu M10-4/Fujitsu M10-4S/SPARC M10-4/SPARC M10-4S Service Manual

PCI Expansion Unit for Fujitsu M10/SPARC M10 Systems Service Manual

Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide

Fujitsu M10/SPARC M10 Systems Domain Configuration Guide

Fujitsu M10/SPARC M10 Systems XSCF Reference Manual

Fujitsu M10/SPARC M10 Systems Product Notes

Fujitsu M10/SPARC M10 Systems Glossary

*1: The listed manuals are subject to change without notice.

*2: The printed manual comes with the product.

Text Conventions

This manual uses the following fonts and symbols to express specific types of information.

Font/Symbol	Meaning	Example
AaBbCc123	What you type, when contrasted with on-screen computer output. This font represents the example of command input in the frame.	XSCF> adduser jsmith
AaBbCc123	The names of commands, files, and directories; on-screen computer output. This font represents the example of command output.	XSCF> showuser -P User Name: jsmith Privileges: useradm auditadm
<i>Italic</i>	Indicates the name of a reference manual, a variable, or userreplaceable text.	See the <i>Fujitsu M10/SPARC M10 Systems Installation Guide</i> .
" "	Indicates names of chapters, sections, items, buttons, or menus.	See "Chapter 2 Network Connection."

Command syntax in the text

While the XSCF commands have the section number of (8) or (1), it is omitted in the text. The Oracle Solaris commands have the section number such as (1M) in the text. Each command has the section number in a command name when prompting users to refer to it.

Notes on Safety

Read the following documents thoroughly before using or handling any SPARC M10 Systems:

- *SPARC M10 Systems Important Legal and Safety Information*
 - *SPARC M10 Systems Safety and Compliance Guide*
-

Syntax of the Command-Line Interface (CLI)

The command syntax is as follows:

- A variable that requires input of a value must be put in Italics.
 - An optional element must be enclosed in [].
 - A group of options for an optional keyword must be enclosed in [] and delimited by |.
-

Notation of This Manual

Here describes the notation used in this manual.

`Intro(1)` provides the XSCF shell commands and the brief description of them in the alphabetical order.

Each XSCF shell command is described in the order of sections below. When there's no relevant description provided, the section itself is omitted.

Section	Description
NAME	This section gives the names of the XSCF shell commands, followed by a brief description of what they do.
SYNOPSIS	<p>This section gives the syntax of commands. The use of font style complies with the following rule.</p> <p>bold Enters the command name or the constants as displayed.</p> <p><i>Italic</i> Substitutes the variables and so forth with the appropriate values when the command executed.</p> <p>The use of symbols such as parenthesis complies with the following rule.</p> <ul style="list-style-type: none"> [] Brackets. The OPTIONS or OPERANDS enclosed in these brackets can be omitted. Those not enclosed can't be omitted. { } Braces. The OPTIONS or OPERANDS enclosed in these braces are treated as a unit. Separator. You should specify one of the OPTIONS or OPERANDS delimited with this symbol " ". ... Ellipsis. You can specify multiple OPTIONS or OPERANDS just before.
DESCRIPTION	This section gives the detailed description such as the command function. It describes the behavior after the command executed and the content to be displayed. It doesn't describe how to specify the OPTIONS or OPERANDS.
Privileges	This section gives the privileges required for command execution. In case that what can be executed varies by the user privileges, it is described here.
OPTIONS	<p>This section gives the meaning of and how to specify the OPTIONS. In case the OPERANDS required for the OPTIONS, it is described here.</p> <p>To specify multiple 1-character OPTIONS, you may specify the first OPTION followed by the alphabetic part of the second.</p> <p>e.g. <code>fmadm -a -i</code> <code>fmadm -ai</code></p>

Section	Description
OPERANDS	This section gives the meaning of and how to specify the OPERANDS. The OPERANDS which follows the OPTIONS are described in "OPTIONS."
EXTENDED DESCRIPTION	This section gives the description in case the supplementary explanation required in addition to the content written in "DESCRIPTION." Also used to divide the description prolonged in "DESCRIPTION."
EXAMPLES	This section gives the examples of command execution. The explanation of examples, the execution command, and the messages returned from the system as a result of execution.
EXIT STATUS	This section gives the status which shows whether or not the command executed normally terminated. "0" for normal termination, and ">0" for abnormal termination.
SEE ALSO	This section gives the related command names.

Documentation Feedback

If you have any comments or requests regarding this document, go to the following websites:

- Japanese site:
<http://jp.fujitsu.com/platform/server/sparc/manual/>
- Global site:
<http://www.fujitsu.com/global/services/computing/server/sparc/downloads/manual/>

R e f e r e n c e

List of XSCF Commands

NAME	Intro - Displays the list of commands provided by the XSCF firmware.																																				
DESCRIPTION	<p>The Intro page lists the user commands (<code>exit(1)</code>, <code>man(1)</code>, and <code>who(1)</code>) and the system management commands (all commands starting with <code>addboard(8)</code>), which are provided by the XSCF firmware of the SPARC M10 Systems. The XSCF commands include the commands with the same names as ones of Oracle Solaris. However, their usages are not the same. For details, see the man page of each command.</p> <p>XSCF supports the following commands.</p> <table> <tbody> <tr> <td><code>exit</code></td><td>Ends the XSCF shell.</td></tr> <tr> <td><code>man</code></td><td>Displays the manual page of the XSCF shell command.</td></tr> <tr> <td><code>who</code></td><td>Displays list of user accounts logged in to XSCF.</td></tr> <tr> <td><code>addboard</code></td><td>Incorporates or assigns a system board (PSB) to a physical partition (PPAR).</td></tr> <tr> <td><code>addcodactivation</code></td><td>Adds the CPU Activation key to the XSCF.</td></tr> <tr> <td><code>addfru</code></td><td>Adds the Field Replaceable Unit (FRU) and a chassis.</td></tr> <tr> <td><code>addpowerschedule</code></td><td>Adds a schedule for powering on/off the automatic power control system (APCS).</td></tr> <tr> <td><code>adduser</code></td><td>Creates an XSCF user account.</td></tr> <tr> <td><code>applynetwork</code></td><td>Applies the contents of the XSCF network to the XSCF.</td></tr> <tr> <td><code>clearremotepwrmgmt</code></td><td>Deletes the management information of the remote power management function.</td></tr> <tr> <td><code>console</code></td><td>Connects to the control domain console.</td></tr> <tr> <td><code>deleteboard</code></td><td>Releases the system board (PSB) from the physical partition (PPAR) configuration.</td></tr> <tr> <td><code>deletecodactivation</code></td><td>Deletes the CPU Activation key from the XSCF.</td></tr> <tr> <td><code>deletepowerschedule</code></td><td>Deletes a schedule for powering on/off the automatic power control system (APCS).</td></tr> <tr> <td><code>deleteuser</code></td><td>Deletes an XSCF user account.</td></tr> <tr> <td><code>diagxbu</code></td><td>Diagnoses crossbar cable and crossbar unit (XBU).</td></tr> <tr> <td><code>disableuser</code></td><td>Disables an XSCF user account.</td></tr> <tr> <td><code>dumpcodactivation</code></td><td>Saves the CPU Activation key in a file.</td></tr> </tbody> </table>	<code>exit</code>	Ends the XSCF shell.	<code>man</code>	Displays the manual page of the XSCF shell command.	<code>who</code>	Displays list of user accounts logged in to XSCF.	<code>addboard</code>	Incorporates or assigns a system board (PSB) to a physical partition (PPAR).	<code>addcodactivation</code>	Adds the CPU Activation key to the XSCF.	<code>addfru</code>	Adds the Field Replaceable Unit (FRU) and a chassis.	<code>addpowerschedule</code>	Adds a schedule for powering on/off the automatic power control system (APCS).	<code>adduser</code>	Creates an XSCF user account.	<code>applynetwork</code>	Applies the contents of the XSCF network to the XSCF.	<code>clearremotepwrmgmt</code>	Deletes the management information of the remote power management function.	<code>console</code>	Connects to the control domain console.	<code>deleteboard</code>	Releases the system board (PSB) from the physical partition (PPAR) configuration.	<code>deletecodactivation</code>	Deletes the CPU Activation key from the XSCF.	<code>deletepowerschedule</code>	Deletes a schedule for powering on/off the automatic power control system (APCS).	<code>deleteuser</code>	Deletes an XSCF user account.	<code>diagxbu</code>	Diagnoses crossbar cable and crossbar unit (XBU).	<code>disableuser</code>	Disables an XSCF user account.	<code>dumpcodactivation</code>	Saves the CPU Activation key in a file.
<code>exit</code>	Ends the XSCF shell.																																				
<code>man</code>	Displays the manual page of the XSCF shell command.																																				
<code>who</code>	Displays list of user accounts logged in to XSCF.																																				
<code>addboard</code>	Incorporates or assigns a system board (PSB) to a physical partition (PPAR).																																				
<code>addcodactivation</code>	Adds the CPU Activation key to the XSCF.																																				
<code>addfru</code>	Adds the Field Replaceable Unit (FRU) and a chassis.																																				
<code>addpowerschedule</code>	Adds a schedule for powering on/off the automatic power control system (APCS).																																				
<code>adduser</code>	Creates an XSCF user account.																																				
<code>applynetwork</code>	Applies the contents of the XSCF network to the XSCF.																																				
<code>clearremotepwrmgmt</code>	Deletes the management information of the remote power management function.																																				
<code>console</code>	Connects to the control domain console.																																				
<code>deleteboard</code>	Releases the system board (PSB) from the physical partition (PPAR) configuration.																																				
<code>deletecodactivation</code>	Deletes the CPU Activation key from the XSCF.																																				
<code>deletepowerschedule</code>	Deletes a schedule for powering on/off the automatic power control system (APCS).																																				
<code>deleteuser</code>	Deletes an XSCF user account.																																				
<code>diagxbu</code>	Diagnoses crossbar cable and crossbar unit (XBU).																																				
<code>disableuser</code>	Disables an XSCF user account.																																				
<code>dumpcodactivation</code>	Saves the CPU Activation key in a file.																																				

dumpconfig	Saves the XSCF configuration information in a file.
enableuser	Enables an XSCF user account.
flashupdate	Updates the firmware.
getflashimage	Downloads an XSCF Control Package (XCP) image file.
getremotepwrmgt	Obtains the settings file of the remote power management function.
initbb	Detach the SPARC M10-4S and the crossbar box from the system and initialize it to the factory default.
ioxadm	Manages the cards connected to the PCI Expansion Unit, link card, and host server.
nslookup	Refers to the Internet name server for the host name.
password	Sets the password of the XSCF user account and the effective period.
ping	Sends the ECHO_REQUEST packet of ICMP to the host on the network.
poweroff	Shuts down the physical partition (PPAR).
poweron	Starts the physical partition (PPAR).
prtfru	Displays the FRUID data on the system and the PCI Expansion Unit.
rastest	Causes a fault virtually.
rebootxscf	Resets XSCF.
replacefru	Replaces the Field Replaceable Unit (FRU) and chassis.
reset	Resets the specified physical partition (PPAR) or a logical domain (guest domain).
resetdateoffset	Resets the difference between the system time and the Hypervisor time of each physical partition (PPAR).
restorecodactivation	Restores the CPU Activation key.
restoreconfig	Restores the XSCF settings information.
restoredefaults	Restores settings of the XSCF unit and its back-up information to the factory default.

sendbreak	Sends a break signal to the control domain of the specified physical partition (PPAR).
setad	Configure Active Directory.
setaltitude	Sets the altitude of the system.
setaudit	Manages the audit function of the system.
setautologout	Sets the session timeout time of XSCF shell.
setcod	Sets the CPU Activation to be used in the physical partition (PPAR).
setdate	Sets the date and time of the XSCF clock.
setdomainconfig	Specifies the logical domain configuration when the physical partition (PPAR) is started.
setdualpowerfeed	Sets the dual power feed mode.
setemailreport	Sets the e-mail report function.
sethostname	Sets the host names and DNS domain names of the master chassis and chassis whose XSCF is standby.
sethttps	Sets the start and halt of the HTTPS service used in the XSCF network. Also it performs authentication-related settings.
setldap	Configure the Service Processor as a Lightweight Directory Access Protocol (LDAP) client.
setldapssl	Configure LDAP/SSL.
setlocator	Sets the blinking status of the CHECK LED of the operation panel.
setloginlockout	Enables or disables the lockout function when logging in.
setlookup	Enable or disable the use of the Lightweight Directory Access Protocol (LDAP) server for authentication and privilege lookup.
setnameserver	Sets or deletes the name server and search path used in XSCF network.
setnetwork	Sets or deletes the network interface to be used in XSCF.
setntp	Sets the time synchronization for XSCF.
setpacketfilters	Sets the IP packet filtering rules used in the XSCF network.

<code>setpasswordpolicy</code>	Manages the password policy of the system.
<code>setpcl</code>	Sets the physical partition (PPAR) configuration information (PCL).
<code>setpciboxdio</code>	Configures each PCI slot setting of whether to enable the direct I/O function for PCI card mounted on PCI Expansion unit.
<code>setpowercapping</code>	Sets limitations for power consumption.
<code>setpowerschedule</code>	Sets the schedule operation information.
<code>setpowerupdelay</code>	Sets the warm-up operation time of the system and the wait time before start.
<code>setpparmode</code>	Sets the operation mode of the physical partition (PPAR).
<code>setpparparam</code>	Execute forced rewriting of OpenBoot PROM environment variables and registration or deletion of boot scripts of the control domain.
<code>setprivileges</code>	Assigns the user privileges.
<code>setremotepwrmgmt</code>	Sets the remote power management function.
<code>setroute</code>	Sets the routing information of the XSCF network interface.
<code>setservicetag</code>	Enables or disables the servicetag agents.
<code>setsmtplib</code>	Sets the Simple Mail Transfer Protocol (SMTP) service.
<code>setsnmp</code>	Manages the SNMP agent.
<code>setsnmpusm</code>	Sets the User-based Security Model (USM) of the SNMPv3 agent.
<code>setsnmpvacm</code>	Sets the View-based Access Control Model (VACM) settings of the SNMPv3 agent.
<code>setsscp</code>	Assigns the IP address of the SP to SP communication protocol (SSCP).
<code>setssh</code>	Sets Secure Shell (SSH) service used in the XSCF network.
<code>settelneth</code>	Starts or halts Tenet service used in the XSCF network.
<code>settimezone</code>	Sets the time zone and daylight saving time of XSCF.

<code>showad</code>	Show Active Directory configuration and messages.
<code>setupfru</code>	Sets the hardware of devices.
<code>showaltitude</code>	Displays the altitude of the system.
<code>showaudit</code>	Displays the current status of the audit system.
<code>showautologout</code>	Displays the session timeout time of the XSCF shell.
<code>showbbstatus</code>	Display the status of the SPARC M10 Systems chassis.
<code>showboards</code>	Displays the information of the system board (PSB).
<code>showcod</code>	Displays the CPU Activation information.
<code>showcodactivation</code>	Displays the current CPU Activation key information stored in the XSCF.
<code>showcodactivationhistory</code>	Displays the Capacity on Demand (CoD) logs.
<code>showcodusage</code>	Display the usage information of CPU core resources.
<code>showconsolepath</code>	Displays the information of the domain console that is currently connected to the physical partition (PPAR).
<code>showdate</code>	Displays the date and time of the XSCF clock.
<code>showdateoffset</code>	Displays the difference between the system time and the Hypervisor time of each physical partition (PPAR).
<code>showdomainconfig</code>	Displays the configuration information of the logical domain of the specified physical partition (PPAR).
<code>showdomainstatus</code>	Displays the status of the current logical domain.
<code>showdualpowerfeed</code>	Displays the status of dual power feed mode.
<code>showemailreport</code>	Displays the settings data of the e-mail report.
<code>showenvironment</code>	Displays the intake-air temperature and humidity, temperature sensor information, voltage sensor information, and fan rotation information of the system.
<code>showfru</code>	Displays the contents of settings regarding the hardware devices.

showhardconf	Displays the information of the Field Replaceable Unit (FRU) mounted on the server.
showhostname	Displays the host names set in the master chassis and chassis whose XSCFs are standby.
showhttps	Displays the status of the HTTPS service set in the XSCF network.
showldap	Display the Lightweight Directory Access Protocol (LDAP) configuration for the Service Processor.
showldapssl	Show LDAP/SSL configuration and messages.
showlocator	Displays the status of the CHECK LED on the operation panel.
showloginlockout	Displays the time set in the lockout function of the user account.
showlogs	Displays the specified log.
showlookup	Display the configuration for authentication and privileges lookup.
showmonitorlog	Displays the contents of the monitoring message log in real time.
shownameserver	Displays the name server and the search path set in the XSCF network.
shownetwork	Displays the information of the network interface set in the XSCF.
showntp	Displays the NTP information set in the XSCF network.
showpacketfilters	Displays the IP packet filtering rule set in the XSCF network.
showpasswordpolicy	Displays the current password policy setting.
showpciboxdio	Displays each PCI slot setting of whether to enable the direct I/O function for PCI card mounted on PCI Expansion unit.
showpcl	Displays the physical partition (PPAR) configuration information (PCL) that is currently set.
showpowercapping	Displays the status of power consumption limitation.
showpowerschedule	Displays the schedule operation information.

showpowerupdelay	Displays the warm-up time and wait time for air conditioning of the system that is currently set.
showpparinfo	Display the resource information of the physical partition (PPAR).
showpparmode	Displays the operation mode of the physical partition (PPAR) that is currently set.
showpparparam	Displays the OpenBoot PROM environmental variable and the boot script of the control domain which will be set at the subsequent startup of the specified physical partition (PPAR).
showpparprogress	Shows the detailed status of the physical partition (PPAR) in the middle of power control sequence.
showpparstatus	Displays the status of the current physical partition (PPAR).
showremotepwrmgmt	Displays the settings of the remote power management function and the power status of the Node.
showresult	Displays the end status of the previously executed command.
showroute	Displays the routing information set in the XSCF network interface.
showservicetag	Displays whether the servicetag agents are currently enabled or disabled.
showsntp	Displays the settings information of the Simple Mail Transfer Protocol (SMTP).
showsntp	Displays the settings information and the current status of the SNMP agent.
showsnpmpusm	Displays the current User-based Security Model (USM) information regarding the SNMP agent.
showsnpmpvacm	Displays the current View-based Control Access (VACM) information regarding the SNMP agent.
showsscp	Displays the IP address assigned to the SP to SP communication protocol (SSCP).
showssh	Displays the contents of the Secure Shell (SSH) service set in the XSCF network.
showstatus	Displays the degraded Field Replaceable Unit (FRU).

showtelnet	Displays the status of the Telnet service set in the XSCF network.
showtimezone	Displays the currently set time zone of the XSCF and the daylight saving time information.
showuser	Displays the XSCF user account information.
snapshot	Collects and transfers the data regarding environment, logs, errors, and Field Replaceable Unit Identifier (FRUID).
switchscf	Switches the status of XSCF in between master and standby.
testsb	Performs an initial diagnosis on the specified system board (PSB).
traceroute	Displays the network route to the specified host.
unlockmaintenance	Release multi-activated lock created by addfru(8) and replacefru(8).
version	Displays the version number of the firmware.
viewaudit	Displays the audit record.

R e f e r e n c e

User Commands

NAME	exit - Ends the XSCF shell.
SYNOPSIS	exit
DESCRIPTION	exit is a command to end and close the XSCF shell.
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .

exit(8)



NAME	man - Displays the manual page of the XSCF shell command.										
SYNOPSIS	man <i>command_name</i> ... man -h										
DESCRIPTION	man is a command to display the manual page of the specified XSCF shell command.										
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .										
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.										
OPERANDS	The following operands are supported. <i>command_name</i> Specify the command to display the manual page. You can make multiple specifications by separating them with spaces. With "Intro" specified in <i>command_name</i> , the list of the XSCF shell commands is displayed.										
EXTENDED DESCRIPTION	If the manual page is long, it is divided by each screen for display. In this case, you can make an operation like the following using keys.										
	<table> <thead> <tr> <th>Key</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>[Enter]</td> <td>Displays the next one line.</td> </tr> <tr> <td>Space</td> <td>Displays the next one page.</td> </tr> <tr> <td>[b]</td> <td>Returns by half-page.</td> </tr> <tr> <td>[q]</td> <td>Interrupts the display of the manual page.</td> </tr> </tbody> </table>	Key	Description	[Enter]	Displays the next one line.	Space	Displays the next one page.	[b]	Returns by half-page.	[q]	Interrupts the display of the manual page.
Key	Description										
[Enter]	Displays the next one line.										
Space	Displays the next one page.										
[b]	Returns by half-page.										
[q]	Interrupts the display of the manual page.										
EXAMPLES	<p>EXAMPLE 1 Display the manual page of addboard(8).</p> <pre>XSCF> man addboard</pre> <p>EXAMPLE 2 Display the list of the XSCF shell commands.</p> <pre>XSCF> man Intro</pre>										

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

NAME	who - Displays list of user accounts logged in to XSCF.				
SYNOPSIS	who who -h				
DESCRIPTION	who is a command to display list of user accounts logged in to XSCF. The following information is displayed. <ul style="list-style-type: none"> ■ XSCF user account name ■ Terminal in use ■ Idle time ■ Login time ■ Remote host name 				
Privileges	No privileges are required to execute this command. For details on user privileges, see <i>setprivileges(8)</i> .				
OPTIONS	The following options are supported. <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p>				
EXAMPLES	EXAMPLE 1 Display the list of user accounts logged in to XSCF.				
	<pre>XSCF> who USER TTY IDLE TIME HOST Sxf pts/0 00:00 Jul 17 05:29:11 jjjj.ffff.fujitsu.com</pre>				
EXIT STATUS	The following exit values are returned. <table> <tr> <td>0</td><td>Indicates normal end.</td></tr> <tr> <td>>0</td><td>Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				

who(8)



R e f e r e n c e

System Administration Commands

NAME	addboard - Incorporates or assigns a system board (PSB) into a physical partition (PPAR).						
SYNOPSIS	<pre>addboard [[-q] -{y n}] [-f] [-v] [-c configure] [[-m function=mode]...] -p ppar_id psb [psb...]</pre> <pre>addboard [[-q] -{y n}] [-f] -c assign -p ppar_id psb [psb...]</pre> <pre>addboard [[-q] -{y n}] [-f] -c reserve -p ppar_id psb [psb...]</pre> <pre>addboard -h</pre>						
DESCRIPTION	<p>addboard is a command to incorporate or to assign a system board (PSB) into a physical partition (PPAR) according to the PPAR configuration information (PCL).</p> <p>The addboard command is not available on SPARC M10-1/M10-4.</p> <p>You can specify any of the following incorporation methods.</p> <table> <tr> <td>configure</td><td>Incorporates a PSB into the specified PPAR. The incorporated PSB can be assigned to a logical domain. If the PPAR is powered off, or if the Oracle Solaris of the control domain is not running, the PSB is not incorporated, and it causes an error.</td></tr> <tr> <td>assign</td><td>Assigns a PSB to the specified PPAR. The assigned PSB is reserved for the specified PPAR, so the PSB cannot be incorporated in or assigned to any other PPAR. After assigning the PSB, the PSB is incorporated into the PPAR when the system is restarted or addboard with -c configure is executed.</td></tr> <tr> <td>reserve</td><td>Reserves incorporation of a PSB into the specified PPAR. The operation is the same as when -c assign is executed.</td></tr> </table>	configure	Incorporates a PSB into the specified PPAR. The incorporated PSB can be assigned to a logical domain. If the PPAR is powered off, or if the Oracle Solaris of the control domain is not running, the PSB is not incorporated, and it causes an error.	assign	Assigns a PSB to the specified PPAR. The assigned PSB is reserved for the specified PPAR, so the PSB cannot be incorporated in or assigned to any other PPAR. After assigning the PSB, the PSB is incorporated into the PPAR when the system is restarted or addboard with -c configure is executed.	reserve	Reserves incorporation of a PSB into the specified PPAR. The operation is the same as when -c assign is executed.
configure	Incorporates a PSB into the specified PPAR. The incorporated PSB can be assigned to a logical domain. If the PPAR is powered off, or if the Oracle Solaris of the control domain is not running, the PSB is not incorporated, and it causes an error.						
assign	Assigns a PSB to the specified PPAR. The assigned PSB is reserved for the specified PPAR, so the PSB cannot be incorporated in or assigned to any other PPAR. After assigning the PSB, the PSB is incorporated into the PPAR when the system is restarted or addboard with -c configure is executed.						
reserve	Reserves incorporation of a PSB into the specified PPAR. The operation is the same as when -c assign is executed.						
Privileges	<p>To execute this command, either of the following privileges is required.</p> <table> <tr> <td>platadm</td><td>Enables execution for all PPARs.</td></tr> <tr> <td>pparadm</td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table> <p>For details on user privileges, see setprivileges(8).</p>	platadm	Enables execution for all PPARs.	pparadm	Enables execution for PPARs for which you have administration privilege.		
platadm	Enables execution for all PPARs.						
pparadm	Enables execution for PPARs for which you have administration privilege.						

OPTIONS	The following options are supported.
-c assign	Assigns a PSB to PPAR configuration. If you omit the -c option, -c configure is assumed specified.
-c configure	Incorporates a PSB in PPAR configuration. If you omit the -c option, -c configure is assumed specified.
-c reserve	Reserves incorporation of a PSB into the specified PPAR. The operation is the same as when -c assign is executed.
-f	Incorporates a PSB in PPAR forcibly. If a PSB is forcibly added to PPAR by specifying the -f option, all the added hardware resources may not run normally. For this reason, we recommend that users do not use the -f option during normal operation. If you specify the -f option, be sure to check the conditions of the added PSB and other devices.
-h	Displays the usage. Specifying this option with another option or operand causes an error.

-m *function=mode* Set up the operation mode and its value. Several functions can be set up at the same time. If the **-m** is omitted, the default value will take effect. Specify the operation mode to *function*. Any of the following can be specified.

bind Set up the automatic assignment of resources feature (enable / disable) for the resources that will be added due to the incorporation of a PSB. This option is to be used when replacing PSBs. If resources were deleted with the *deleteboard(8)* before executing the *addboard* and the automatic assignment of resources feature was enabled, the resources on the system will revert back to the state before executing the *deleteboard(8)*. However, if the logical domain configuration was changed before executing the *addboard*, resources will be assigned in accordance with the changed logical domain configuration.

diag Set up the hardware diagnosis level at the time of incorporation of a PSB to a PPAR configuration.

When *bind* is specified to *function*, any of the following can be specified to *mode*. The default is *resource*.

resource Enable the automatic assignment of resources feature.

none Disable the automatic assignment of resources feature. The added resources will be designated as free resources on the specified PPAR.

When *diag* is specified to *function*, any of the following can be specified to *mode*. The default is *min*.

off Do not execute hardware diagnosis.

min Set up hardware diagnosis level to normal.

-n Automatically responds to prompt with "n" (no).

-p *ppar_id* Specifies PPAR-ID to which a PSB is incorporated or assigned. Depending on the system configuration, you can specify an integer from 0 to 15 for *ppar_id*.

	<p>-q Prevents display of messages, including prompt, for standard output.</p> <p>-v Show the detailed progress report of the processing of PSB incorporation. Ignored when executed along with the -q.</p> <p>-Y Automatically responds to prompt with "y" (yes).</p>									
OPERANDS	<p>The following operands are supported.</p>									
EXTENDED DESCRIPTION	<p><i>psb</i> Specifies the PSB number of the PSB to be incorporated or assigned. You can make multiple specifications by separating them with spaces. The specification format is below.</p> <table> <tr> <td><i>xx-y</i></td> <td></td> <td></td> </tr> <tr> <td><i>xx</i></td> <td></td> <td>Specifies an integer from 00 to 15.</td> </tr> <tr> <td><i>y</i></td> <td></td> <td>It is fixed to 0.</td> </tr> </table> <ul style="list-style-type: none"> ■ When you specify -c configure, a hardware diagnostic on the PSB is performed before the PSB is incorporated in PPAR. Therefore, it may take time to execute the command. ■ When you use addboard to assign or incorporate a PSB, you have to set the PCL by using setpcl(8). ■ If you execute a command while the PPAR is in power-on or power-off processing, the system enters in busy state. Execute the command again after the PPAR processing is completed. ■ For details on PCL, see setpcl(8) and showpcl(8). ■ Even if the PPAR is not running, you can execute addboard. However, if you specify -c configure while the PPAR is running to execute addboard, Logical Domains (LDoms) Manager needs to be running. ■ If the PPAR DR feature is disabled, addboard -c configure cannot be executed when the PPAR is running. Please refer to setpparmode(8) and showpparmode(8) for details on the PPAR DR feature. ■ If CPU Activation error occurs in a PPAR, addboard -c configure cannot be executed when the PPAR is running. ■ When replacing a PSB, if addboard is executed without -m or if it is executed with -m bind=resource, the resources may not revert back to their assigned state before executing the deleteboard(8). If the amount of resources differs before and after the replacement, the state of resources cannot be reverted back to the previous state. If the assignment of resources cannot be reverted back to the previous state, the resources will be rendered as empty resources. In such a case, use the ldm(1M) command to reassign these resources to the logical domain. 	<i>xx-y</i>			<i>xx</i>		Specifies an integer from 00 to 15.	<i>y</i>		It is fixed to 0.
<i>xx-y</i>										
<i>xx</i>		Specifies an integer from 00 to 15.								
<i>y</i>		It is fixed to 0.								

- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Assign PSB 00-0, 01-0, 02-0, and 03-0 to PPAR-ID 0.

```
XSCF> addboard -y -c assign -p 0 00-0 01-0 02-0 03-0
PSB#00-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
PSB#01-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
PSB#02-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
PSB#03-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
```

EXAMPLE 2 Assign PSB 00-0, 01-0, 02-0, and 03-0 to PPAR-ID 2 forcibly.

```
XSCF> addboard -f -c assign -p 2 00-0 01-0 02-0 03-0
PSB#00-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
PSB#01-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
PSB#02-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
PSB#03-0 will be assigned into PPAR-ID 0. Continue? [y|n] :y
```

EXAMPLE 3 PSB 01-0 will be incorporated in PPAR-ID 0.

```
XSCF> addboard -c configure -p 0 01-0
PSB#01-0 will be configured into PPAR-ID 0. Continue? [y|n] :y
Start connecting PSB to PPAR. [3600sec]
0..... 30..... 60..... 90..... 120..... 150..... 180..... 210..end
Connected PSB to PPAR.
Start configuring PSB to Logical Domains (LDom) Manager. [1800sec]
0..... 30..... 60..... 90..... 120end
Configured PSB to Logical Domains (LDom) Manager.
Operation has completed
```

EXAMPLE 4 PSB 01-0, 03-0 will be incorporated in PPAR-ID 0.

```
XSCF> addboard -c configure -p 0 01-0 03-0
PSB#01-0 will be configured into PPAR-ID 0. Continue? [y|n] :y
Start connecting PSB to PPAR. [3600sec]
0..... 30..... 60..... 90..... 120..... 150..... 180..... 210..end
Connected PSB to PPAR.
Start configuring PSB to Logical Domains (LDom) Manager. [1800sec]
0..... 30..... 60..... 90..... 120end
Configured PSB to Logical Domains (LDom) Manager.
PSB#03-0 will be configured into PPAR-ID 0. Continue? [y|n] :y
Start connecting PSB to PPAR. [3600sec]
0..... 30..... 60..... 90..... 120..... 150..... 180..... 210..end
Connected PSB to PPAR.
Start configuring PSB to Logical Domains (LDom) Manager. [1800sec]
0..... 30..... 60..... 90..... 120end
Configured PSB to Logical Domains (LDom) Manager.
Operation has completed
```

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.
SEE ALSO	deleteboard(8) , diagxbu(8) , setpcl(8) , setpparmode(8) , setupfru(8) , showboards(8) , showfru(8) , showpcl(8) , showpparmode(8) , showpparstatus(8) , testsb(8)

NAME	addcodactivation - Adds the CPU Activation key to the XSCF.																				
SYNOPSIS	<pre>addcodactivation [[-q] -{y n}] key_signature addcodactivation [[-q] -{y n}] [-u user] [-p proxy [-t proxy_type]] -F url addcodactivation [-v] [-{y n}] [-u user] [-p proxy [-t proxy_type]] -F url addcodactivation -h</pre>																				
DESCRIPTION	<p>addcodactivation is a command to add the specified CPU Activation key to the XSCF.</p> <p>Note – Before executing this command, you need to obtain the CPU Activation key. For obtaining the CPU Activation key, see the <i>Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide</i>.</p>																				
Privileges	<p>To execute this command, <code>platadm</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>																				
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td><code>-F url</code></td><td>Specifies URL that the CPU Activation key(s) are included. The following types of format are supported.</td></tr> <tr> <td></td><td><code>http://server[:port]/path/file</code></td></tr> <tr> <td></td><td><code>https://server[:port]/path/file</code></td></tr> <tr> <td></td><td><code>ftp://server[:port]/path/file</code></td></tr> <tr> <td></td><td><code>file:///media/usb_msd/path/file</code></td></tr> <tr> <td><code>-h</code></td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td><code>-n</code></td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td><code>-p proxy</code></td><td>Specifies the proxy server to use for transfer. If you omit <code>-t proxy_type</code>, the default proxy type is http. Specify <code>proxy</code> in <code>servername:port</code> format.</td></tr> <tr> <td><code>-q</code></td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td><code>-t proxy_type</code></td><td>Specifies the proxy type. Specify it with the <code>-p</code> option. You can specify any of http, socks4, and socks5. The default is http.</td></tr> </table>	<code>-F url</code>	Specifies URL that the CPU Activation key(s) are included. The following types of format are supported.		<code>http://server[:port]/path/file</code>		<code>https://server[:port]/path/file</code>		<code>ftp://server[:port]/path/file</code>		<code>file:///media/usb_msd/path/file</code>	<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.	<code>-n</code>	Automatically responds to prompt with "n" (no).	<code>-p proxy</code>	Specifies the proxy server to use for transfer. If you omit <code>-t proxy_type</code> , the default proxy type is http. Specify <code>proxy</code> in <code>servername:port</code> format.	<code>-q</code>	Prevents display of messages, including prompt, for standard output.	<code>-t proxy_type</code>	Specifies the proxy type. Specify it with the <code>-p</code> option. You can specify any of http, socks4, and socks5. The default is http.
<code>-F url</code>	Specifies URL that the CPU Activation key(s) are included. The following types of format are supported.																				
	<code>http://server[:port]/path/file</code>																				
	<code>https://server[:port]/path/file</code>																				
	<code>ftp://server[:port]/path/file</code>																				
	<code>file:///media/usb_msd/path/file</code>																				
<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.																				
<code>-n</code>	Automatically responds to prompt with "n" (no).																				
<code>-p proxy</code>	Specifies the proxy server to use for transfer. If you omit <code>-t proxy_type</code> , the default proxy type is http. Specify <code>proxy</code> in <code>servername:port</code> format.																				
<code>-q</code>	Prevents display of messages, including prompt, for standard output.																				
<code>-t proxy_type</code>	Specifies the proxy type. Specify it with the <code>-p</code> option. You can specify any of http, socks4, and socks5. The default is http.																				

<ul style="list-style-type: none"> -u <i>user</i> -V -Y 	<p>Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. You can specify this using up to 127 characters.</p> <p>Displays detailed network activities. This option is used to diagnose network and server problems. It cannot be used with the -q.</p> <p>Automatically responds to prompt with "y" (yes).</p>
--	--

OPERANDS

The following operands are supported.

<i>key_signature</i>	<p>Specifies the CPU Activation key to be added to the XSCF. Enclose the CPU Activation key in double quotation marks ("") for specification.</p>
----------------------	---

EXTENDED DESCRIPTION

When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Add the copied CPU Activation key.

```
XSCF> addcodactivation "Product: SPARC M10-1
SequenceNumber: 116
Cpu noExpiration 2
Text-Signature-SHA256-RSA2048:
SBxYBSmB32E1ctOidgWV09nGFnWKntCJ5N3WSlowbRUY1VVySvjncfOrDNteFLzo
:
:
1TSgrjnee9FyEYITT+ddJQ=="
Above Key will be added, Continue? [y|n] : y
```

EXAMPLE 2 Add CPU Activation keys in a lump from the CPU Activation key file, specified with the URL.

```
XSCF> addcodactivation -F file:///media/usb_msd/cod_key.txt
Above Key will be added, Continue? [y|n] : y
..... done.
successfully added Activation Key count : 10.
```

EXAMPLE 3 Add CPU Activation keys individually from the CPU Activation key file, specified with the URL.

```
XSCF> addcodactivation -F file:///media/usb_msd/cod_key_M10-
1_116.txt
Above Key will be added, Continue? [y|n] : y
..... done.
successfully added Activation Key count : 1.
```

EXIT STATUS	The following exit values are returned.
	0 Indicates normal end.
	>0 Indicates error occurrence.
SEE ALSO	deletecodactivation(8) , dumpcodactivation (8) , restorecodactivation (8) , setcod (8) , showcod (8) , showcodactivation (8) , showcodactivationhistory (8) , showcodusage (8)

addcodactivation(8)



NAME	addfru - Adds the Field Replaceable Unit (FRU) and a chassis.		
SYNOPSIS	addfru addfru -h		
DESCRIPTION	<p>addfru is a command to add the FRU and a chassis.</p> <p>It enables settings required for expansions, such as selecting, confirming, or inserting the FRU or a chassis, interactively by using menu format.</p> <p>The following FRU and chassis can be added by addfru.</p> <ul style="list-style-type: none"> ■ Power supply unit (PSU) ■ SPARC M10-4S ■ Crossbar box 		
Privileges	To execute this command, the <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .		
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.
-h	Displays the usage. Specifying this option with another option or operand causes an error.		
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ According to the implementation status and the state of the chassis of the FRU which is to be added, the addition operation may not be executed. In such a case, when the target FRU or chassis is selected, an error message, stating that the operation cannot be executed, is output. <p>In the following conditions, addition of FRUs is not possible.</p> <ul style="list-style-type: none"> ■ Common to all FRUs and chassis <p>The target chassis (if the target is a FRU, then the chassis on which the FRU is mounted) is in any of the following states.</p> <ul style="list-style-type: none"> - In the middle of firmware updating - Not in the state of "SCF READY" - Has already been recognized by the system <ul style="list-style-type: none"> ■ PSU <p>Implemented by default if not applicable to all FRUs and chassis.</p> <ul style="list-style-type: none"> ■ SPARC M10-4S <ul style="list-style-type: none"> - IP address is not setup to the SSCP link of the target SPARC M10-4S using the <code>setsscp(8)</code> 		

- If there is a chassis which has the same BB-ID as the target SPARC M10-4S, and was implemented in a system before (unless it was removed by the `initbb(8)`)
- The selected chassis cannot be connected due to system configuration
- Crossbar boxes
 - IP address is not setup to the SSCP link of the target crossbar box using the `setsscp(8)`
 - If there is a chassis which has the same BB-ID as the target crossbar box, and was implemented in a system before (unless it was removed by the `initbb(8)`)
 - Addition of a slave chassis is attempted when only two crossbar units (XBU) exist on the master chassis
- In case of SPARC M10-4S and crossbar boxes, if the chassis information such as the serial number, in respect to the selected BB-ID, has already been registered in the system, an error message is output and adding with the `addfru` becomes impossible. In such a case, use the `replacefru(8)` to replace the parts.
- The `addfru` can only be executed on the master XSCF. If it is executed on the standby XSCF, an error is output.

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

initbb (8), replacefru (8), setsscp (8), showhardconf (8), testsb (8), unlockmaintenance (8)

NAME	addpowerschedule - Adds a schedule for powering on/off the automatic power control system (APCS).				
SYNOPSIS	<pre>addpowerschedule {-p <i>ppar_id</i> -a} -m daily {on= <i>ontime</i> off= <i>offtime</i> on= <i>ontime</i> off= <i>offtime</i>} term= <i>value</i></pre> <pre>addpowerschedule {-p <i>ppar_id</i> -a} -m weekly {on= <i>ontime</i> off= <i>offtime</i> on= <i>ontime</i> off= <i>offtime</i>} pattern= <i>week</i> term= <i>value</i></pre> <pre>addpowerschedule {-p <i>ppar_id</i> -a} -m monthly {on= <i>ontime</i> off= <i>offtime</i> on= <i>ontime</i> off= <i>offtime</i>} pattern= <i>value</i> term= <i>value</i></pre> <pre>addpowerschedule {-p <i>ppar_id</i> -a} -m special {on= <i>ontime</i> off= <i>offtime</i> on= <i>ontime</i> off= <i>offtime</i>} date= <i>value</i></pre> <pre>addpowerschedule {-p <i>ppar_id</i> -a} -m holiday date= <i>value</i></pre> <pre>addpowerschedule -h</pre>				
DESCRIPTION	addpowerschedule is a command to set a schedule for powering on/off the automatic power control system (APCS).				
Privileges	To execute this command, either of the following privileges is required.				
	<table> <tr> <td><i>plataadm</i></td><td>Enables execution for all PPARs.</td></tr> <tr> <td><i>pparadm</i></td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table>	<i>plataadm</i>	Enables execution for all PPARs.	<i>pparadm</i>	Enables execution for PPARs for which you have administration privilege.
<i>plataadm</i>	Enables execution for all PPARs.				
<i>pparadm</i>	Enables execution for PPARs for which you have administration privilege.				
	For details on user privileges, see <i>setprivileges(8)</i> .				
OPTIONS	The following options are supported.				
-a	Adds a power control schedule for all PPARs.				
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
-m daily	Adds a power control schedule to be repeated daily.				
-m weekly	Adds a power control schedule to be repeated weekly.				
-m monthly	Adds a power control schedule to be repeated monthly.				
-m special	Adds a one-shot power control schedule.				
-m holiday	Adds a pause of scheduled operation.				
-p <i>ppar_id</i>	Specifies PPAR-ID for setting a schedule. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .				

OPERANDS	The following operands are supported.
<code>on=ontime</code>	Sets a time to power on. To specify <i>ontime</i> , use the <i>hhm0</i> format. <code>hh</code> Specifies hours (in 24 hour format). <code>m0</code> Specifies minutes (in 10 minute format).
<code>off=offtime</code>	Sets a time to power off. To specify <i>offtime</i> , use the <i>hhm0</i> format. <code>hh</code> Specifies hours (in 24 hour format). <code>m0</code> Specifies minutes (in 10 minute format).
<code>term=value</code>	Sets a period of conducting the scheduled operation. To specify <i>daily</i> , use <i>value</i> by using <i>MMDD-mmdd</i> format. To specify <i>value</i> for weekly and monthly schedule, use the <i>MM-mm</i> format. <code>MM</code> Specifies the starting month. <code>DD</code> Specifies the starting day. <code>mm</code> Specifies the ending month. <code>dd</code> Specifies the ending day.
<code>pattern=week</code>	Sets the day of the week for conducting weekly scheduled operation. To specify <i>week</i> , use the following formats. To specify more than one day of the week, separate them by inserting a comma (,) between them. <code>sun</code> Specifies Sunday. <code>mon</code> Specifies Monday. <code>tue</code> Specifies Tuesday. <code>wed</code> Specifies Wednesday. <code>thu</code> Specifies Thursday. <code>fri</code> Specifies Friday. <code>sat</code> Specifies Saturday.
<code>patern=value</code>	Specifies the date for conducting monthly scheduled operation. To specify <i>value</i> , use the <i>DD-dd</i> format. <code>DD</code> Specifies the starting day. <code>dd</code> Specifies the ending day.

EXTENDED DESCRIPTION	<table border="0" style="width: 100%;"> <tr> <td style="width: 30%;"><code>date=value</code></td><td>Specifies the date, month, and year for conducting or suspending a one-shot schedule or a pause of scheduled operation. To specify <i>value</i>, use the YYMMDD format.</td></tr> <tr> <td><i>YY</i></td><td>Specifies the last two digits of year (2000-2037).</td></tr> <tr> <td><i>MM</i></td><td>Specifies a month.</td></tr> <tr> <td><i>DD</i></td><td>Specifies a day.</td></tr> </table> <ul style="list-style-type: none"> ■ When <code>setpowerschedule(8)</code> is added to enable the schedule of PPAR-ID, the scheduled operations are conducted. However, if the mode switch on the operation panel is set to Service, the operations are not conducted. ■ By using <code>showpowerschedule(8)</code>, the contents of the added schedule can be checked. ■ To delete the added schedule, use <code>deletepowerschedule(8)</code>. ■ If non-existent <i>ppar_id</i> or time, or past date or invalid option is specified, it ends abnormally. ■ Up to 4096 schedules can be specified in the entire system. ■ If two or more schedules are set at the same time, they are conducted in order of the following priority. <ul style="list-style-type: none"> 1. Pause of schedule (special) 2. One-shot schedule (holiday) 3. Monthly schedule (monthly) 4. Weekly schedule (weekly) 5. Daily schedule (daily) ■ If power-on and power-off schedule are set at the same time in the same order of priority, powering off is conducted. ■ When you changed the configuration of the logical domain, execute the <code>1dm add-spconfig</code> command on the control domain, to store the latest configuration information in XSCF. If you do not store the information, the automatic power-off processing may fail to work properly. 	<code>date=value</code>	Specifies the date, month, and year for conducting or suspending a one-shot schedule or a pause of scheduled operation. To specify <i>value</i> , use the YYMMDD format.	<i>YY</i>	Specifies the last two digits of year (2000-2037).	<i>MM</i>	Specifies a month.	<i>DD</i>	Specifies a day.
<code>date=value</code>	Specifies the date, month, and year for conducting or suspending a one-shot schedule or a pause of scheduled operation. To specify <i>value</i> , use the YYMMDD format.								
<i>YY</i>	Specifies the last two digits of year (2000-2037).								
<i>MM</i>	Specifies a month.								
<i>DD</i>	Specifies a day.								
EXAMPLES	<p>EXAMPLE 1 Add a schedule of PPAR-ID 1 that operates from January 1 to December 31, from 9:00 to 21:30 daily.</p> <pre>XSCF> addpowerschedule -p 1 -m daily on=0900 off=2130 term=0101-1231 XSCF></pre> <p>EXAMPLE 2 Add a schedule of PPAR-ID 1 that operates from February to April, from 7:10</p>								

addpowerschedule(8)

to 19:50 on every Monday, Tuesday, Wednesday, Thursday, and Friday.

```
XSCF> addpowerschedule -p 1 -m weekly on=0710 off=1950  
pattern=mon,tue,wed,thu,fri term=02-04  
XSCF>
```

EXAMPLE 3 Add a schedule of PPAR-ID 1 that operates from first to fifth of May to June, from 9:20 to 18:40 daily.

```
XSCF> addpowerschedule -p 1 -m monthly on=0920 off=1840 pattern=01-  
05 term=05-06  
XSCF>
```

EXAMPLE 4 Add a schedule of PPAR-ID 1 that operates only on March 4, 2013 from 0:00 to 23:50.

```
XSCF> addpowerschedule -p 1 -m special on=0000 off=2350 date=120304  
XSCF>
```

EXAMPLE 5 Cancel the schedule of PPAR-ID 1 set to May 4, 2013.

```
XSCF> addpowerschedule -p 1 -m holiday date=120504  
XSCF>
```

EXAMPLE 6 Add a schedule of PPAR-ID 1 that is turned on at 7:10 on every Monday and turned off at 19:50 on every Friday from June to August.

```
XSCF> addpowerschedule -p 1 -m weekly on=0710 pattern=mon term=06-  
08  
XSCF> addpowerschedule -p 1 -m weekly off=1950 pattern=fri term=06-  
08  
XSCF>
```

EXAMPLE 7 Add a schedule of PPAR-ID 1 that operates from December 1 to March 1 of the next year, from 6:00 to 22:00 daily.

```
XSCF> addpowerschedule -p 1 -m daily on=0600 off=2200 term=1201-  
0301  
XSCF>
```

EXAMPLE 8 Add a schedule of PPAR-ID 1 that is turned on at 8:00 on 1st of every month from November to February of the next year and turned off at 20:00 on 29th

of every month.

```
XSCF> addpowerschedule -p 1 -m monthly on=0800 pattern=01-01  
term=11-02  
XSCF> addpowerschedule -p 1 -m monthly off=2000 pattern=29-29  
term=11-02  
XSCF>
```

EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	deletepowerschedule (8) , setpowerschedule (8) , showpowerschedule (8)

`addpowerschedule(8)`



NAME	adduser - Creates an XSCF user account.
SYNOPSIS	adduser [-u <i>UID</i>] <i>user</i> adduser -h
DESCRIPTION	<p>adduser is a command to create a new XSCF user account.</p> <p>An XSCF user account is used for configuring, manipulating, managing, and operating XSCF. No password is set to the newly created user account. Therefore, set a password by using <i>password(8)</i>, or set the public key for users by using Secure Shell (SSH). Otherwise, you cannot log in. The created user account is locked but not disabled. The number of user accounts to be specified is up to 100 assuming that a user account contains 10 characters on average.</p> <p>When Lightweight Directory Access Protocol (LDAP), Active Directory, or LDAP/SSL is set to be used for the user account data on XSCF, the user account name and the user identifier (if specified) must be the one that is not used for XSCF, LDAP, Active Directory, or LDAP/SSL.</p> <p>When you create a user account, the current value of the password policy is saved in the file for the created user account. For details on password policy, see <i>setpasswordpolicy(8)</i>.</p>
Privileges	<p>To execute this command, <i>useradm</i> privilege is required.</p> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -u <i>UID</i> Creates a new user with the specified identifier (UID). For specifying <i>UID</i>, use an integer between 100 and 60000. If you omit the -u option, an integer greater than or equal to 100 is automatically assigned as a user identifier.
OPERANDS	<p>The following operands are supported.</p> <ul style="list-style-type: none"> <i>user</i> Specifies the XSCF user account name to be created. For specifying a user account name, use up to 31 characters in combination of lowercase alphabets, numbers, hyphens (-), and underscores (_). No uppercase characters are available. Be sure to use a lowercase alphabet for the first character. The examples of user account name available are <i>jsmith</i>, <i>j_smith</i>, and <i>j_smith-0123</i>.

EXAMPLES

EXAMPLE 1 Create a new user.

```
XSCF> adduser -u 359 jsmith
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

deleteuser(8), **disableuser(8)**, **enableuser(8)**, **password(8)**,
setpasswordpolicy(8), **showpasswordpolicy(8)**, **showuser(8)**

NAME	applynetwork - Applies the contents of the XSCF network to XSCF.										
SYNOPSIS	applynetwork [[-q] -{y n}] [-M] applynetwork -h										
DESCRIPTION	<p>applynetwork is a command to apply the configured contents of the XSCF network to XSCF.</p> <p>Use the following three procedures to configure contents of the XSCF network.</p> <ol style="list-style-type: none"> 1. Use the following command to configure a network. <ul style="list-style-type: none"> ■ Use sethostname(8) to set the XSCF host name and DNS domain name. ■ Use setnameserver(8) to set the name server and the search path. ■ Use setnetwork(8) to set the IP address and netmask of XSCF-LAN. ■ Use setroute(8) to set a routing of the XSCF network interface. ■ Use setsscp(8) to set the IP address of SSCP. 2. Execute applynetwork to apply the configured contents to XSCF. 3. Execute rebootxscf(8) to reset all XSCF based on the applied contents. <p>Note – If you reset XSCF without executing applynetwork, the configured contents of the network is not applied. Not only that but the configured contents are erased.</p>										
Privileges	<p>To execute this command, platadm privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>										
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-M</td><td>Displays text one screen at a time.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td>-y</td><td>Automatically responds to prompt with "y" (yes).</td></tr> </table> <p>■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.</p>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-n	Automatically responds to prompt with "n" (no).	-q	Prevents display of messages, including prompt, for standard output.	-y	Automatically responds to prompt with "y" (yes).
-h	Displays the usage. Specifying this option with another option or operand causes an error.										
-M	Displays text one screen at a time.										
-n	Automatically responds to prompt with "n" (no).										
-q	Prevents display of messages, including prompt, for standard output.										
-y	Automatically responds to prompt with "y" (yes).										
EXTENDED DESCRIPTION											

- For applying the XSCF network, the IP address and netmask of XSCF-LAN must be configured. If they are configured correctly, the configuration of the XSCF network cannot be applied.
- On a SPARC M10-4S, if the XSCF-LAN in up state is configured as described below, it causes an error. Use `setnetwork(8)` to correct the settings.
 - The subnets of `xbbox#80-lan#0`, `xbbox#81-lan#0`, and takeover IP address `lan#0` are all different.
 - The subnets of `xbbox#80-lan#1`, `xbbox#81-lan#1`, and takeover IP address `lan#1` are all different.
 - Any of the subnets of `xbbox#80-lan#0`, `xbbox#80-lan#1`, and SSCP link is overlapped.
 - Any of the subnets of `xbbox#81-lan#0`, `xbbox#81-lan#1`, and SSCP link is overlapped.
 - Any of the subnets of `xbbox#80-lan#0`, `xbbox#81-lan#1`, and SSCP link is overlapped.
 - Any of the subnets of `xbbox#81-lan#0`, `xbbox#80-lan#1`, and SSCP link is overlapped.
 - The subnets of `bb#00-lan#0`, `bb#01-lan#0`, and takeover IP address `lan#0` are all different.
 - The subnets of `bb#00-lan#1`, `bb#01-lan#1`, and takeover IP address `lan#1` are all different.
 - Any of the subnets of `bb#00-lan#0`, `bb#00-lan#1`, and SSCP link is overlapped.
 - Any of the subnets of `bb#01-lan#0`, `bb#01-lan#1`, and SSCP link is overlapped.
 - Any of the subnets of `bb#00-lan#0`, `bb#01-lan#1`, and SSCP link is overlapped.
 - Any of the subnets of `bb#01-lan#0`, `bb#00-lan#1`, and SSCP link is overlapped.
 - If the subnets of `bb#00-lan#0` and `bb#00-lan#1` which are in up state on SPARC M10-1/M10-4, it causes an error. Use `setnetwork(8)` to correct the settings.
 - If the total number of characters of the DNS domain name specified with `sethostname(8)` and the search path specified with `setnameserver(8)` exceeds 256, it causes an error.
 - If the IP address of the SSCP link is not set for all the SPARC M10 Systems chassis or crossbar boxes, it causes an error. Use `setsscp(8)` to correct the settings.
 - If an IP address that is not included in any XSCF-LAN exists in the gateway address of the routing information, it causes an error. Use `setroute(8)` to correct the settings.
 - If the IP address of the destination of the routing information and the subnet of the SSCP link are overlapped, it causes an error. Use `setsscp(8)` to correct the settings.

- When the system is configured with multiple XSCFs, do not execute `applynetwork` during an XSCF failover.

EXAMPLES

EXAMPLE 1 Apply the following network settings after resetting the XSCF in the SPARC M10-4S with the building block configuration (without crossbar box).

- Host name (bb#00): hostname-0
- Host name (bb#01): hostname-1
- DNS domain name: example.com
- Name server: 10.23.4.3
- Interface: Enables bb#00-lan#0 at a start.
- IP address (bb#00-lan#0): 10.24.144.214
- Netmask (bb#00-lan#0): 255.255.255.0
- Routing (default gateway): 10.24.144.1
- Interface: Enables bb#01-lan#0 at a start.
- IP address (bb#01-lan#0): 10.24.144.215
- Netmask (bb#01-lan#0): 255.255.255.0
- Routing (default gateway of bb#01-lan#0): 10.24.144.1
- IP address (SSCP): From 192.168.1.1 to 192.168.1.4, from 192.168.1.9 to 192.168.1.12, from 192.168.1.17 to 192.168.1.18
- Netmask (SSCP): 255.255.255.248, 255.255.255.248, and 255.255.255.252

```
XSCF> applynetwork
The following network settings will be applied:
  xbbox#80 hostname:
  xbbox#81 hostname:
    bb#00 hostname      :hostname-0
    bb#01 hostname      :hostname-1
    DNS domain name   :example.com
    nameserver          :10.23.4.3

    interface           :xbbox#80-lan#0
    status              :down
    IP address          :
    netmask             :
    route               :

    interface           :xbbox#80-lan#1
    status              :down
    IP address          :
    netmask             :
    route               :

    interface           :xbbox#81-lan#0
    status              :down
```

applynetwork(8)

```
IP address      :  
netmask        :  
route          :  
  
interface      :xbbox#81-lan#1  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :bb#00-lan#0  
status         :up  
IP address     :10.24.144.214  
netmask        :255.255.255.0  
route          : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1  
  
interface      :bb#00-lan#1  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :bb#01-lan#0  
status         :up  
IP address     :10.24.144.215  
netmask        :255.255.255.0  
route          : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1  
  
interface      :bb#01-lan#1  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :lan#0  
status         :down  
IP address     :  
netmask        :  
  
interface      :lan#1  
status         :down  
IP address     :  
netmask        :  
  
SSCP network ID:0 netmask    :255.255.255.248  
  
interface      :bb#00-if#0  
IP address     :192.168.1.1  
  
interface      :bb#01-if#0  
IP address     :192.168.1.2  
  
interface      :bb#02-if#0  
IP address     :192.168.1.3
```

```

interface :bb#03-if#0
IP address :192.168.1.4

SSCP network ID:1 netmask :255.255.255.248

interface :bb#00-if#1
IP address :192.168.1.10

interface :bb#01-if#1
IP address :192.168.1.9

interface :bb#02-if#1
IP address :192.168.1.11

interface :bb#03-if#1
IP address :192.168.1.12

SSCP network ID:2 netmask :255.255.255.252

interface :bb#00-if#2
IP address :192.168.1.17

interface :bb#01-if#2
IP address :192.168.1.18

Continue? [y|n] :y

```

EXAMPLE 2 Apply the following network settings after resetting the XSCF in the SPARC M10-4S with the building block configuration (with crossbar box).

- Host name (xbbox#80): hostname-0
- Host name (xbbox#81): hostname-1
- DNS domain name: example.com
- Name server: 10.23.4.3
- Interface: Enables xbbox#80-lan#0 at a start.
- IP address (xbbox#80-lan#0): 10.24.144.214
- Netmask (xbbox#80-lan#0): 255.255.255.0
- Routing (default gateway): 10.24.144.1
- Interface: Enables xbbox#81-lan#0 at a start.
- IP address (xbbox#81-lan#0): 10.24.144.215
- Netmask (xbbox#81-lan#0): 255.255.255.0
- Routing (default gateway of xbbox#81-lan#0): 10.24.144.1

- IP address (SSCP): From 192.168.1.1 to 192.168.1.17, from 192.168.2.1 to 192.168.2.17, from 192.168.3.1 to 192.168.3.4, from 192.168.4.1 to 192.168.4.4, and from 192.168.5.1 to 192.168.5.2
- Netmask (SSCP): 255.255.255.0, 255.255.255.0, 255.255.255.0, 255.255.255.0, and 255.255.255.0

```
XSCF>applynetwork
```

```
The following network settings will be applied:
```

```
xbbox#80 hostname:hostname-0
xbbox#81 hostname:hostname-1
bb#00 hostname   :
bb#01 hostname   :
DNS domain name :example.com
nameserver        :10.23.4.3

interface      :xbbox#80-lan#0
status         :up
IP address    :10.24.144.214
netmask        :255.255.255.0
route          : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1

interface      :xbbox#80-lan#1
status         :down
IP address    :
netmask        :
route          :

interface      :xbbox#81-lan#0
status         :up
IP address    :10.24.144.215
netmask        :255.255.255.0
route          : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1

interface      :xbbox#81-lan#1
status         :down
IP address    :
netmask        :
route          :

interface      :bb#00-lan#0
status         :down
IP address    :
netmask        :
route          :

interface      :bb#00-lan#1
status         :down
IP address    :
netmask        :
route          :

interface      :bb#01-lan#0
status         :down
```

```
IP address      :  
netmask        :  
route          :  
  
interface      :bb#01-lan#1  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :lan#0  
status         :down  
IP address     :  
netmask        :  
  
interface      :lan#1  
status         :down  
IP address     :  
netmask        :  
  
SSCP network ID:0 netmask      :255.255.255.0  
  
interface      :xbbox#80-if#0  
IP address     :192.168.1.1  
  
interface      :bb#00-if#0  
IP address     :192.168.1.2  
  
interface      :bb#01-if#0  
IP address     :192.168.1.3  
  
interface      :bb#02-if#0  
IP address     :192.168.1.4  
  
interface      :bb#03-if#0  
IP address     :192.168.1.5  
  
interface      :bb#04-if#0  
IP address     :192.168.1.6  
  
interface      :bb#05-if#0  
IP address     :192.168.1.7  
  
interface      :bb#06-if#0  
IP address     :192.168.1.8  
  
interface      :bb#07-if#0  
IP address     :192.168.1.9  
  
interface      :bb#08-if#0  
IP address     :192.168.1.10  
  
interface      :bb#09-if#0  
IP address     :192.168.1.11
```

applynetwork(8)

interface	:bb#10-if#0
IP address	:192.168.1.12
interface	:bb#11-if#0
IP address	:192.168.1.13
interface	:bb#12-if#0
IP address	:192.168.1.14
interface	:bb#13-if#0
IP address	:192.168.1.15
interface	:bb#14-if#0
IP address	:192.168.1.16
interface	:bb#15-if#0
IP address	:192.168.1.17
SSCP network ID:1 netmask	:255.255.255.0
interface	:xbbox#81-if#1
IP address	:192.168.2.1
interface	:bb#00-if#1
IP address	:192.168.2.2
interface	:bb#01-if#1
IP address	:192.168.2.3
interface	:bb#02-if#1
IP address	:192.168.2.4
interface	:bb#03-if#1
IP address	:192.168.2.5
interface	:bb#04-if#1
IP address	:192.168.2.6
interface	:bb#05-if#1
IP address	:192.168.2.7
interface	:bb#06-if#1
IP address	:192.168.2.8
interface	:bb#07-if#1
IP address	:192.168.2.9
interface	:bb#08-if#1
IP address	:192.168.2.10
interface	:bb#09-if#1
IP address	:192.168.2.11

interface	:bb#10-if#1
IP address	:192.168.2.12
interface	:bb#11-if#1
IP address	:192.168.2.13
interface	:bb#12-if#1
IP address	:192.168.2.14
interface	:bb#13-if#1
IP address	:192.168.2.15
interface	:bb#14-if#1
IP address	:192.168.2.16
interface	:bb#15-if#1
IP address	:192.168.2.17
SSCP network ID:2 netmask	:255.255.255.0
interface	:xbbox#80-if#2
IP address	:192.168.3.1
interface	:xbbox#81-if#2
IP address	:192.168.3.2
interface	:xbbox#82-if#2
IP address	:192.168.3.3
interface	:xbbox#83-if#2
IP address	:192.168.3.4
SSCP network ID:3 netmask	:255.255.255.0
interface	:xbbox#80-if#3
IP address	:192.168.4.1
interface	:xbbox#81-if#3
IP address	:192.168.4.2
interface	:xbbox#82-if#3
IP address	:192.168.4.3
interface	:xbbox#83-if#3
IP address	:192.168.4.4
SSCP network ID:4 netmask	:255.255.255.0
interface	:xbbox#80-if#4
IP address	:192.168.5.1
interface	:xbbox#81-if#4

applynetwork(8)

```
IP address :192.168.5.2  
Continue? [y|n] :y
```

EXAMPLE 3 Apply the following network settings after resetting the XSCF in the SPARC M10-1.

- Host name (bb#00): hostname-0
- DNS domain name: example.com
- Name server: 10.23.4.3
- Interface: Enables bb#00-lan#0 at a start.
- IP address (bb#00-lan#0): 10.24.144.214
- Netmask (bb#00-lan#0): 255.255.255.0
- Routing (default gateway): 10.24.144.1

```
XSCF> applynetwork  
The following network settings will be applied:  
bb#00 hostname :hostname-0  
DNS domain name :example.com  
nameserver :10.23.4.3  
  
interface :bb#00-lan#0  
status :up  
IP address :10.24.144.214  
netmask :255.255.255.0  
route : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1  
  
interface :bb#00-lan#1  
status :down  
IP address :  
netmask :  
route :  
  
Continue? [y|n] :y
```

EXAMPLE 4 Apply the XSCF network settings without setting the bb#00-lan#0 and bb#00-lan#1 routings.

```
XSCF> applynetwork  
The following network settings will be applied:  
bb#00 hostname :hostname-0  
DNS domain name :example.com  
nameserver :10.23.4.3  
  
interface :bb#00-lan#0  
status :up  
IP address :10.24.144.214  
netmask :255.255.255.0
```

```

route          :
interface      :bb#00-lan#1
status         :up
IP address    :10.24.131.215
netmask        :255.255.255.0
route          :

Continue? [y|n] :y

```

EXAMPLE 5 Apply the XSCF network settings while all the interfaces are in down state.

```

XSCF> applynetwork
The following network settings will be applied:
  bb#00 hostname      :hostname-0
  DNS domain name   :example.com
  nameserver         :10.23.4.3

  interface          :bb#00-lan#0
  status             :down
  IP address        :10.24.144.214
  netmask            :255.255.255.0
  route              :

  interface          :bb#00-lan#1
  status             :down
  IP address        :10.24.131.215
  netmask            :255.255.255.0
  route              :

Continue? [y|n] :y

```

EXAMPLE 6 Apply the XSCF network settings in multi-XSCF configuration while a standby XSCF has a failure.

```

XSCF> applynetwork
The set state is as follows now.
  xbbox#80 hostname:
  xbbox#81 hostname:
  bb#00 hostname      :hostname-0
  bb#01 hostname      :
  DNS domain name   :example.com
  nameserver         :10.23.4.3

  interface          :xbbox#80-lan#0
  status             :down
  IP address        :
  netmask            :
  route              :

  interface          :xbbox#80-lan#1
  status             :down

```

applynetwork(8)

```
IP address      :  
netmask        :  
route          :  
  
interface      :xbbox#81-lan#0  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :xbbox#81-lan#1  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :bb#00-lan#0  
status         :up  
IP address     :10.24.144.214  
netmask        :255.255.255.0  
route          : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1  
  
interface      :bb#00-lan#1  
status         :down  
IP address     :10.24.131.215  
netmask        :255.255.255.0  
route          :  
  
interface      :bb#01-lan#0  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :bb#01-lan#1  
status         :down  
IP address     :  
netmask        :  
route          :  
  
interface      :lan#0  
status         :down  
IP address     :  
netmask        :  
  
interface      :lan#1  
status         :down  
IP address     :  
netmask        :  
  
SSCP network ID:0 netmask      :255.255.255.248  
  
interface      :bb#00-if#0  
IP address     :192.168.1.1
```

```

interface :bb#01-if#0
IP address :192.168.1.2

interface :bb#02-if#0
IP address :192.168.1.3

interface :bb#03-if#0
IP address :192.168.1.4

SSCP network ID:1 netmask :255.255.255.248

interface :bb#00-if#1
IP address :192.168.1.10

interface :bb#01-if#1
IP address :192.168.1.9

interface :bb#02-if#1
IP address :192.168.1.11

interface :bb#03-if#1
IP address :192.168.1.12

SSCP network ID:2 netmask :255.255.255.252

interface :bb#00-if#2
IP address :192.168.1.17

interface :bb#01-if#2
IP address :192.168.1.18

bb#01 could not apply the network settings.
Continue? [y|n] :

```

EXAMPLE 7 Apply the XSCF network settings in the SPARC M10-1. The prompt is automatically given a "y" response.

```

XSCF> applynetwork -y
The following network settings will be applied:
bb#00 hostname :hostname-0
DNS domain name :example.com
nameserver :10.23.4.3

interface :bb#00-lan#0
status :up
IP address :10.24.144.214
netmask :255.255.255.0
route : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1

interface :bb#00-lan#1
status :down
IP address :

```

applynetwork(8)

```
netmask          :
route           :

Continue? [y|n] :y
Please reset the all XSCFs by rebootxscf to apply the network settings.
Please confirm that the settings have been applied by executing
showhostname, shownetwork, showroute, showsscp and shownameserver after
rebooting the all XSCFs.
```

EXAMPLE 8 After setting the DNS server and the search paths, apply the XSCF network settings.

- Name server: 10.23.4.3, 10.24.144.5, and 10.24.131.7
- Search path: example1.com, example2.com, example3.com, example4.com, and example5.com

```
XSCF> applynetwork
The following network settings will be applied:
bb#00 hostname      :hostname-0
DNS domain name    :example.com
nameserver          :10.23.4.3
nameserver          :10.24.144.5
nameserver          :10.24.131.7
search              :example1.com
search              :example2.com
search              :example3.com
search              :example4.com
search              :example5.com

interface          :bb#00-lan#0
status              :up
IP address          :10.24.144.214
netmask             :255.255.255.0
route               : -n 0.0.0.0 -m 0.0.0.0 -g 10.24.144.1

interface          :bb#00-lan#1
status              :down
IP address          :
netmask             :
route               :

Continue? [y|n] :y
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

rebootxscf(8), **sethostname**(8), **setnameserver**(8), **setnetwork**(8), **setroute**(8),
setsscp(8)

applynetwork(8)

NAME	clearremotepwrmgmt - Deletes the management information of the remote power management function.
SYNOPSIS	clearremotepwrmgmt [-a -G <i>groupid</i>] [[-q] -{y n}] clearremotepwrmgmt -h
DESCRIPTION	clearremotepwrmgmt is a command to delete the management information of remote power management group on the host node that has been registered as a remote power management group. Before incorporating a host node to the remote power management group or deleting it from the remote power management group, you need to execute this command on the target host node. You do not have to execute clearremotepwrmgmt on the I/O node because the management information is not stored on the I/O node.
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -a Deletes all administrative information of remote power management groups which is configured. When the -a and -G options are omitted, it is regarded as the -a option is specified. -G <i>groupid</i> Specifies the remote power management group to delete the information. In <i>groupid</i>, specify only a single group ID using an integer from 1 to 32. When the -a and -G options are omitted, it is regarded as the -a option is specified. -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -q Prevents display of messages, including prompt, for standard output. -y Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute clearremotepwrmgmt, if the remote power management function is enabled, it causes an error. It is necessary to set it disabled by using setremotepwrmgmt -c disable. When no remote power management group exists, it ends normally. ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Delete the management information of the remote power management group on the host node.

```
XSCF> clearremotepwrmgmt
All remote power management group informations are cleared. Continue?
[y|n] : y
The command completed successfully.
XSCF>
```

EXAMPLE 2 Delete all administrative information of remote power management groups in the host node.

```
XSCF> clearremotepwrmgmt -a
All remote power management group informations are cleared. Continue?
[y|n] : y
The command completed successfully.
XSCF>
```

EXAMPLE 3 Delete the administrative information of remote power management group #1 in the host node.

```
XSCF> clearremotepwrmgmt -G 1
Group#01 remote power management group informations are cleared. Continue?
[y|n] : y
The command completed successfully.
XSCF>
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

getremotepwrmgmt(8), **setremotepwrmgmt(8)**, **showremotepwrmgmt(8)**

NAME	clearstatus - Clear the fault information of field replaceable units (FRUs) that have been detected as faulty units.		
SYNOPSIS	clearstatus <i>devicepath</i> clearstatus -h		
DESCRIPTION	<p>clearstatus is a command to clear the fault information of specified FRUs that have been detected as faulty units.</p> <p>The following fault information is cleared:</p> <ul style="list-style-type: none"> ■ Fault information which is stored in XSCF ■ The fault flag stored in the FRUID-ROM of FRU <p>Note – You can execute the clearstatus only when all domains are powered off. To verify that all domains are powered off, execute the showlogs power command and look for the value System Power Off.</p>		
Privileges	<p>To execute this command, platadm privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>		
OPTIONS	<p>The following option is supported:</p> <p>-h Displays usage statement. When used with other options or operands, an error occurs.</p>		
OPERANDS	<p>The following operand is supported:</p> <table> <tr> <td><i>devicepath</i></td> <td>Specifies an FRU of which the faulty flag is cleared. FRUs shown below can be specified according to the system configuration.</td> </tr> </table>	<i>devicepath</i>	Specifies an FRU of which the faulty flag is cleared. FRUs shown below can be specified according to the system configuration.
<i>devicepath</i>	Specifies an FRU of which the faulty flag is cleared. FRUs shown below can be specified according to the system configuration.		

- For SPARC M10-1:

/MBU

/MBU/MEM#*x*

x: an integer between 00A and 03A, between 10A and 13A,
between 00B and 03B, between 10B and 13B

/MBU/PCI#*x*/LINK

x: an integer between 0 and 2

/FAN#*x*

x: an integer between 0 and 6

/OPNL

/PSU#*x*

x: 0 or 1

/PSUBP

■ For SPARC M10-4/M10-4S (without crossbar box):

/BB#*x*/CMUL

x: an integer between 0 and 15

/BB#*x*/CMUL/MEM#*y*

x: an integer between 0 and 15, *y*: an integer between 00A and 07A, between 10A and 17A, between 00B and 07B, between 10B and 17B

/BB#*x*/CMUU

x: an integer between 0 and 15

/BB#*x*/CMUU/MEM#*y*

x: an integer between 0 and 15, *y*: an integer between 0 and 31

/BB#*x*/XBU#*y*

x: an integer between 0 and 15, *y*: 0 or 1

/BB#*x*/THU#*y*

x: an integer between 0 and 15, *y*: 0 or 1

/BB#*x*/PSUBP

x: an integer between 0 and 15

/BB#*x*/OPNL

x: an integer between 0 and 15

/BB#*x*/FANU#*y*

x: an integer between 0 and 15, *y*: an integer between 0 and 4

/BB#*x*/PSU#*y*

x: an integer between 0 and 15, *y*: 0 or 1

/BB#*x*/PSU#*y*/LINK

x: an integer between 0 and 15, *y*: 0 or 1

■ For SPARC M10-4S (with crossbar box):

/XBBOX#*x*/XBU#*y*

x: an integer between 80 and 83, *y*: an integer between 0 and 2

/XBBOX#*x*/XSCFU

x: an integer between 80 and 83

/XBBOX#*x*/XBBPU

x: an integer between 80 and 83

/XBBOX#*x*/XSCFIFU

x: an integer between 80 and 83

/XBBOX#*x*/OPNL

x: an integer between 80 and 83

/XBBOX#*x*/FANU#*y*

x: an integer between 80 and 83, *y*: an integer between 0 and 3

/XBBOX#*x*/PSU#*y*

x: an integer between 80 and 83, *y*: an integer between 0 and 3

- For PCI Expansion unit:
 /MBU/PCI#*x*/PCIBOX#*y*/IOB
x: an integer between 0 and 2, *y*: last 4 digits of the serial number of the PCI Expansion unit
 /MBU/PCI#*x*/PCIBOX#*y*/FANBP
x: an integer between 0 and 2, *y*: last 4 digits of the serial number of the PCI Expansion unit
 /MBU/PCI#*x*/PCIBOX#*y*/FAN#*z*
x: an integer between 0 and 2, *y*: last 4 digits of the serial number of the PCI Expansion unit, *z*: an integer between 0 and 2
 /MBU/PCI#*x*/PCIBOX#*y*/PSU#*z*
x: an integer between 0 and 2, *y*: last 4 digits of the serial number of the PCI Expansion unit, *z*: 0 or 1
 /MBU/PCI#*x*/PCIBOX#*y*/LINKBD
x: an integer between 0 and 2, *y*: last 4 digits of the serial number of the PCI Expansion unit
 /BB#*x*/PCI#*y*/PCIBOX#*z*/IOB
x: an integer between 0 and 2, *y*: an integer between 0 and 10, *z*: last 4 digits of the serial number of the PCI Expansion unit
 /BB#*x*/PCI#*y*/PCIBOX#*z*/FANBP
x: an integer between 0 and 2, *y*: an integer between 0 and 10, *z*: last 4 digits of the serial number of the PCI Expansion unit
 /BB#*x*/PCI#*y*/PCIBOX#*z*/FAN#*w*
x: an integer between 0 and 2, *y*: an integer between 0 and 10, *z*: last 4 digits of the serial number of the PCI Expansion unit, *w*: an integer between 0 and 2
 /BB#*x*/PCI#*y*/PCIBOX#*z*/PSU#*w*
x: an integer between 0 and 2, *y*: an integer between 0 and 10, *z*: last 4 digits of the serial number of the PCI Expansion unit, *w*: 0 or 1
 /BB#*x*/PCI#*y*/PCIBOX#*z*/LINKBD
x: an integer between 0 and 2, *y*: an integer between 0 and 10, *z*: last 4 digits of the serial number of the PCI Expansion unit

EXTENDED DESCRIPTION

- If you are to clear the link card of the PCI Expansion unit, confirm that the following conditions are both satisfied before executing the `clearstatus`.
 - The building block to which the target PCI Expansion unit is connected has been built into the physical partition (PPAR)
 - Power of that physical partition is on

The `clearstatus` only makes the reservation to clear, and the fault flag is not cleared. To clear the fault flag and build the FRU into system, it is necessary to power off the PPAR and then power on again.

- If you are to clear a target other than the link card of the PCI Expansion unit, confirm that the following conditions are both satisfied before executing the `clearstatus`.
 - The building block on which the target FRU is mounted has not been built into the physical partition (PPAR)
 - Power of that physical partition is off
- The `clearstatus` only clears the fault flag and it is not to say that after the clearance, the FRU is built into the system. To build the FRU into the system, it is necessary to use the `replacefru(8)`, turn off the system input power and then turned on again, or start up PPAR.
- If you are to clear the CPU memory unit (CMUU or CMUL), the flag of the subordinate memory (DIMM) is also cleared.
- Execute the `clearstatus` after disabled the write inhibit to FRUID-ROM. If the write inhibit to FRUID-ROM is enabled, clear of the fault information of the FRU is not performed.

EXAMPLES

EXAMPLE 1 Clears the fault flag of /BB#00/CMUL.

```
XSCF> clearstatus /BB#00/CMUL
```

EXAMPLE 2 Clears the fault flag of /MBU/PCI#0/PCIBOX#A3B5/IOB.

```
XSCF> clearstatus /MBU/PCI#0/PCIBOX#A3B5/IOB
```

EXIT STATUS

The following exit values are returned:

- | | |
|----|------------------------|
| 0 | Successful completion. |
| >0 | An error occurred. |

clearstatus(8)



NAME	console - Connects to the control domain console.
SYNOPSIS	console [[-q] -{y n}] -p <i>ppar_id</i> [-f -r] [-s <i>escapeChar</i>] console -h
DESCRIPTION	console is a command to connect from the XSCF shell to the control domain console on the specified physical partition (PPAR). There are two types of control domain consoles, RW console that is available for inputs and outputs and RO console that is available only for reference. To one PPAR, only one RW console can be connected, but more than one RO console can be connected. If one RW console has been already connected, attempting to connect to another RW console causes an error. Even in this case, if the user has <code>platadm</code> privilege or <code>pparadm</code> privilege for the target PPAR, it can be connected to the RW console forcibly. In this case, the RW console that is currently connected will be disconnected. To end the control domain console and return to the XSCF shell, press the [Enter] key, and then enter "#" and "." (period). Note – If you return to the XSCF shell from the domain console, or if you terminate the XSCF shell, both without logging out of the domain, you will be automatically logged out from the domain. At the same time, a termination signal might be sent to any program that is running in the background on the domain console.
Privileges	To execute this command, any of the following privileges is required. <code>platadm</code> , <code>platop</code> , <code>fieldeng</code> Enables execution for all PPARs. <code>pparadm</code> , <code>pparmgr</code> , <code>pparop</code> Enables execution for PPARs for which you have access privilege. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -f Forcibly connects to an RW console. The RW console that is currently connected will be disconnected. This can be specified only by a user who has <code>platadm</code> privilege or <code>pparadm</code> privilege for the target PPAR. -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no).

-p <i>ppar_id</i>	Specifies PPAR-ID of the PPAR to be connected. For <i>ppar_id</i> , only one integer from 0 to 15 can be specified depending on the system configuration.
-q	Prevents display of messages, including prompt, for standard output.
-r	Connects to an RO console.
-s <i>escapeChar</i>	Specifies an escape symbol. The default is "#." As <i>escapeChar</i> , any of the following characters can be specified. Use the double quotation marks ("") to enclose the character. "#", "@", "^", "&", "?", "*", "=", ".", " "
	The specified escape symbol is enabled only in the session in which console is executed.
-Y	Automatically responds to prompt with "y" (yes).

EXTENDED DESCRIPTION

- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
- In the domain console, "#" used for the first letter in the line is recognized as an escape symbol. The escape symbol is specified for having the console perform a special processing. The examples of combination available for specifying with "#" are as shown below.

"#" + "?"	Outputs the status message.
"#" + "."(period)	Disconnects the control domain console.

- To input "#" for the console at the beginning of the line, press the [#] key twice.
- To display the information about the control domain console that is currently connected to the PPAR, use **showconsolepath(8)**.

EXAMPLES

Example 1 Connect to the RW console of PPAR-ID 0.

```
XSCF> console -p 0

Console contents may be logged.
Connect to PPAR-ID 0? [y|n] :y
:
<<Contents of domain console input/output are displayed.>>
:
<<Pressing the [#] + [?] key combination outputs a status message.>>
console: read write mode.
:
```

```
<<Pressing the [#] + [.] key combination exits from the control domain console.>>
exit from console.
XSCF>
```

Example 2 Connect to the RW console of PPAR-ID 1 forcibly. At this time, specify "#" for escape symbol.

```
XSCF> console -p 1 -f -s "#"

Console contents may be logged.
Connect to PPAR-ID 1? [y|n] :y
:
<<Contents of domain console input/output are displayed.>>
:
<<Pressing the [#] + [?] key combination outputs a status message.>>
console: read write mode.
:
<<Pressing the [#] + [.] key combination exits from the control domain console.>>
exit from console.
XSCF>
```

Example 3 Connect to the RO console of PPAR-ID 2.

```
XSCF> console -p 2 -r

Console contents may be logged.
Connect to PPAR-ID 2? [y|n]:y
:
<<Contents of domain console input/output are displayed.>>
:
<<Pressing the [#] + [?] key combination outputs a status message.>>
console: read only mode.
:
<<Pressing the [#] + [.] key combination exits from the control domain console.>>
exit from console.
XSCF>
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO [sendbreak \(8\)](#), [showconsolepath \(8\)](#)

console(8)



NAME	deleteboard - Releases the system board (PSB) from the physical partition (PPAR) configuration.						
SYNOPSIS	<pre>deleteboard [[-q] -{y n}] [-f] [-v] [-c disconnect] [[-m function=mode]...] psb [psb...]</pre> <pre>deleteboard [[-q] -{y n}] [-f] [-v] -c unassign [[-m function=mode]...] psb [psb...]</pre> <pre>deleteboard [[-q] -{y n}] [-f] -c reserve psb [psb...]</pre> <pre>deleteboard -h</pre>						
DESCRIPTION	<p>deleteboard is a command to release a PSB from the PPAR configuration, in which the PSB is currently incorporated.</p> <p>deleteboard cannot be used on a SPARC M10-1/M10-4.</p> <p>You can specify any of the following releasing methods depending on the conditions after releasing the PSB.</p> <table> <tr> <td>disconnect</td> <td>Releases the PSB from the PPAR configuration and sets it to assigned state. Because the PSB remains being assigned to the PPAR configuration, you can incorporate it into the PPAR again by restarting the PPAR or executing addboard(8).</td> </tr> <tr> <td>unassign</td> <td>Releases the PSB completely from the PPAR configuration and sets it to system board pool state. The PSB in system board pool state can be incorporated or assigned to other PPAR configuration.</td> </tr> <tr> <td>reserve</td> <td>Does not release the PSB immediately from the PPAR configuration but just reserves it for releasing. After it is reserved, when the specified PPAR is stopped, the PSB is released from the PPAR configuration and set in system board pool state.</td> </tr> </table>	disconnect	Releases the PSB from the PPAR configuration and sets it to assigned state. Because the PSB remains being assigned to the PPAR configuration, you can incorporate it into the PPAR again by restarting the PPAR or executing addboard(8).	unassign	Releases the PSB completely from the PPAR configuration and sets it to system board pool state. The PSB in system board pool state can be incorporated or assigned to other PPAR configuration.	reserve	Does not release the PSB immediately from the PPAR configuration but just reserves it for releasing. After it is reserved, when the specified PPAR is stopped, the PSB is released from the PPAR configuration and set in system board pool state.
disconnect	Releases the PSB from the PPAR configuration and sets it to assigned state. Because the PSB remains being assigned to the PPAR configuration, you can incorporate it into the PPAR again by restarting the PPAR or executing addboard(8).						
unassign	Releases the PSB completely from the PPAR configuration and sets it to system board pool state. The PSB in system board pool state can be incorporated or assigned to other PPAR configuration.						
reserve	Does not release the PSB immediately from the PPAR configuration but just reserves it for releasing. After it is reserved, when the specified PPAR is stopped, the PSB is released from the PPAR configuration and set in system board pool state.						
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td>platadm</td> <td>Enables execution for all PPARs.</td> </tr> <tr> <td>pparadm</td> <td>Enables execution for PPARs for which you have administration privilege.</td> </tr> </table> <p>For details on user privileges, see setprivileges(8).</p>	platadm	Enables execution for all PPARs.	pparadm	Enables execution for PPARs for which you have administration privilege.		
platadm	Enables execution for all PPARs.						
pparadm	Enables execution for PPARs for which you have administration privilege.						

OPTIONS	The following options are supported.
-c disconnect	Releases the PSB from the PPAR configuration and sets it to assigned state. If you omit the -c option, -c disconnect is assumed specified.
-c reserve	Reserves the releasing of PSB. If you omit the -c option, -c disconnect is assumed specified.
-c unassign	Releases the PSB completely from the PPAR configuration and sets it to system board pool state. If you omit the -c option, -c disconnect is assumed specified.
-f	Releases the specified PSB forcibly. Releasing a PSB from PPAR forcibly by using the -f option may lead to serious problems on a process to which the CPU bound or on a process that is accessing to the device. For this reason, we recommend that users do not use the -f option during normal operation. If you specify the -f option, be sure to check the conditions of PPAR and business processes.
-h	Displays the usage. Specifying this option with another option or operand causes an error.

-m *function=mode* Set up the operation mode and its value. Specify the operation mode to *function*. Any of the following can be specified.

unbind

Set up the operation mode when the resources are insufficient at the destination to which a logical domain that uses the resources of the PSB that is to be detached, is migrated.

If resources are insufficient at the destination, execute any of the following:

- Sufficient resources must be secured at the destination by deleting the resources from the logical domain whose resources are to be migrated, or from any other logical domains inside the PPAR.
- Sufficient resources must be secured at the destination by shutting down any logical domain inside the PPAR.

When *unbind* is specified to *function*, any of the following can be specified to *mode*. The default is none.

none

Do not secure resources at the destination. The *deleteboard* will produce an error if resources are insufficient. This option cannot be specified while the PPAR is running in factory-default state.

resource

Secure resources at the destination by deleting resources from the logical domain whose resources are to be migrated. or any other logical domains inside the PPAR. None of the logical domains is shut down to secure resources at the destination.

shutdown

Secure resources at the destination by deleting resources from the logical domain whose resources are to be migrated or from any other logical domains inside the PPAR. If resources were not secured, any of the logical domains inside the PPAR will shut down to secure resources at the destination.

-n

Automatically responds to prompt with "n" (no).

-q

Prevents display of messages, including prompt, for standard output.

-v

Show the detailed progress report of the processing of PSB detachment. Ignored when executed along with the -q.

	-Y	Automatically responds to prompt with "y" (yes).
OPERANDS	The following operands are supported.	
	<i>psb</i>	Specifies the PSB number of the PSB to be released. You can make multiple specifications by separating them with spaces. The specification format is below.
	<i>x-y</i>	
	<i>x</i>	Specifies an integer from 00 to 15.
	<i>y</i>	It is fixed to 0.
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ If you specify -c disconnect while the PPAR is stopped or if the PSB has already been released from the PPAR configuration, no processing is performed. Also while the PPAR is in starting process or in stopping process, it causes an error. ■ If you specify -c unassign even while the PPAR is stopped or the PSB has already been released from the PPAR configuration, the PSB is switched from the assigned state to the system board pool state. If the PSB has already been in the system board pool state, no processing is performed. While the PPAR is in starting process or in stopping process, it causes an error. ■ If you specify -c reserve while the PPAR is stopped or the PSB has already been released from the PPAR configuration, the PSB is switched immediately from the assigned state to the system board pool state. If the PSB has already been in the system board pool state, no processing is performed. ■ When a PSB is released, the hardware resources on the PSB are released from the Oracle Solaris. Therefore, it may take time to execute the command. ■ The PSB assigned state is the state that the PSB is reserved for incorporating to the specified PPAR. By restarting the PPAR or executing addboard(8), the PSB is incorporated. You cannot incorporate or assign the PSB that has already been assigned to any other PPAR. ■ The system board pool is the state that the PSB does not belong to any PPAR. Because the PSB in system board pool state does not belong to any PPAR, you can assign or incorporate it freely as long as it is defined in PCL. ■ Even if the PPAR is not running, you can execute this command. However, to execute this command with specifying -c unassign or -c disconnect while the PPAR is running, the Logical Domains (LDoms) Manager needs to be running. 	

- When the PPAR is running in the factory-default state, an error is produced if -m unbind=none is specified. When the PPAR is running in the factory-default state, specify either -m unbind=resource or -m unbind=shutdown.
- If the PPAR DR feature is disabled, deleteboard -c unassign or deleteboard -c disconnect cannot be executed when the PPAR is running. Please refer to setpparmode(8) and showpparmode(8) for details on the PPAR DR feature.
- If CPU Activation error occurs in a PPAR, deleteboard -c unassign or deleteboard -c disconnect cannot be executed when the PPAR is running.

EXAMPLES

EXAMPLE 1 Put PSB00-0, 01-0, 02-0, 03-0 in the system board pool (execute the following command when the PPAR is powered off)..

```
XSCF> deleteboard -c unassign 00-0 01-0 02-0 03-0
PSB#00-0 will be unassigned from PPAR immediately. Continue? [y|n] :y
PSB#01-0 will be unassigned from PPAR immediately. Continue? [y|n] :y
PSB#02-0 will be unassigned from PPAR immediately. Continue? [y|n] :y
PSB#03-0 will be unassigned from PPAR immediately. Continue? [y|n] :y
```

EXAMPLE 2 Reserve the PSBs 00-0, 01-0, 02-0, and 03-0 for releasing.

```
XSCF> deleteboard -c reserve 00-0 01-0 02-0 03-0
PSB#00-0 will be unassigned from PPAR after the PPAR restarts.
Continue? [y|n] :y
PSB#00-0 will be unassigned from PPAR after the PPAR restarts.
Continue? [y|n] :y
PSB#00-0 will be unassigned from PPAR after the PPAR restarts.
Continue? [y|n] :y
PSB#00-0 will be unassigned from PPAR after the PPAR restarts.
Continue? [y|n] :y
```

EXAMPLE 3 Put PSB01-0 in the system board pool (execute the following command when the PPAR is powered off)

```
XSCF> deleteboard -c configure -p 0 01-0
PSB#01-0 will be configured into PPAR-ID 0. Continue? [y|n] :y
Start connecting PSB to PPAR. [3600sec]
0..... 30..... 60..... 90..... 120..... 150..... 180..... 210....end
Connected PSB to PPAR.
Start configuring PSB to Logical Domains (LDoms) Manager. [1800sec]
0..... 30..... 60..... 90..... 120end
Configured PSB to Logical Domains (LDoms) Manager.
Operation has completed
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

deleteboard(8)

SEE ALSO

**addboard(8), replacefru(8), setpcl(8), setupfru(8), showboards(8),
showpcl(8), showfru(8), showpparstatus(8)**

NAME	deletecodactivation - Deletes the CPU Activation key from the XSCF.
SYNOPSIS	deletecodactivation [-f] [-q] -{y n}] -i <i>key-index</i> deletecodactivation -h
DESCRIPTION	deletecodactivation is a command to delete the specified CPU Activation key from the XSCF. Note – For details on the CPU Activation key, see the <i>Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide</i> . The system checks the number of CPU Activations and the number of CPU core resource in use. If deleting a CPU Activation key results in the number of CPU Activations being lower than the assigned number of CPU core resource, the CPU Activation key is not deleted from the XSCF. To delete the CPU Activation key in this case, you need to reduce the assigned number of CPU core resource. Use <i>setcod(8)</i> to change the assigned number of CPU Activations.
Privileges	To execute this command, <i>platadm</i> privilege is required. For details on user privileges, see <i>setprivileges(8)</i> .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -f Deletes the specified CPU Activation key forcibly from the XSCF. -h Displays the usage. Specifying this option with another option or operand causes an error. -i <i>key-index</i> Specifies the administration number of the CPU Activation key to be deleted from the XSCF. Use <i>showcodactivation(8)</i> to check the administration number. -n Automatically responds to prompt with "n" (no). -q Prevents display of messages, including prompt, for standard output. -y Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
EXAMPLES	EXAMPLE 1 Delete the CPU Activation key with the administration number 10. <pre>XSCF> deletecodactivation -i 10 Above Key will be deleted, Continue? [y n] :y</pre>

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.
SEE ALSO	deletecodactivation(8) , setcod(8) , showcod(8) , showcodactivation(8) , showcodactivationhistory(8) , showcodusage(8)

NAME	deletepowerschedule - Deletes a schedule for powering on/off the automatic power control system (APCS).
SYNOPSIS	deletepowerschedule [[-q] {-y n}] { -r <i>id</i> -p <i>ppar_id</i> -a } deletepowerschedule -h
DESCRIPTION	deletepowerschedule is a command to delete a schedule for powering on/off the APCS.
Privileges	To execute this command, either of the following privileges is required. platadm Enables execution for all PPARs. pparamd Enables execution for PPARs for which you have administration privilege.
	For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -a Deletes all the schedule data. -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -p <i>ppar_id</i> Specifies PPAR-ID for deleting a schedule. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> . All the schedules which are set to the specified PPAR-ID are deleted. -q Prevents display of messages, including prompt, for standard output. -r <i>id</i> Specifies the schedule data to be deleted. You can check <i>id</i> by using showpowerschedule(8) . -y Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ By using showpowerschedule(8), you can check the contents of the currently set schedule. ■ Use addpowerschedule(8) to set a schedule. ■ Specifying non-existent <i>ppar_id</i> or <i>id</i>, or invalid option causes an error. ■ The schedule data which has been set by using addpowerschedule -a to cover all PPAR will not be deleted by deletepowerschedule -p <i>ppar_id</i>.

deletepowerschedule(8)

	<ul style="list-style-type: none">■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.				
EXAMPLES	<p>EXAMPLE 1 Delete all the schedules set to PPAR-ID 1.</p> <pre>XSCF> deletepowerschedule -p 1 PPAR-ID 1 Power schedule will be deleted, Continue? [y n]:y XSCF></pre> <p>EXAMPLE 2 Delete the schedule set to the schedule ID 3.</p> <pre>XSCF> deletepowerschedule -r 3 ID 3 Power schedule will be deleted, Continue? [y n]:y XSCF></pre>				
EXIT STATUS	The following exit values are returned. <table><tr><td>0</td><td>Indicates normal end.</td></tr><tr><td>>0</td><td>Indicates error occurrence.</td></tr></table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	addpowerschedule (8) , setpowerschedule (8) , showpowerschedule (8)				

NAME	deleteuser - Deletes an XSCF user account.
SYNOPSIS	deleteuser <i>user</i> deleteuser -h
DESCRIPTION	<p>deleteuser is a command to delete an XSCF user account.</p> <p>Executing deleteuser deletes the user account and all the data associated with the user account, such as a password and a public key for Secure Shell (SSH).</p> <p>When you delete a user account, the XSCF shell and the XSCF Web session which are being executed on the deleted user account end at the same time. Because the user account is deleted from the system, you cannot use the user account for login. You cannot delete the user account that is currently used for login.</p>
Privileges	<p>To execute this command, useradm privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error.
OPERANDS	<p>The following operands are supported.</p> <ul style="list-style-type: none"> <i>user</i> Specifies the XSCF user account to be deleted.
EXAMPLES	<p>EXAMPLE 1 Delete an XSCF user account.</p> <pre>XSCF> deleteuser jsmith</pre>
EXIT STATUS	<p>The following exit values are returned.</p> <ul style="list-style-type: none"> 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	adduser(8) , disableuser(8) , enableuser(8) , showuser(8)

`deleteuser(8)`

NAME	diagxbu - Diagnose crossbar cable and crossbar unit (XBU).
SYNOPSIS	<pre>diagxbu [[-q] -{y n}] -b bb_id -t target_bb [-t target_bb...] diagxbu [[-q] -{y n}] -b bb_id -p ppar_id diagxbu -h</pre>
DESCRIPTION	<p>diagxbu is a command to diagnose a crossbar unit or cables which are connected to a crossbar unit, that is mounted on a SPARC M10-4S chassis or crossbar box.</p> <p>The crossbar unit is mounted on SPARC M10-4S or a crossbar box, connected with a crossbar cable. The diagxbu conducts diagnosis by checking whether the connections between SPARC M10-4S chassis, connected by crossbar cables, are being properly established. To execute diagxbu, specifying SPARC M10-4S to be diagnosed, and SPARC M10-4S to be communicated are required.</p> <p>SPARC M10-4 to be diagnosed can be specified with -b <i>bb_id</i>. To start the diagnosis, the system board (PSB) on SPARC M10-4S must be in system board pool, or powered off.</p> <p>Any of the following SPARC M10-4S should be specified, according to the status of PSB on SPARC M10-4S, as the communication target.</p> <ul style="list-style-type: none"> ■ When a PSB is in the system board pool, or its power is off, specify SPARC M10-4S by -t <i>target_bb</i>. ■ Several SPARC M10-4S chassis can be specified as the target of -t <i>target_bb</i>. In such a case, PSBs on SPARC M10-4S must not be incorporated in PPARs, or such PPARs should be in a powered off state. ■ When a PSB is running on a physical partition (PPAR), specify PPAR by -p <i>ppar_id</i>. Only one -p <i>ppar_id</i> can be specified. At this time, the PPAR must be in a powered on state. <p>This command is not supported on SPARC M10-1 and SPARC M10-4.</p>
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>

OPTIONS	The following options are supported.
	-b <i>bb_id</i> Specifies BB-ID of a SPARC M10-4S to diagnose. For <i>bb_id</i> , integer 0-3 can be specified on SPARC M10-4S (without a crossbar box), and 0-15 can be specified on SPARC M10-4S (with a crossbar box). It can be used along with -t or -p.
	-h Displays the usage. Specifying this option with another option or operand causes an error.
	-n Automatically responds to prompt with "n" (no).
	-p <i>ppar_id</i> Specifies the PPAR-ID of the PPAR on which the destination SPARC M10-4S is running. <i>ppar_id</i> can be specified with an integer 0-15 depending on the system configuration.
	-q Prevents display of messages, including prompt, for standard output.
	-t <i>target_bb</i> Specifies BB-ID of the target SPARC M10-4S. For <i>bb_id</i> , integer 0-3 can be specified on SPARC M10-4S (without a crossbar box), and 0-15 can be specified on SPARC M10-4S (with a crossbar box).
	-Y Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ An error occurs when a PSB on SPARC M10-4S specified with -b <i>bb_id</i> or -t <i>target_bb</i> is in one of the following statuses. <ul style="list-style-type: none"> ■ Being included in a PPAR and this PPAR is running. ■ Being included in a PPAR and this PPAR is at OpenBoot PROM of the booting process. ■ Being included in a PPAR and this PPAR is being powered on, powered off, or in the resetting process. ■ addboard(8) and deleteboard(8) are in execution for PSB. ■ An error occurs when a PPAR specified with -p <i>ppar_id</i> is in one of the following states. <ul style="list-style-type: none"> ■ No PPAR exists. ■ PPAR is not running. ■ An error occurs when testsb(8) or diagxbu(8) is being performed. ■ Diagnosis is terminated when [Ctrl]+[C] has been entered while executing diagnosis of a crossbar cable or a crossbar unit.

- Diagnosis of the crossbar unit cannot be executed on a system which consists only one SPARC M10-4S chassis.

- Diagnosis target and connection target SPARC M10-4S chassis and PPAR is selected in the following ways:

- Diagnosing crossbar boxes

When replacing a crossbar box etc., use the following procedure to diagnose whether connections using crossbar boxes are properly established.

1. Execute the showboards - a command and check that power is turned off (the "Pwr" column shows "n" and the "Test" column does not show "Testing") and the "Fault" column shows "Normal" in all the PSBs.

2. Among the PSBs in 1., select the SPARC M10-4S chassis that is to be diagnosed and specify all the other PSBs as the target of connection to execute the diagxbu.

To conduct diagnosis with the above procedure, at least two PSBs , whose power has been turned off and the "Fault" column in the output of the showboards - a command shows "Normal", is necessary. If there are no more than one such PSBs or if there are no PPARs which should be powered off before replacing crossbar boxes, conduct diagnosis by specifying a running PPAR as follows. In such a case, the target SPARC M10-4S chassis and PPAR is to be selected in the following way.

[In case the diagnosis target crossbar box is XBBOX#80 or XBBOX#81]

There must be at least two BB-IDs with the range of 0 to 11 among the BB-IDs included in PPAR (specified by the -p) and the BB-IDs which are specified by the -b.

[In case the diagnosis target crossbar box is XBBOX#82 or XBBOX#83]

There must be at least one BB-ID within the range of 0 to 11 among the BB-IDs included in PPAR (specified by the -p) and at least one BB-ID within the range of 12 to 15 among the BB-IDs which are specified by the -b.

However, it is not possible to conduct diagnosis on crossbar boxes if there is no powered off PSBs or if the system is comprised with only one SPARC M10-4S chassis.

- Diagnosing SPARC M10-4S chassis

After replacing a SPARC M10-4S chassis, execute any of the following procedures to diagnose whether connections using SPARC M10-4S chassis is properly established.

- If there is a plan to add in a configured PPAR, execute diagxbu by specifying that PPAR-ID with the -p and the target BB-ID with the -b.

- In case of a PPAR, which has been planned to be added and the configuration has been determined but the PPAR has not yet constructed , execute the diagxbu with the -b, whose parameter is the BB-ID of the constituent SPARC M10-4S chassis that is to be diagnosed; all the other SPARC M10-4S chassis is to be specified with the -t.
- In case of a PPAR, which has been planned to be added, check the status of all the PSBs with the showboards -a and if any PSB is in a powered off state (the "Pwr" column shows "n" and the "Test" column does not show "Testing") and the "Fault" column shows "Normal", use any of their BB-ID with the -t , but if there are no such PSBs, use any of the PPAR-IDs with the -p when executing the diagxbu.

EXAMPLES

EXAMPLE 1 Diagnosing the crossbar cable that connects BB-ID 0 and BB-ID 1, and the crossbar unit. (In this case diagnosis completed successfully.)

```
XSCF> diagxbu -b 0 -t 1
XBU diagnosis is about to start, Continue? [y|n] :y
Power on sequence started. [7200sec]
0..... 30..... 60..... 90..... 120end
XBU diagnosis started. [7200sec]
0..... 30..... 60..... 90..... 120end
Power off sequence started. [1200sec]
0..... 30..... 60..... 90..... 120end
completed.

*Note*
Please confirm the error of XBU by "showlogs error".
In addition, please confirm the degraded of XBU by "showstatus".
```

EXAMPLE 2 Diagnosing the crossbar cable and the crossbar unit that connects PPAR-ID 0 and BB-ID 1. (In this case diagnosis completed successfully.)

```
XSCF> diagxbu -b 1 -p 0
XBU diagnosis is about to start, Continue? [y|n] :y
Power on sequence started. [7200sec]
0..... 30..... 60..... 90..... 120end
XBU diagnosis started. [7200sec]
0..... 30..... 60..... 90..... 120end
completed.
Power off sequence started. [1200sec]
0..... 30..... 60..... 90..... 120end
completed.

*Note*
Please confirm the error of XBU by "showlogs error".
In addition, please confirm the degraded of XBU by "showstatus".
```

EXAMPLE 3 Diagnosing the crossbar cable that connects PPAR-ID 0 and BB-ID 1, or cross-

bar unit. (The case where an error has been detected in the diagnosis.)

```
XSCF> diagxbu -b 1 -p 0
XBU ddiagnosis is about to start, Continue? [y|n] :y
Power on sequence started. [7200sec]
 0..... 30..... 60..... 90.....120end
.
.
completed.
Power off sequence started. [1200sec]
 0..... 30..... 60..... 90.....120end
completed.
A Hardware error occurred by XBU diagnosis.

*Note*
Please confirm the error of XBU by "showlogs error".
In addition, please confirm the degraded of XBU by "showstatus".
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **showlogs (8), showstatus (8), testsb (8)**



NAME	disableuser - Disables an XSCF user account.				
SYNOPSIS	disableuser <i>user</i> disableuser -h				
DESCRIPTION	<p>disableuser is a command to disable an XSCF user account. This does not affect the session that you currently log in. The disabled user account cannot be used for the next and later login. This setting is applied not only to the Secure Shell (SSH) but also to the console connected in serial or in Telnet connection. A login to XSCF Web is also disabled.</p> <p>All the data associated to the disabled user account such as a password or SSH key are stored in XSCF. Using enableuser(8) enables the disabled user again.</p>				
Privileges	To execute this command, useradm privilege is required. For details on user privileges, see setprivileges(8) .				
OPTIONS	<p>The following options are supported.</p> <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p>				
OPERANDS	<p>The following operands are supported.</p> <p><i>user</i> Specifies the XSCF user account to be disabled.</p>				
EXAMPLES	<p>EXAMPLE 1 Disable an XSCF user account.</p> <pre>XSCF> disableuser jsmith</pre>				
EXIT STATUS	<p>The following exit values are returned.</p> <table> <tr> <td>0</td> <td>Indicates normal end.</td> </tr> <tr> <td>>0</td> <td>Indicates error occurrence.</td> </tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	adduser(8) , deleteuser(8) , enableuser(8) , showuser(8)				

disableuser(8)

NAME	dumpcodactivation - Saves the CPU Activation key in a file.
SYNOPSIS	dumpcodactivation [-v] [-V] [[-q] -{y n}] [-e [-P <i>password</i>]] [-u <i>user</i>] [-p <i>proxy</i>] [-t <i>proxy_type</i>]] <i>url</i> dumpcodactivation -h
DESCRIPTION	dumpcodactivation is a command to save the CPU Activation key, which is set for XSCF, to the specified file. The CPU Activation key which is saved to the file can be restored to XSCF by using the <i>restorecodactivation</i> (8).
Privileges	To execute this command, any of the following privileges is required. <i>platadm</i> , <i>platop</i> , <i>fieldeng</i> For details on user privileges, see <i>setprivileges</i> (8).
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -e Encrypts a file. You can specify a password using -P <i>password</i>. If you omit -P <i>password</i>, it displays a prompt for password entry. When you encrypt and save the CPU Activation key, you need a password for restoring it. If you lose the password, the CPU Activation key cannot be restored. -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -P <i>password</i> Sets a password for encryption. Specify it with the -e option. If you omit the -P option, a prompt for setting a password appears. You can specify this using up to 128 characters. -p <i>proxy</i> Specifies the proxy server to use for transfer. If you omit -t <i>proxy_type</i>, the default proxy type is http. Specify <i>proxy</i> in <i>servername:port</i> format. -q Prevents display of messages, including prompt, for standard output. -t <i>proxy_type</i> Specifies the proxy type. Specify it with the -p option. You can specify any of http, socks4, and socks5. The default is http. -u <i>user</i> Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. You can specify this using up to 127 characters.

	<ul style="list-style-type: none"> -v Displays detailed information. This option is used to diagnose server problems. -V Displays detailed network activities. This option is used to diagnose network and server problems. -Y Automatically responds to prompt with "y" (yes). 				
OPERANDS	The following operands are supported..				
	<p><i>url</i> Specifies URL to be the destination of saving the CPU Activation key. The following types of format are supported.</p> <p><i>http://server[:port]/path/file</i> <i>https://server[:port]/path/file</i> <i>ftp://server[:port]/path/file</i> <i>file:///media/usb_msd/path/file</i></p>				
EXTENDED DESCRIPTION	<p>When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.</p> <p>CPU core activation key can only restore the data that was saved from a system with the same system serial number.</p>				
EXAMPLES	<p>EXAMPLE 1 Save the CPU Activation key on the USB device.</p> <pre>XSCF> dumpcodactivation -v -V file:///media/usb_msd/cpukey.cfg reading database*done creating temporary file ... done starting file transfer ...transfer from '/ssd/dumpcodactivation.mAuleL' to 'file:///media/usb_msd/cpukey.cfg' * Closing connection #0 done removing temporary file ... done operation completed XSCF></pre>				
EXIT STATUS	<p>The following exit values are returned.</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">0</td> <td>Indicates normal end.</td> </tr> <tr> <td>>0</td> <td>Indicates error occurrence.</td> </tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	dumpconfig (8), restorecodactivation (8)				

NAME	dumpconfig - Saves the XSCF configuration information in a file.
SYNOPSIS	dumpconfig [-v] [-V] [[-q] {-y n}] [-e [-P <i>password</i>]] [-c <i>comment</i>] [-u <i>user</i>] [-p <i>proxy</i> [-t <i>proxy_type</i>]] <i>url</i> dumpconfig -h
DESCRIPTION	dumpconfig is a command to save the XSCF configuration information in the specified file. Using restoreconfig(8) enables restoration of the saved configuration information to XSCF.
Privileges	To execute this command, any of the following privileges is required. <code>platadm, platop, fieldeng</code> For details on user privileges, see setprivileges(8).

OPTIONS

The following options are supported.

- c *comment* Sets a comment in the file. If there are several piece of the saved XSCF configuration information, this can be used for categorizing the files. The comment will not be loaded into the XSCF at restoration.
Specify *comment* using up to 132 characters. You can use alphanumeric characters, double quotation marks ("), and spaces. Alphabets are case-sensitive. To use spaces, enclose the entire comment in double quotation marks. No special characters are available.
An example of a comment is shown below.
`-c "This is a valid comment"`
Because spaces are used in the comment without enclosed in double quotation marks, the following example is incorrect.
`-c This is an invalid comment`
Because it includes unavailable special characters, the following example is incorrect.
`-c "This! is @invalid"`
- e Encrypts a file. You can specify a password using -P *password*. If you omit -P *password*, it displays a prompt for password entry. When you encrypt and save the XSCF configuration information, you need a password for restoring it. If you lose the password, the XSCF configuration information cannot be restored.
- h Displays the usage. Specifying this option with another option or operand causes an error.
- n Automatically responds to prompt with "n" (no).
- P *password* Sets a password for encryption. Specify it with the -e option. If you omit the -P option, a prompt for setting a password appears. You can specify this using up to 128 characters.
- p *proxy* Specifies the proxy server to use for transfer. If you omit -t *proxy_type*, the default proxy type is http. Specify *proxy* in *servername:port* format.
- q Prevents display of messages, including prompt, for standard output.
- t *proxy_type* Specifies the proxy type. Specify it with the -p option. You can specify any of http, socks4, and socks5. The default is http.

<ul style="list-style-type: none"> -u <i>user</i> -v -V -y 	<p>Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. You can specify this using up to 127 characters.</p> <p>Displays detailed information. This option is used to diagnose server problems.</p> <p>Displays detailed network activities. This option is used to diagnose network and server problems.</p> <p>Automatically responds to prompt with "y" (yes).</p>
--	--

OPERANDS

The following operands are supported..

<i>url</i>	<p>Specifies URL to be the destination of saving the XSCF configuration information. The following types of format are supported.</p> <p><i>http://server[:port]/path/file</i> <i>https://server[:port]/path/file</i> <i>ftp://server[:port]/path/file</i> <i>file:///media/usb_msd/path/file</i></p>
------------	--

EXTENDED DESCRIPTION

When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

The XSCF settings information can be restored only in the same sever model. Moreover, if restoration is done from data that was saved from a system with a different system serial number, network setup information, CPU core activation key etc. are not restored.

EXAMPLES

EXAMPLE 1 Save the XSCF configuration information on the USB device.

```
XSCF> dumpconfig -v -V file:///media/usb_msd/system.cfg
file '/media/usb_msd/system.cfg' already exists
Do you want to overwrite this file? [y|n]: y
reading database ... .....*done
creating temporary file ... done
starting file transfer ...transfer from '/ssd/dumpconfig.mAuleL' to
'file:///media/usb_msd/system.cfg'
* Closing connection #0
done
removing temporary file ... done
operation completed
XSCF>
```

dumpconfig(8)

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO	dumpcodactivation (8) , restoreconfig (8)
-----------------	---

NAME	enableuser - Enables an XSCF user account.
SYNOPSIS	enableuser <i>user</i> enableuser -h
DESCRIPTION	enableuser is a command to enable the disabled XSCF user account. The enabled user account becomes available for login to the console by using Secure Shell (SSH). Using enableuser enables the account that is disabled by using disableuser(8).
Privileges	To execute this command, useradm privilege is required. For details on user privileges, see setprivileges(8).
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
OPERANDS	The following operands are supported. <i>user</i> Specifies the XSCF user account to be enabled.
EXAMPLES	EXAMPLE 1 Enable a user account. XSCF> enableuser jsmith
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	adduser(8) , deleteuser(8) , disableuser(8) , showuser(8)

enableuser(8)

NAME	flashupdate - Updates the firmware.																
SYNOPSIS	flashupdate -c check -m {xcp xscf} -s <i>version</i> flashupdate [[-q] -{y n}] -c update -m {xcp xscf} [-f] -s <i>version</i> flashupdate -c sync flashupdate -h																
DESCRIPTION	<p>flashupdate is a command to update the firmware.</p> <p>This command updates the following firmware. By specifying -c check, you can check the availability of update in advance.</p> <ul style="list-style-type: none"> ■ Updating the entire XSCF Control Package (XCP) (XSCF firmware, Hypervisor firmware, OpenBoot PROM firmware, and Power-On Self-Test (POST) firmware) ■ Updating XSCF firmware only 																
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>																
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-c check</td> <td>Checks whether or not the specified firmware can be updated.</td> </tr> <tr> <td>-c update</td> <td>Updates the specified firmware. When the system is in the multi-XSCF configuration, all XSCFs are updated at the same time.</td> </tr> <tr> <td>-c sync</td> <td>When the system is in multi-XSCF configuration, this option matches the version of each XSCF firmware. It is used when the FRU including XSCF is replaced.</td> </tr> <tr> <td>-f</td> <td>To update the firmware to the specified version, it is overwritten even if the same version has already been written.</td> </tr> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-m xcp</td> <td>Targets the entire XCP. Specify this option to check, register, and update the firmware.</td> </tr> <tr> <td>-m xscf</td> <td>Targets the XSCF firmware. Specify this option to check or update the firmware.</td> </tr> <tr> <td>-n</td> <td>Automatically responds to prompt with "n" (no).</td> </tr> </table>	-c check	Checks whether or not the specified firmware can be updated.	-c update	Updates the specified firmware. When the system is in the multi-XSCF configuration, all XSCFs are updated at the same time.	-c sync	When the system is in multi-XSCF configuration, this option matches the version of each XSCF firmware. It is used when the FRU including XSCF is replaced.	-f	To update the firmware to the specified version, it is overwritten even if the same version has already been written.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-m xcp	Targets the entire XCP. Specify this option to check, register, and update the firmware.	-m xscf	Targets the XSCF firmware. Specify this option to check or update the firmware.	-n	Automatically responds to prompt with "n" (no).
-c check	Checks whether or not the specified firmware can be updated.																
-c update	Updates the specified firmware. When the system is in the multi-XSCF configuration, all XSCFs are updated at the same time.																
-c sync	When the system is in multi-XSCF configuration, this option matches the version of each XSCF firmware. It is used when the FRU including XSCF is replaced.																
-f	To update the firmware to the specified version, it is overwritten even if the same version has already been written.																
-h	Displays the usage. Specifying this option with another option or operand causes an error.																
-m xcp	Targets the entire XCP. Specify this option to check, register, and update the firmware.																
-m xscf	Targets the XSCF firmware. Specify this option to check or update the firmware.																
-n	Automatically responds to prompt with "n" (no).																

<p>-q</p> <p>-s <i>version</i></p> <p>-y</p>	<p>Prevents display of messages, including prompt, for standard output.</p> <p>Specifies the firmware version for checking, registering, or updating the firmware. <i>version</i> specifies the major version and minor version in decimal. This can be specified using the following format.</p> <p style="text-align: center;"><i>xxyy</i></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; text-align: center;"><i>xx</i></td><td style="width: 70%; text-align: center;">Major version</td></tr> <tr> <td style="text-align: center;"><i>yy</i></td><td style="text-align: center;">Minor version</td></tr> </table> <p>Automatically responds to prompt with "y" (yes).</p>	<i>xx</i>	Major version	<i>yy</i>	Minor version
<i>xx</i>	Major version				
<i>yy</i>	Minor version				

EXTENDED DESCRIPTION

- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
- When XCP or XSCF firmware is updated, the XSCF is reset. Therefore, while the XSCF is in LAN connection, it is once disconnected.
- If there is any faulty Field Replaceable Unit (FRU), the firmware cannot be updated. Correct the fault of FRU before updating it.
- From XCP 2050 onwards, when firmware update is completed, the master XSCF and XSCF in the standby status is automatically switched.
- Do not execute the `switchscf(8)` when running the `flashupdate`.

EXAMPLES

EXAMPLE 1 Confirm whether or not the firmware can be updated to Version 0101.

```
XSCF> flashupdate -c check -m xcp -s 0101
```

EXAMPLE 2 Update the firmware from Version 0101 to Version 0102.

```
XSCF> flashupdate -c update -m xcp -s 0102
The XSCF will be reset. Continue? [y|n] :y
XCP update is started. [2400sec]
0..... 30..... 60..... 90..... 120..... 150..... 180..... 210..... 240.....-
270..... 300..... 330..... 360..... 390..... 420..... 450..... 480..... 510.....|
540..... 570..... 600
```

EXAMPLE 3 Update the XSCF firmware from Version 0101 to Version 0102.

```
XSCF> flashupdate -c update -m xscf -s 0102
The XSCF will be reset. Continue? [y|n] :y
XCP update is started. [2400sec]
0..... 30..... 60..... 90..... 120..... 150..... 180..... 210..... 240.....-
270..... 300..... 330..... 360..... 390..... 420..... 450..... 480..... 510.....|
540..... 570..... 600
```

EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
--------------------	--

SEE ALSO	version (8)
-----------------	--------------------

`flashupdate(8)`



NAME	getflashimage - Downloads an XSCF Control Package (XCP) image file.
SYNOPSIS	<pre>getflashimage [-v] [[-q] -{y n}] [-u user] [-p proxy [-t proxy_type]] url getflashimage -l getflashimage [[-q] -{y n}] [-d] getflashimage -h</pre>
DESCRIPTION	<p>getflashimage is a command to download an XCP image file used for flashupdate(8).</p> <p>If there is an older version of XCP image file on the service processor, it is deleted before the new version image file is downloaded. After the image file is downloaded successfully, the correctness of the file is verified, and the MD5 checksum value is displayed.</p>
Privileges	<p>To execute this command, platadm or fieldeng privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>
OPTIONS	<p>The following options are supported..</p> <ul style="list-style-type: none"> -d Deletes all the older versions of the XCP image file on the service processor. -h Displays the usage. Specifying this option with another option or operand causes an error. -l Displays the list of the XCP image files on the service processor. -n Automatically responds to prompt with "n" (no). -p <i>proxy</i> Specifies the proxy server to use for transfer. If you omit -t <i>proxy_type</i>, the default proxy type is http. Specify <i>proxyinservername:port</i> format. -q Prevents display of messages, including prompt, for standard output. -t <i>proxy_type</i> Specifies the proxy type. Specify it with the -p option. You can specify any of http, socks4, and socks5. The default is http. -u <i>user</i> Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. -v Displays detailed information. This option is used to diagnose network and server problems. -y Automatically responds to prompt with "y" (yes).

OPERANDS

The following operands are supported..

url

Specify URL for downloading the firmware image. The following types of format are supported.

```
http://server[:port]/path/file
https://server[:port]/path/file
ftp://server[:port]/path/file
file:///media/usb_msd/path/file
```

file is replaced with any of the following values.

```
BBXCPvvvv.tar.gz
PCIBOXvvvv.tar.gz
```

Also, *vvvv* is replaced with the version number consisting of four characters.

Extended description

When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Download an image file from the HTTP server.

```
XSCF> getflashimage ftp://imageserver/images/BBXCP1041.tar.gz
Existing versions:
Version Size Date
Existing versions:
Version Size Date
BBXCPXXXX.tar.gz 46827123 Wed Mar 14 19:11:40 2007
Warning: About to delete existing versions.
Continue? [y|n]: y
Removing BBXCPXXXX.tar.gz.
0MB received
1MB received
2MB received
...
43MB received
44MB received
45MB received
Download successful: 46827KB at 1016.857KB/s
Checking file...
MD5: e619e6dd367c888507427e58cdb8e0a0
```

EXAMPLE 2 Download an image file from the FTP server.

```
XSCF> getflashimage ftp://imageserver/images/BBXCP1041.tar.gz
Existing versions:
Version Size Date
BBXCPXXXX.tar.gz 46827123 Wed Mar 14 19:11:40 2007
Warning: About to delete existing versions.
```

```
Continue? [y|n]: y
Removing BBXCPXXXX.tar.gz.
 0MB received
 1MB received
 2MB received
...
 43MB received
 44MB received
 45MB received
Download successful: 46827KB at 1016.857KB/s
Checking file...
MD5: e619e6dd367c888507427e58cdb8e0a1
```

EXAMPLE 3 Download an image file by using the HTTP proxy server with port number 8080.

```
XSCF> getflashimage - p proxyserver:8080 http://imageserver/
images/BBXCP1041.tar.gz
Existing versions:
  Version          Size      Date
  BBXCPXXXX.tar.gz 46827123  Wed Mar 14 19:11:40 2007
Warning: About to delete existing versions.
Continue? [y|n]: y
Removing BBXCPXXXX.tar.gz.
 0MB received
 1MB received
 2MB received
...
 43MB received
 44MB received
 45MB received
Download successful: 46827KB at 1016.857KB/s
Checking file...
MD5: e619e6dd367c888507427e58cdb8e0a2
```

EXAMPLE 4 Download the image file by using the user name and its password.

```
XSCF> getflashimage -u jsmith http://imageserver/images/
BBXCP1041.tar.gz
Existing versions:
      Version          Size        Date
      BBXCPXXXX.tar.gz    46827123   Wed Mar 14 19:11:40 2007
Warning: About to delete existing versions.
Continue? [y|n]: y
Removing BBXCPXXXX.tar.gz.
Password: [not echoed]
      0MB received
      1MB received
      2MB received
      ...
      43MB received
      44MB received
      45MB received
Download successful: 46827KB at 1016.857KB/s
Checking file...
MD5: e619e6dd367c888507427e58cdb8e0a3
```

EXAMPLE 5 Download an image file from the USB memory stick.

```
XSCF> getflashimage file:///media/usb_msd/images/BBXCP1041.tar.gz
Existing versions:
      Version          Size        Date
      BBXCPXXXX.tar.gz    46827123   Wed Mar 14 19:11:40 2007
Warning: About to delete existing versions.
Continue? [y|n]: y
Removing BBXCPXXXX.tar.gz.
Mounted USB device
      0MB received
      1MB received
      ...
      44MB received
      45MB received
Download successful: 46827 Kbytes in 109 secs (430.094 Kbytes/sec)
Checking file...
MD5: e619e6dd367c888507427e58cdb8e0a4
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

flashupdate (8)

NAME	getremotepwrmgmt - Obtains the settings information of the remote power management function.
SYNOPSIS	getremotepwrmgmt { -G <i>groupid</i> } [-v] [-u <i>user</i>] [-X <i>proxy</i> [-t <i>proxy_type</i>]] [-y -n] <i>configuration_file</i> getremotepwrmgmt -h
DESCRIPTION	getremotepwrmgmt is a command to obtain the settings information of remote power management group and to save it as a management information file in CSV format.
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -G <i>groupid</i> Specifies one group ID of the remote power management group. You can specify a value from 1 to 32. -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -t <i>proxy_type</i> Specifies the proxy type. Specify it with the -X option. You can specify any of http, socks4, and socks5. The default is http. -u <i>user</i> Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. -v Displays detailed information. This option is used to diagnose network and server problems. -X <i>proxy</i> Specifies the proxy server to use for obtaining information. If you omit -t <i>proxy_type</i>, the default proxy type is http. Specify <i>proxy</i> in <i>servername:port</i> format. -y Automatically responds to prompt with "y" (yes).

OPERANDS

The following operands are supported.

configuration_file Specifies URL to be the destination of saving the management information file.

The following types of format are supported.

http://server[:port]/path/file
https://server[:port]/path/file
ftp://server[:port]/path/file
file:///media/usb_msd/path/file

EXTENDED DESCRIPTION

- If non-existing group ID is specified for the -G option, an error occurs.
 - You can use the management information file of the remote power management group obtained with getremotepwrmgmt as it is for when you execute setremotepwrmgmt -c config.
 - Set the format of the management information file to CSV. For details on the format of the management information file, see the *PFujitsu M10/SARC M10 Systems System Operation and Administration Guide*.
 - It is necessary to create the management information file for each group. If one management information file has multiple group IDs, it causes an error.
 - If the password to access the distribution destination of the information is not set in the management information file and the default user is not specified, it is required to enter the password when distributing the information of the remote power management group.
 - Use the following procedure for updating the settings of the existing remote power management group.
1. Execute getremotepwrmgmt to obtain the settings information of the remote power management group to be updated as management information file.
 2. Edit the file obtained in Step 1.
 3. Execute setremotepwrmgmt -c disable to disable the remote power management function of the remote power management group to be updated.
 4. Specify the management information file that was edited in Step 2, and execute setremotepwrmgmt -c config to update the settings of the remote power management group.
 5. Execute setremotepwrmgmt -c enable to enable the remote power management function of the updated remote power management group.

EXAMPLES

EXAMPLE 1 On the FTP site, obtain the management information file of the remote power

management group 1.

```
XSCF> getremotepwrmgmt -G 1 -X proxyserver:8080 -u jsmith ftp://
dataserver/data/rpm_group.1.conf
Group#01 remote power management group information is got. Continue? [y|n]:
Y
transfer from '/tmp/rpm_group.1.conf' to 'ftp://dataserver/data/
rpm_group.1.conf'
Password:
* About to connect() to proxyserver port 8080
* Trying proxyserver... * connected
* Connected to proxyserver (xxx.xxx.xxx.xxx) port 8080
* Proxy auth using (nil) with user ''
* Server auth using Basic with user 'jsmith'
> PUT ftp://dataserver/data/rpm_group.1.conf HTTP/1.1
Authorization: Basic bHdhbmc6bHdhbmc=
User-Agent: dumpconfig
Host: dataserver:21
Pragma: no-cache
Accept: */*
Content-Length: 24720
Expect: 100-continue
< HTTP/1.1 100 Continue
< HTTP/1.1 200 OK
< Server: Sun-Java-System-Web-Proxy-Server/4.0
< Date: Mon, 04 Aug 2012 16:46:11 GMT
< Transfer-encoding: chunked
* Connection #0 to host proxyserver left intact
* Closing connection #0
The command completed successfully.
XSCF>
```

EXAMPLE 2 On the http site, obtain the management information file of the remote power management group 1.

```
XSCF> getremotepwrmgmt -G 1 -X proxyserver:8080 -u jsmith http://
dataserver/data/rpm_group.1.conf
Group#01 remote power management group information is got. Continue? [y|n]:
Y
The command completed successfully.
XSCF>
```

EXAMPLE 3 On the USB device, obtain the management information file of the remote power management group 1.

```
XSCF> getremotepwrmgmt -G 1 file:///media/usb_msd/rpm_group.1.conf
Group#01 remote power management group information is got. Continue? [y|n]:
Y
Making sure mount point is clear
Trying to mount USB device /dev/sdal as /media/usb_msd
Mounted USB device
file '/media/usb_msd/rpm_group.1.conf' already exists
Do you want to overwrite this file? [y|n]: Y
```

getremotepwrmgmt(8)

```
removing file 'file:///media/usb_msd/rpm_group.1.conf' ... done
reading database ... .....*done
creating temporary file ... done
starting file transfer ...transfer from '/tmp/rpm_group.1.conf.HE1RZa' to
'file:///media/usb_msd/rpm_group.1.conf'
done
removing temporary file ... done
Unmounted USB device
The command completed successfully.
XSCF>
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

clearremotepwrmgmt(8) , **setremotepwrmgmt(8)** , **showremotepwrmgmt(8)**

NAME	initbb - detach the SPARC M10-4S and the crossbar box from the system and initialize it to the factory default
SYNOPSIS	initbb [[-q] -{y n}] [-f] -b <i>bb_id</i> initbb -h
DESCRIPTION	initbb detaches the SPARC M10-4S and the crossbar box from the system configuration and initializes it to the factory default. After you executed the initbb , the SPARC M10-4S and the crossbar box will be halted. initbb cannot be used on a SPARC M10-1/M10-4.
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -b <i>bb_id</i> Specifies the SPARC M10-4S or the crossbar box to initialize. In <i>bb_id</i>, you can specify an integer from 0 to 15 in case of SPARC M10-4S, and from 80 to 83 in case of crossbar box. -f Forcibly detach the SPARC M10-4S or the crossbar box even though a system is abnormal condition. -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -q Prevents display of messages, including prompt, for standard output. -y Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ Execute the initbb in the master XSCF. Whether it is the master XSCF or not can be confirmed by using the showbbstatus(8). ■ The initbb cannot initialize the master XSCF. ■ After you executed the initbb, the SPARC M10-4S and the crossbar box will be detached from the system and be halted. To build it into the system again, power off and on the system or add on the target SPARC M10-4S and the crossbar box. ■ By making the serial connection to XSCF on target SPARC M10-4S or the crossbar box, the status and the completion of initialization can be confirmed. ■ To initialize the crossbar box, execute the command while the system power is off.

- To initialize the crossbar box, execute the command after the system turned off. If the system is not turned off, it results in an error.

System turn-off condition means that all PPAR are turned off. If those are up and running, execution of poweroff -a will turn off all PPAR, and then system power will be disconnected. Execute the showhardconf(8) command and see the display of "System_Power:" ("On" or "Off"), to confirm the condition of system power.

- To initialize the SPARC M10-4S, execute the command while the system board on the SPARC M10-4S is in the system board pooling status, or while it is detached from the PPAR configuration. If the system board is not in the system board pooling status, it turns to the system board pooling status. If the system board is built into the PPAR configuration and the PPAR is in operation, it results in an error.
- To initialize the SPARC M10-4S, the PPAR which has the same ID as the target SPARC M10-4S needs to be powered off.
- After initialized the SPARC M10-4S, the PPAR which has the same ID as the target SPARC M10-4S becomes unable to power on. This can be resolved by either of the following methods.
 - Add on the initialized SPARC M10-4S and build it into the system again
 - Change the PPAR configuration to use another PPAR-ID
- When the serial number of the target SPARC M10-4S or the crossbar box has been used as the serial number of the system, it results in an error.
- If "n" is entered for the prompt at the command execution, it ends without initializing the SPARC M10-4S.
- When you specified the -f option, the SPARC M10-4S or the crossbar box is detached from the system configuration even though it is in the abnormal status. However, if the target SPARC M10-4S or the crossbar box is not normal, there is no guarantee that it will be initialized properly.
- After the command was executed, a CPU core Activation key, which had been registered to the system is deleted. To retain a CPU core Activation key, you must save this CPU core Activation key by executing the dumpcodactivation(8) beforehand. Be sure to execute initbb before executing the restorecodactivation(8) for the restoration of the saved CPU core Activation key.

In a case where initbb was executed before saving the CPU core Activation key, you must register a CPU core Activation key again.

- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Initializes BB#01 to the factory default. After executed the command, BB#01

stops.

```
XSCF> initbb -b 1
You are about to initialize BB/XB-Box.
NOTE the following.
1. BB/XB-Box is excluded from the system and halted.
2. PPAR-ID of the same value as BB-ID becomes invalid.

Continue? [y|n] :y
```

EXAMPLE 2 Initialize XBBOX#81. The prompt is automatically given a "y" response. After executed the command, XBBOX#81 stops.

```
XSCF> initbb -y -b 81
You are about to initialize BB/XB-Box.
NOTE the following.
1. BB/XB-Box is excluded from the system and halted.
2. PPAR-ID of the same value as BB-ID becomes invalid.

Continue? [y|n] :y
```

EXAMPLE 3 Initializes BB#01. The prompt is hidden and automatically given a "y" response.

```
XSCF> initbb -q -y -b 1
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

showbbstatus (8)



NAME	ioxadm - Manages the cards connected to the PCI Expansion unit, link card, and host server.
SYNOPSIS	ioxadm [-f] [-A] [-v] [-M] env [-e] [-l] [-t] [target [sensor]] ioxadm [-f] [-A] [-v] [-M] list [<i>target</i>] ioxadm [-f] [-A] [-v] [-M] locator [on off] [<i>target</i>] ioxadm [-f] [-A] [-v] [-M] poweroff <i>target</i> ioxadm [-f] [-A] [-v] [-M] poweron <i>target</i> ioxadm [-f] [-A] [-v] [-M] reset <i>target</i> ioxadm [-f] [-A] [-v] [-M] settled [on off blink] <i>target led_type</i> ioxadm serial <i>target serial_num</i> ioxadm -c check <i>target</i> -s <i>version</i> ioxadm [-f] [-A] [-v] [-M] -c update <i>target</i> -s <i>version</i> ioxadm [-f] [-A] [-M] versionlist [<i>target</i>] ioxadm -h
DESCRIPTION	<p>ioxadm is a command to manage the cards connected to the PCI Expansion unit, link card, and host server.</p> <p>To use ioxadm, it is necessary to specify the operand and the option required for the operand. What can be specified for the target device is a card mounted in the PCI slot built in the host server, PCI Expansion unit, or Field Replaceable Unit (FRU) in the PCI Expansion unit. The cards in the host server are identified by character strings indicating the paths from the host server to the cards.</p> <p>For details, see the section of <i>target</i> of the option.</p>

Privileges	To execute this command, any of the following privileges is required.
Privileges	Operands
platop	env, list, versionlist
platadm	env, list, versionlist, locator, poweroff, poweron
fieldeng	All operands
OPTIONS	For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported.
-A	Hides the headers of outputs and displays only the analyzable outputs. Each field is separated with a single tab.
-c check	Checks whether the firmware can be applied. Checks the firmware of the type/version specified by the operand.
-c update	Updates the firmware of the PCI Expansion unit and link card. Updates the firmware of the version and <i>target</i> specified by the operand.
-f	Executes the command forcibly ignoring the warning.
-h	Displays the usage. Specifying this option with another option or operand causes an error.
-M	Displays text one screen at a time.

-s <i>version</i>	Specifies the version of the firmware. Specifies when checking, registering, or updating the firmware. Specifies the major version and minor version in <i>version</i> continuously.
	The version of firmware is specified by four figures such as "xxyy." The numbers have the following meanings.
<i>xx</i>	Major release number
<i>yy</i>	Minor release number
-v	Displays detailed information. For details, see each operand.
target	Specifies the target device. You can specify any of the cards mounted in the PCI slot built in the host server, PCI Expansion unit or the FRU in the PCI Expansion unit.
	The cards mounted in the slots of the host server are identified by <i>host_path</i> .
	<i>host_path</i> depends on the platform and indicates the path to the slot of the host server in which the card is mounted. <i>host_path</i> is indicated in the following format.
	BB#0-PCI#0, PCI-E slot0
	PCI Expansion unit (<i>box_id</i>) is identified by the serial number.
	To refer to the serial number, use "PCIBOX#nnnn." "nnnn" is the last four digits of the serial number of PCI Expansion unit.
	Depending on the specified contents, only one of the components of PCI Expansion unit may be affected. For example, the IO Board and power supply unit can be turned on and off independently.
	The FRU (<i>fru</i>) in PCI Expansion unit is identified as follows.
	PCIBOX#nnnn/IOB – IO Board
	PCIBOX#nnnn/FANBP – Fan backplane
	PCIBOX#nnnn/PSU#0 – Power supply unit in the rear lower bay
	PCIBOX#nnnn/PSU#1 – Power supply unit in the rear upper bay
	PCIBOX#nnnn/FAN#0 – Fan unit in the front left bay
	PCIBOX#nnnn/FAN#1 – Fan unit in the front central bay
	PCIBOX#nnnn/FAN#2 – Fan unit in the front right bay

OPERANDS	The following operands are supported.
	env [-e] [-l] [-t] [<i>target</i> [<i>sensor</i>]]
	Displays the summary of the environment status of the PCI Expansion unit or link card.
	-e Displays the status regarding electricity (measurement values of the current and voltage, rotation speed of the fan, and settings of the switches).
	-l Displays the status of LED.
	-t Displays the measurement value of the temperature sensor.
	<i>target</i> See the section of <i>target</i> of the option. For the contents unique to the env operand, see the following.
	<i>sensors</i> Specifies the sensor whose data is to be displayed. If not specified, the information on all sensors is displayed. It is specified with <i>target</i> .
	If the FRU in the PCI Expansion unit or card in the slot of the host server is specified as <i>target</i> , env just displays the environment information on the FRU.
	If none of the options, -e, -l or -t is specified, the information on all sensors are displayed. If no sensor is specified, the information on all sensors is displayed. If <i>target</i> is not specified, the information on all PCI Expansion units is displayed.
	If <i>box_id</i> is specified as <i>target</i> , env displays the list of the sensor measurement values for all FRUs and link cards mounted in the specified PCI Expansion unit.
	The options of env can be used in any combinations.

The following information is also applied to `env` and the displayed result.

- The result is displayed in a table format. Each FRU sensor is displayed in the first column. What is entered in the second column is the sensor name. It is displayed as `T_AMBIENT` in the case of the ambient temperature and `V_12V_0V` in the case of the measurement value of the voltage of the 12V rail. The third, fourth, and fifth columns shows the sensor measurement value (`value`), sensor resolution (`Res`), and unit(`Units`), respectively. See Example 1.
- Each FRU has various sensors. To specify multiple values in `sensor`, specify them separating the values with spaces. The values which can be specified in `sensor` are shown in the `Sensor` column of Example 1. `Units` displays the degrees C, voltage, ampere, SWITCH, and RPM.
- The name of `sensor` depends on FRU and varies according to the type of FRU. It may vary among each FRU in some cases.
- If the `-v` option is specified, the detailed information is output. In addition to the normal output, the maximum value and minimum value (Max, Min) supported by the sensor as well as the upper and lower warning thresholds (Min Alarm, Max Alarm) are included in the outputs.
- The LED indicator does not support these fields.
- The field including `"-"` indicates that the setting is not supported. For example, there is no warning threshold regarding the lower limit of the temperature.

`led_type`

Specifies the FRU LED which can be controlled by XSCF. It is specified with the `setled` operand. The following table shows the statuses of the LEDs which can be controlled by the values of the `setled` operand: `off`, `on`, and `blink`. `Y` (yes) shows the controllable LEDs. `N` (no) shows the uncontrollable LEDs.

<code>LED</code>	<code>Name</code>	<code>off</code>	<code>on</code>	<code>blink</code>
<code>LOCATE</code>	<code>Locate</code>	<code>Y</code>	<code>N</code>	<code>Y</code>

* All LED statuses can be set for the `OVERTEMP` LED and the `ACTIVE` LED of the chassis. However, the LED status after change may not be displayed because the status of the LED is frequently updated by hardware.

Note – Other LEDs are not controlled by software. The list of the LEDs included in the system can be displayed by using the `env -l` operand.

list [target]

Displays the list of the PCI Expansion unit managed by the system.

If **list** is executed without specifying *target*, the list of the PCI Expansion unit is displayed. (One PCI Expansion unit is displayed in each line.) Each line includes the identifier unique to PCI Expansion unit and the name unique to the host of the link card. See Example 3.

If the command is executed by specifying the argument of PCI Expansion unit or the path of the link card, a single line including the specified FRU is displayed. If *host path* is specified, only the information of the link card is displayed. If the detailed option [-v] is set, the detailed information of FRU is included in the output. See Example 4 and 5.

locator [on | off] [target]

Sets or inquires the status of the chassis (locator) LED.

If **locator** is executed without specifying an option, the current status of the LED regarding the specified FRU is output.

To use the field of the option, the *target* argument is essential. The only *target* which can be specified is the PCI Expansion unit.

on	Illuminates the LED.
off	Turns off the LED.

The chassis locator is the orange LED. If FRU is specified, the yellow service LED of FRU is used with the chassis (locator) LED.

There is only one FRU which activates the location indicators simultaneously in the chassis of PCI Expansion unit. If the chassis (locator) LED is turned off, the (service) FRU LED stops blinking. See Example 6.

poweroff target

Indicates that the specified FRU was shut down, the corresponding LED was turned on, and the FRU has become removable. If *target* is PSU, use it with the -f.

Note – Do not remove both of the two power supply units (PSU) of the same PCI Expansion unit. If the two power supply units are shut down, the power of PCI Expansion unit cannot be turned on again from the command line. The power of PCI Expansion unit needs to be turned on only from the chassis.

Note – The LED and fan may operate even if one of the power supply units is shut down, because they are powered from two power supply units.

poweron *target*

Recovers all power supply to the IO Boards. Or reactivates the power supply from a removable power source. If a new power supply unit is installed and the POWER switch is turned on, or the IO board is connected to a link card with a power source, the power supplies are automatically turned on. However, as for the power supply units or IO Boards whose power has already been turned off for removal, this command can be used to turn on the power again only if the position of the POWER switch is ON.

reset *target*

Reinitializes the FRU components used for monitoring of the PCI Expansion unit environment. If the IO Board or link card is specified, the bridge controller of the link card is reset and reinitialized. If PCI Expansion unit is specified, the fan controller and demultiplexer of PCI Expansion unit as well as the bridge controller associated with PCI Expansion unit are reset and reinitialized.

setled [on|off|blink] *target led_type*

Sets the LED status.

- | | |
|-------|----------------------|
| off | Turns off the LED. |
| on | Illuminates the LED. |
| blink | Makes the LED blink. |

For details on the LED types, see *led_type*.

The only *target* which can be specified is the PCI Expansion unit.

serial *target serial_num*

Specifies a serial number of the PCI Expansion unit. This operand is used to re-register the serial number of the PCI Expansion unit when replacing the IO board and Fan backplane at a time.

The only *target* which can be specified is the PCI Expansion unit.

versionlist [*target*]

If either the PCI Expansion unit or the link card is specified in the target, the firmware version of each device is compared according to the combination of the PCI Expansion unit and the link card.

If "versionlist" is executed with specifying a target, the comparison result of firmware versions is displayed. Comparison result is displayed in tabular form. Each line contains information on the device name of the PCI Expansion unit, firmware version of the PCI Expansion unit, device name of the link card, firmware version of the link card and the comparison result (mismatch : there is some difference, equal: there is no difference). In case of "mismatch", the respective line starts with an asterisk. Please refer to example 7.

EXAMPLES

EXAMPLE 1 Display the measurement values of the temperature, voltage, current, and fan rotation speed sensors.

```
XSCF> ioxadm env -te PCIBOX#A3B5
Location Sensor Value Res Units

PCIBOX#A3B4/PSU#0 FAN 3224.324 - RPM
PCIBOX#A3B4/PSU#1 FAN 3224.324 - RPM
PCIBOX#A3B4/FAN#0 FAN 3522.314 - RPM
PCIBOX#A3B4/FAN#1 FAN 3522.314 - RPM
PCIBOX#A3B4/FAN#2 FAN 3522.314 - RPM
PCIBOX#A3B4/FAN#0 FAN 3522.314 - RPM
PCIBOX#A3B4/IOB T_INTAKE 32.000 - C
PCIBOX#A3B4/IOB T_PART_NO1 32.000 - C
PCIBOX#A3B4/IOB T_PART_NO2 32.000 - C
PCIBOX#A3B4/IOB T_PART_NO3 32.000 - C
PCIBOX#A3B4/IOB V_12_OV 12.400 - V
PCIBOX#A3B4/IOB V_3_3_NO0 3.320 - V
PCIBOX#A3B4/IOB V_3_3_NO1 3.310 - V
PCIBOX#A3B4/IOB V_3_3_NO2 3.310 - V
PCIBOX#A3B4/IOB V_3_3_NO3 3.320 - V
PCIBOX#A3B4/IOB V_1_8V 1.820 - V
PCIBOX#A3B4/IOB V_0_9V 0.910 - V
```

EXAMPLE 2 Display all sensor measurement values regarding one link. Hides the header.

```
XSCF> ioxadm -A env BB#00-PCI#1
BB#00-PCI#1 LINK On - LED
BB#00-PCI#1 MGMT On - LED
```

EXAMPLE 3 Display the paths of all PCI Expansion unit or link cards.

```
XSCF> ioxadm list
PCIBOX      Link
PCIBOX#0033 BB#00-PCI#1
PCIBOX#12B4 BB#01-PCI#0
```

In Example 3, the connection between the PCI Expansion unit and the link card in the host server are displayed by `list`. The IO Board and PCIBOX#0033 with a power source are connected to the host server via the link card. `Link` shows the link card connected to the IO Board.

EXAMPLE 4 Display a single PCI Expansion unit.

```
XSCF> ioxadm list PCIBOX#12B4
PCIBOX      Link
PCIBOX#12B4 BB#01-PCI#0
```

EXAMPLE 5 Display the card in the detailed output mode with the header hidden using the host path.

```
XSCF> ioxadm -A -v list BB#00-PCI#1
BB#00-PCI#1 F20 - 000004 5111500-01 On
```

EXAMPLE 6 Display the status of the locator LED of the PCI Expansion unit.

```
XSCF> ioxadm locator PCIBOX#12B4
Location      Sensor  Value Resolution Units
PCIBOX#12B4   LOCATE  Blink -          LED
```

The white LED of the chassis of PCI Expansion unit has a POWER button. This button can be used to switch the status of the white locator LED of the chassis to "Off" or "High-speed." If the locator LED is turned off using this button, the FRU service LED of high-speed blinking is cleared.

EXAMPLE 7 Firmware version of the PCI Expansion unit, firmware version of the link card at the point of connection and the comparison result is displayed.

```
XSCF> ioxadm versionlist
PCIBOX      Ver. Link      Ver. Info
PCIBOX#0033 1010 BB#00-PCI#1 1010 equal
* PCIBOX#12B4 1010 BB#00-PCI#0 1011 mismatch
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |



NAME	nslookup - Refers to the Internet name server for the host name.
SYNOPSIS	nslookup <i>hostname</i> nslookup -h
DESCRIPTION	nslookup is a command to refer to the Internet name server for the specified host name. The following information is displayed.
	Server Name of the Internet name server Address IP address of the Internet name server Name Host name Address IP address of the host
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported.
	-h Displays the usage. Specifying this option with another option or operand causes an error.
OPERANDS	The following operands are supported.
	<i>hostname</i> Specifies the host name set in the network interface. You can specify it by the Fully Qualified Domain Name (FQDN) or an abbreviation.
EXTENDED DESCRIPTION	Executing nslookup with nothing specified causes an error.
EXAMPLES	EXAMPLE 1 Display the information of the host name scf0-hostname0. <pre>XSCF> nslookup scf0-hostname0 Server: server.example.com Address: 192.168.1.100 Name: scf0-hostname0.example.com Address: 192.168.1.101</pre>

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

NAME	password - Sets the password of the XSCF user account and the effective period.				
SYNOPSIS	password [-e <i>days</i> <i>date</i> NEVER] [-i <i>inactive</i>] [-M <i>maxdays</i>] [-n <i>mindays</i>] [-w <i>warn</i>] [<i>user</i>] password -h				
DESCRIPTION	<p>password is a command to set the password of the XSCF user account and the effective period of the password.</p> <p>The password is specified within 32 characters. The following characters can be used.</p> <ul style="list-style-type: none"> ■ abcdefghijklmnopqrstuvwxyz ■ ABCDEFGHIJKLMNOPQRSTUVWXYZ ■ 0123456789 ■ !@#\$%^&*[]{}()_-+=~,><"/"?;:[SPACE] <p>If password is executed with one or more options specified, the effective period of the account is changed. For the default value, see setpasswordpolicy(8).</p> <p>If password is executed with option omitted, the prompt to change the password is displayed.</p> <p>If password is executed with the <i>user</i> operand omitted, the current user account becomes the target.</p> <p>The user account must be local no matter whether the user name is specified. If the user account is not local, the password will cause an error.</p>				
Privileges	<p>To execute this command, the following privileges are required.</p> <table> <tr> <td>useradm</td> <td>The user can configure a password and effective period of any user account unconditionally.</td> </tr> <tr> <td>the other privileges</td> <td>The user can configure only its own password.</td> </tr> </table> <p>For details on user privileges, see setprivileges(8).</p>	useradm	The user can configure a password and effective period of any user account unconditionally.	the other privileges	The user can configure only its own password.
useradm	The user can configure a password and effective period of any user account unconditionally.				
the other privileges	The user can configure only its own password.				

OPTIONS	The following options are supported.
-e <i>days</i> <i>date</i> Never	Sets the number of days of the effective period of the XSCF user account beginning today in <i>days</i> . 0 to 10730 can be specified. If the result of adding the value specified in <i>days</i> to the current date exceeds January 2038, the specified value becomes invalid and the command is not executed. Sets the expiration date of the account in <i>date</i> . Specifies a date before January 2038. This can be specified using one of the following format. <i>mm/dd/yy</i> (10/30/12) <i>yyyy-mm-dd</i> (2012-10-30) <i>yy-mm-dd</i> (12-10-30) <i>dd-Mmm-yy</i> (30-Oct-12) <i>dd-Mmm-yyyy</i> (30-Oct-2012) <i>dd Mmm yy</i> ("30 Oct 12") <i>Mmm dd, yy</i> ("Oct 30, 12") <i>Mmm dd, yyyy</i> ("Oct 30, 2012") If a format including a space is used, put it in double quotation marks (""). This is not case-sensitive.
-h	Never indicates that the account has already expired. This is not case-sensitive.
-i <i>inactive</i>	Displays the usage. Specifying this option with another option or operand causes an error.
	Sets the number of days from the expiration of the password to account lock. This value is assigned when a new user account is created. The default is -1. If the value is -1, it indicates that the account is not locked even after the expiration of the password. This is specified with an integer from -1 to 999999999.

	-M <i>maxdays</i>	Sets the maximum number of days when the password is effective. This value is assigned when a new user account is created. The default is 999999. This is specified with an integer from 0 to 99999999.
	-n <i>mindays</i>	Sets the minimum number of days from a change in the password to the next change. The default is 0. This indicates that the password can be changed at any time. This is specified with an integer from 0 to 99999999.
		This value is assigned to a new user account when the account is created.
	-w <i>warn</i>	Sets the number of days until the actual expiration after the issuance of the alarm of the expiration date of the password to the user. This value is assigned when a new user account is created. The default is 7. This is specified with an integer from 0 to 99999999.
OPERANDS	The following operand is supported.	
EXTENDED DESCRIPTION	<p>user Specifies the XSCF user account name.</p> <ul style="list-style-type: none"> ■ When the password is changed with another user specified in the <i>user</i> operand, the password policy of the system is not reflected automatically. Use the <i>user</i> operand if the default password of a new user is to be created, the user account expires, or you forget the password. Be sure to specify a password in compliance with the password policy of the system when changing the password of another user. You can execute <code>showpasswordpolicy(8)</code> to refer to the current password policy. ■ When the user with the <code>useradm</code> privilege attempts to execute the command, the password and effective period of another user account can be changed, even in a case where the effective period of the specified user account had already been specified with a different value. <p>In this case, the password and effective period will be overwritten with the specified values.</p>	
EXAMPLES	<p>EXAMPLE 1 Set the expiration date of the password to February 2, 2012.</p> <pre>XSCF> password -e 2012-02-02</pre> <p>EXAMPLE 2 Lock the account 10 days after the expiration of the password.</p> <pre>XSCF> password -i 10</pre>	

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO `setpasswordpolicy(8)`, `showpasswordpolicy(8)`

NAME	ping - Sends the ECHO_REQUEST packet of ICMP to the host on the network.
SYNOPSIS	ping [-c <i>count</i>] [-q] <i>host</i> ping -h
DESCRIPTION	ping is a command to extract ECHO_RESPONSE from the specified host or gateway using the ECHO_REQUEST datagram of ICMP. If ping can be executed normally, you can determine that the network between XSCF and the specified host or gateway is normal. It is also possible to measure the network performance from the result.
Privileges	To execute this command, any of the following privileges is required. <ul style="list-style-type: none"> ■ Case that "localhost," the loop-back address "127.0.0.0/8," and the interface of the SSCP link is specified in <i>host</i> fieldeng ■ Other than above No privileges are required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -c <i>count</i> Specifies the frequency to send a packet. If the specified number of packets is sent and the responses are received, ping is terminated. If omitted, packets continue to be sent until termination by the user. -h Displays the usage. Specifying this option with another option or operand causes an error. -q Controls the output. Outputs only at the time of start and termination without displaying the progress.
OPERANDS	The following operands are supported. <ul style="list-style-type: none"> <i>host</i> Specifies the host name or IP address to which a packet is to be sent.
EXAMPLES	EXAMPLE 1 Send a packet to the host name, scf0-hostname0, three times. <pre>XSCF> ping -c 3 scf0-hostname0 PING scf0-hostname0 (192.168.1.100): 56 data bytes 64 bytes from 192.168.1.100: icmp_seq=0 ttl=64 time=0.1 ms 64 bytes from 192.168.1.100: icmp_seq=1 ttl=64 time=0.1 ms 64 bytes from 192.168.1.100: icmp_seq=2 ttl=64 time=0.1 ms</pre>

```
--- scf0-hostname0 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max = 0.1/0.1/0.1 ms
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

NAME	poweroff - Shuts down the physical partition (PPAR).				
SYNOPSIS	poweroff [[-q] -{y n}] [-f] [-M] -p <i>ppar_id</i> poweroff [[-q] -{y n}] [-M] -a poweroff -h				
DESCRIPTION	<p>poweroff is a command to shut down PPAR.</p> <p>Shuts down all of the specified PPARs. PPAR is shut down after the execution of the normal shut down processing for the Oracle Solaris.</p>				
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><i>platadm</i>, <i>fieldeng</i></td><td>Enables execution for all PPARs.</td></tr> <tr> <td><i>pparadm</i>, <i>pparmgr</i></td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table> <p>For details on user privileges, see setprivileges(8).</p>	<i>platadm</i> , <i>fieldeng</i>	Enables execution for all PPARs.	<i>pparadm</i> , <i>pparmgr</i>	Enables execution for PPARs for which you have administration privilege.
<i>platadm</i> , <i>fieldeng</i>	Enables execution for all PPARs.				
<i>pparadm</i> , <i>pparmgr</i>	Enables execution for PPARs for which you have administration privilege.				
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Shuts down all of the PPARs in operation. Only the users with the <i>platadm</i> and <i>fieldeng</i> privileges can specify this option. They shut down even during waiting for warm-up or air-conditioning, or start processing of PPARs. -f Forcibly shuts down the PPAR specified by XSCF. It is used with the -p option. -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. -n Automatically responds to prompt with "n" (no). -p <i>ppar_id</i> Specifies the PPAR-ID of the physical partition to be shut down. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. It does not shut down during waiting for warm-up or air-conditioning, or start processing for PPAR. -q Prevents display of messages, including prompt, for standard output. -y Automatically responds to prompt with "y" (yes). 				

EXTENDED DESCRIPTION

- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
- If the Oracle Solaris of the logical domain is running, the shutdown processing equivalent to the -i 5 option of shutdown(1M) is executed.
- You cannot shut down PPAR if the Oracle Solaris of the logical domain is in operation. Execute poweroff again after completion of start.
- If the Oracle Solaris of the logical domain is running in the single user mode, you cannot shut it down using poweroff. Execute shutdown(1M) by the logical domain.
- When you changed the configuration of the logical domain, execute the 1dm add-spconfig command on the control domain, to store the latest configuration information in XSCF. If you do not store the information, the PPAR stop processing may fail to work properly.
- If poweroff is executed, the shutdown result is displayed in the following format for each of the specified PPARs.

Powering off	Indicates normal end.
Not powering off	Indicates error occurrence, which prevented shutdown. An error message is displayed with the result.

- You can confirm whether each PPAR on the system has shut down by using showdomainstatus(8).

EXAMPLES

EXAMPLE 1 Shut down all PPARs.

```
XSCF> poweroff -a
PPAR-IDs to power off:00,01,02,03
Continue? [y|n]:y
00:Powering off
01:Powering off
02:Powering off
03:Powering off

*Note*
This command only issues the instruction to power-off.
The result of the instruction can be checked by the "showpparprogress".
XSCF>
```

EXAMPLE 2 Shut down PPAR-ID 0.

```
XSCF> poweroff -p 0
PPAR-IDs to power off:00
Continue? [y|n]:y
00:Powering off
```

Note

This command only issues the instruction to power-off.
 The result of the instruction can be checked by the "showpparprogress".
 XSCF>

EXAMPLE 3 Forcibly shut down PPAR-ID 0.

```
XSCF> poweroff -f -p 0  

PPAR-IDs to power off:00  

The -f option will cause domains to be immediately resets.  

Continue? [y|n]:y  

00:Powering off
```

Note

This command only issues the instruction to power-off.
 The result of the instruction can be checked by the "showpparprogress".
 XSCF>

EXAMPLE 4 Shut down PPAR-ID 2. The prompt is automatically given a "y" response.

```
XSCF> poweroff -y -p 2  

PPAR-IDs to power off:02  

Continue? [y|n]:y  

02:Powering off
```

Note

This command only issues the instruction to power-off.
 The result of the instruction can be checked by the "showpparprogress".
 XSCF>

EXAMPLE 5 Shut down PPAR-ID 2. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> poweroff -q -y -p 2  

XSCF>
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

poweron (8), **reset (8)**, **showdomainstatus (8)**, **showpparprogress (8)**

poweroff(8)



NAME	poweron - Starts the physical partition (PPAR).														
SYNOPSIS	poweron [[-q] {-y n}] [-M] -p <i>ppar_id</i> poweron [[-q] {-y n}] [-M] -a poweron -h														
DESCRIPTION	<p>poweron is a command to start PPAR.</p> <p>Starts all of the specified PPARs.</p>														
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><i>platadm</i>, <i>fieldeng</i></td><td>Enables execution for all PPARs.</td></tr> <tr> <td><i>pparamdm</i>, <i>pparmgr</i></td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table>	<i>platadm</i> , <i>fieldeng</i>	Enables execution for all PPARs.	<i>pparamdm</i> , <i>pparmgr</i>	Enables execution for PPARs for which you have administration privilege.										
<i>platadm</i> , <i>fieldeng</i>	Enables execution for all PPARs.														
<i>pparamdm</i> , <i>pparmgr</i>	Enables execution for PPARs for which you have administration privilege.														
OPTIONS	<p>For details on user privileges, see <i>setprivileges(8)</i>.</p> <p>The following options are supported.</p> <table> <tr> <td>-a</td><td>Starts all of the PPARs whose setup has been completed. Only the users with the <i>platadm</i> or <i>fieldeng</i> privilege can specify this option. "PPAR whose setup has been completed" means PPAR whose setting has been completed by <i>setupfru(8)</i>.</td></tr> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-M</td><td>Displays text one screen at a time.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-p <i>ppar_id</i></td><td>Specifies the PPAR-ID of the physical partition to be started. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>.</td></tr> <tr> <td>-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td>-y</td><td>Automatically responds to prompt with "y" (yes).</td></tr> </table>	-a	Starts all of the PPARs whose setup has been completed. Only the users with the <i>platadm</i> or <i>fieldeng</i> privilege can specify this option. "PPAR whose setup has been completed" means PPAR whose setting has been completed by <i>setupfru(8)</i> .	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-n	Automatically responds to prompt with "n" (no).	-p <i>ppar_id</i>	Specifies the PPAR-ID of the physical partition to be started. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .	-q	Prevents display of messages, including prompt, for standard output.	-y	Automatically responds to prompt with "y" (yes).
-a	Starts all of the PPARs whose setup has been completed. Only the users with the <i>platadm</i> or <i>fieldeng</i> privilege can specify this option. "PPAR whose setup has been completed" means PPAR whose setting has been completed by <i>setupfru(8)</i> .														
-h	Displays the usage. Specifying this option with another option or operand causes an error.														
-M	Displays text one screen at a time.														
-n	Automatically responds to prompt with "n" (no).														
-p <i>ppar_id</i>	Specifies the PPAR-ID of the physical partition to be started. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .														
-q	Prevents display of messages, including prompt, for standard output.														
-y	Automatically responds to prompt with "y" (yes).														
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. 														

- If poweron is executed, the start result is displayed in the following format for each of the specified PPARs.

Powering on	Indicates normal start.
Not Powering on	Indicates error occurrence, which prevented start. An error message is displayed with the result.

- You can confirm whether PPAR has been started by using showhardconf(8).

EXAMPLES

EXAMPLE 1 Start all PPARs.

```
XSCF> poweron -a
PPAR-IDs to power on:00,01,02,03
Continue? [y|n]:y
00:Powering on
01:Powering on
02:Powering on
03:Powering on
```

Note

This command only issues the instruction to power-on.
The result of the instruction can be checked by the "showpparprogress".

EXAMPLE 2 Start PPAR-ID 0.

```
XSCF> poweron -p 0
PPAR-IDs to power on:00
Continue? [y|n]:y
00:Powering on
```

Note

This command only issues the instruction to power-on.
The result of the instruction can be checked by the "showpparprogress".

EXAMPLE 3 Start PPAR-ID 0. The prompt is automatically given a "y" response.

```
XSCF> poweron -y -p 0
PPAR-IDs to power on:00
Continue? [y|n]:y
00:Powering on
```

Note

This command only issues the instruction to power-on.
The result of the instruction can be checked by the "showpparprogress".
XSCF>

EXAMPLE 4 Start PPAR-ID 1. The message is hidden and the prompt is automatically giv-

en a "Y" response.

```
XSCF> poweron -q -y -p 1  
XSCF>
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **poweroff(8)**, **reset(8)**, **showpparstatus(8)**, **showpparprogress(8)**

poweron(8)



NAME	prtfru - Displays the FRUID data of the system and PCI Expansion Unit.		
SYNOPSIS	prtfru [-c] [-l] [-M] [-x] [container] prtfru -h		
DESCRIPTION	<p>prtfru is a command to acquire Field Replaceable Unit Identifier (FRUID) from the system and PCI Expansion Unit.</p> <p>The output format is tree structure and the path of FRU is echoed to each container. If the container is found, the data of the container is also output similarly in tree structure.</p> <p>If prtfru is executed with no argument specified, the hierarchy of FRU and all FRUID container data are output. If prtfru is executed, they are output on the screen.</p> <p>Note – The FRU information from the physical partition (PPAR) cannot be acquired even by using this command.</p>		
Privileges	<p>To execute this command, <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>		
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -c Outputs only the container and container data. This option does not output the FRU tree hierarchy. -h Displays the usage. Specifying this option with another option or operand causes an error. -l Outputs only the FRU tree hierarchy. This option does not output the container data. -M Displays text one screen at a time. -x Outputs data with the system identifier of <code>prtfrureg.dtd</code> (SYSTEM) in the XML format. 		
OPERANDS	<p>The following operands are supported.</p> <table> <tr> <td><i>container</i></td> <td>Specifies the path name of specific hardware to store data.</td> </tr> </table>	<i>container</i>	Specifies the path name of specific hardware to store data.
<i>container</i>	Specifies the path name of specific hardware to store data.		
EXTENDED DESCRIPTION	<p>The <code>prtfru(8)</code> command must be executed alone. An error returns when attempting the <code>prtfru(8)</code> command while another user is executing the same command.</p>		

EXAMPLES**EXAMPLE 1** Display the FRU tree hierarchy.

```
XSCF> prtfru -l
/frutree/BB#0 (fru)
/frutree/BB#0/CMUL (container)
/frutree/BB#0/CMUL/MEM#00A (container)
/frutree/BB#0/CMUL/MEM#01A (container)
/frutree/BB#0/CMUL/MEM#02A (container)
/frutree/BB#0/CMUL/MEM#03A (container)
/frutree/BB#0/CMUL/MEM#04A (container)
/frutree/BB#0/CMUL/MEM#05A (container)
/frutree/BB#0/CMUL/MEM#06A (container)
/frutree/BB#0/CMUL/MEM#07A (container)
/frutree/BB#0/CMUL/MEM#10A (container)
/frutree/BB#0/CMUL/MEM#11A (container)
/frutree/BB#0/CMUL/MEM#12A (container)
/frutree/BB#0/CMUL/MEM#13A (container)
/frutree/BB#0/CMUL/MEM#14A (container)
/frutree/BB#0/CMUL/MEM#15A (container)
/frutree/BB#0/CMUL/MEM#16A (container)
/frutree/BB#0/CMUL/MEM#17A (container)
/frutree/BB#0/CMUL/MEM#00B (container)
/frutree/BB#0/CMUL/MEM#01B (container)
/frutree/BB#0/CMUL/MEM#02B (container)
/frutree/BB#0/CMUL/MEM#03B (container)
/frutree/BB#0/CMUL/MEM#04B (container)
/frutree/BB#0/CMUL/MEM#05B (container)
/frutree/BB#0/CMUL/MEM#06B (container)
/frutree/BB#0/CMUL/MEM#07B (container)
/frutree/BB#0/CMUL/MEM#10B (container)
/frutree/BB#0/CMUL/MEM#11B (container)
/frutree/BB#0/CMUL/MEM#12B (container)
/frutree/BB#0/CMUL/MEM#13B (container)
/frutree/BB#0/CMUL/MEM#14B (container)
/frutree/BB#0/CMUL/MEM#15B (container)
/frutree/BB#0/CMUL/MEM#16B (container)
/frutree/BB#0/CMUL/MEM#17B (container)
/frutree/BB#0/CMUU (container)
/frutree/BB#0/CMUU/MEM#20A (container)
/frutree/BB#0/CMUU/MEM#21A (container)
/frutree/BB#0/CMUU/MEM#22A (container)
/frutree/BB#0/CMUU/MEM#23A (container)
/frutree/BB#0/CMUU/MEM#24A (container)
/frutree/BB#0/CMUU/MEM#25A (container)
:
/frutree/BB#0/XBU#0 (container)
/frutree/BB#0/XBU#1 (container)
/frutree/BB#0/THU#0 (container)
/frutree/BB#0/THU#1 (container)
/frutree/BB#0/PSUBP (container)
/frutree/BB#0/OPNL (container)
/frutree/BB#0/PSU#0 (container)
/frutree/BB#0/PSU#1 (container)
/frutree/BB#1 (fru)
```

```
/frutree/BB#1/CMUL (container)
/frutree/BB#1/CMUL/MEM#00A (container)
/frutree/BB#1/CMUL/MEM#01A (container)
:
```

EXAMPLE 2 Display the list of containers.

```
XSCF> prtfru -lc
/frutree/BB#0/CMUL/MEM#00A (container)
/frutree/BB#0/CMUL/MEM#01A (container)
/frutree/BB#0/CMUL/MEM#02A (container)
/frutree/BB#0/CMUL/MEM#03A (container)
/frutree/BB#0/CMUL/MEM#04A (container)
/frutree/BB#0/CMUL/MEM#05A (container)
/frutree/BB#0/CMUL/MEM#06A (container)
/frutree/BB#0/CMUL/MEM#07A (container)
/frutree/BB#0/CMUL/MEM#10A (container)
/frutree/BB#0/CMUL/MEM#11A (container)
/frutree/BB#0/CMUL/MEM#12A (container)
/frutree/BB#0/CMUL/MEM#13A (container)
:
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

ioxadm(8)



NAME	rastest - Causes a fault virtually.
SYNOPSIS	rastest -c {test hb} rastest -h
DESCRIPTION	<p>rastest is a command to register an error log after causing a fault virtually.</p> <p>Error logs to be registered are defined for this command. The registered error logs can be shown by the showlogs(8).</p> <p>While the SNMP agent is enabled, SNMP trap can be sent. For the SNMP agent settings, refer to setsnmp(8).</p> <p>Warnings are not sent to remote maintenance service or email when rastest is executed. Moreover, components are not degraded and LED is also not lighted up. PPAR does not also panic and restart.</p> <p>When the rastest is executed, it automatically determines the model of the system and according to the model, logs errors about the following FRUs as pseudo trouble spots.</p>

	Depending on the option, pseudo failure of any one of the following will occur.																								
test	<p>Record error logs on pseudo failures.</p> <ul style="list-style-type: none"> ■ SPARC M10-1 <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/MBU</td> </tr> <tr> <td>No. 2 pseudo faulty unit</td> <td>/OPNL</td> </tr> <tr> <td>No. 3 pseudo faulty unit</td> <td>/PSU#0</td> </tr> </table> ■ SPARC M10-4 <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/BB#0/CMUL</td> </tr> <tr> <td>No. 2 pseudo faulty unit</td> <td>/BB#0/OPNL</td> </tr> <tr> <td>No. 3 pseudo faulty unit</td> <td>/BB#0/PSU#0</td> </tr> </table> ■ SPARC M10-4S <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/XBBOX#80/XBU#0</td> </tr> <tr> <td>No. 2 pseudo faulty unit</td> <td>/XBBOX#80/OPNL</td> </tr> <tr> <td>No. 3 pseudo faulty unit</td> <td>/XBBOX#80/PSU#0</td> </tr> </table> <p>or</p> <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/BB#0/CMUL</td> </tr> <tr> <td>No. 2 pseudo faulty unit</td> <td>/BB#0/OPNL</td> </tr> <tr> <td>No. 3 pseudo faulty unit</td> <td>/BB#0/PSU#0</td> </tr> </table> 	No. 1 pseudo faulty unit	/MBU	No. 2 pseudo faulty unit	/OPNL	No. 3 pseudo faulty unit	/PSU#0	No. 1 pseudo faulty unit	/BB#0/CMUL	No. 2 pseudo faulty unit	/BB#0/OPNL	No. 3 pseudo faulty unit	/BB#0/PSU#0	No. 1 pseudo faulty unit	/XBBOX#80/XBU#0	No. 2 pseudo faulty unit	/XBBOX#80/OPNL	No. 3 pseudo faulty unit	/XBBOX#80/PSU#0	No. 1 pseudo faulty unit	/BB#0/CMUL	No. 2 pseudo faulty unit	/BB#0/OPNL	No. 3 pseudo faulty unit	/BB#0/PSU#0
No. 1 pseudo faulty unit	/MBU																								
No. 2 pseudo faulty unit	/OPNL																								
No. 3 pseudo faulty unit	/PSU#0																								
No. 1 pseudo faulty unit	/BB#0/CMUL																								
No. 2 pseudo faulty unit	/BB#0/OPNL																								
No. 3 pseudo faulty unit	/BB#0/PSU#0																								
No. 1 pseudo faulty unit	/XBBOX#80/XBU#0																								
No. 2 pseudo faulty unit	/XBBOX#80/OPNL																								
No. 3 pseudo faulty unit	/XBBOX#80/PSU#0																								
No. 1 pseudo faulty unit	/BB#0/CMUL																								
No. 2 pseudo faulty unit	/BB#0/OPNL																								
No. 3 pseudo faulty unit	/BB#0/PSU#0																								
hb	<p>Registers an error log of heart beat notifications to Ops Center and ASR Manager.</p> <ul style="list-style-type: none"> ■ SPARC M10-1 <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/MBU</td> </tr> </table> ■ SPARC M10-4 <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/BB#xx/CMUL</td> </tr> </table> ■ SPARC M10-4S <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/XBBOX#xx/XBU#0</td> </tr> </table> <p>or</p> <table> <tr> <td>No. 1 pseudo faulty unit</td> <td>/BB#xx/CMUL</td> </tr> </table> <p>xx: BB-ID of master XSCF</p>	No. 1 pseudo faulty unit	/MBU	No. 1 pseudo faulty unit	/BB#xx/CMUL	No. 1 pseudo faulty unit	/XBBOX#xx/XBU#0	No. 1 pseudo faulty unit	/BB#xx/CMUL																
No. 1 pseudo faulty unit	/MBU																								
No. 1 pseudo faulty unit	/BB#xx/CMUL																								
No. 1 pseudo faulty unit	/XBBOX#xx/XBU#0																								
No. 1 pseudo faulty unit	/BB#xx/CMUL																								
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>																								

OPTIONS	<p>The following options are supported.</p> <table border="0"> <tr> <td style="vertical-align: top; padding-right: 20px;">-c hb</td><td>Registers an error log of heart beat notifications.</td></tr> <tr> <td style="vertical-align: top; padding-right: 20px;">-c test</td><td>Registers an error log of suspected faults.</td></tr> <tr> <td style="vertical-align: top; padding-right: 20px;">-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> </table> <p>EXTENDED DESCRIPTION</p> <ul style="list-style-type: none"> ■ In case of suspected failure (-c test), the following error log is registered and trap is sent. <ul style="list-style-type: none"> ■ Error log <pre>Date: May 30 17:10:45 JST 2013 Code: 80000000-003e01009301009600-ff0200010000000000000000 Status: Alarm Occurred: May 30 17:10:42.798 JST 2013 FRU: /BB#0/CMUL,/BB#0/OPNL,/BB#0/PSU#0 Msg: Pseudo error for test trap notice</pre> ■ Trap <pre>2013-05-30 17:09:52 A4U4S144 [10.26.147.53] (via UDP: [10.26.147.53]:54687) TRAP, SNMP v1, community paplcommunity XSCF-SP-MIB::scfMIBTraps Enterprise Specific Trap (XSCF-SP-MIB::scfComponentStatusEvent) Uptime: 1:55:35.40 XSCF-SP-MIB::scfComponentErrorStatus.bb.0.cmul.0.notApplicable.0 = INTEGER: faulted(3) XSCF-SP-MIB::scfTrapStatusEventType.0 = INTEGER: alarm(1) XSCF-SP-MIB::scfSystemSerialNumber.0 = STRING: 2081208019 XSCF-SP-MIB::scfSystemType.0 = STRING: SPARC M10-4S XSCF-SP-MIB::scfSystemName.0 = STRING: A4U4S144 XSCF-SP-MIB::scfTrapFaultEventCode.0 = STRING: FF020001 XSCF-SP-MIB::scfTrapFaultTimestamp.0 = STRING: May 30 17:10:42.798 JST 2013 XSCF-SP-MIB::scfTrapFaultKnowledgeUrl.0 <https://support.oracle.com/msg/M10-Pseudo.error> XSCF-SP-MIB::scfTrapFruSerialNumber1st.0 = STRING: PP120903GW XSCF-SP-MIB::scfTrapFruPartNumber1st.0 = STRING: CA07361-D912 A0 / BGA-16CL-01 XSCF-SP-MIB::scfTrapFruSerialNumber2nd.0 = STRING: PP120902HF XSCF-SP-MIB::scfTrapFruPartNumber2nd.0 = STRING: CA07361-D011 A0 / NOT-FIXD-01 XSCF-SP-MIB::scfTrapFruSerialNumber3rd.0 = STRING: MD12070325 XSCF-SP-MIB::scfTrapFruPartNumber3rd.0 = STRING: CA01022-0761 / D-01 XSCF-SP-MIB::scfTrapFruPartPath.0 = STRING: /BB#0/CMUL,/BB#0/OPNL,/ BB#0/PSU#0 XSCF-SP-MIB::scfTrapProductName.0 = STRING: Fujitsu M10-4S XSCF-SP-MIB::scfTrapSupportServiceStatus.0 = INTEGER: supportServiceRequired(1)</pre>	-c hb	Registers an error log of heart beat notifications.	-c test	Registers an error log of suspected faults.	-h	Displays the usage. Specifying this option with another option or operand causes an error.
-c hb	Registers an error log of heart beat notifications.						
-c test	Registers an error log of suspected faults.						
-h	Displays the usage. Specifying this option with another option or operand causes an error.						

```
XSCF-SP-MIB::scfMIBTrapData.26.0 = STRING: "M10-Pseudo.error"S
```

- In case of heartbeat notice (-c hb), the following error log is registered and trap is sent.

- Error log

```
Date: May 31 15:28:23 JST 2013
Code: 10000000-00a6010000ff0000ff-ff010001000000000000000000000000
Status: Information Occurred: May 31 15:28:20.370 JST 2013
Msg: Pseudo error for heartbeat trap notice
```

- Trap

```
2013-05-31 15:28:30 XB-SYS39 [10.26.147.113] (via UDP:
[10.26.147.113]:57525) TRAP, SNMP
v1, community paplcommunity
    XSCF-SP-MIB::scfMIBTraps Enterprise Specific Trap
(XSCF-SP-MIB::scfComponentStatusEvent) Uptime: 0:15:14.83
    XSCF-SP-MIB::scfComponentErrorStatus.xbbx.1.xbu.0.notApplicable.0 =
INTEGER
normal(1)
    XSCF-SP-MIB::scfTrapStatusEventType.0 = INTEGER: information(4)
    XSCF-SP-MIB::scfSystemSerialNumber.0 = STRING: 2111206002
    XSCF-SP-MIB::scfSystemType.0 = STRING: SPARC M10-4S
    XSCF-SP-MIB::scfSystemName.0 = STRING: XB-SYS39
    XSCF-SP-MIB::scfTrapFaultEventCode.0 = STRING: FF010001
    XSCF-SP-MIB::scfTrapFaultTimestamp.0 = STRING: May 31 15:28:20.370
JST 2013
    XSCF-SP-MIB::scfTrapFaultKnowledgeUrl.0 = STRING:
    XSCF-SP-MIB::scfTrapFruSerialNumber1st.0 = STRING:
    XSCF-SP-MIB::scfTrapFruPartNumber1st.0 = STRING:
    XSCF-SP-MIB::scfTrapFruSerialNumber2nd.0 = STRING:
    XSCF-SP-MIB::scfTrapFruPartNumber2nd.0 = STRING:
    XSCF-SP-MIB::scfTrapFruSerialNumber3rd.0 = STRING:
    XSCF-SP-MIB::scfTrapFruPartNumber3rd.0 = STRING:
    XSCF-SP-MIB::scfTrapFruPartPath.0 = STRING:
    XSCF-SP-MIB::scfTrapProductName.0 = STRING: Fujitsu M10-4S
    XSCF-SP-MIB::scfTrapSupportServiceStatus.0 = INTEGER:
supportServiceRequired(1)
    XSCF-SP-MIB::scfMIBTrapData.26.0 = STRING: "M10-Heartbeat"
```

EXAMPLES

EXAMPLE 1 Registering an error log of suspected faults.

```
XSCF> rastest -c test
XSCF>
```

EXAMPLE 2 Registering an error log of heart beat notifications.

```
XSCF> rastest -c hb
XSCF>
```

EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
--------------------	--

SEE ALSO	showsntp (8), showlogs (8)
-----------------	--

rastest(8)



NAME	rebootxscf - Resets XSCF.														
SYNOPSIS	rebootxscf [[-q] {-y n}] -a rebootxscf [[-q] {-y n}] -b <i>bb_id</i> rebootxscf [[-q] {-y n}] -s rebootxscf -h														
DESCRIPTION	<p>rebootxscf is a command to reset XSCF.</p> <p>The contents set by the following command is reflected in XSCF after resetting XSCF by rebootxscf.</p> <ul style="list-style-type: none"> ■ applenetwork(8) ■ setaltitude(8) ■ setntp(8) 														
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>														
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-a</td> <td>Resets the XSCFs of all SPARC M10 Systems chassis and crossbar boxes. It cannot be executed from an XSCF other than a master XSCF.</td> </tr> <tr> <td>-b <i>bb_id</i></td> <td>Resets the XSCF of the specified <i>bb_id</i>. It cannot be executed from an XSCF other than a master XSCF. <i>bb_id</i> can be specified with an integer from 0 to 15 for a SPARC M10 Systems, and with an integer from 80 to 83 for crossbar box.</td> </tr> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-n</td> <td>Automatically responds to prompt with "n" (no).</td> </tr> <tr> <td>-q</td> <td>Prevents display of messages, including prompt, for standard output.</td> </tr> <tr> <td>-s</td> <td>Resets its own XSCF.</td> </tr> <tr> <td>-y</td> <td>Automatically responds to prompt with "y" (yes).</td> </tr> </table>	-a	Resets the XSCFs of all SPARC M10 Systems chassis and crossbar boxes. It cannot be executed from an XSCF other than a master XSCF.	-b <i>bb_id</i>	Resets the XSCF of the specified <i>bb_id</i> . It cannot be executed from an XSCF other than a master XSCF. <i>bb_id</i> can be specified with an integer from 0 to 15 for a SPARC M10 Systems, and with an integer from 80 to 83 for crossbar box.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-q	Prevents display of messages, including prompt, for standard output.	-s	Resets its own XSCF.	-y	Automatically responds to prompt with "y" (yes).
-a	Resets the XSCFs of all SPARC M10 Systems chassis and crossbar boxes. It cannot be executed from an XSCF other than a master XSCF.														
-b <i>bb_id</i>	Resets the XSCF of the specified <i>bb_id</i> . It cannot be executed from an XSCF other than a master XSCF. <i>bb_id</i> can be specified with an integer from 0 to 15 for a SPARC M10 Systems, and with an integer from 80 to 83 for crossbar box.														
-h	Displays the usage. Specifying this option with another option or operand causes an error.														
-n	Automatically responds to prompt with "n" (no).														
-q	Prevents display of messages, including prompt, for standard output.														
-s	Resets its own XSCF.														
-y	Automatically responds to prompt with "y" (yes).														
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. 														

- When you execute the command, the connections between telnet, ssh, etc. and XSCF are disconnected.
- If -a is specified, the XSCFs of all SPARC M10 Systems chassis and crossbar boxes are reset. To just reset an individual SPARC M10 Systems, specify -b *bb_id*.
- If XSCF reset executed automatically by setdate(8) is cancelled, resetting XSCF by rebootxscf again does not reflect the set contents in XSCF.

EXAMPLES**EXAMPLE 1** Reset all XSCFs.

```
XSCF> rebootxscf -a
The XSCF will be reset. Continue? [y|n] :y
```

EXAMPLE 2 Reset all XSCFs. The prompt is automatically given a "y" response.

```
XSCF> rebootxscf -y -a
The XSCF will be reset. Continue? [y|n] :y
```

EXAMPLE 3 Reset its own XSCF. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> rebootxscf -q -y -s
```

EXAMPLE 4 Cancel reset of its own XSCF in the middle. The prompt is automatically given a "n" response.

```
XSCF> rebootxscf -n -s
The XSCF will be reset. Continue? [y|n] :n
XSCF>
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO**applynetwork (8)**, **setdate (8)**

NAME	replacefru - Replaces the Field Replaceable Unit (FRU) and chassis.
SYNOPSIS	replacefru replacefru -h
DESCRIPTION	<p>replacefru is a command to replace the FRU and chassis.</p> <p>You can interactively select, confirm, replace, etc. the FRU and chassis required for replacement of FRU in the menu format.</p> <p>With replacefru, the following FRUs and chassis can be replaced.</p> <ul style="list-style-type: none"> ■ Fan unit ■ Power supply unit ■ SPARC M10-4S ■ Crossbar box
Privileges	<p>To execute this command, <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p> <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p>
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ Depending on the implementation status of the FRU which is to be replaced or the status of the chassis, replacement may not be executed. In such a case an error message, stating that the target FRU or chassis cannot be selected, will be displayed. <p>In the following conditions, replacement is not possible.</p> <ul style="list-style-type: none"> ■ Common to all FRUs and chassis <p>The target chassis (if the target is a FRU, then the chassis on which it is mounted) is in any of the following states.</p> <ul style="list-style-type: none"> - In the middle of firmware updating - Not in the state of "SCF READY" <ul style="list-style-type: none"> ■ FAN <p>Due to removal for replacement, if the number of connected devices becomes less than the minimum number of devices required to start the chassis.</p> <p>However, the minimum number of connected devices that is required to start a chassis depends on the model and the power status.</p> <ul style="list-style-type: none"> ■ PSU

If there is only one PSU which is running normally.

- XSCFU

In case the target XSCF unit is mounted on the master chassis.

- SPARC M10-4S

 - In case the target SPARC M10-4S is the master chassis.

 - Physical partitions (PPAR), including the target SPARC M10-4S is in a powered on state

 - If there is a chassis which has the same BB-ID as the target SPARC M10-4S, but was not implemented in any system before

- Crossbar boxes

 - In case the target cross-bar box is the master chassis.

 - The target crossbar box for the `setsscp(8)` is not powered off

 - If there is a chassis which has the same BB-ID as the target crossbar box, but was not implemented in any system before

Note – The "powered off" state of a crossbar box means that all the PPARS which use the crossbar box as communication channel are powered off. If there are any such PPARS which are powered on, power them off individually or execute the `poweroff` - a command to power off all the PPARS, which will eventually power off the crossbar box in question. To confirm that a crossbar box is powered off, make sure that the state of the target crossbar box does not show "Cabinet Power On" in the power logs, or confirm that power LED (green) at the front panel of the crossbar box chassis is turned off.

- In case the target is any FRU other than an XSCF unit or the target is a chassis, removal only of this target can be executed by canceling all other procedures just after the removal of the target FRU or the chassis. In such case, the target FRU or chassis will have the state of maintenance. To consummate the maintenance status, undergo maintenance of the FRU or chassis, using the `replacefru`

Note – Removal of the chassis, as stated above, is a temporary removal of the chassis from the system for maintenance purposes. Information on the target system, like serial number etc., are not deleted. Moreover, the removed chassis is also not initialized. To permanently remove a chassis from a system, use the `initbb(8)`.

- It is not possible to add a chassis anew with a BB-ID whose information is not registered in the system, using the `replacefru`. In such a case, use the `addfru(8)` to add the chassis.
- `replacefru` can be executed only in the master XSCF. Attempting to execute it on a standby XSCF causes an error.

EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	addboard (8), addfru (8), deleteboard (8), initbb (8), showhardconf (8), showlogs (8), showpparstatus (8), testsb (8), unlockmaintenance (8)



NAME	reset - Resets the specified physical partition (PPAR) or a logical domain.								
SYNOPSIS	<pre>reset [[-q] -{y n}] -p <i>ppar_id</i> por reset [[-q] -{y n}] -p <i>ppar_id</i> -g <i>domainname</i> sir reset [[-q] -{y n}] -p <i>ppar_id</i> -g <i>domainname</i> panic reset [[-q] -{y n}] -p <i>ppar_id</i> xir reset -h</pre>								
DESCRIPTION	<p>Note – <code>reset</code> may cause a failure of the disk, etc. because it forcibly resets the system. This shall be used exclusively for recovery in the case of hang-up of the Oracle Solaris, etc.</p> <p><code>reset</code> is a command to reset the specified PPAR or the logical domain.</p> <p>The following four types can be specified as the reset method.</p> <table> <tr> <td><code>por</code></td> <td>Resets PPAR.</td> </tr> <tr> <td><code>sir</code></td> <td>Resets the logical domain.</td> </tr> <tr> <td><code>panic</code></td> <td>Orders panic to the Oracle Solaris of the logical domain. It is ignored during shutdown processing or under suspension.</td> </tr> <tr> <td><code>xir</code></td> <td>Resets all CPUs in PPAR.</td> </tr> </table>	<code>por</code>	Resets PPAR.	<code>sir</code>	Resets the logical domain.	<code>panic</code>	Orders panic to the Oracle Solaris of the logical domain. It is ignored during shutdown processing or under suspension.	<code>xir</code>	Resets all CPUs in PPAR.
<code>por</code>	Resets PPAR.								
<code>sir</code>	Resets the logical domain.								
<code>panic</code>	Orders panic to the Oracle Solaris of the logical domain. It is ignored during shutdown processing or under suspension.								
<code>xir</code>	Resets all CPUs in PPAR.								
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><code>platadm, fieldeng</code></td> <td>Enables execution for all PPARs.</td> </tr> <tr> <td><code>pparadm, pparamgr</code></td> <td>Enables execution for PPARs for which you have administration privilege.</td> </tr> </table> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>	<code>platadm, fieldeng</code>	Enables execution for all PPARs.	<code>pparadm, pparamgr</code>	Enables execution for PPARs for which you have administration privilege.				
<code>platadm, fieldeng</code>	Enables execution for all PPARs.								
<code>pparadm, pparamgr</code>	Enables execution for PPARs for which you have administration privilege.								
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td><code>-g <i>domainname</i></code></td> <td>Specify the logical domain name of the logical domain that is to be reset. It can be specified only if <code>panic</code> or <code>sir</code> is specified in <i>level</i>.</td> </tr> <tr> <td><code>-h</code></td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td><code>-n</code></td> <td>Automatically responds to prompt with "n" (no).</td> </tr> </table>	<code>-g <i>domainname</i></code>	Specify the logical domain name of the logical domain that is to be reset. It can be specified only if <code>panic</code> or <code>sir</code> is specified in <i>level</i> .	<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.	<code>-n</code>	Automatically responds to prompt with "n" (no).		
<code>-g <i>domainname</i></code>	Specify the logical domain name of the logical domain that is to be reset. It can be specified only if <code>panic</code> or <code>sir</code> is specified in <i>level</i> .								
<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.								
<code>-n</code>	Automatically responds to prompt with "n" (no).								

-p <i>ppar_id</i>	Specifies only one PPAR-ID to be reset. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .
-q	Prevents display of messages, including prompt, for standard output.
-Y	Automatically responds to prompt with "y" (yes).

OPERANDS

The following operands are supported.

por	Resets PPAR.
sir	Resets the logical domain.
panic	Orders panic to the Oracle Solaris of the logical domain.
xir	Resets all CPUs in PPAR.

EXTENDED DESCRIPTION

- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
- You can confirm the current status of PPAR after ordering reset by using showhardconf(8).
- If *reset* is executed in the following status, the processing is stopped before the Oracle Solaris is started.
 - The autoboot function for the specified guest domain is disabled in setpparmode(8).
 - The autoboot function for the logical domain is disabled in OpenBoot PROM environment variable, auto-boot?.
- When you changed the configuration of the logical domain, execute the ldm add-spconfig command on the control domain, to store the latest configuration information in XSCF. If you do not store the information, the reset processing may fail to work properly.

EXAMPLES

EXAMPLE 1 Reset "GuestDomain0001" which is the logical domain of PPAR-ID 0.

```
XSCF> reset -p 0 -g GuestDomain0001 sir
PPAR-ID:00
GuestDomain to sir:GuestDomain0001
Continue? [y|n] :y
00 GuestDomain0001 :Resetting

*Note*
This command only issues the instruction to reset.
The result of the instruction can be checked by the "showdomainstatus".
XSCF>
```

EXAMPLE 2 Reset the CPU of PPAR-ID 0. The prompt is automatically given a "y" response.

```
XSCF> reset -y -p 0 xir
PPAR-ID to reset:00
Continue? [y|n]:y
00 :Resetting
```

Note

This command only issues the instruction to reset.
The result of the instruction can be checked by the "showpparprogress".
XSCF>

EXAMPLE 3 Reset PPAR-ID 0 immediately. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> reset -q -y -p 0 por
XSCF>
```

EXAMPLE 4 Cancel the executed reset in the middle.

```
XSCF> reset -p 0 -g GuestDomain0001 sir
PPAR-ID :00
GuestDomain to sir:GuestDomain0001
Continue? [y|n]:n
XSCF>
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

poweroff(8), **poweron**(8), **setpparmode**(8), **showpparstatus**(8),
showpparprogress(8)

reset(8)



NAME	resetdateoffset - Resets the difference between the system time and the Hypervisor time of each physical partition (PPAR).
SYNOPSIS	<pre>resetdateoffset [[-q] -{y n}] -p <i>ppar_id</i> resetdateoffset [[-q] -{y n}] [-a] resetdateoffset -h</pre>
DESCRIPTION	<p>resetdateoffset is a command to reset the difference between the system time managed by XSCF and the Hypervisor time managed by each PPAR.</p> <p>In XSCF, the difference between the system time and the Hypervisor time of each PPAR is stored. If the system time is changed by <code>setdate(8)</code>, etc., the difference between the Hypervisor time of each PPAR and changed system time is updated. The stored difference of the time is retained even if PPAR or the system is restarted.</p> <p><code>resetdateoffset</code> resets the difference between the system time and the Hypervisor time of each PPAR. Thanks to this, the Hypervisor time of each PPAR after restart is set to the same time as the system time.</p>
Privileges	To execute this command, any of the following privileges is required. <ul style="list-style-type: none"> <code>platadm, fieldeng</code> Enables execution for all PPARs. <code>pparamdm</code> Enables execution for PPARs for which you have administration privilege. <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> <code>-a</code> Initializes the differences form the Hypervisor time of all PPARs. <code>-h</code> Displays the usage. Specifying this option with another option or operand causes an error. <code>-n</code> Automatically responds to prompt with "n" (no). <code>-p <i>ppar_id</i></code> Specifies the PPAR-ID to reset the time difference. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. <code>-q</code> Prevents display of messages, including prompt, for standard output. <code>-y</code> Automatically responds to prompt with "y" (yes).

EXTENDED DESCRIPTION	<ul style="list-style-type: none">■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.■ If no option is specified, the differences form the Hypervisor time of all PPARs are reset.■ <code>resetdateoffset</code> shall be executed after PPAR has been shut down.
EXAMPLES	EXAMPLE 1 Initialize the difference between the system time and the Hypervisor time of PPAR-ID 1.
	<pre>XSCF> resetdateoffset -p 1 Clear the offset of PPAR-ID 1? [y n] :y XSCF></pre>
	EXAMPLE 2 Initialize the differences between the system time and the Hypervisor times of all PPARs.
	<pre>XSCF> resetdateoffset -a Clear the offset of all PPARs? [y n] :y XSCF></pre>
EXIT STATUS	The following exit values are returned.
	0 Indicates normal end.
	>0 Indicates error occurrence.
SEE ALSO	showdateoffset (8)

NAME	restorecodactivation - Restores the CPU Activation key.
SYNOPSIS	restorecodactivation [-v] [-V] [[-q] -{y n}] [-P password] [-u user] [-p proxy [-t proxy_type]] url restorecodactivation -h
DESCRIPTION	restorecodactivation is a command to restore the CPU Activation key, which is saved by using the dumpcodactivation(8) , to XSCF.
Privileges	To execute this command, platadm or fieldeng privilege is required. You can execute it even with the default and admin accounts initially prepared in the system.
	For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported.
-h	Displays the usage. Specifying this option with another option or operand causes an error.
-n	Automatically responds to prompt with "n" (no).
-P <i>password</i>	Specifies the password to decode encrypted files. If the -P option is omitted when you restore the encrypted CPU core Activation key, the command prompts for the password. You can specify this using up to 128 characters.
-p <i>proxy</i>	Specifies the proxy server to use for transfer. If -t <i>proxy_type</i> is not specified, the default proxy type is http. <i>proxy</i> is specified in the format of <i>servername:port</i> .
-q	Prevents display of messages, including prompt, for standard output.
-t <i>proxy_type</i>	Specifies the proxy type. It is specified with the -p option. You can specify any of http, socks4, and socks5. The default is http.
-u <i>user</i>	Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. You can specify this using up to 127 characters.
-v	Displays detailed information. This option is used to diagnose server problems.
-V	Displays detailed network activities. This option is used to diagnose network and server problems.
-Y	Automatically responds to prompt with "y" (yes).

OPERANDS	The following operands are supported..
<i>url</i>	Specifies the URL storing the CPU Activation key. The following types of format are supported. <i>http://server[:port]/path/file</i> <i>https://server[:port]/path/file</i> <i>ftp://server[:port]/path/file</i> <i>file:///media/usb_msd/path/file</i>
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ The beginning of the CPU Activation key which has been saved contains the basic identification information in text format. Using the text viewer, you can confirm the following information. <ul style="list-style-type: none"> ■ System at the time when the CPU Activation key was saved ■ Date when it is saved ■ Whether it is encrypted ■ It is necessary to shut down all physical partitions (PPARs) before executing restorecodactivation. ■ CPU core activation key can only restore the data that was saved from a system with the same system serial number.
EXAMPLES	<p>EXAMPLE 1 Restore the CPU Activation key which is saved on USB device.</p> <pre>XSCF> restorecodactivation -v -V file:///media/usb_msd/cpukey.cfg initiating file transfer from 'file:///media/usb_msd/cpukey.cfg' ... transfer from '/ssd/transferred_file_cod.bin' to 'file:///media/usb_msd/cpukey.cfg' * Closing connection # file decoding done. Backup keys created on Tue Oct 16 13:19:46 2012 from system 'M10-4S' with serial number '2111205009', version '0001' validating backup keys data. *** The CPU core Activation keys are overwritten in the backup data. *** Do you want to restore this keys to your system? [y n]:y operation completed</pre>
EXIT STATUS	The following exit values are returned.
	0 Indicates normal end.
	>0 Indicates error occurrence.
SEE ALSO	dumpconfig (8) , restorecodactivation (8)

NAME	restoreconfig - Restores the XSCF settings information.														
SYNOPSIS	<pre>restoreconfig [-v] [-V] [[-q] {-y n}] [-P <i>password</i>] [-s network={yes no}] [-u user] [-p proxy [-t proxy_type]] <i>url</i></pre> restoreconfig -h														
DESCRIPTION	<p>restoreconfig is a command to restore the XSCF settings information saved by dumpconfig in XSCF.</p> <p>This command confirms the consistency of the XSCF settings information, searches the network information, and verifies whether the version of the XSCF settings information file and system class match.</p>														
Privileges	<p>To execute this command, platadm privilege is required. You can execute it even with the default and admin accounts initially prepared in the system.</p> <p>For details on user privileges, see setprivileges(8).</p>														
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-P <i>password</i></td><td>Specifies the password to decode encrypted files. If the -P option is omitted when you restore the encrypted XSCF configuration information, the command prompts for the password. You can specify this using up to 128 characters.</td></tr> <tr> <td>-p <i>proxy</i></td><td>Specifies the proxy server to use for transfer. If -t <i>proxy_type</i> is not specified, the default proxy type is http. <i>proxy</i> is specified in the format of <i>servername:port</i>. See Example 3.</td></tr> <tr> <td>-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td>-s network={yes no}</td><td>Specifies whether to restore the network configuration. To restore the network configuration, specify yes. Not to restore the network configuration, specify no. If the -s option is omitted, the serial number of the target system is compared with that of the configuration information. If the numbers match, the network configuration is restored.</td></tr> <tr> <td>-t <i>proxy_type</i></td><td>Specifies the proxy type. It is specified with the -p option. You can specify any of http, socks4, and socks5. The default is http.</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-P <i>password</i>	Specifies the password to decode encrypted files. If the -P option is omitted when you restore the encrypted XSCF configuration information, the command prompts for the password. You can specify this using up to 128 characters.	-p <i>proxy</i>	Specifies the proxy server to use for transfer. If -t <i>proxy_type</i> is not specified, the default proxy type is http. <i>proxy</i> is specified in the format of <i>servername:port</i> . See Example 3.	-q	Prevents display of messages, including prompt, for standard output.	-s network={yes no}	Specifies whether to restore the network configuration. To restore the network configuration, specify yes. Not to restore the network configuration, specify no. If the -s option is omitted, the serial number of the target system is compared with that of the configuration information. If the numbers match, the network configuration is restored.	-t <i>proxy_type</i>	Specifies the proxy type. It is specified with the -p option. You can specify any of http, socks4, and socks5. The default is http.
-h	Displays the usage. Specifying this option with another option or operand causes an error.														
-n	Automatically responds to prompt with "n" (no).														
-P <i>password</i>	Specifies the password to decode encrypted files. If the -P option is omitted when you restore the encrypted XSCF configuration information, the command prompts for the password. You can specify this using up to 128 characters.														
-p <i>proxy</i>	Specifies the proxy server to use for transfer. If -t <i>proxy_type</i> is not specified, the default proxy type is http. <i>proxy</i> is specified in the format of <i>servername:port</i> . See Example 3.														
-q	Prevents display of messages, including prompt, for standard output.														
-s network={yes no}	Specifies whether to restore the network configuration. To restore the network configuration, specify yes. Not to restore the network configuration, specify no. If the -s option is omitted, the serial number of the target system is compared with that of the configuration information. If the numbers match, the network configuration is restored.														
-t <i>proxy_type</i>	Specifies the proxy type. It is specified with the -p option. You can specify any of http, socks4, and socks5. The default is http.														

-u <i>user</i>	Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry. You can specify this using up to 127 characters.
-v	Displays detailed information. This option is used to diagnose server problems.
-V	Displays detailed network activities. This option is used to diagnose network and server problems.
-Y	Automatically responds to prompt with "y" (yes).

OPERANDS

The following operands are supported..

<i>url</i>	Specifies the URL storing the XSCF settings information. The following types of format are supported.
------------	---

http://server[:port]/path/file
https://server[:port]/path/file
ftp://server[:port]/path/file
file:///media/usb_msd/path/file

EXTENDED DESCRIPTION

- At the head of the XSCF settings information, the basic identification information is contained in the text format. The following information can be confirmed using a text viewer.
 - System at the time when the XSCF settings information was saved
 - Date when it is saved
 - Whether it is encrypted
 - It is necessary to shut down all physical partitions (PPARs) before executing **restoreconfig**.
 - **restoreconfig** downloads the XSCF settings information and verifies whether the information is correct. When authentication is finished, XSCF is reset and data is restored.
 - The XSCF settings information can be restored only in the same sever model.
- Moreover, if restoration is done from data that was saved from a system with a different system serial number, network setup information, CPU core activation key etc. are not restored.

EXAMPLES

EXAMPLE 1 Restore the XSCF settings information using USB.

```
XSCF> restoreconfig -V file:///media/usb_msd/system.cfg
Making sure mount point is clear
umount: /media/usb_msd is not mounted (according to mtab)
Trying to mount USB device /dev/sdb1 as /media/usb_msd
```

```
mount: I could not determine the filesystem type, and none was specified
Trying to mount USB device /dev/sdb as /media/usb_msd
Mounted USB device
obtaining lock ... done
initiating file transfer from 'file:///media/usb_msd/system.cfg' ...
transfer from
'/ssd/transferred_file.bin' to 'file:///media/usb_msd/system.cfg'
* Closing connection #0
Unmounted USB device
done
file decoding done.
Configuration backup created on Tue Oct  9 10:31:22 2012
  from system '2081208013' with serial number '2081208014', version '0001'
validating backup configuration data
:
:
*** Do you want to restore this configuration to your system? [y/n]:y
requesting XSCF reboot to perform restore ... requested
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

dumpconfig (8), **restorecodactivation (8)**

`restoreconfig(8)`

NAME	restoreddefaults - Restores settings of the XSCF unit and its back-up information to the factory default.								
SYNOPSIS	<pre>restoreddefaults -c factory [-r activation] restoreddefaults -c xscf restoreddefaults -h</pre>								
DESCRIPTION	<p>restoreddefaults is a command to restore settings of XSCF unit and its back-up information to the factory default.</p> <p>To execute restoreddefaults, connect to XSCF by serial. If connected by XSCF-LAN, the network connection is disconnected during execution.</p> <p>The following types of initialization scope can be specified.</p> <table> <tr> <td>factory</td><td>Restores the entire system to factory settings. Clears information of user settings and errors, out of setting and back-up information of the XSCF unit.</td></tr> <tr> <td>xscf</td><td>Restores the XSCF unit to factory settings. User settings, error information, and CPU core Activation keys of the XSCF unit are cleared.</td></tr> </table>	factory	Restores the entire system to factory settings. Clears information of user settings and errors, out of setting and back-up information of the XSCF unit.	xscf	Restores the XSCF unit to factory settings. User settings, error information, and CPU core Activation keys of the XSCF unit are cleared.				
factory	Restores the entire system to factory settings. Clears information of user settings and errors, out of setting and back-up information of the XSCF unit.								
xscf	Restores the XSCF unit to factory settings. User settings, error information, and CPU core Activation keys of the XSCF unit are cleared.								
Privileges	<p>To execute this command, platadm or fieldeng privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>								
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-c factory</td><td>Restores the entire system to the default.</td></tr> <tr> <td>-c xscf</td><td>Restores setting information of the XSCF unit to the factory default and deletes CPU core Activation keys.</td></tr> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-r activation</td><td>Deletes CPU core Activation keys. It is used to delete CPU core Activation key while specifying -c factory.</td></tr> </table>	-c factory	Restores the entire system to the default.	-c xscf	Restores setting information of the XSCF unit to the factory default and deletes CPU core Activation keys.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-r activation	Deletes CPU core Activation keys. It is used to delete CPU core Activation key while specifying -c factory .
-c factory	Restores the entire system to the default.								
-c xscf	Restores setting information of the XSCF unit to the factory default and deletes CPU core Activation keys.								
-h	Displays the usage. Specifying this option with another option or operand causes an error.								
-r activation	Deletes CPU core Activation keys. It is used to delete CPU core Activation key while specifying -c factory .								
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ restoreddefaults is executed by the master XSCF. Confirm the master XSCF with showbbstatus(8). ■ In use of SPARC M10-4S, be sure to execute restoreddefaults only on a single SPARC M10-4S. Executing it with multiple SPARC M10-4S connected causes an error. 								

- After `restoreddefaults` is executed, the XSCF configuration information is shut down. After shutdown, turn off the input power of the system and turn it on again.
- If you need to move the XSCF unit to another SPARC M10 system, please specify "`-c xscf`". The XSCF unit is restored to its factory state and the system is powered off. You can then move it to another SPARC M10 system.
- If you specify "`-c xscf`", the back-up information remains. Therefore, when the system is powered off then on, the information that has been saved is read and the XSCF unit settings are restored to its previous state before being restored. This XSCF unit contains the back-up information so be sure not to move it to another SPARC M10 system.
- `restoreddefaults` shall be executed with the system shut down. If the system is not shut down, it causes an error.

The status in which the system is shut down means the status in which all physical partitions (PPARs) are shut down. If PPAR is in operation, executing `poweroff -a` shuts down all PPARs and after that the power of the system is turned off. Execute the `showhardconf(8)` and see the display of "System_Power:" ("On" or "Off"), to confirm the condition of system power.

- If only "`-c factory`" is specified, the information of CPU core Activation keys in the system is not cleared. To clear the information of CPU core Activation keys, be sure to specify "`-r activation`" too.
- If "`-c xscf`" is specified, CPU core Activation keys, registered to XSCF unit and its back-up information, are deleted. To save CPU core Activation keys, run `dumpcodactivation(8)` to save CPU core Activation keys beforehand. To restore the saved CPU core Activation keys, execute `restoreddefaults -c xscf`, then `restorecodactivation(8)`.

In a case where `restoreddefaults` was executed before saving the CPU core Activation key, you must register a CPU core Activation key again.

- An error occurs if "`-c factory`" is specified when PSU backplane and crossbar backplane are not installed.

EXAMPLES

EXAMPLE 1 Restoring the XSCF unit to factory settings and clears CPU core Activation keys.

```
XSCF> restoreddefaults -c xscf
```

WARNING:

If this system does not have BACK UP, this command will set all the user settable XSCF configuration parameters to their default value as they were set when the system was shipped out.

Furthermore, this command will delete all logs in the intended chassis XSCF. Check the man page of this command before you run it.

NOTE:

The CPU core Activation keys will be also removed.

```
Continue? [yes/no] (default no) :yes
You must check the following points.

1. Have the ability to power cycle the system.
2. Have access to the serial console and hold the serial console of the
   XSCF to confirm the completion of the command.
```

If you answer "yes" this command will HALT the XSCF when it completes.
 You will need to power cycle the system after the XSCF BOOT STOP.

Do you really want to continue?

```
Continue? [yes/no] (default no) :yes
The initialization of XSCF will be started.
  XSCF      : all data clear
                (Including CPU core Activation keys)
  BACK UP   : not clear
XSCF will be automatically rebooted. Afterwards, XSCF will be initialized.
  Continue? [yes/no] (default no) :yes
  CoD initialization complete.
  Syncing file systems... complete
  Setting FRUID-ROM to writable complete
  Clear BB-ID complete
  XSCF shutdown request was completed.
```

<snip>....XSCF reboot..<snip>

XSCF clear : start

<snip>

XSCF clear : complete

Please turn off the breaker after XSCF halt.

EXAMPLE 2 Restoring the entire system to factory settings. In this case, CPU core Activation keys are not cleared.

XSCF> **restoreddefaults -c factory**

WARNING:

If this system does not have BACK UP, this command will set all the user settable XSCF configuration parameters to their default value as they were set when the system was shipped out.

Furthermore, this command will delete all logs in the intended chassis XSCF. Check the man page of this command before you run it.

```
Continue? [yes/no] (default no) :yes
You must check the following points.
```

1. Have the ability to power cycle the system.
2. Have access to the serial console and hold the serial console of the XSCF to confirm the completion of the command.

If you answer "yes" this command will HALT the XSCF when it completes.
 You will need to power cycle the system after the XSCF BOOT STOP.

Do you really want to continue?

```
Continue? [yes/no] (default no) :yes
The initialization of XSCF will be started.
  XSCF      : all data clear (exclude SYSTEM ID data)
  BACK UP   : all data clear (exclude SYSTEM ID data)
XSCF will be automatically rebooted. Afterwards, XSCF will be initialized.
Continue? [yes/no] (default no) :yes
Disabling IDIAG prompt complete
Setting FRUID-ROM to writable complete
Clear BB-ID complete
Backup common DB complete
XSCF shutdown request was completed.
```

<snip>....XSCF reboot..<snip>

XSCF clear : start

<snip>

XSCF clear : complete

Please turn off the breaker after XSCF halt.

EXAMPLE 3 Restoring the entire system to factory settings and clearing CPU core Activation keys.

XSCF> restoreddefaults -c factory -r activation

WARNING:

If this system does not have BACK UP, this command will set all the user settable XSCF configuration parameters to their default value as they were set when the system was shipped out.

Furthermore, this command will delete all logs in the intended chassis XSCF. Check the man page of this command before you run it.

NOTE:

The CPU core Activation keys will be also removed.

Continue? [yes/no] (default no) :**yes**

You must check the following points.

1. Have the ability to power cycle the system.
2. Have access to the serial console and hold the serial console of the XSCF to confirm the completion of the command.

If you answer "yes" this command will HALT the XSCF when it completes.
 You will need to power cycle the system after the XSCF BOOT STOP.

```
Do you really want to continue?

Continue? [yes/no] (default no) :yes
The initialization of XSCF will be started.
  XSCF      : all data clear (exclude SYSTEM ID data)
                (Including CPU core Activation keys)
  BACK UP   : all data clear (exclude SYSTEM ID data)
                (Including CPU core Activation keys)
XSCF will be automatically rebooted. Afterwards, XSCF will be initialized.
Continue? [yes/no] (default no) :yes
Disabling IDIAG prompt complete
Setting FRUID-ROM to writable complete
Clear BB-ID complete
CoD initialization complete.
Backup common DB complete
XSCF shutdown request was completed.

<snip>....XSCF reboot..<snip>

XSCF clear : start

<snip>

XSCF clear : complete

Please turn off the breaker after XSCF halt.
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

showbbstatus(8), **showlogs**(8)

`restoreddefaults(8)`



NAME	sendbreak - Sends a break signal to the control domain of the specified physical partition (PPAR).										
SYNOPSIS	sendbreak [[-q] {-y n}] -p <i>ppar_id</i> sendbreak -h										
DESCRIPTION	<p>sendbreak is a command to send a break signal to the control domain of the specified PPAR.</p> <p>If a break signal is sent to the Oracle Solaris on PPAR from the control domain console, the control is transferred from Oracle Solaris to OpenBoot PROM and the prompt for OpenBoot PROM (ok) is displayed.</p> <p>Note – If the mode switch of the operator panel is set to "Locked," setting the secure mode of setpparmode(8) to "on" prevents transmission of a break signal. For details, see setpparmode(8).</p>										
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td>platadm</td><td>Enables execution for all PPARs.</td></tr> <tr> <td>pparamdm</td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table> <p>For details on user privileges, see setprivileges(8).</p>	platadm	Enables execution for all PPARs.	pparamdm	Enables execution for PPARs for which you have administration privilege.						
platadm	Enables execution for all PPARs.										
pparamdm	Enables execution for PPARs for which you have administration privilege.										
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-p <i>ppar_id</i></td><td>Specifies PPAR-ID to which a break signal is to be sent. Depending on the system configuration, you can specify only one integer from 0 to 15 for <i>ppar_id</i>.</td></tr> <tr> <td>-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td>-y</td><td>Automatically responds to prompt with "y" (yes).</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-p <i>ppar_id</i>	Specifies PPAR-ID to which a break signal is to be sent. Depending on the system configuration, you can specify only one integer from 0 to 15 for <i>ppar_id</i> .	-q	Prevents display of messages, including prompt, for standard output.	-y	Automatically responds to prompt with "y" (yes).
-h	Displays the usage. Specifying this option with another option or operand causes an error.										
-n	Automatically responds to prompt with "n" (no).										
-p <i>ppar_id</i>	Specifies PPAR-ID to which a break signal is to be sent. Depending on the system configuration, you can specify only one integer from 0 to 15 for <i>ppar_id</i> .										
-q	Prevents display of messages, including prompt, for standard output.										
-y	Automatically responds to prompt with "y" (yes).										
EXTENDED DESCRIPTION	When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.										

EXAMPLES **EXAMPLE 1** Send a break signal to the control domain of PPAR-ID 0.

```
XSCF> sendbreak -p 0  
Send break signal to PPAR-ID 0? [y|n] :
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **console (8)**, **setpparmode (8)**, **showconsolepath (8)**

NAME	setad - configure Active Directory
SYNOPSIS	<pre>setad enable disable setad loadcert [[-q] {-y n}] [-i n] [-u <i>username</i>] [-p <i>proxy</i>] [-t <i>proxy_type</i>] <i>URI</i> setad loadcert [[-q] {-y n}] [-i n] console setad rmcert [[-q] {-y n}] [-i n] setad group administrator -i n name [<i>groupname</i>] setad group operator -i n name [<i>groupname</i>] setad group custom -i n name [<i>groupname</i>] setad group custom -i n roles [<i>privileges</i>] setad userdomain -i n [<i>domainname</i>] setad defaultrole [<i>privileges</i>] setad timeout <i>seconds</i> setad server [-i n] [<i>ipaddr</i> [:<i>port</i>]] setad logdetail none high medium low trace setad log [[-q] {-y n}] clear setad dnslocatormode expsearchmode strictcertmode enable disable setad dnslocatorquery -i n [<i>service</i>] setad default [[-q] {-y n}] setad -h</pre>
DESCRIPTION	<p>setad(8) configures Active Directory. To simply enable or disable Active Directory, execute the command with only those operands. To enable or disable an Active Directory mode, such as dnslocatormode, specify the mode along with enable or disable.</p> <p>To clear or unset a property, issue a setad command with no value for the operand. For example, setad group custom -i 1 name clears the name property from custom group 1. If a property is not set, it is displayed with no value.</p> <p>Note – If you are an Active Directory or LDAP/SSL user, do not upload a public key. If one has already been uploaded, use the following command to delete it: XSCF> setssh -c delpubkey -a -u proxyuser</p>

Privileges	You must have useradm privileges to run this command. Refer to setprivileges(8) for more information.
OPTIONS	The following options are supported: <ul style="list-style-type: none"> -h Displays usage statement. When used with other options or operands, an error occurs. -i <i>n</i> Sets an index marker, value 1 - 5. -n Automatically answers "n" (no) to all prompts. -p Specifies the proxy server to be used for transfers. The default transfer type is <code>http</code>, unless modified using the <code>-t proxy_type</code> option. The value for proxy must be in the format <code>servername:port</code>. See EXAMPLE 8. -q Suppresses all messages to stdout, including prompts. -t Use with the <code>-p</code> option to specify proxy type as <code>http</code>, <code>socks4</code>, or <code>socks5</code>. The default is <code>http</code>. -u Specifies the user name when logging in to a remote ftp or http server that requires authentication. Prompts for a password. See EXAMPLE 9. -y Automatically answers "y" (yes) to all prompts.
OPERANDS	The following operands are supported: <ul style="list-style-type: none"> enable disable When used with no other operands, enable or disable the Active Directory feature. loadcert loadcert console prompts for certificate information to be entered at the console. Use this command to paste certificate information copied from a file. Terminate input with CTRL-D. <ul style="list-style-type: none"> <code>loadcert URI</code> loads a certificate file for the Active Directory server. Supported formats for <i>URI</i> are: <pre style="margin-left: 40px;"><code>http://server[:port]/path/file</code> <code>https://server[:port]/path/file</code> <code>ftp://server[:port]/path/file</code> <code>file:///media/usb_msd/path/file</code></pre>

rmcert	Delete certificate file for the Active Directory server. strictcertmode must be in the disabled state for a certificate to be removed.
group administrator	Assign group name for up to five specified administrator groups. The administrator group has platadm, useradm, and auditadm privileges and you cannot change that.
group operator	Assign group name for up to five specified operator groups. The operator group has platop and auditop privileges and you cannot change that.
group custom	Assign group name and privileges for up to five groups.
userdomain	Configure the specified user domain. A user domain can be configured explicitly through the setad userdomain command on XSCF, or entered at the login prompt using the form, <i>user@domain</i> . <ul style="list-style-type: none"> ■ If a user domain is specified at the login prompt – for example, <code>login: ima.admin@dc01.example.com</code> – that user domain is used for this login attempt. Any pre-configured user domains (as displayed by showad userdomain) are ignored. ■ If a user domain is not specified at the login prompt – for example, <code>login: ima.admin</code> – XSCF checks each of the pre-configured user domains, in turn, to authenticate the user. <p>See EXAMPLE 6, below, for important information.</p>
defaultrole	Configure default privileges. If defaultrole is configured, users have privileges as specified by defaultrole after authentication; user group membership is not checked. If defaultrole is not configured, users' privileges will be learned from Active Directory based on group membership.
timeout	Configure transaction timeout, in seconds. <i>seconds</i> can be 1 to 20. The default is 4. If the specified timeout is too brief for the configuration, the login process or retrieval of user privilege settings could fail.
server	Configure the primary and up to five alternate Active Directory servers. To use a host name, DNS must be enabled. An IP address can be specified with port number; otherwise, the default port is used.

	logdetail	Enable logging of Active Directory authentication and authorization diagnostic messages at the specified detail level. This log is for use in troubleshooting and is cleared on SP reboot. Level can be one of the following:
	none	Do not log diagnostic messages. Use this setting during normal system operation
	high	Log only high-severity diagnostic messages
	medium	Log only high-severity and medium-severity diagnostic messages
	low	Log high-severity, medium-severity, and informational diagnostic messages
	trace	Log high-severity, medium-severity, informational, and trace-level diagnostic messages
	log [<i>options</i>] clear	Clear the log file of Active Directory authentication and authorization diagnostic messages.
	dnslocatormode	Enable or disable DNS locator mode. This mode is disabled by default. If enabled, XSCF queries a DNS server to learn the Active Directory server to use for user authentication.
	expsearchmode	Enable or disable expanded search mode. The default Active Directory functionality is intentionally restrictive to ensure proper security. Search criteria can be expanded to accommodate specific customer environments. The expanded search mode is disabled by default, which means the UserPrincipalName (UPN) is expected to have a fully qualified domain name suffix. When expanded search mode is enabled, more searches are attempted if the more specific UPN search does not immediately succeed.

	strictcertmode	Enable or disable strictcertmode mode. This mode is disabled by default; the channel is secure, but limited validation of the certificate is performed. If strictcertmode is enabled, the server's certificate must have already been uploaded to the server so that the certificate signatures can be validated when the server certificate is presented. Data is always protected, even if strictcertmode is disabled. Strictcertmode applies to primary and alternate servers alike.
	dnslocatorquery	Configure the DNS locator query. DNS and DNS Locator Mode must be enabled for DNS Locator Queries to work. The DNS Locator service query identifies the named DNS service. See EXAMPLES, below, for important information.
	default	Reset Active Directory settings to factory default.
EXAMPLES	EXAMPLE 1 Configures the Active Directory primary server, specifying a port other than the default.	
	<pre>XSCF> setad server 10.1.12.250:4040</pre>	
	EXAMPLE 2 Sets name for administrator group 3.	
	<pre>XSCF> setad group administrator -i 3 name CN=spSuperAdmin, \ OU=Groups,DC=Sales,DC=aCompany,DC=com</pre>	
	EXAMPLE 3 Sets name for custom group 2.	
	<pre>XSCF> setad group custom -i 2 name CN=spLimitedAdmin, \ OU=Groups,DC=Sales,DC=aCompany,DC=com</pre>	
	EXAMPLE 4 Sets roles for custom group 2.	
	<pre>XSCF> setad group custom -i 2 roles auditadm,platop</pre>	
	EXAMPLE 5 Loads certificate information for Alternate Server 4 from the console.	
	<pre>XSCF> setad loadcert -i 4 console Warning: About to load certificate for Alternate Server 4: Continue? [y n]: y Please enter the certificate:</pre>	
	<pre>-----BEGIN CERTIFICATE----- MIETjCCAzagAwIBAgIBADANBgkqhkiG9w0BAQQFADB8MQswCQYDVQQGEwJVUzET MBEGA1UECBMKQ2FsaWZvcm5pYTESEMBAGA1UEBxMJu2FuIERpZWdvMRkwFwYDVQQK ExBTdW4gTWljcm9zeXN0ZW1zMRUwEwYDVQQLEwxTeXN0ZW0gR3JvdXAxEjAQBgNV</pre>	

```
-----END CERTIFICATE-----
```

CTRL-D

XSCF>

EXAMPLE 6 Configures user domain 2. <USERNAME> is a template that must be entered exactly as shown. During authentication the user's login name replaces <USERNAME>. userdomain can take the form of UPN or Distinguished Name (DN).

```
XSCF> setad userdomain -i 2 '<USERNAME>@yoshi.example.aCompany.com'
```

EXAMPLE 7 Loads a server certificate for Active Directory using the specified URI.

```
XSCF> setad loadcert http://domain_2/UID_2333/testcert
```

EXAMPLE 8 Loads a server certificate for Active Directory using an http Proxy Server with port 8080.

```
XSCF> setad loadcert -p webproxy.aCompany.com:8080 \
http://domain_2/UID_2333/testcert
```

EXAMPLE 9 Loads a server certificate for Active Directory using a username and password.

```
XSCF> setad loadcert -u yoshi \
http://domain_2/UID_2333/testcert
```

EXAMPLE 10 Removes the certificate for alternate server 3.

```
XSCF> setad rmcert -i 3
```

EXAMPLE 11 Sets logging of high-severity diagnostic messages.

```
XSCF> setad logdetail high
```

EXAMPLE 12 Clears diagnostic messages from the log file, answering Yes to all prompts.

```
XSCF> setad log -y clear
```

EXAMPLE 13 Enables strictcertmode.

```
XSCF> setad strictcertmode enable
```

EXAMPLE 14 Configures the dnslocatorquery configuration. *service* represents the DNS query to be performed. The port ID is generally part of the record, but you can override it by using the format <PORT:&i>portnumber

```
XSCF> setad dnslocatorquery -i 2 \
'_ldap._tcp.gc._msdcs.<DOMAIN>.<PORT:3269>'
```

EXAMPLE 15 Configures the default privileges, where *privileges* are the same as those used in the setad group custom roles command.

```
XSCF> setad defaultrole platadm plaptop
```

EXIT STATUS The following exit values are returned:

- | | |
|----|------------------------|
| 0 | Successful completion. |
| >0 | An error occurred. |

SEE ALSO **showad**(8)



NAME	setaltitude - Sets the altitude of the system.				
SYNOPSIS	setaltitude -s <i>altitude= value</i> setaltitude -h				
DESCRIPTION	setaltitude is a command to set the altitude of the system.				
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8) .				
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-s <i>altitude=value</i></td><td>Sets the altitude of the system. Specifies the altitude of the location where the system is installed by meter (m) in <i>value</i>. 0 or a larger integer can be specified by 100 m. Values less than 100 m are rounded up. The default value is 0 m.</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-s <i>altitude=value</i>	Sets the altitude of the system. Specifies the altitude of the location where the system is installed by meter (m) in <i>value</i> . 0 or a larger integer can be specified by 100 m. Values less than 100 m are rounded up. The default value is 0 m.
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
-s <i>altitude=value</i>	Sets the altitude of the system. Specifies the altitude of the location where the system is installed by meter (m) in <i>value</i> . 0 or a larger integer can be specified by 100 m. Values less than 100 m are rounded up. The default value is 0 m.				
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ If the altitude of the system is set, abnormalities in the intake temperature can be detected early. If the altitude of the system is unknown, set a high altitude. If the altitude of the system is not set, temperature abnormalities can be detected by an abnormality of the CPU temperature, etc. Therefore, the system will not be damaged seriously. ■ To reflect the set contents, it is necessary to reset XSCF by using rebootxscf(8). ■ Negative numbers are not supported in the altitude setting. If the altitude is below sea level, specify <i>altitude=0</i>. ■ You can confirm the altitude of the system set currently by using showaltitude(8). 				
EXAMPLES	<p>EXAMPLE 1 Set the altitude of the system to 1000 m.</p> <pre>XSCF> setaltitude -s altitude=1000 1000m</pre> <p>EXAMPLE 2 Set the altitude of the system to 200 m. The specified value is rounded up to the nearest 100 m.</p> <pre>XSCF> setaltitude -s altitude=157 200m</pre>				

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO	rebootxscf(8) , showaltitude(8)
-----------------	---

NAME	setaudit - Manages the audit function of the system.
SYNOPSIS	<pre>setaudit enable disable archive delete setaudit [-p count suspend] [-m mailaddr] [-a users=enable disable default] [-c classes= {enable disable}]... [-e events=enable disable]... [-g {enable disable}] [-t percents] setaudit -h</pre>
DESCRIPTION	<p>setaudit is a command to manage collection of data on the use of the system resources.</p> <p>Audit data contains the record of the system event related to security. This data can be used for assignment of responsibilities to the actions executed in the system. In audit, the record is generated when the specified event occurs. The events which generate an audit record are below.</p> <ul style="list-style-type: none"> ■ Start and shutdown of the system ■ Login and logout ■ Action of authentication ■ Action of administration
Privileges	<p>To execute this command, <code>auditadm</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p> <p>-a users=enable disable default Sets the audit record generation policy of the specified user. <i>users</i> is the comma-separated list of the valid user names.</p> <p>If <i>enable</i> or <i>disable</i> is set, the audit record generation of the user becomes <i>enable</i> or <i>disable</i>, respectively. This setting disables the global policy of each specified user. To set the global policy of the user, use the -g option.</p> <p>Setting this to <i>default</i> enables the global policy for the policy of the user. To confirm the global audit record policy of the user, use <code>showaudit -g</code>.</p>

`-c classes=enable|disable`

Changes the audit record generation policy of the specified audit class. *classes* is a comma-separated list of audit classes. Classes can be specified with a number or name. ACS_prefix can be omitted. For example, the classes of audit-related events can be expressed as ACS_AUDIT, AUDIT or 16.

The valid classes are below.

<code>all</code>	All classes
<code>ACS_SYSTEM(1)</code>	System-related event
<code>ACS_WRITE(2)</code>	Command that can change the status
<code>ACS_READ(4)</code>	Command to read the current status
<code>ACS_LOGIN(8)</code>	Login-related event
<code>ACS_AUDIT(16)</code>	Audit-related event
<code>ACS_PPAR(32)</code>	Physical partition (PPAR) administration-related event
<code>ACS_USER(64)</code>	User administration-related event
<code>ACS_PLATFORM(128)</code>	Platform administration-related event
<code>ACS_MODES(256)</code>	Mode-related event

You can specify more than one of these options. If more than one of these options are specified, they are handled in the order of the list with the `-e` option. See Example 1.

If `enable` or `disable` is set, the audit record generation of the specified class becomes enable or disable, respectively. It is possible to disable these settings for individual events by using the `-e` option. The audit record generation policies of classes and events are applied to all users. It is impossible to specify a unique policy of class or event for each individual user.

<code>-e events=enable disable</code>	Changes the audit record generation policy of the specified audit event. <i>events</i> is a comma-separated list of audit events. Events can be specified with a number or name. AEV_prefix can be omitted. For example, the event of SSH login can be expressed as AEV_LOGIN_SSH, LOGIN_SSH, or 0.
	For the list of valid events, see <code>showaudit -e all</code> .
	You can specify more than one of these options. If more than one of these options are specified, they are handled in the order of the list with the <code>-c</code> option. See Example 3.
	If <code>enable</code> or <code>disable</code> is set, the audit record generation of the specified event becomes <code>enable</code> or <code>disable</code> , respectively. Setting these options disables the settings of classes for events. The settings of classes are set by the <code>-c</code> option.
<code>-g enable disable</code>	The audit record generation policies of classes and events are applied to all users. It is impossible to specify a unique policy of class or event for each individual user.
	Sets the global audit record generation policy of the user.
	If it is set to <code>disable</code> , no audit record which can attribute to all user accounts is generated. These settings may be disabled depending on individual users by the <code>-a</code> option.
<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.

-m <i>mailaddr</i>	Sets the address of the e-mail sent when the usage of the local audit area reaches the threshold (See the -t option). The e-mail address needs to be an e-mail address in a valid format, "user@company.com." Specifying none in <i>mailaddr</i> disables e-mail notification.
-p suspend count	Sets the policy to be followed if the audit trail reaches the full capacity. The valid values are below. suspend Until free space is secured and it becomes possible to write on the record, or the policy is changed into count, all processes to write on the audit record are suspended. count New audit records are deleted. The number of the records to be deleted are counted.
-t <i>percents</i>	Sets the threshold to issue a warning for the usage of the local region. <i>percents</i> is a comma-separated list showing the percentage of the used area. Up to four values can be set in this list. For example, if the values, 50, 75, 80, and 90 are set, a warning is issued when the usage of the areas available for audit records reaches 50%, 75%, 80%, and 90%, respectively. The default is 80%. A warning is issued as a message to the console. Optionally, it is also possible to issue a warning to the administrator by using e-mail. See -m <i>mailaddr</i> .

OPERANDS	<p>The following operands are supported.</p>
	<p>archive Notifies the archive mechanism of logs to archive the current audit trail.</p>
	<p>delete Deletes the data of audit trail from the partition of audit logs in chronological order and uses the current partition. delete can be used to secure the area for new audit records when the local audit trail reaches the full capacity. The space in a partition is automatically cleared when logs are archived, if necessary.</p>
	<p>Operations are required only if a problem with the audit policy or network interrupts archiving of audit logs.</p>
	<p>Note – If setaudit delete is executed twice, data is deleted from the partitions of audit logs in reverse chronological order and no data of audit trail is kept.</p>
	<p>For details on administration of audit logs, see the <i>Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide</i>.</p>
	<p>disable Disables writing audit records on audit trail. After that, it notifies the archive mechanism of logs to archive the current audit trail.</p>
	<p>enable Enables writing audit records on audit trail.</p>
EXTENDED DESCRIPTION	<p>It is possible to confirm the contents of the audit system set currently by using showaudit(8).</p>
EXAMPLES	<p>EXAMPLE 1 Change the class by name. Disable the login- and audit-related audit classes and enable the lead-related audit classes.</p>
	<pre>XSCF> setaudit -c LOGIN,AUDIT=disable -c ACS_READ=enable</pre>
	<p>EXAMPLE 2 Change the class by number. Disable the classes 8 (login) and 16 (audit) and enable 1 (system).</p>
	<pre>XSCF> setaudit -c 8,16=disable -c 1=enable</pre>
	<p>EXAMPLE 3 Change the class and enable the event. Disable the event 64 (user) only and enable the class 1 (system).</p>
	<pre>XSCF> setaudit -c 1=enable -e 64=disable</pre>
	<p>EXAMPLE 4 Enable audit. Enable writing on records for audit trail.</p>
	<pre>XSCF> setaudit enable</pre>

EXAMPLE 5 Enable warning. If the capacity reaches 50% or 75%, a warning is sent.

```
XSCF> setaudit -t 50,75
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **showaudit(8)**

NAME	setautologout - Sets the session timeout time of XSCF shell.				
SYNOPSIS	setautologout -s <i>timeout</i> setautologout -h				
DESCRIPTION	setautologout is a command to set the session timeout time of XSCF shell. The default timeout time is 10 minutes.				
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .				
OPTIONS	The following options are supported. <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-s <i>timeout</i></td><td>Specifies the session timeout time of XSCF shell. Specify the time to timeout in <i>timeout</i> by minutes. You can specify an integer from 1 to 255.</td></tr> </table> <ul style="list-style-type: none"> ■ The set session timeout time becomes valid from the next login. ■ You can confirm the session timeout time of XSCF shell set currently by using <code>showautologout(8)</code>. 	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-s <i>timeout</i>	Specifies the session timeout time of XSCF shell. Specify the time to timeout in <i>timeout</i> by minutes. You can specify an integer from 1 to 255.
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
-s <i>timeout</i>	Specifies the session timeout time of XSCF shell. Specify the time to timeout in <i>timeout</i> by minutes. You can specify an integer from 1 to 255.				
EXTENDED DESCRIPTION					
EXAMPLES	EXAMPLE 1 Set the session timeout time of XSCF shell to 30 minutes. <pre>XSCF> setautologout -s 30 30min</pre>				
EXIT STATUS	The following exit values are returned. <table> <tr> <td>0</td><td>Indicates normal end.</td></tr> <tr> <td>>0</td><td>Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	showautologout(8)				

`setautologout(8)`

NAME	setcod - Sets the CPU Activation to be used in the physical partition (PPAR).
SYNOPSIS	setcod -s cpu setcod -p <i>ppar_id</i> -s cpu setcod -p <i>ppar_id</i> -s cpu <i>permits</i> setcod -h
DESCRIPTION	setcod is a command to set the CPU Activation to be used in PPAR.
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -p <i>ppar_id</i> Specifies PPAR-ID. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. If -p <i>ppar_id</i> is not specified, you can specify the number of the CPU Activations interactively for each PPAR. The prompt to enter the number of the CPU Activations shows the possible maximum value of the number in round brackets and the number currently set in square brackets ([]). If the number of the keys is not specified, the current value is retained. -s cpu Sets the allocation of the CPU core resource used in PPAR.
OPERANDS	<p>The following operands are supported.</p> <ul style="list-style-type: none"> <i>permits</i> Specifies the number of the CPU Activations allocated for PPAR. You can specify 0 or a higher integer. The units of CPU Activations allocated are 1 core for CPU. You cannot set a value higher than the number of the CPU Activations available. You can confirm the number of the CPU Activations available by <code>showcodusage -p resource</code>.
EXTENDED DESCRIPTION	If <code>showcod(8)</code> is used, the CPU Activation information currently set is confirmed.

EXAMPLES	EXAMPLE 1 Set the number of the CPU Activations to be allocated for PPAR. <pre>XSCF> setcod -s cpu PROC Permits installed: 5 cores PROC Permits assigned for PPAR 0 (5 MAX) [Permanent 2cores] Permanent [2]:1 PROC Permits assigned for PPAR 1 (4 MAX) [Permanent 0cores] Permanent [0]:4 PROC Permits assigned for PPAR 2 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 3 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 4 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 5 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 6 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 7 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 8 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 9 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 10 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 11 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 12 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 13 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 14 (0 MAX) [Permanent 0cores] Permanent [0]: PROC Permits assigned for PPAR 15 (0 MAX) [Permanent 0cores] Permanent [0]:</pre>				
EXIT STATUS	The following exit values are returned. <table> <tr> <td data-bbox="352 1206 381 1240">0</td><td data-bbox="540 1206 799 1240">Indicates normal end.</td></tr> <tr> <td data-bbox="352 1257 381 1292">>0</td><td data-bbox="540 1257 856 1292">Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	addcodactivation(8) , deletecodactivation(8) , showcod(8) , showcodactivation(8) , showcodactivationhistory(8) , showcodusage(8)				

NAME	setdate - Sets the date and time of the XSCF clock.																
SYNOPSIS	setdate [[-q] {-y n}] [-u] -s <i>date</i> setdate -h																
DESCRIPTION	<p>setdate is a command to set the date and time of the XSCF clock.</p> <p>If the local time (JST) is specified without specifying the -u option when setting the date and time, it is set after converted to the coordinated universal time (UTC).</p> <p>After the command is executed, XSCF is automatically reset.</p>																
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .																
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td>-s <i>date</i></td><td>Sets the date and time. <i>date</i> can be specified in either of the following formats.</td></tr> <tr> <td></td><td><i>yyyy.MM.DD-hh:mm:ss</i> "Year.Month.Date.-Hour (24 hour format):minute:second"</td></tr> <tr> <td></td><td><i>MMDDhhmmYYYY.ss</i> "Month Date Hour (24 hour format) Minute Year.Second"</td></tr> <tr> <td>-u</td><td>Specifies the time and date in UTC. If omitted, it becomes JST.</td></tr> <tr> <td>-y</td><td>Automatically responds to prompt with "y" (yes).</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-q	Prevents display of messages, including prompt, for standard output.	-s <i>date</i>	Sets the date and time. <i>date</i> can be specified in either of the following formats.		<i>yyyy.MM.DD-hh:mm:ss</i> "Year.Month.Date.-Hour (24 hour format):minute:second"		<i>MMDDhhmmYYYY.ss</i> "Month Date Hour (24 hour format) Minute Year.Second"	-u	Specifies the time and date in UTC. If omitted, it becomes JST.	-y	Automatically responds to prompt with "y" (yes).
-h	Displays the usage. Specifying this option with another option or operand causes an error.																
-n	Automatically responds to prompt with "n" (no).																
-q	Prevents display of messages, including prompt, for standard output.																
-s <i>date</i>	Sets the date and time. <i>date</i> can be specified in either of the following formats.																
	<i>yyyy.MM.DD-hh:mm:ss</i> "Year.Month.Date.-Hour (24 hour format):minute:second"																
	<i>MMDDhhmmYYYY.ss</i> "Month Date Hour (24 hour format) Minute Year.Second"																
-u	Specifies the time and date in UTC. If omitted, it becomes JST.																
-y	Automatically responds to prompt with "y" (yes).																
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ Setting the time by <code>setdate</code> may affect the difference from the Hypervisor time of each physical partition (PPAR) and cause a mismatch of the time when PPAR is started. After setting the time, confirm the difference between XSCF and the Hypervisor time of each PPAR by using <code>showdateoffset(8)</code>. If the difference becomes large, reset the difference of the time by <code>resetdateoffset(8)</code>. ■ If an NTP server is set for XSCF, the time is not set. You can confirm whether an NTP server is set in XSCF by <code>showntp(8)</code>. 																

- You can confirm the date and time of XSCF set currently by using `showdate(8)`.

EXAMPLES

EXAMPLE 1 Specify "October 20, 2012 16:59:00" in JST and set it after converting it into UTC. After the setting is made, XSCF is reset.

```
XSCF> setdate -s 102016592012.00
Sat Oct 20 16:59:00 JST 2012
The XSCF will be reset. Continue? [y|n] :y
Sat Oct 20 7:59:00 UTC 2012
XSCF>
(After this, the reset processing continues.)
```

EXAMPLE 2 Set the current time to "October 20, 2012 07:59:00" in UTC. After the setting is made, XSCF is reset.

```
XSCF> setdate -u -s 102007592012.00
Sat Oct 20 07:59:00 UTC 2012
The XSCF will be reset. Continue? [y|n] :y
Sat Oct 20 7:59:00 UTC 2012
XSCF>
(After this, the reset processing continues.)
```

EXAMPLE 3 Set the current time to "October 20, 2012 16:59:00" in JST. The prompt is automatically given a "y" response. After the setting is made, XSCF is reset.

```
XSCF> setdate -y -s 102016592012.00
Sat Oct 20 16:59:00 JST 2012
The XSCF will be reset. Continue? [y|n] :y
Sat Oct 20 7:59:00 UTC 2012
XSCF>
(After this, the reset processing continues.)
```

EXAMPLE 4 Set the current time to "October 20, 2012 16:59:00" in JST. The prompt is automatically given a "y" response after hiding the message. After the setting is made, XSCF is reset.

```
XSCF> setdate -q -y -s 102016592012.00
XSCF>
(After this, the reset processing continues.)
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

setntp(8), **settimezone(8)**, **showdate(8)**, **showntp(8)**, **showtimezone(8)**

NAME	setdomainconfig - Specifies the logical domain configuration when the physical partition (PPAR) is started.														
SYNOPSIS	<pre>setdomainconfig -p ppar_id setdomainconfig [[-q] -{y n}] -p ppar_id -i index setdomainconfig [[-q] -{y n}] -p ppar_id -c default setdomainconfig -h</pre>														
DESCRIPTION	<p><code>setdomainconfig</code> is a command to specify the logical domain configuration when the PPAR is started next time.</p> <p>If <code>setdomainconfig</code> is executed without specifying <code>-i index</code>, the list of the logical domain configurations is displayed on the prompt and then specify the Index of the logical domain configuration used when PPAR is started next time. If Index is not specified, the current setting is retained.</p>														
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><code>platadm, fieldeng</code></td><td>Enables execution for all PPARs.</td></tr> <tr> <td><code>pparadm</code></td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>	<code>platadm, fieldeng</code>	Enables execution for all PPARs.	<code>pparadm</code>	Enables execution for PPARs for which you have administration privilege.										
<code>platadm, fieldeng</code>	Enables execution for all PPARs.														
<code>pparadm</code>	Enables execution for PPARs for which you have administration privilege.														
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td><code>-c default</code></td><td>Sets the logical domain configuration to the factory settings (factory-default).</td></tr> <tr> <td><code>-h</code></td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td><code>-i index</code></td><td>Specifies the administration number specified for the logical domain configuration. The administration number can be confirmed by <code>showdomainconfig(8)</code>. You can specify an integer from 1 to 8.</td></tr> <tr> <td><code>-n</code></td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td><code>-p ppar_id</code></td><td>Specifies the PPAR-ID to set the logical domain configuration. <code>ppar_id</code> can be 0-15 depending on the system configuration.</td></tr> <tr> <td><code>-q</code></td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td><code>-y</code></td><td>Automatically responds to prompt with "y" (yes).</td></tr> </table>	<code>-c default</code>	Sets the logical domain configuration to the factory settings (factory-default).	<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.	<code>-i index</code>	Specifies the administration number specified for the logical domain configuration. The administration number can be confirmed by <code>showdomainconfig(8)</code> . You can specify an integer from 1 to 8.	<code>-n</code>	Automatically responds to prompt with "n" (no).	<code>-p ppar_id</code>	Specifies the PPAR-ID to set the logical domain configuration. <code>ppar_id</code> can be 0-15 depending on the system configuration.	<code>-q</code>	Prevents display of messages, including prompt, for standard output.	<code>-y</code>	Automatically responds to prompt with "y" (yes).
<code>-c default</code>	Sets the logical domain configuration to the factory settings (factory-default).														
<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.														
<code>-i index</code>	Specifies the administration number specified for the logical domain configuration. The administration number can be confirmed by <code>showdomainconfig(8)</code> . You can specify an integer from 1 to 8.														
<code>-n</code>	Automatically responds to prompt with "n" (no).														
<code>-p ppar_id</code>	Specifies the PPAR-ID to set the logical domain configuration. <code>ppar_id</code> can be 0-15 depending on the system configuration.														
<code>-q</code>	Prevents display of messages, including prompt, for standard output.														
<code>-y</code>	Automatically responds to prompt with "y" (yes).														

EXTENDED DESCRIPTION

- The logical domain configuration is saved by Logical Domains (LDoms) Manager.
- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
- You can confirm the contents of the logical domain configuration set currently by using showdomainconfig(8).

EXAMPLES

EXAMPLE 1 Set the logical domain configuration of PPAR-ID 0 to "ldm-set1."

```
XSCF> setdomainconfig -p 0
PPAR-ID      :0
Booting config
  (Current)   :ldm-set2
  (Next)      :ldm-set2
-----
-----
Index       :1
config_name :factory-default
domains     :1
date_created:-
-----
-----
Index       :2
config_name :ldm-set1
domains     :8
date_created:'2012-08-08 11:34:56'
-----
-----
Index       :3
config_name :ldm-set2
domains     :20
date_created:'2012-08-09 12:43:56'
-----
-----
Select Index of Using config_name :2
PPAR-ID of PPARS that will be affected :00
Logical domain config_name will be set to "ldm-set1".
Continue? [y|n] :y
```

EXAMPLE 2 Set the logical domain configuration of PPAR-ID 0 to "ldm-set2."

```
XSCF> setdomainconfig -p 0 -i 1
Index       :1
config_name :ldm-set2
domains     :8
date_created:'2012-08-08 11:34:56'
-----
-----
PPAR-ID of PPARS that will be affected:00
Logical domain config_name will be set to "ldm-set2".
Continue? [y|n] :y
```

EXAMPLE 3 Set the logical domain configuration of PPAR-ID 0 to the default. The prompt is automatically given a "y" response.

```
XSCF> setdomainconfig -y -p 0 -c default
PPAR-ID of PPARs that will be affected :00
Logical domain config_name will be set to "factory-default".
Continue? [y|n] :y
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO [showdomainconfig \(8\)](#)

NAME	setdualpowerfeed - Sets the dual power feed mode.
SYNOPSIS	setdualpowerfeed [-a -b <i>bb_id</i>] -s <i>key</i> setdualpowerfeed -h
DESCRIPTION	setdualpowerfeed is to enable or disable the dual power feed mode of the system. Note – The SPARC M10 Systems have redundant Power Supply Units. Even when the dual power feed setting is enabled/disabled by setdualpowerfeed, it won't make any changes on the system behavior including redundancy management of power. This function can be used as "memo" for administrator to distinguish whether a customer's facility is configured as dual power feed or not.
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -a Configures the dual power feed mode of all SPARC M10 Systems chassis and the crossbar boxes. -b <i>bb_id</i> Specifies the BB-ID to which you set the dual power feed mode. In <i>bb_id</i>, you can specify an integer from 0 to 15 in case of SPARC M10 Systems, and from 80 to 83 in case of crossbar box. -h Displays the usage. Specifying this option with another option or operand causes an error. -s <i>key</i> Sets the dual power feed mode of the system. You can specify either of the following for <i>key</i>. <ul style="list-style-type: none"> enable Enables the dual power feed mode. disable Disables the dual power feed mode.
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ You can confirm the status of the dual power feed mode set currently by using <code>showdualpowerfeed(8)</code>. ■ You can confirm the information of the model and power supply unit (PSU) set currently by using <code>showhardconf(8)</code>.
EXAMPLES	EXAMPLE 1 Disables the dual power feed mode of the entire system. <pre>XSCF> setdualpowerfeed -a -s disable BB#00:enable -> disable BB#01:enable -> disable BB#02:enable -> disable</pre>

```
setdualpowerfeed(8)
```

```
BB#03:enable -> disable
BB#04:enable -> disable
BB#05:enable -> disable
BB#06:enable -> disable
BB#07:enable -> disable
BB#08:enable -> disable
BB#09:enable -> disable
BB#10:enable -> disable
BB#11:enable -> disable
BB#12:enable -> disable
BB#13:enable -> disable
BB#14:enable -> disable
BB#15:enable -> disable
XBBOX#80:enable -> disable
XBBOX#81:enable -> disable
XBBOX#82:enable -> disable
XBBOX#83:enable -> disable
```

EXAMPLE 2 Enables the dual power feed mode of BB-ID 01.

```
XSCF> setdualpowerfeed -b 1 -s enable
BB#00:disable -> disable
BB#01:disable -> enable
BB#02:disable -> disable
BB#03:disable -> disable
BB#04:disable -> disable
BB#05:disable -> disable
BB#06:disable -> disable
BB#07:disable -> disable
BB#08:disable -> disable
BB#09:disable -> disable
BB#10:disable -> disable
BB#11:disable -> disable
BB#12:disable -> disable
BB#13:disable -> disable
BB#14:disable -> disable
BB#15:disable -> disable
XBBOX#80:disable -> disable
XBBOX#81:disable -> disable
XBBOX#82:disable -> disable
XBBOX#83:disable -> disable
```

EXAMPLE 3 Enables the dual power feed mode on the SPARC M10-1.

```
XSCF> setdualpowerfeed -b 1 -s enable
BB#00:disable -> enable
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **showdualpowerfeed(8)**, **showhardconf(8)**

`setdualpowerfeed(8)`

NAME	setemailreport - Sets the e-mail report function.						
SYNOPSIS	setemailreport [-v] [-t] setemailreport [-s <i>variable= value</i>]... setemailreport -h						
DESCRIPTION	<p>setemailreport is a command to set the e-mail report function for remote maintenance.</p> <p>You can interactively set the e-mail report function by executing setemailreport without specifying an option. For interactive setting, use the following options.</p> <table><tr><td>-a</td><td>Addition of addressee</td></tr><tr><td>-d</td><td>Deletion of addressee</td></tr><tr><td>-r</td><td>Replacement of addressee (Default)</td></tr></table> <p>To set the e-mail report non-interactively, specify the -s option.</p> <p>Setting the mail server and port using setsmtplib(8) enables transmission of test mail by setemailreport -t.</p>	-a	Addition of addressee	-d	Deletion of addressee	-r	Replacement of addressee (Default)
-a	Addition of addressee						
-d	Deletion of addressee						
-r	Replacement of addressee (Default)						
Privileges	To execute this command, platadm privilege is required. For details on user privileges, see setprivileges(8) .						

OPTIONS	<p>The following options are supported.</p> <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p> <p>-s <i>variable=value</i> Sets the e-mail report function. You can specify the following values for <i>variable</i>.</p> <table border="0" data-bbox="581 381 1293 623"> <tr> <td style="vertical-align: top; padding-right: 20px;">enable</td><td>Specifies whether to enable the e-mail report function.</td></tr> <tr> <td style="vertical-align: top;">recipient</td><td>Specifies the recipient address of e-mail.</td></tr> </table> <p>If <i>enable</i> is set in <i>variable</i>, you can specify either of the following values for <i>value</i>.</p> <table border="0" data-bbox="581 571 1229 623"> <tr> <td style="vertical-align: top; padding-right: 20px;">yes</td><td>Enables the e-mail report function.</td></tr> <tr> <td style="vertical-align: top;">no</td><td>Disables the e-mail report function.</td></tr> </table> <p>If <i>recipient</i> is set in <i>variable</i>, specify the recipient e-mail address for <i>value</i>. The e-mail addresses can be specified by separating them either with commas (,), colons (:), or semicolons (;). If multiple addresses are specified, enclose them in double quotation marks ("").</p> <p>-t Sends a test mail.</p> <p>-v Displays detailed message.</p>	enable	Specifies whether to enable the e-mail report function.	recipient	Specifies the recipient address of e-mail.	yes	Enables the e-mail report function.	no	Disables the e-mail report function.
enable	Specifies whether to enable the e-mail report function.								
recipient	Specifies the recipient address of e-mail.								
yes	Enables the e-mail report function.								
no	Disables the e-mail report function.								
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ You can confirm the data of the e-mail report set currently by using <code>showemailreport(8)</code>. ■ The e-mail addresses that are used with the <code>setemailreport</code> should be in the following format, which is based on "3.4.1. Addr-Spec Specification" of RFC5322. <ul style="list-style-type: none"> ■ The local-part and the domain should be combined by the "@" character in this format: local-part@domain, the local-part should not contain more than 64 characters, the domain should not contain more than 255 characters and the mail address as a whole should not contain more than 256 characters ■ The following character strings can be used in the local-part: <ul style="list-style-type: none"> - abcdefghijklmnopqrstuvwxyz - ABCDEFGHIJKLMNOPQRSTUVWXYZ - 0123456789 - !#\$%&'*+-/?^_`{ } ~. <p>The dot (.) cannot be used as the first or last character of the local-part. Moreover, two or more of this character cannot be used consecutively.</p> ■ The domain should be specified as a combination of its constituent labels, added by a dot (.), in this format: label1.label2. 								

The dot (.) cannot be used as the first or last character of the domain part.
 Moreover, two or more of this character cannot be used consecutively.

- The labels, which are part of domains, may contain the following characters:

- abcdefghijklmnopqrstuvwxyz
- ABCDEFGHIJKLMNOPQRSTUVWXYZ
- 0123456789
- ..-

The hyphen (-) cannot be used as the first character of a label.

- If there are more than one recipients, put all the e-mail addresses in a pair of double quotes and separate individual e-mail addresses either with commas (,), colons (:), or semicolons (;).

Note – Depending on the mail server, the above symbols may not be used.

Note – The following formats as defined in RFC5322 are not supported:

- 3.2.1. quoted-pairs, as defined in "Quoted Characters".
- 3.2.2. CFWS, FWS, comment, as defined in "Folding White Space and Comments".
- 3.2.4. quoted-strings, as defined in "Quoted Strings".
- 3.4.1. domain-literal, as defined in "Addr-Spec Specification".
4. The obsolete formats described in "Obsolete Syntax".

EXAMPLES

EXAMPLE 1 Enable the e-mail report function interactively.

```
XSCF> setemailreport
Enable E-Mail Reporting? [no] :yes
E-mail Recipient Address [useradm@company.com] :
Do you want to send a test mail now [no]? yes
... Sending test mail to 'useradm@company.com'
```

EXAMPLE 2 Add the e-mail address to receive the e-mail report interactively.

```
XSCF> setemailreport
Enable E-Mail Reporting? [yes] :[Enter]
E-mail Recipient Address [useradm@company.com] : -a adm2@company.com
```

EXAMPLE 3 Delete the e-mail address to receive the e-mail report interactively.

```
XSCF> setemailreport
Enable E-Mail Reporting? [yes] :[Enter]
E-mail Recipient Address [adm2@company.com] : -d adm2@company.com
```

EXAMPLE 4 Set the e-mail report function non-interactively.

```
XSCF> setemailreport -s enable=yes -s recipient="useradm@company.com,adm2@company.com"
```

setemailreport(8)

EXAMPLE 5 Send a test mail.

```
XSCF> setemailreport -t
... Sending test mail to 'useradm@company.com'
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

setsntp (8), showemailreport (8)

NAME	sethostname - Sets the host names and DNS domain names of the master chassis and chassis whose XSCF is standby.
SYNOPSIS	sethostname <i>xscfu hostname</i> sethostname -d <i>domainname</i> sethostname -h
DESCRIPTION	sethostname is a command to set the host names and DNS domain names of the master chassis and chassis whose XSCF is standby.
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. -d <i>domainname</i> Specifies the DNS domain names to be set for the master chassis/chassis whose XSCF is standby. <i>domainname</i> is specified with the label elements separated by periods (.). For the label element, you can use alphanumeric characters and hyphens (-). However, make the specification using an alphabetic character for the beginning, and an alphanumeric character for the end of the element. (Based on RFC 1034.) It shall be specified keeping the number of characters including that of <i>hostname</i> 253 or lower. The reason why the number of characters is 253 or lower is that two characters are kept for one period to connect <i>hostname</i> with <i>domainname</i> and another one to indicate the root domain. -h Displays the usage. Specifying this option with another option or operand causes an error.

OPERANDS	The following operands are supported.		
	<p><i>hostname</i> Specifies the host names to be set for the master chassis and chassis whose XSCF is standby. Specifies it not by the Fully Qualified Domain Name (FQDN) but within 63 characters in the abbreviated format. It shall be specified keeping the number of characters including that of <i>domainname</i> 253 or lower. The reason why the number of characters is 253 or lower is that two characters are kept for one period to connect <i>hostname</i> with <i>domainname</i> and another one to indicate the root domain. <i>hostname</i> is specified with the label elements separated by periods (.). For the label element, you can use alphanumeric characters and hyphens (-). However, make the specification using an alphabetic character for the beginning, and an alphanumeric character for the end of the element. (Based on RFC 1034.)</p>		
	<p><i>xscfu</i> Specifies the chassis to be set. Depending on the system configuration, you can specify it as follows. Omitting this causes an error.</p>		
	<ul style="list-style-type: none"> ■ For SPARC M10-4S (with crossbar box) 		
	<table> <tr> <td>XBBOX#80</td> <td>xbbox#80</td> </tr> </table>	XBBOX#80	xbbox#80
XBBOX#80	xbbox#80		
	<table> <tr> <td>XBBOX#81</td> <td>xbbox#81</td> </tr> </table>	XBBOX#81	xbbox#81
XBBOX#81	xbbox#81		
	<ul style="list-style-type: none"> ■ For SPARC M10-4S (without crossbar box) 		
	<table> <tr> <td>BB#00</td> <td>bb#00</td> </tr> </table>	BB#00	bb#00
BB#00	bb#00		
	<table> <tr> <td>BB#01</td> <td>bb#01</td> </tr> </table>	BB#01	bb#01
BB#01	bb#01		
	<ul style="list-style-type: none"> ■ For SPARC M10-1/M10-4 		
	<table> <tr> <td>bb#00</td> <td></td> </tr> </table>	bb#00	
bb#00			
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ The following cases cause an error when <code>applynetwork(8)</code> is executed. <ul style="list-style-type: none"> ■ Case that the host name and DNS domain name are not set ■ Case that the character strings "localdomain" and "localhost" are specified for the DNS domain name and host name, respectively. ■ Case that the total number of characters including the DNS domain name set by <code>sethostname</code> and search path set by <code>setnameserver(8)</code> exceeds 256. ■ To reflect the set host name and DNS domain name in XSCF, execute <code>applynetwork(8)</code>. After that, reset XSCF by <code>rebootxscf(8)</code> and fix the contents of setting. ■ You can confirm the host name and DNS domain name set currently by using <code>shownetwork(8)</code>. 		

EXAMPLES	<p>EXAMPLE 1 Set the host name, scf0-hostname, in BB#00.</p> <pre>XSCF> sethostname bb#00 scf0-hostname</pre> <p>EXAMPLE 2 Specify the DNS domain name, example.com, the master chassis/chassis whose XSCF is standby.</p> <pre>XSCF> sethostname -d example.com</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	applynetwork (8) , rebootxscf (8) , setnameserver (8) , showhostname (8) , shownameserver (8)

`sethostname(8)`

NAME	sethttps - Sets the start and halt of the HTTPS service used in the XSCF network. Also it performs authentication-related settings.
SYNOPSIS	<pre>sethttps [[-q] {-y n}] -c {enable disable}</pre> <pre>sethttps -c gencsr <i>country state province locality organization organizationalunit common e-mail</i></pre> <pre>sethttps [[-q] {-y n}] -c genserverkey</pre> <pre>sethttps -c importca</pre> <pre>sethttps [[-q] {-y n}] -c selfsign <i>country state province locality organization organizationalunit common e-mail</i></pre> <pre>sethttps -h</pre>
DESCRIPTION	<p>sethttps is a command to set the start and halt of the HTTPS service used in the XSCF network. It also performs authentication-related settings used in the HTTPS service.</p> <p>The following contents can be set as authentication-related items.</p> <ul style="list-style-type: none"> ■ Self-certificate-related settings <ul style="list-style-type: none"> ■ Construction of self-certificate authority ■ Generation of private keys of Web servers ■ Creation of self-signed Web server certificates ■ External certificate-related settings <ul style="list-style-type: none"> ■ Generation of private keys of Web servers ■ Generation of certificate signing requests (CSR) for Web servers and requests for issuance of certificates ■ Import of Web server certificates <p>In multi-XSCF configuration, the settings are automatically reflected in the standby XSCF.</p>
Privileges	<p>To execute this command, <code>platadm</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>

OPTIONS	<p>The following options are supported.</p> <p>-c {enable disable} Specifies the start and half of the HTTPS service. You can specify either of the following. Omitting this causes an error.</p> <table border="0" data-bbox="630 316 1120 371"> <tr> <td style="vertical-align: top; padding-right: 20px;">enable</td><td>Starts HTTPS service.</td></tr> <tr> <td style="vertical-align: top;">disable</td><td>Halts HTTPS service.</td></tr> </table> <p>If there is no Web server private key or Web server certificate when starting HTTPS service, creates a Web server private key and self-signed Web server certificate after creating a self-certificate authority and starts HTTPS service.</p> <p>After HTTPS service is started, the settings are reflected when command execution is completed and the service is started.</p> <table border="0" data-bbox="357 682 1313 1157"> <tr> <td style="vertical-align: top; padding-right: 20px;">-c gencsr</td><td>Generates CSR.</td></tr> <tr> <td style="vertical-align: top;">-c genserverkey</td><td>Creates private key for Web server.</td></tr> <tr> <td style="vertical-align: top;">-c importca</td><td>Imports the Web server certificate signed at the certificate authority to XSCF.</td></tr> <tr> <td style="vertical-align: top;">-c selfsign</td><td>Constructs a self-certificate authority. It also creates a self-signed Web server certificate.</td></tr> <tr> <td style="vertical-align: top;">-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td style="vertical-align: top;">-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td style="vertical-align: top;">-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> <tr> <td style="vertical-align: top;">-Y</td><td>Automatically responds to prompt with "y" (yes).</td></tr> </table>	enable	Starts HTTPS service.	disable	Halts HTTPS service.	-c gencsr	Generates CSR.	-c genserverkey	Creates private key for Web server.	-c importca	Imports the Web server certificate signed at the certificate authority to XSCF.	-c selfsign	Constructs a self-certificate authority. It also creates a self-signed Web server certificate.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-q	Prevents display of messages, including prompt, for standard output.	-Y	Automatically responds to prompt with "y" (yes).
enable	Starts HTTPS service.																				
disable	Halts HTTPS service.																				
-c gencsr	Generates CSR.																				
-c genserverkey	Creates private key for Web server.																				
-c importca	Imports the Web server certificate signed at the certificate authority to XSCF.																				
-c selfsign	Constructs a self-certificate authority. It also creates a self-signed Web server certificate.																				
-h	Displays the usage. Specifying this option with another option or operand causes an error.																				
-n	Automatically responds to prompt with "n" (no).																				
-q	Prevents display of messages, including prompt, for standard output.																				
-Y	Automatically responds to prompt with "y" (yes).																				
OPERANDS	<p>The following operands are supported.</p> <table border="0" data-bbox="357 1261 1313 1537"> <tr> <td style="vertical-align: top; padding-right: 20px;"><i>common</i></td> <td>Specifies a common name such as the creator name and host name of servers within 64 characters. When specifying -c selfsign, you cannot specify values containing only space characters.</td> </tr> <tr> <td style="vertical-align: top;"><i>country</i></td> <td>Specifies a country name with two characters such as JP and US. When specifying -c selfsign, you cannot specify values containing only space characters.</td> </tr> <tr> <td style="vertical-align: top;"><i>e-mail</i></td> <td>Specifies the e-mail address within 64 characters.</td> </tr> </table>	<i>common</i>	Specifies a common name such as the creator name and host name of servers within 64 characters. When specifying -c selfsign , you cannot specify values containing only space characters.	<i>country</i>	Specifies a country name with two characters such as JP and US. When specifying -c selfsign , you cannot specify values containing only space characters.	<i>e-mail</i>	Specifies the e-mail address within 64 characters.														
<i>common</i>	Specifies a common name such as the creator name and host name of servers within 64 characters. When specifying -c selfsign , you cannot specify values containing only space characters.																				
<i>country</i>	Specifies a country name with two characters such as JP and US. When specifying -c selfsign , you cannot specify values containing only space characters.																				
<i>e-mail</i>	Specifies the e-mail address within 64 characters.																				

<i>locality</i>	Specifies the name of a city, etc. within 64 characters.
<i>organization</i>	Specifies the name of a company, etc. within 64 characters. When specifying -c selfsign, you cannot specify values containing only space characters.
<i>organizationalunit</i>	Specifies the names of a division and department, etc. within 64 characters.
<i>state province</i>	Specifies the names of a state and prefecture, etc. within 64 characters. When specifying -c selfsign, you cannot specify values containing only space characters.

Format rules of operands:

- If any symbols or space characters are included in the value, specify the entire value enclosing it in single quotation marks ('') or double quotation marks ("") like "Kawasaki city."
- To specify space characters only, specify the space characters enclosing it in single quotation marks ('') or double quotation marks ("") like " ". However, there are operands for which values composed of space characters only cannot be specified. For details, see the explanation of each operand.
- To create CSR, you cannot specify space characters for any operands.
- To omit operands, specify two continuous single quotation marks ('') or double quotation marks ("") like "". At this time, a Web server certificate is generated based on the contents set initially.
- To include a backslash (\) or dollar mark (\$), specify it with a backslash (\) just before it like "\\\" or "\\\$."
- As for -c selfsign or -c gencsr, the specification order of operands is fixed. See the format.
- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.
- CSR is created by overwriting.
- For start of HTTPS service, the contents of settings are reflected just after execution of sethttps, and the service is started.
If there is no Web server private key or Web server certificate when starting HTTPS service, creates a Web server private key and self-signed Web server certificate after creating a self-certificate authority and starts HTTPS service.
- Halt of HTTPS service is reflected just after execution of sethttps. At this time, the HTTPS sessions in operation are disconnected, if any.

EXTENDED DESCRIPTION

- Creation of Web server private keys, (-c genserverkey), import of server certificates (-c importca), construction of self-certificate authority, and creation of self-signed Web server certificates (-c selfsign) can be executed only when HTTPS service is halted.
- You can confirm the contents of the HTTPS service set currently by using showhttps(8).

EXAMPLES**EXAMPLE 1** Start HTTPS service.

```
XSCF> sethttps -c enable
Continue? [y|n] :y
```

EXAMPLE 2 Halt HTTPS service.

```
XSCF> sethttps -c disable
Continue? [y|n] :y
```

EXAMPLE 3 If there is no Web server certificate when executing enable, create a self-certificate authority and self-signed Web server certificate, and start HTTPS service.

```
XSCF> sethttps -c enable
The Web serverkey or Web server certificate which has been signed by an
external certification authority does not exist.
Create self certification authority and Web server certificate which has
been self signed.
Continue? [y|n] :y
```

EXAMPLE 4 Generate a Web server certificate signing request (CSR) based on the following contents. *country*: JP, *state | province*: Kanagawa, *locality*: Kawasaki, *organization*: Example, *organizationalunit*: development, *common*: scf-host, *e-mail*: abc@example.com

```
XSCF> sethttps -c gencsr JP Kanagawa Kawasaki Example development
\ scf-host abc@example.com
```

EXAMPLE 5 Construct a self-certificate authority based on the following contents and generate a self-signed Web server certificate. *country*: JP, *state | province*: Kanagawa, *locality*: Kawasaki, *organization*: Example, *organizationalunit*: development, *common*: scf-host, *e-mail*: abc@example.com

```
XSCF> sethttps -c selfsign JP Kanagawa Kawasaki Example development
scf-host abc@example.com
CA key and CA cert already exist. Do you still wish to update? [y|n] :y
Enter passphrase:
Verifying - Enter passphrase:
```

EXAMPLE 6 Create private key for Web server.

```
XSCF> sethttps -c genseverkey
Server key already exists. Do you still wish to update? [y|n] :y
Enter passphrase:
Verifying - Enter passphrase:
```

EXAMPLE 7 Import the copied Web server certificate. To terminate it, press the [Enter] key and then press the [Ctrl]+[D] key.

```
XSCF> sethttps -c importca
Please import a certificate:
-----BEGIN CERTIFICATE-----
MIIDdTCCAt6gAwIBAgIBATANBgkqhkiG9w0BAQQFADCBgTELMAkGA1UEBhMCamox
DjAMBgNVBAgTBXN0YXR1MREwDwYDVQQHEwhsb2NhbG1o eTEVMBMGA1UEChMMb3Jn
YW5pemF0aW9uMQ8wDQYDVQQLewZvcmdhbmkxDzANBgNVBAMTBmNvbW1vbjEWMBQG
CSqGSib3DQEJARYHZWUbWFpbDAeFw0wNjA1MzAwNTI5MTVaFw0xNjA1MjcwNTI5
MTVaMG4xCzAJBgNVBAYTAmqMQ4wDAYDVQQIEwVzdGF0ZTEVMBMGA1UEChMMb3Jn
YW5pemF0aW9uMQ8wDQYDVQQLewZvcmdhbmkxDzANBgNVBAMTBmNvbW1vbjEWMBQG
CSqGSib3DQEJARYHZWUbWFpbDCBnzANBgkqhkiG9w0BAQEFAAOBjQAwgYkCgYEA
nkPntf+TjYtyK1NYFbO/YavFpUzkYTlHdt0Fbz/tZmGd3e6Jn34A2W9EC7D9hjLs
j+kAP41Al6wFwG07KP3H4iImX0Uysj19Hyk4jLBUs1sw8JqvT2utTj1tV5mFPKL6
5A51Yuhf80GrR+bYGLi6H1a6RPmlMSD7Z0AGDxRoEY0CAwEAAsOCAQ0wggeJMAkG
A1UdEwQCMAAwLAYJYIZIAyb4QgENBB8WHU9wZw5TU0wgR2VuZXJhdGVkIEN1cnRp
ZmljYXR1MB0GA1UdDgQWBBQH1lCmI7Qyza8zpt1H16EfLR+EwDCBrgYDVR0jBIGm
MIGjgBTnQYs6jzD7wdDhk7wsFeJGVaUTtaGBh6SBhDCBqTELMAkGA1UEBhMCamox
DjAMBgNVBAgTBXN0YXR1MREwDwYDVQQHEwhsb2NhbG1o eTEVMBMGA1UEChMMb3Jn
YW5pemF0aW9uMQ8wDQYDVQQLewZvcmdhbmkxDzANBgNVBAMTBmNvbW1vbjEWMBQG
CSqGSib3DQEJARYHZWUbWFpbII BADNBgkqhkiG9w0BAQQFAAOBjQcQBFB08Hi
yvOUyW8EB111AbuA04IrnjHI4cjHq9NuSX1w8mJ8XKTVMx3WZCJpJDC+f/WoRMKw
R+OpXAVQvb2tjIn3k09dq+begEC04mwknW1t7QI7A1BkcW2/MkOolIRa6iP1Zwg
JoPmwAbrGyAvGUtdzUoyIH0j17dRqrVIRA==
-----END CERTIFICATE-----
[Ctrl] + [D]
```

EXAMPLE 8 Create private key for Web server. The prompt is automatically given a "y" response.

```
XSCF> sethttps -c genseverkey -y
Server key already exists. Do you still wish to update? [y|n] :y
Enter passphrase:
Verifying - Enter passphrase:
```

EXAMPLE 9 Create private key for Web server. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> sethttps -c genseverkey -q -y
Enter passphrase:
Verifying - Enter passphrase:
```

EXAMPLE 10 For the operand *organizationalunit*, specify "\$development" and create CSR.

```
XSCF> sethttps -c gencsr JP Kanagawa Kawasaki Example  
'$development' xscf-host abc@example.com
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

showhttps (8)

NAME	setldap - configure the Service Processor as a Lightweight Directory Access Protocol (LDAP) client												
SYNOPSIS	<pre>setldap {-b bind} {-B baseDN} {-c certchain} {-p } {-s servers} {-t user} -T timeout</pre> <pre>setldap -h</pre>												
DESCRIPTION	<p>setldap(8) allows you to configure the Service Processor as an LDAP client.</p> <p>Note – The LDAP client supports passwords only in the CRYPT format; UNIX Crypt or MD5. Therefore the passwords on the LDAP server must support it as well. Refer to the <i>Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide</i> for more information. Also note that an XSCF user account user name cannot match an LDAP user name, and an XSCF user account (UID) number cannot match an LDAP UID number.</p>												
Privileges	<p>You must have <code>useradm</code> privileges to run this command.</p> <p>Refer to <code>setprivileges(8)</code> for more information.</p>												
OPTIONS	<p>The following options are supported:</p> <table> <tr> <td>-B <i>baseDN</i></td><td>Specifies distinguished name for the search base. Maximum character length is 128 characters.</td></tr> <tr> <td>-b <i>bind</i></td><td>Sets the identity to use when binding to the LDAP server. Maximum character length is 128 characters</td></tr> <tr> <td>-c <i>certchain</i></td><td>Imports an LDAP server certificate chain from the remote file specified in <i>certchain</i>. The certificate chain must be in PEM format. Remote files are specified using the standard <code>scp</code> syntax, that is, <code>[user@] host :file ..</code>, and imported using <code>scp</code>. If the copy requires a user password you will be prompted for it. Use of this option implicitly enables the use of Transport Layer Security (TLS) when connecting to LDAP. This may be disabled by specifying <i>certchain</i> as none. The certificate chain must be 64 Kbytes in size or less, and it must be valid or it will be rejected.</td></tr> <tr> <td>-h</td><td>Displays usage statement.</td></tr> <tr> <td></td><td>When used with other options or operands, an error occurs.</td></tr> <tr> <td>-p</td><td>Sets a password to use when binding to the LDAP server. You will be prompted for the password.</td></tr> </table>	-B <i>baseDN</i>	Specifies distinguished name for the search base. Maximum character length is 128 characters.	-b <i>bind</i>	Sets the identity to use when binding to the LDAP server. Maximum character length is 128 characters	-c <i>certchain</i>	Imports an LDAP server certificate chain from the remote file specified in <i>certchain</i> . The certificate chain must be in PEM format. Remote files are specified using the standard <code>scp</code> syntax, that is, <code>[user@] host :file ..</code> , and imported using <code>scp</code> . If the copy requires a user password you will be prompted for it. Use of this option implicitly enables the use of Transport Layer Security (TLS) when connecting to LDAP. This may be disabled by specifying <i>certchain</i> as none. The certificate chain must be 64 Kbytes in size or less, and it must be valid or it will be rejected.	-h	Displays usage statement.		When used with other options or operands, an error occurs.	-p	Sets a password to use when binding to the LDAP server. You will be prompted for the password.
-B <i>baseDN</i>	Specifies distinguished name for the search base. Maximum character length is 128 characters.												
-b <i>bind</i>	Sets the identity to use when binding to the LDAP server. Maximum character length is 128 characters												
-c <i>certchain</i>	Imports an LDAP server certificate chain from the remote file specified in <i>certchain</i> . The certificate chain must be in PEM format. Remote files are specified using the standard <code>scp</code> syntax, that is, <code>[user@] host :file ..</code> , and imported using <code>scp</code> . If the copy requires a user password you will be prompted for it. Use of this option implicitly enables the use of Transport Layer Security (TLS) when connecting to LDAP. This may be disabled by specifying <i>certchain</i> as none. The certificate chain must be 64 Kbytes in size or less, and it must be valid or it will be rejected.												
-h	Displays usage statement.												
	When used with other options or operands, an error occurs.												
-p	Sets a password to use when binding to the LDAP server. You will be prompted for the password.												

<ul style="list-style-type: none"> -s servers -t user -T timeout 	<p>Sets the primary and secondary LDAP servers and ports. <i>servers</i> is a comma-separated list of <i>server:port</i>. Ports are specified numerically and servers can be specified either by name or IP address in the dotted decimal format. For example, 10.8.31.14.636, company:636. The first server in the list is the primary. Server names must be resolvable. Maximum name length is 128 characters.</p> <p>Tests connections to all configured LDAP servers. Attempts to retrieve the password data for the specified user from each configured server and reports success or failure in each case.</p> <p>Sets the maximum time allowed for an LDAP search before it returns search results.</p>
--	--

EXAMPLES**EXAMPLE 1** Configuring Bind Name

```
XSCF> setldap -b user -p
Password: <Enter password>
XSCF> showldap
Bind Name:           user
Base Distinguished Name: Not set
LDAP Search Timeout:   0
Bind Password:        Set
LDAP Servers:         None
CERTS:                None
```

EXAMPLE 2 Configuring Base Distinguished Name

```
XSCF> setldap -B ou=people,dc=company,dc=com
XSCF> showldap
Bind Name:           user
Base Distinguished Name: ou=people,dc=company,dc=com
LDAP Search Timeout:   0
Bind Password:        Set
LDAP Servers:         None
CERTS:                None
```

EXAMPLE 3 Setting the LDAP Timeout

```
XSCF> setldap -T 60
XSCF> showldap

Bind Name:           user
Base Distinguished Name: ou=people,dc=company,dc=com
LDAP Search Timeout: 60
Bind Password:       Set
LDAP Servers:        None
CERTS:               None
```

EXAMPLE 4 Setting the LDAP Server

```
XSCF> setldap -s ldap://company.com,ldaps://company2.com
XSCF> showldap

Bind Name:           user
Base Distinguished Name: ou=people,dc=company,dc=com
LDAP Search Timeout: 60
Bind Password:       Set
LDAP Servers:        ldap://company.com:389 ldaps://company2.com:636
CERTS:               None
```

EXAMPLE 5 Importing a Certificate

```
XSCF> setldap -c user@remote.machine:/path/to/cacert.pem
XSCF> showldap

Bind Name:           user
Base Distinguished Name: ou=people,dc=company,dc=com
LDAP Search Timeout: 60
Bind Password:       Set
LDAP Servers:        ldap://company.com:389 ldaps://company2.com:636
CERTS:               cacert.pem
```

EXAMPLE 6 Testing the LDAP connection

```
XSCF> setldap -t jsmith
company.com:389 PASSED
```

EXIT STATUS	The following exit values are returned:
0	Successful completion.
>0	An error occurred.

SEE ALSO	setlookup(8) , showldap(8)
-----------------	--

NAME	setldapssl - configure LDAP/SSL
SYNOPSIS	<pre>setldapssl {enable disable} setldapssl loadcert [[-q] -{y n}] [-i n] [-u <i>username</i>] [-p <i>proxy</i>] [-t <i>proxy_type</i>]] <i>URL</i> setldapssl loadcert [[-q] -{y n}] [-i n] console setldapssl rmcert [[-q] -{y n}] [-i n] setldapssl group {administrator operator custom} -i n name [<i>groupname</i>] setldapssl group custom -i n roles [<i>privileges</i>] setldapssl userdomain -i n [<i>domainname</i>] setldapssl defaultrole [<i>privileges</i>] setldapssl timeout <i>seconds</i> setldapssl server [-i n] [<i>ipaddr</i> [: <i>port</i>]] setldapssl logdetail {none high medium low trace} setldapssl log [[-q] -{y n}] clear setldapssl {strictcertmode usermapmode} {enable disable} setldapssl usermap {attributeInfo binddn bindpw searchbase} [<i>value</i>] setldapssl default [[-q] -{y n}] setldapssl -h</pre>
DESCRIPTION	<p>setldapssl(8) configures LDAP/SSL. To enable or disable LDAP/SSL, execute only the command and one of those operands. To enable or disable LDAP/SSL strictcertrmode or usermapmode, specify the mode along with enable or disable.</p> <p>To clear or unset a property, issue a setldapssl command with no value for the operand. For example, setldapssl group custom -i 1 name clears the name property from custom group 1, and setldapssl usermap searchbase clears the searchbase property from the optional user mapping settings. If a property is not set, it is displayed with no value.</p> <p>Note – If you are an Active Directory or LDAP/SSL user, do not upload a public key. If one has already been uploaded, use the following command to delete it: XSCF> setssh -c delpubkey -a -u proxyuser</p>
Privileges	<p>You must have useradm privileges to run this command.</p> <p>Refer to setprivileges(8) for more information.</p>

OPTIONS	The following options are supported:
-h	Displays usage statement. When used with other options or operands, an error occurs.
-i <i>n</i>	Sets an index marker, value 1 - 5.
-n	Automatically answers "n" (no) to all prompts.
-p	Specifies the proxy server to be used for transfers. The default transfer type is http, unless modified using the -t <i>proxy_type</i> option. The value for proxy must be in the format <i>servername:port</i> . See EXAMPLE 12.
-q	Suppresses all messages to stdout, including prompts.
-t	Use with the -p option to specify proxy type as http, socks4, or socks5. The default is http.
-u	Specifies the user name when logging in to a remote ftp or http server that requires authentication. Prompts for a password. See EXAMPLE 13.
-y	Automatically answers "y" (yes) to all prompts.
OPERANDS	The following operands are supported:
enable disable	When used with no other operands, enable or disable LDAP/SSL.
loadcert	loadcert console prompts for certificate information to be entered at the console. Use this command to paste certificate information copied from a file. Terminate input with CTRL-D. loadcert <i>URI</i> loads a certificate file for the LDAP/SSL server. Supported formats for <i>URI</i> are: <i>http://server[:port]/path/file</i> <i>https://server[:port]/path/file</i> <i>ftp://server[:port]/path/file</i> <i>file:///media/usb_msd/path/file</i>
rmcert	Delete certificate for an LDAP/SSL server. strictcertmode must be in the disabled state for a certificate to be removed.

group administrator	Assign group name for up to five specified administrator groups. The administrator group has platadm, useradm, and auditadm privileges and you cannot change that.
group operator	Assign group name for up to five specified operator groups. The operator group has plaptop and auditop privileges and you cannot change that.
group custom	Assign group name and privileges for up to five groups.
userdomain	Configure the user domain. See EXAMPLE 6, below, for important information.
defaultrole	Configure default privileges. If defaultrole is configured, users have privileges as specified by defaultrole after authentication; user group membership is not checked. If defaultrole is not configured, users' privileges will be learned from the LDAP/SSL server based on group membership.
timeout	Configure transaction timeout, in seconds. <i>seconds</i> can be 1 to 20. The default is 4. If the specified timeout is too brief for the configuration, the login process or retrieval of user privilege settings could fail.
server	Configure the primary and up to five alternate LDAP/SSL servers. To use a host name, DNS must be enabled. An IP address can be specified with port number; otherwise, the default port is used.

	logdetail	Enable logging of LDAP/SSL authentication and authorization diagnostic messages at the specified detail level. This log is for use in troubleshooting and is cleared on SP reboot. Level can be one of the following:
	none	Do not log diagnostic messages. Use this setting during normal system operation
	high	Log only high-severity diagnostic messages
	medium	Log only high-severity and medium-severity diagnostic messages
	low	Log high-severity, medium-severity, and informational diagnostic messages
	trace	Log high-severity, medium-severity, informational, and trace-level diagnostic messages
	log [<i>options</i>] clear	Clear the log file of LDAP/SSL authentication and authorization diagnostic messages.
	strictcertmode	Enable or disable strictcertmode mode. This mode is disabled by default; the channel is secure, but limited validation of the certificate is performed. If strictcertmode is enabled, the server's certificate must have already been uploaded to the server so that the certificate signatures can be validated when the server certificate is presented. Data is always protected, even if strictcertmode is disabled. Strictcertmode applies to primary and alternate servers alike.

	usermapmode	Enable or disable use of the usermap. When enabled, user attributes specified with the usermap operand, rather than userdomain, are used for user authentication.
	usermap	Only if usermapmode is enabled, configure the specified usermap parameter:
	attributeInfo	Use the specified attribute information for user validation
	binddn	Use the specified Distinguished Name for binding with the LDAP/SSL server
	bindpw	Use the specified password for binding with the LDAP/SSL server
	searchbase	Configure the specified search base
		For more information, see EXAMPLES.
	default	Reset LDAP/SSL settings to factory default.

EXAMPLES

EXAMPLE 1 Configures the LDAP/SSL primary server, specifying a port other than the default.

```
XSCF> setldapssl server 10.1.12.250:4040
```

EXAMPLE 2 Sets name for administrator group 3.

```
XSCF> setldapssl group administrator -i 3 name CN=spSuperAdmin, \
    OU=Groups,DC=Sales,DC=aCompany,DC=com
```

EXAMPLE 3 Sets name for custom group 2.

```
XSCF> setldapssl group custom -i 2 name CN=spLimitedAdmin, \
    OU=Groups,DC=Sales,DC=aCompany,DC=com
```

EXAMPLE 4 Sets roles for custom group 2.

```
XSCF> setldapssl group custom -i 2 role auditadm,platop
```

EXAMPLE 5 Loads certificate information for Alternate Server 4 from the console.

```
XSCF> setldapssl loadcert -i 4 console
Warning: About to load certificate for Alternate Server 4:
. Continue? [y|n]: y
Please enter the certificate:

-----BEGIN CERTIFICATE-----
MIIEtjCCAzagIBAgIBADANBgkqhkiG9w0BAQQFADB8MQswCQYDVQQGEwJVUzET
MBEGA1UECBMKQ2FsaWZvcm5pYTEsMBAGA1UEBxMJu2FuIERpZWdvMRkwFwYDVQQK
ExBTdW4gTWljcm9zeXN0ZWlzMRUwEwYDVQQLEwxTeXN0ZW0gR3JvdXAxEjAQBgNV
...
-----END CERTIFICATE-----
CTRL-D
XSCF>
```

EXAMPLE 6 Configures user domain 2. <USERNAME> is a template that must be entered exactly as shown. During authentication the user's login name replaces <USERNAME>. userdomain can only take the form of Distinguished Name (DN).

```
XSCF> setldapssl userdomain -i 2 \
'UID=<USERNAME>,OU=people,DC=aCompany,DC=com'
```

EXAMPLE 7 Configures the optional user mapping attribute info setting.

```
XSCF> setldapssl usermap attributeInfo \
'(&(objectclass=person)(uid=<USERNAME>))'
```

EXAMPLE 8 Configures the optional user mapping bind distinguished name setting.

```
XSCF> setldapssl usermap binddn CN=SuperAdmin,DC=aCompany,DC=com
```

EXAMPLE 9 Configures the optional user mapping bind password setting.

```
XSCF> setldapssl usermap bindpw b.e9s#n
```

EXAMPLE 10 Configures the optional user mapping search base setting.

```
XSCF> setldapssl usermap searchbase OU=yoshi,DC=aCompany,DC=com
```

EXAMPLE 11 Loads a server certificate for LDAP/SSL using the specified URI.

```
XSCF> setldapssl loadcert http://domain_2/UID_2333/testcert
```

EXAMPLE 12 Loads a server certificate for LDAP/SSL using an http Proxy Server with port 8080.

```
XSCF> setldapssl loadcert -p webproxy.aCompany.com:8080 \
http://domain_2/UID_2333/testcert
```

EXAMPLE 13 Loads a server certificate for LDAP/SSL using a username and password.

```
XSCF> setldapssl loadcert -u yoshi \
http://domain_2/UID_2333/testcert
```

EXAMPLE 14 Sets logging of high-severity diagnostic messages.

```
XSCF> setldapssl logdetail high
```

EXAMPLE 15 Clears diagnostic messages from the log file, answering Yes to all prompts.

```
XSCF> setldapssl log -y clear
```

EXIT STATUS

The following exit values are returned:

0 Successful completion.

>0 An error occurred.

SEE ALSO

showldapssl (8)

NAME	setlocator - Sets the blinking status of the CHECK LED of the operation panel.
SYNOPSIS	setlocator [-b <i>bb_id</i>] <i>value</i> setlocator -h
DESCRIPTION	setlocator is a command to set the blinking status of the CHECK LEDs of the operation panels mounted in SPARC M10 Systems chassis and crossbar boxes. The following statuses can be set. Blinking Blinks CHECK LED. Blinking cancel Cancels blinking of CHECK LED.
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. -b <i>bb_id</i> Specifies the SPARC M10 Systems chassis and crossbar boxes to set the blinking status of the CHECK LEDs. Depending on the system configuration, you can specify any of the following values for <i>bb_id</i> . If omitted, the blinking status of the CHECK LED of its own chassis is set. SPARC M10-4S (without crossbar box) 0 to 15 SPARC M10-4S (with crossbar box) 0 to 15, 80 to 83 SPARC M10-1/M10-4 0 -h Displays the usage. Specifying this option with another option or operand causes an error.
OPERANDS	The following operands are supported. <i>value</i> Specifies the status of CHECK LED. You can specify either of the following. blink Blinks CHECK LED. reset Cancels blinking of CHECK LED.

EXTENDED DESCRIPTION	You can confirm the status of CHECK LED set currently by using showlocator(8).
EXAMPLES	<p>EXAMPLE 1 Blink the CHECK LED of BB-ID 1.</p> <pre>XSCF> setlocator -b 1 blink XSCF></pre> <p>EXAMPLE 2 Cancel blinking of the CHECK LED of BB-ID 80.</p> <pre>XSCF> setlocator -b 80 reset XSCF></pre>
EXIT STATUS	The following exit values are returned.
SEE ALSO	0 Indicates normal end. >0 Indicates error occurrence. showlocator (8)

NAME	setloginlockout - Enables or disables the lockout function when logging in.				
SYNOPSIS	setloginlockout -s unlock= <i>time</i> setloginlockout -h				
DESCRIPTION	setloginlockout is a command to set the time when the user account cannot login after failing in login three times in a row.				
Privileges	To execute this command, <code>useradm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .				
OPTIONS	The following options are supported. <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-s unlock= <i>time</i></td><td>Specifies the lockout time of the user account by minutes. You can specify it within the range from 0 to 1440 (24 hours). The default value is 0 minute and the lockout function is disabled.</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-s unlock= <i>time</i>	Specifies the lockout time of the user account by minutes. You can specify it within the range from 0 to 1440 (24 hours). The default value is 0 minute and the lockout function is disabled.
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
-s unlock= <i>time</i>	Specifies the lockout time of the user account by minutes. You can specify it within the range from 0 to 1440 (24 hours). The default value is 0 minute and the lockout function is disabled.				
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ If the lockout function for login is set, the user can try logging in three times in a row. Enter the user account name in the login prompt and press the [Enter] key, and then login will succeed. At this time, even if the user account name is entered without password or login causes timeout, it is recognized as login. If login fails three times in a row, login becomes impossible for the set period after that. The user can enter the user account name and password even during lockout, but even if the correct password is entered, the login will be rejected. Even if login fails during lockout, the lockout time is not prolonged. ■ <code>setloginlockout -s 0</code> disables the lockout function of the user account. If the lockout function is disabled, login and failure can be repeated without limitation. ■ If the lockout function of the user account is enabled again after disabled, the locked out user can try logging in until the function is enabled again after disabled. However, if login is not attempted until the lockout function is enabled again, there is no change and lockout continues as in the case that lockout is not disabled and enabled again. ■ You can confirm the lockout function of the user account set currently by using <code>showloginlockout(8)</code>. 				
EXAMPLES	EXAMPLE 1 Set the timeout time of lockout to 90 minutes. <pre>XSCF> setloginlockout -s 90 90 minutes</pre>				

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO	showloginlockout (8)
-----------------	-----------------------------

NAME	setlookup - enable or disable the use of the Lightweight Directory Access Protocol (LDAP) server for authentication and privilege lookup
SYNOPSIS	<pre>setlookup -a {local ldap} setlookup -p {local ldap} setlookup -h</pre>
DESCRIPTION	setlookup(8) sets whether authentication and privileges data are looked up in LDAP or not.
Privileges	You must have useradm privileges to run this command. Refer to setprivileges(8) for more information.
OPTIONS	<p>The following options are supported:</p> <ul style="list-style-type: none"> -a Sets the authentication lookup. Used with one of the required operands ldap or local. -h Displays usage statement. When used with other options or operands, an error occurs. -p Sets privileges lookup. Used with one of the required operands ldap or local.
OPERANDS	<p>The following operands are supported:</p> <ul style="list-style-type: none"> ldap Used with the -a and -p options. When set to ldap, authentication or privileges are first looked up locally and then in LDAP if not found locally. Verify that LDAP servers have been correctly configured before executing setlookup -a ldap or setlookup -p ldap. local Used with the -a and -p options. When set to local, authentication or privileges are looked up only locally.
EXAMPLES	<p>EXAMPLE 1 Enabling LDAP Lookup of Privilege Data</p> <pre>XSCF> setlookup -p ldap</pre>

EXIT STATUS	The following exit values are returned:
0	Successful completion.
>0	An error occurred.

SEE ALSO	setldap(8) , showlookup(8)
-----------------	--

NAME	setnameserver - Sets or deletes the name server and search path used in XSCF network.
SYNOPSIS	<pre>setnameserver [-c add] <i>address...</i> setnameserver -c del <i>address...</i> setnameserver -c del -a setnameserver -c addsearch <i>domainname...</i> setnameserver -c delsearch <i>domainname...</i> setnameserver -c delsearch -a setnameserver -h</pre>
DESCRIPTION	<p>setnameserver is a command to set/delete the name server and search path used in XSCF network.</p> <p>In XSCF, up to three name servers can be registered. If the number exceeds three, it causes an error. Up to five search paths can be registered. If the number exceeds five, it causes an error.</p>
Privileges	<p>To execute this command, <code>platadm</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Deletes all of the name servers or search paths registered currently. To delete name server, use it with <code>-c del</code>. To delete search path, use it with <code>-c delsearch</code>. -c add Registers a name server. It is used with <code>address</code>. If you omit the <code>-c</code> option, <code>-c add</code> is assumed specified. To register a name server, the existing settings are deleted and the host specified by <code>address</code> is added. -c addsearch Registers a search path. It is used with <code>domainname</code>. If you omit the <code>-c</code> option, <code>-c add</code> is assumed specified. To register a search path, the existing settings are deleted and the domain name specified by <code>domainname</code> is added.

-c del	Deletes a name server. If you omit the -c option, -c add is assumed specified. When you delete multiple name servers, they are deleted in the order of setting.
-c delsearch	Deletes a search path. If you omit the -c option, -c add is assumed specified. You can make multiple specifications by separating them with spaces.
-h	Displays the usage. Specifying this option with another option or operand causes an error.

OPERANDS

The following operands are supported.

<i>address</i>	Specifies the IP address of the name server to be registered or deleted. Specify it putting a period (.) between four sets of integer values. This can be specified using the following format. You can make up to three specifications by separating them with spaces.
<i>xxx.xxx.xxx.xxx</i>	<i>xxx</i> Specifies an integer from 0 to 255. This can be specified using zero suppression.

You cannot specify a loop-back address (127.0.0.0/8), network address, or broadcast address. Setting this may cause a failure in name resolution.

<i>domainname</i>	Specifies the domain name of the search path to be registered or deleted. You can make up to five specifications by separating them with spaces. <i>domainname</i> is specified within 256 characters by separating the label elements by periods (.). For the label element, you can use alphanumeric characters and hyphens (-). However, make the specification using an alphabetic character for the beginning, and an alphanumeric character for the end of the element. At the end, put a period (.) representing the root domain (Based on RFC 1034).
-------------------	--

EXTENDED DESCRIPTION

- If multiple name servers are registered, name resolution is performed in the order of registering.
- The registered search path is used, for example, for referring to the name server for the host name by using nslookup(8). The host name specified by nslookup(8), followed by the domain name registered in the search path is confirmed with the name server in the FQDN format.

For example, if the following command is executed after registering subdomain.example.com to the search path, hostname.subdomain.example.com is confirmed with the name server.

```
XSCF> nslookup hostname
```

- If multiple search paths are registered, domain names are attached in the order of registering and confirmed with the name server.
- Specifies the DNS domain name set by sethostname(8) and the search path set by setnameserver within 256 characters in total.
- To reflect a name server and search path in XSCF, execute applynetwork(8). Reflect it in XSCF by applynetwork(8) and reset XSCF by using rebootxscf(8), and then setting is completed.
- You can confirm the contents of the name server and search path set currently by using shownameserver(8).

EXAMPLES

EXAMPLE 1 Register the hosts whose IP addresses are 192.168.1.2, 10.18.108.10, 10.24.1.2 as the name server. Name resolution is performed in the order of registering.

```
XSCF> setnameserver 192.168.1.2 10.18.108.10 10.24.1.2
```

EXAMPLE 2 Delete the host whose IP address is 10.18.108.10 from the name server.

```
XSCF> setnameserver -c del 10.18.108.10
```

EXAMPLE 3 Delete all of the registered name servers.

```
XSCF> setnameserver -c del -a
```

EXAMPLE 4 Register the domain names search1.com, search2.com, search3.com, search4.com, and search5.com to the search path.

```
XSCF> setnameserver -c addsearch search1.com search2.com  
search3.com search4.com search5.com
```

EXAMPLE 5 Delete the domain name search5.com from the search path.

```
XSCF> setnameserver -c delsearch search5.com
```

EXAMPLE 6 Delete all of the registered domain names from the search path.

```
XSCF> setnameserver -c delsearch -a
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

applynetwork (8), **sethostname (8)**, **setsscp (8)**, **shownameserver (8)**

`setnameserver(8)`

NAME	setnetwork - Sets or deletes the network interface to be used in XSCF.
SYNOPSIS	setnetwork [-m <i>addr</i>] <i>interface address</i> setnetwork -c {up down} <i>interface</i> setnetwork [[-q] -{y n}] -r <i>interface</i> setnetwork -h
DESCRIPTION	<p>setnetwork is a command to set or delete the network interface to be used in XSCF.</p> <p>The following contents can be set or deleted for the network interface of XSCF-LAN.</p> <ul style="list-style-type: none">■ Whether to enable or disable the network interface■ IP address■ Netmask <p>If an IP address or netmask is set, the specified network interface is enabled at the same time as setting.</p> <p>If the network interface is deleted, the specified network interface is disabled at the same time as deletion. Also, if the routing information is set in the target network interface, it is deleted at the same time and its status becomes down.</p> <p>If applynetwork(8) is executed setting down, the interface is disabled even with an IP address and netmask set.</p>
Privileges	To execute this command, platadm privilege is required. For details on user privileges, see setprivileges(8).

OPTIONS	The following options are supported.
-c {up down}	Specifies whether to enable the specified network interface. You can specify either of the following. Omitting this causes an error. up Enables the network interface. down Disables the network interface.
-h	Displays the usage. Specifying this option with another option or operand causes an error.
-m <i>addr</i>	Specifies the netmask. <i>addr</i> is specified in a format using four sets of integers separated by periods (.). This can be specified using the following format. <i>xxx.xxx.xxx.xxx</i> <i>xxx</i> Specifies an integer from 0 to 255. This can be specified using zero suppression. If the -m option is omitted, one of the following net mask values is set depending on the IP address specified by the <i>address</i> operand. <ul style="list-style-type: none">■ If the specified IP address is Class A (e.g. 20.1.1.1) A netmask value of 255.0.0.0 is set.■ If the specified IP address is Class B (e.g. 136.18.1.1) A netmask value of 255.255.0.0 is set.■ If the specified IP address is Class C (e.g. 200.18.108.1) A netmask value of 255.255.255.0 is set.
-n	Automatically responds to prompt with "n" (no).
-q	Prevents display of messages, including prompt, for standard output.
-r	Deletes the IP address and netmask of the network interface.
-y	Automatically responds to prompt with "y" (yes).

OPERANDS

The following operands are supported.

<i>address</i>	Specifies an IP address. <i>address</i> is specified in a format using four sets of integers separated by periods (.).
<i>xxx</i>	Specifies an integer from 0 to 255. This can be specified using zero suppression.
	You cannot specify a loopback address (127.0.0.0/8), network address, broadcast address, or Class D, E address (224.0.0.0 to 255.255.255.255).
<i>interface</i>	Specifies the network interface to be set. You can specify any of the following.
	<ul style="list-style-type: none"> ■ For SPARC M10-4S (with crossbar box)
xbbox#80-lan#0	XBBOX#80-LAN#0
xbbox#80-lan#1	XBBOX#80-LAN#1
lan#0	Take-over IP addresses of XBBOX#80-LAN#0 and
	XBBOX#81-LAN#0
xbbox#81-lan#0	XBBOX#81-LAN#0
xbbox#81-lan#1	XBBOX#81-LAN#1
lan#1	Take-over IP addresses of XBBOX#80-LAN#1 and
	XBBOX#81-LAN#1
	<ul style="list-style-type: none"> ■ For SPARC M10-4S (without crossbar box)
bb#00-lan#0	BB#00-LAN#0
bb#00-lan#1	BB#00-LAN#1
lan#0	Take-over IP addresses of BB#00-LAN#0 and BB#01-LAN#0
bb#01-lan#0	BB#01-LAN#0
bb#01-lan#1	BB#01-LAN#1
lan#1	Take-over IP addresses of BB#00-LAN#1 and BB#01-LAN#1
	<ul style="list-style-type: none"> ■ For SPARC M10-1/M10-4
bb#00-lan#0	BB#00-LAN#0
lan#0	Abbreviation of BB#00-LAN#0
bb#00-lan#1	BB#00-LAN#1
lan#0	Abbreviation of BB#00-LAN#1

EXTENDED DESCRIPTION

- The take-over IP address means IP addresses which can be used without switch of XSCF recognized in multi-XSCF configuration. Setting each LAN port of the master XSCF to lan#0 or lan#1 enables access by the name of lan#0 or lan#1.
- For SPARC M10-1/M10-4, lan#0 and lan#1 are fixed to bb#00-lan#0 and bb#00-lan#1, respectively. lan#0 and lan#1 can be used as abbreviations of bb#00-lan#0 and bb#00-lan#1, respectively.
- In the following cases, setnetwork causes an error.
 - Case that the same IP address as an set IP address is specified
 - Case that a loopback address (127.0.0.0/8), network address, or broadcast address is specified for the IP address of *interface*
 - Case that the netmask specified by -m *addr* does not correspond to either of the following
 - Only the most significant bit is 1.
 - 1 from the most significant bit is repeated.
- If the settings of the network interface whose status is up are as follows in SPARC M10-4S, it causes an error when applynetwork(8) is executed.
 - Case that the subnets of xbbox#80-lan#0, xbbox#81-lan#0, and the take-over IP addresslan#0 are different
 - Case that the subnets of xbbox#80-lan#1, xbbox#81-lan#1, and the take-over IP addresslan#1 are different
 - Case that some of xbbox#80-lan#0, xbbox#80-lan#1, and the SCCP link address have the same subnet
 - Case that some of xbbox#81-lan#0, xbbox#81-lan#1, and the SCCP link address have the same subnet
 - Case that some of xbbox#80-lan#0, xbbox#81-lan#1, and the SCCP link address have the same subnet
 - Case that some of xbbox#81-lan#0, xbbox#80-lan#1, and the SCCP link address have the same subnet
 - Case that the subnets of bb#00-lan#0, bb#01-lan#0, and the take-over IP addresslan#0 are different
 - Case that the subnets of bb#00-lan#1, bb#01-lan#1, and the take-over IP addresslan#1 are different
 - Case that some of bb#00-lan#0, bb#00-lan#1, and the SCCP link address have the same subnet
 - Case that some of bb#01-lan#0, bb#01-lan#1, and the SCCP link address have the same subnet
 - Case that some of bb#00-lan#0, bb#01-lan#1, and the SCCP link address have the same subnet
 - Case that some of bb#01-lan#0, bb#00-lan#1, and the SCCP link address have the same subnet

- If the settings of the network interface whose status is up are as follows in SPARC M10-1/M10-4, it causes an error when `applynetwork(8)` is executed.
 - Case that the subnets of `bb#00-lan#0` and `bb#00-lan#1` are the same
- If the IP address and netmask of the specified network interface are deleted, the routing information set in the target interface is also deleted and the status becomes down.
- If `applynetwork(8)` is executed after disabling the specified network interface, the network interface is disabled even with an IP address and netmask set.
- You can confirm the contents of the network interface set currently by using `shownetwork(8)`.
- To reflect the contents of the set network interface, execute `applynetwork(8)`. Reflect it in XSCF by `applynetwork(8)`, use `rebootxscf(8)` to reset XSCF and then setting is completed.
- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Set the IP address 192.168.10.10 and netmask 255.255.255.0 in LAN#0 of BB#00.

```
XSCF> setnetwork bb#00-lan#0 -m 255.255.255.0 192.168.10.10
```

EXAMPLE 2 Set the IP address 192.168.10.10 and netmask 255.255.255.0 in LAN#0 of BB#00 in SPARC M10-1.

```
XSCF> setnetwork lan#0 -m 255.255.255.0 192.168.10.10
```

EXAMPLE 3 Disable LAN#1 of XBBOX#80.

```
XSCF> setnetwork xbbox#80-lan#1 -c down
```

EXAMPLE 4 Set the IP address 192.168.11.10 and netmask 255.255.255.0 in LAN#0 of XB-BOX#81.

```
XSCF> setnetwork xbbox#81-lan#0 -m 255.255.255.0 192.168.11.10
```

EXAMPLE 5 Set the IP address 192.168.1.10 and netmask 255.255.255.0 in the take-over IP address of LAN#0.

```
XSCF> setnetwork lan#0 -m 255.255.255.0 192.168.1.10
```

EXAMPLE 6 Delete the IP address and netmask set in LAN#0 of XBBOX#80.

```
XSCF> setnetwork -r xbbox#80-lan#0
```

You specified '-r' interface remove option.

So, we delete routing information that interface corresponds.

```
Continue? [y|n] :y
If you choose 'y'es, you must execute 'applynetwork' command for
application.
Or you choose 'y'es, but you don't want to apply, you execute 'rebootxscf'
for reboot.
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

applynetwork (8), **rebootxscf (8)**, **setroute (8)**, **setsscp (8)**, **shownetwork (8)**

NAME	setntp - Sets the time synchronization for XSCF
SYNOPSIS	<pre>setntp -s server -c {enable disable} setntp [-c add] address ... setntp -c del address ... setntp -c del -a setntp -c stratum -i <i>stratum_no</i> setntp -s client -c {enable disable} setntp -s server -c {enable disable} setntp -m <i>type=value</i> setntp -h</pre>
DESCRIPTION	<p>setntp is a command to set the time synchronization for XSCF.</p> <p>In setntp, the following items can be set.</p> <ul style="list-style-type: none"> ■ Whether to synchronize with upper NTP servers ■ Whether to provide NTP service to other clients as an NTP server ■ stratum value set in XSCF ■ Existence of prefer as a client ■ Clock address of the XSCF local clock <p>By default, the XSCF is not synchronized with upper NTP servers and does not provide NTP service to other clients.</p> <p>Up to three NTP servers can be registered as upper NTP servers of the XSCF network. Attempting to register four or more causes an error. In multi-XSCF configuration, the settings are automatically reflected in the master XSCF and standby XSCFs.</p>
Privileges	<p>To execute this command, <code>platadm</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>

OPTIONS	The following options are supported.
-a	Deletes all of the upper NTP servers set currently. It is used with -c del.
-c add	Adds to upper NTP servers. It is specified with <i>address</i> . If you omit the -c option, -c add is assumed specified. To register an NTP server, the existing settings are deleted and overwritten by the specified <i>address</i> .
-c del	Deletes an upper NTP server. It is specified with <i>address</i> or -a. If you omit the -c option, -c add is assumed specified. When you delete multiple NTP servers, they are deleted in the order of setting.
-c disable	Disables the settings of XSCF as an NTP server. It is specified with the -s option. If you omit the -c option, -c add is assumed specified.
-c enable	Enables the settings of XSCF as an NTP server. It is specified with the -s option. If you omit the -c option, -c add is assumed specified.
-c stratum	Sets the stratum value in the case that XSCF is set as an NTP server. If you omit the stratum value, the default is 5.
-h	Displays the usage. Specifying this option with another option or operand causes an error.
-i <i>stratum_no</i>	Specifies stratum value. It is used with -c stratum. You can specify an integer from 1 to 15.

-m <i>type=value</i>	Sets a preferred server or the XSCF local clock. You can specify either of the following for <i>type</i> .
prefer	Sets whether to give top priority to the NTP server registered first at the time of synchronization.
localaddr	Sets the XSCF local clock.
	If <i>prefer</i> is specified in <i>type</i> , you can specify either of the following in <i>value</i> .
on	Top priority is given to the NTP server registered first. After that, priorities are placed on NTP servers in ascending order of stratum value. The default is on.
off	Priorities are placed on NTP servers in ascending order of stratum value regardless of the order of registering.
	If <i>localaddr</i> is specified in <i>type</i> , specify the least significant byte of the clock address 127.127.1.x of the local clock in <i>value</i> . 0 to 3 can be specified. The default is 0 and the clock address of the local clock at that time is 127.127.1.0.
-s server	Sets whether to use the service as an NTP server of XSCF. It is used with -c disable or -c enable. To use XSCF as an NTP server, specify -s server with -c enable. Not to use XSCF as an NTP server, specify -s server with -c disable. The default is -c disable.
-s client	Sets whether to synchronize XSCF as an NTP client with upper NTP servers. It is used with -c disable or -c enable. To synchronize XSCF as an NTP client with upper NTP servers, specify -s client with -c enable. Not to set XSCF as an NTP client, specify -s client with -c disable. The default is -c disable. The upper NTP server to synchronize can be specified by -c add.

OPERANDS

The following operands are supported.

address

Specifies the IP address or host name of the NTP server to be added or deleted. You can specify up to three IP addresses or host names by separating them with spaces.

To specify them by the IP address, *address* can be specified in a format using four sets of integers separated by periods (.).

*xxx.xxx.xxx.xxx**xxx*

Specifies an integer from 0 to 255. This can be specified using zero suppression.

To specify them by the host name, specify *address* within 64 characters in a format separating the label elements by periods (.). For the label element, you can use alphanumeric characters and hyphens (-). However, make the specification using an alphabetic character for the beginning, and an alphanumeric character for the end of the element. (Based on RFC 1034.) Depending on the DNS server, the server name needs to be name-resolvable.

EXTENDED DESCRIPTION

- To reflect the set contents, it is necessary to reset XSCF by using rebootxscf(8).
- If prefer is set while multiple NTP servers are set, top priority is given to the NTP server set first.
- If XSCF is set as an NTP client, ntpdate is executed when XSCF is started and the time of XSCF is synchronized with the time of the NTP server.
- If XSCF is set as a client, the time of the physical partition (PPAR) may be changed by the difference in the time kept in XSCF. Execute resetdateoffset(8) and reset the difference of the time.
- You can confirm the time synchronization currently specified by using showntp(8).

EXAMPLES

EXAMPLE 1 Register the three NTP servers 192.168.1.2, 10.18.108.10, and 10.24.1.2 as upper NTP servers.

```
XSCF> setntp 192.168.1.2 10.18.108.10 10.24.1.2
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 2 Delete the NTP server 10.18.108.10 set as an upper NTP server.

```
XSCF> setntp -c del 10.18.108.10
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 3 Register the two NTP servers: `ntp1.examples.com` and `ntp2.example.com`.

```
XSCF> setntp ntp1.example.com ntp2.example.com
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 4 Set the stratum value used in XSCF network to 7.

```
XSCF> setntp -c stratum -i 7
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 5 Cancel the prefer specification of an NTP server.

```
XSCF> setntp -m prefer=off
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 6 Set the clock address of the XSCF local clock.

```
XSCF> setntp -m localaddr=3
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 7 Set XSCF to an NTP client to synchronize with upper NTP server.

```
XSCF> setntp -s client -c enable
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXAMPLE 8 Set XSCF to an NTP server to provide NTP service to other clients.

```
XSCF> setntp -s server -c enable
Please reset the XSCF by rebootxscf to apply the ntp settings.
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

`rebootxscf(8)`, `setnameserver(8)`, `showntp(8)`

NAME	setpacketfilters - Sets the IP packet filtering rules used in the XSCF network.
SYNOPSIS	setpacketfilters [[-q] -{y n}] -c {add del} [-i <i>interface</i>] [-s <i>address</i> [/ <i>mask</i>]] -j <i>target</i> setpacketfilters [[-q] -{y n}] -c clear setpacketfilters -h
DESCRIPTION	setpacketfilters is a command to set the IP packet filtering rules used in XSCF network. Setting the IP packet filtering rules prevents unauthorized access to the XSCF network. When setpacketfilters is executed, the setting is reflected immediately.
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -c Specifies the operations for the IP packet filtering rules. You can {add del clear} specify any of the following. This cannot be omitted. add Adds an IP packet filtering rule. del Deletes an IP packet filtering rule. clear Deletes all of the set IP packet filtering rules. -h Displays the usage. Specifying this option with another option or operand causes an error.

<p>-i <i>interface</i></p>	<p>Specifies the XSCF network interface to set the IP packet filtering rules. You can specify any of the following.</p> <ul style="list-style-type: none"> ■ For SPARC M10-1/M10-4 <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">bb#00-lan#0</td><td>BB#00-LAN#0</td></tr> <tr> <td>bb#00-lan#1</td><td>BB#00-LAN#1</td></tr> </table> <p>Abbreviation:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">lan#0</td><td>bb#00-lan#0</td></tr> <tr> <td>lan#1</td><td>bb#00-lan#1</td></tr> </table> <ul style="list-style-type: none"> ■ For SPARC M10-4S (without crossbar box) <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">bb#00-lan#0</td><td>BB#00-LAN#0</td></tr> <tr> <td>bb#00-lan#1</td><td>BB#00-LAN#1</td></tr> <tr> <td>bb#01-lan#0</td><td>BB#01-LAN#0</td></tr> <tr> <td>bb#01-lan#1</td><td>BB#01-LAN#1</td></tr> </table> <ul style="list-style-type: none"> ■ For SPARC M10-4S (with crossbar box) <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">xbbox#80-lan#0</td><td>XBBOX#80-LAN#0</td></tr> <tr> <td>xbbox#80-lan#1</td><td>XBBOX#80-LAN#1</td></tr> <tr> <td>xbbox#81-lan#0</td><td>XBBOX#81-LAN#0</td></tr> <tr> <td>xbbox#81-lan#1</td><td>XBBOX#81-LAN#1</td></tr> </table> <p>If the -i option is omitted, all XSCF networks are subject.</p> <ul style="list-style-type: none"> ■ For SPARC M10-1/M10-4 <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">bb#00-lan#0, bb#00-lan#1</td><td></td></tr> </table> <ul style="list-style-type: none"> ■ For SPARC M10-4S (without crossbar box) <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">bb#00-lan#0, bb#01-lan#0, bb#00-lan#1, bb#01-lan#1</td><td></td></tr> </table> <ul style="list-style-type: none"> ■ For SPARC M10-4S (with crossbar box) <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">xbbox#80-lan#0, xbbox#81-lan#0, xbbox#80-lan#1, xbbox#81-lan#1</td><td></td></tr> </table>	bb#00-lan#0	BB#00-LAN#0	bb#00-lan#1	BB#00-LAN#1	lan#0	bb#00-lan#0	lan#1	bb#00-lan#1	bb#00-lan#0	BB#00-LAN#0	bb#00-lan#1	BB#00-LAN#1	bb#01-lan#0	BB#01-LAN#0	bb#01-lan#1	BB#01-LAN#1	xbbox#80-lan#0	XBBOX#80-LAN#0	xbbox#80-lan#1	XBBOX#80-LAN#1	xbbox#81-lan#0	XBBOX#81-LAN#0	xbbox#81-lan#1	XBBOX#81-LAN#1	bb#00-lan#0, bb#00-lan#1		bb#00-lan#0, bb#01-lan#0, bb#00-lan#1, bb#01-lan#1		xbbox#80-lan#0, xbbox#81-lan#0, xbbox#80-lan#1, xbbox#81-lan#1	
bb#00-lan#0	BB#00-LAN#0																														
bb#00-lan#1	BB#00-LAN#1																														
lan#0	bb#00-lan#0																														
lan#1	bb#00-lan#1																														
bb#00-lan#0	BB#00-LAN#0																														
bb#00-lan#1	BB#00-LAN#1																														
bb#01-lan#0	BB#01-LAN#0																														
bb#01-lan#1	BB#01-LAN#1																														
xbbox#80-lan#0	XBBOX#80-LAN#0																														
xbbox#80-lan#1	XBBOX#80-LAN#1																														
xbbox#81-lan#0	XBBOX#81-LAN#0																														
xbbox#81-lan#1	XBBOX#81-LAN#1																														
bb#00-lan#0, bb#00-lan#1																															
bb#00-lan#0, bb#01-lan#0, bb#00-lan#1, bb#01-lan#1																															
xbbox#80-lan#0, xbbox#81-lan#0, xbbox#80-lan#1, xbbox#81-lan#1																															
<p>-j <i>target</i></p>	<p>Specifies the operation in the case that the received IP packet matches the filtering rules. You can specify either of the following.</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">ACCEPT</td> <td>Accepts passing of IP packets.</td> </tr> <tr> <td>DROP</td> <td>Drops IP packets.</td> </tr> </table>	ACCEPT	Accepts passing of IP packets.	DROP	Drops IP packets.																										
ACCEPT	Accepts passing of IP packets.																														
DROP	Drops IP packets.																														
<p>-n</p>	<p>Automatically responds to prompt with "n" (no).</p>																														
<p>-q</p>	<p>Prevents display of messages, including prompt, for standard output.</p>																														

EXTENDED DESCRIPTION	<p>-s address[/mask] Specifies the source of IP packets. It can be specified with either of the IP address, or the network IP address with the netmask (/mask) added.</p> <p>The IP address and network IP address can be specified in a format using four sets of integers separated by periods (.).</p> <p style="margin-left: 20px;">xxx.xxx.xxx.xxx</p> <p>xxx Specifies an integer from 0 to 255. This can be specified using zero suppression.</p> <p>If the -s option is omitted, the filtering rules are applied to all of the IP packets received in the specified network interface.</p> <p>If /mask is omitted, /255.255.255.255 is specified.</p> <p>-y Automatically responds to prompt with "y" (yes).</p> <ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ The IP packet filtering rules are prioritized in the order of setting. ■ Be sure to set the sources to be accepted before limiting them by filtering. Firstly, set the sources to be accepted and then the IP packets to be dropped. If the order of setting is reversed, all IP packets are dropped and communication becomes impossible. ■ Setting the IP packet filtering rules may disable the network function of XSCF. ■ If both -i <i>interface</i> and -s <i>address[/mask]</i> are omitted, the rules are applied to all of the IP packets received by XSCF-LAN. ■ If the netmask value specified by -s <i>address[/mask]</i> does not match any of the following, it causes an error. <ul style="list-style-type: none"> ■ Only the most significant bit is 1. ■ 1 from the most significant bit is repeated. ■ Rules overlapping with the set IP packet filtering rules cannot be set. ■ Up to 16 IP packet filtering rules can be set. ■ If a message encouraging reset of XSCF is output, reset XSCF by using rebootxscf(8). ■ You can confirm the IP packet filtering rules of the XSCF network set currently by using showpacketfilters(8).
-----------------------------	---

EXAMPLES	<p>EXAMPLE 1 Drop the IP packets sent from the IP address 10.10.10.10.</p> <pre>XSCF> setpacketfilters -c add -s 10.10.10.10 -j DROP -s 10.10.10.10/255.255.255.255 -j DROP NOTE: applied IP packet filtering rules. Continue? [y n] :y</pre> <p>EXAMPLE 2 Accept only the IP packets sent from the network of 192.168.100.0/255.255.255.0 in communication to bb#00-lan#0 in SPARC M10-4S (without crossbar box).</p> <pre>XSCF> setpacketfilters -c add -s 192.168.100.0/255.255.255.0 -i bb#00-lan#0 -j ACCEPT -s 192.168.100.0/255.255.255.0 -i bb#00-lan#0 -j ACCEPT NOTE: applied IP packet filtering rules. Continue? [y n] :y XSCF> XSCF> setpacketfilters -c add -i bb#00-lan#0 -j DROP -s 192.168.100.0/255.255.255.0 -i bb#00-lan#0 -j ACCEPT -i bb#00-lan#0 -j DROP NOTE: applied IP packet filtering rules. Continue? [y n] :y</pre> <p>EXAMPLE 3 Delete the drop settings of IP packets set in IP address 10.10.10.10.</p> <pre>XSCF> showpacketfilters -a -s 172.16.0.0/255.255.0.0 -i bb#00-lan#0 -j DROP -s 10.10.10.10/255.255.255.255 -j DROP XSCF> XSCF> setpacketfilters -c del -s 10.10.10.10 -j DROP -s 172.16.0.0/255.255.0.0 -i bb#00-lan#0 -j DROP NOTE: applied IP packet filtering rules. Continue? [y n] :y</pre> <p>EXAMPLE 4 Delete all of the set IP packet filtering rules.</p> <pre>XSCF> setpacketfilters -c clear (none) NOTE: applied IP packet filtering rules. Continue? [y n] :y</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	showpacketfilters (8)

NAME	setpasswordpolicy - Manages the password policy of the system.
SYNOPSIS	setpasswordpolicy [-d <i>dcredit</i>] [-e <i>expiry</i>] [-i <i>inactive</i>] [-k <i>difok</i>] [-l <i>lcredit</i>] [-M <i>maxdays</i>] [-m <i>minlen</i>] [-n <i>mindays</i>] [-o <i>ocredit</i>] [-r <i>remember</i>] [-u <i>ucredit</i>] [-w <i>warn</i>] [-y <i>retry</i>] setpasswordpolicy -h
DESCRIPTION	setpasswordpolicy is a command to change the password policy of the system. These policies are executed by the XSCF on the service processor. Newly set password policies are applied to the user accounts added after execution of setpasswordpolicy . When creating the user, the parameters, <i>expiry</i> , <i>inactive</i> , <i>maxdays</i> , <i>mindays</i> , and <i>warn parameters</i> , are used as the setting of the password effective period of the new account by adduser(8) . The settings of the password effective periods of the existing accounts can be changed by using password(8) .
Privileges	To execute this command, useradm privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -d <i>dcredit</i> Sets the maximum number of numbers included in a password. The minimum acceptable password length is reduced by one per a number included in the password to the value of <i>dcredit</i>. Valid values are integers from 0 to 999999999. The default value is 1. See Example 2. -e <i>expiry</i> Sets the number of days until the effective period of a new account expires and the account becomes invalid. When a new user account is created, this value is assigned to that user account. The default value is 0. Zero indicates that the account will not expire. Valid values are integers from 0 to 999999999. -h Displays the usage. Specifying this option with another option or operand causes an error. -i <i>inactive</i> Sets the number of days from the expiration of the password to account lock. When a new user account is created, this value is assigned to that user account. The default value is -1. If the value is -1, it indicates that the account is not locked even after the expiration of the password. Valid values are integers from -1 to 999999999.

-k <i>difok</i>	Sets the least number of new characters (characters not included in the old password) in the new password. The default value is 3. Valid values are integers from 0 to 999999999.
-l <i>lcredit</i>	Sets the maximum number of lower-case characters included in a password. The minimum acceptable password length is reduced by one per a lower-case character included in the password to the value of <i>lcredit</i> . Valid values are integers from 0 to 999999999. The default value is 1. See Example 2.
-M <i>maxdays</i>	Sets the maximum number of days when the password is effective. When a new user account is created, this value is assigned to that user account. The default value is 999999. Valid values are integers from 0 to 999999999.
-m <i>minlen</i>	Sets the minimum acceptable password length if no limit is applied to the number of characters in a password. If the limit on the number of characters is specified by the -d, -u, -l, -o option, the necessary password length is reduced when the specified character type is used. The default value is 9. Note – A password must be composed of six or more characters regardless of the limit on the number of characters. Valid values are integers from 6 to 999999999. See Example 2.
-n <i>mindays</i>	Sets the minimum number of days from a change in the password to the next change. 0 (the default value of this field) indicates that the password can be changed at any time. When a new user account is created, this value is assigned to that user account. Valid values are integers from 0 to 999999999.
-o <i>ocredit</i>	Sets the maximum number of characters other than alphanumeric characters included in a password. The minimum acceptable password length is reduced by one per a character other than alphanumeric characters included in the password to the value of <i>ocredit</i> . Valid values are integers from 0 to 999999999. The default value is 1. See Example 2.

-r remember -u ucredit -w warn -y retry password	<p>Sets the number of passwords to be stored in the password history.</p> <p>The valid maximum value is 10. The default value is 3.</p> <p>If <code>setpasswordpolicy(8)</code> is executed specifying 0 in <i>remember</i>, the XSCF user cannot change the password and an error message is displayed.</p> <p>Sets the maximum number of upper-case characters included in a password. The minimum acceptable password length is reduced by one per an upper-case character included in the password to the value of <i>ucredit</i>.</p> <p>Valid values are integers from 0 to 999999999. The default value is 1. See Example 2.</p> <p>Sets the default number of days until the actual expiration after the issuance of the alarm of the expiration date of the password to the user. When a new user account is created, this value is assigned to that user account. The default value is 7.</p> <p>Valid values are integers from 0 to 999999999.</p> <p>Sets the number of attempts to accept retries of a password when a password for the user account is changed using a command. The default value is 3.</p> <p>Valid values are integers from 0 to 999999999.</p>
---	---

EXTENDED DESCRIPTION

EXAMPLES

You can confirm the password policy set currently by using `showpasswordpolicy(8)`.

EXAMPLE 1 Set the minimum size and number of the password to be stored.

```
XSCF> setpasswordpolicy -m 12 -r 5
```

EXAMPLE 2 Set the minimum password length and the maximum number of characters for each character type.

```
XSCF> setpasswordpolicy -m 10 -d 1 -u 0 -l 1 -o 1
```

Executing this command sets the minimum password length of a new password to 10 characters. If one or more numbers (or characters other than alphanumeric characters) are included, a password including 9 characters is accepted. If one number and one character other than alphanumeric characters are included, a password including 8 characters is accepted.

setpasswordpolicy(8)

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.
SEE ALSO	adduser (8), password (8), showpasswordpolicy (8)

NAME	setpciboxdio - Configures each PCI slot setting of whether to enable the direct I/O function for PCI card mounted on PCI Expansion unit.												
SYNOPSIS	<pre>setpciboxdio [-b <i>bb_id</i>] -s {enable disable} [[-q] -{y n}] all setpciboxdio [-b <i>bb_id</i>] -s {enable disable} [[-q] -{y n}] <i>slot_no...</i> setpciboxdio -h</pre>												
DESCRIPTION	<p>setpciboxdio is a command to configure enable/disable of the direct I/O function for each PCI card mounted on the PCI Expansion unit.</p> <p>The direct I/O function can be configured with each PCI slot on the server and the configured settings will be reflected to each PCI Expansion unit connected with the target PCI slot. setpciboxdio can be executed regardless of whether a PCI Expansion unit link card is mounted to the server's PCI slot.</p> <p>This command is not supported on SPARC M10-1.</p>												
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p><i>platadm</i>, <i>fieldeng</i></p> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>												
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-b <i>bb_id</i></td><td>Specifies a BB-ID of the target server to which the direct I/O function is configured. On SPARC M10-4, only 0 can be specified for <i>bb_id</i>. On SPARC M10-4S, an integer 0-15 can be specified for <i>bb_id</i> depending on the system configuration.</td></tr> <tr> <td></td><td>When omitting the option, settings will be applied to the own server.</td></tr> <tr> <td></td><td>On SPARC M10-4, only 0 can be specified for <i>bb_id</i>.</td></tr> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-q</td><td>Prevents display of messages, including prompt, for standard output.</td></tr> </table>	-b <i>bb_id</i>	Specifies a BB-ID of the target server to which the direct I/O function is configured. On SPARC M10-4, only 0 can be specified for <i>bb_id</i> . On SPARC M10-4S, an integer 0-15 can be specified for <i>bb_id</i> depending on the system configuration.		When omitting the option, settings will be applied to the own server.		On SPARC M10-4, only 0 can be specified for <i>bb_id</i> .	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-q	Prevents display of messages, including prompt, for standard output.
-b <i>bb_id</i>	Specifies a BB-ID of the target server to which the direct I/O function is configured. On SPARC M10-4, only 0 can be specified for <i>bb_id</i> . On SPARC M10-4S, an integer 0-15 can be specified for <i>bb_id</i> depending on the system configuration.												
	When omitting the option, settings will be applied to the own server.												
	On SPARC M10-4, only 0 can be specified for <i>bb_id</i> .												
-h	Displays the usage. Specifying this option with another option or operand causes an error.												
-n	Automatically responds to prompt with "n" (no).												
-q	Prevents display of messages, including prompt, for standard output.												

-s {enable disable}	Configures whether to enable the direct I/O function via PCI Expansion unit for the specified PCI slot. Any of the following values can be specified. When omitting the option, an error will be occurred.
enable	Enables the direct I/O function.
disable	Disables the direct I/O function.

-y Automatically responds to prompt with "y" (yes).

OPERANDS

The following operands are supported.

all Applies the settings to all PCI slots on the specified server. This operand cannot be used with the *slot_no* at the same time.

slot_no Specifies the number of a PCI slot to be applied with the settings. An integer 0-10 can be specified in no particular order. Plural slot numbers can be specified at the same time by inserting space characters. This operand cannot be used with the all at the same time.

EXTENDED DESCRIPTION

- setpciboxdio cannot be executed to a crossbar box. And, omitting -b causes an error, when the own server has been a crossbar box.
- This command can be executed only in the case where the power of a PPAR, in which the target server's physical system board (PSB) is included, is turned off. In other cases, the command fails with an error. When the power of the PPAR is not turned off, an error occurs and the settings will be reflected at the next boot.
- The PCI hot plug function is disabled in the PCI slot where the direct I/O function has been enabled by setpciboxdio.
- The configured settings will be ignored when 8-10 is specified for the slot number in SPARC M10-4S.
- The configured settings will be ignored when 8-10 is specified for the slot number in SPARC M10-4S.
- When changing the direct I/O setting by setpciboxdio, the logical domain configuration, in which the target PSB of the server has been added, becomes factory-default. The OpenBoot PROM environment variables are also initialized.
- You can confirm the current setting of direct I/O function by using showpciboxdio(8).

EXAMPLES

EXAMPLE 1 Enables the direct I/O function, via PCI Expansion unit, of the PCI slots 2, 3, and 7 on BB#2.

```
XSCF> setpciboxdio -b 2 -s enable 2 3 7
The Direct I/O feature via the PCIBOX will be enabled.
```

```
Notice:  
Logical domain config_name will be set to "factory-default".  
Continue? [y|n] :y
```

EXAMPLE 2 Enables the direct I/O function via PCI Expansion unit on all PCI slots of the own server.

```
XSCF> setpciboxdio -s enable -q -y all
```

EXAMPLE 3 Disables the direct I/O function via PCI Expansion unit on all PCI slots of M10-4.

```
XSCF> setpciboxdio -b 0 -s disable all  
The Direct I/O feature via the PCIBOX will be disabled.
```

```
Notice:  
Logical domain config_name will be set to "factory-default".  
Continue? [y|n] :y
```

EXIT STATUS The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO [showpciboxdio\(8\)](#)

NAME	setpcl - Sets the physical partition (PPAR) configuration information (PCL).						
SYNOPSIS	<pre>setpcl -p ppar_id -s policy= value setpcl -p ppar_id -s variable=value lsb [lsb...] setpcl -p ppar_id -a lsb=psb [lsb=psb...] setpcl -p ppar_id -r lsb [lsb...] setpcl -h</pre>						
DESCRIPTION	<p>setpcl is a command to set PCL.</p> <p>PCL is hardware resource information which can be set in PPAR or logical system boards (LEB) composing PPAR.</p> <p>LSB is the unit of system boards recognized by Hypervisor. It is indicated by an independent integer from 00 to 15 for each PPAR.</p> <p>The system board (PSB) means the boards recognized by XSCF and mounted as hardware. setpcl links LSBs with PSBs by setting PCL and performs settings such as disabling the use of mounted hardware resources on the Oracle Solaris on logical domains.</p> <p>In setpcl, the following information in PCL can be set. For SPARC M10-1/M10-4, only policy can be set.</p> <p>Settings for PPAR:</p> <ul style="list-style-type: none"> ■ Degradation range in the case that an abnormality is detected in the initial hardware diagnosis (policy) However, it cannot be set while PPAR is in operation. To reset it, it is necessary to turn off the power of PPAR. <table> <tr> <td>fru</td> <td>Degradation by part such as CPU and memory (Default)</td> </tr> <tr> <td>psb</td> <td>Degradation by PSB</td> </tr> <tr> <td>system</td> <td>Shutdown of the target PPAR without degradation</td> </tr> </table> <p>Settings for LSB:</p> <ul style="list-style-type: none"> ■ PSB number linked with LSB Specifies the PSB number to be linked with LSB. ■ Using memory mounted in LSB (no-mem) You can set whether to make the Oracle Solaris on the logical domain use memory mounted in LSB. ■ Using I/O device mounted in LSB (no-io) 	fru	Degradation by part such as CPU and memory (Default)	psb	Degradation by PSB	system	Shutdown of the target PPAR without degradation
fru	Degradation by part such as CPU and memory (Default)						
psb	Degradation by PSB						
system	Shutdown of the target PPAR without degradation						

	You can set whether to make the Oracle Solaris on the logical domain use I/O devices such as PCI card mounted in LSB.
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -a <i>lsb=psb</i> Specifies the PSB number to be linked to the LSB number of PPAR. This can be specified using the following format. You cannot specify it in SPARC M10-1/M10-4. <ul style="list-style-type: none"> <i>lsb=psb</i> <i>lsb</i> Specifies the LSB number. You can specify an integer from 0 to 15. <i>psb</i> Specifies the PSB number. This can be specified using the following format. <ul style="list-style-type: none"> <i>xx-y</i> <i>xx</i>: Specifies an integer from 00 to 15. <i>y</i>: Fixed to 0. You can specify it in a format separating <i>lsb</i> and <i>psb</i> by equal sign (=). Do not put any space before and after "=". You can specify multiple <i>lsb=xsb</i> by separating them with spaces. Specifying the same LSB number and PSB number redundantly causes an error. It also causes an error that a PSB number is set in the specified <i>lsb</i>. If the specified <i>psb</i> is set in another LSB, the existing settings is deleted and overwritten on the specified <i>lsb</i>.
	<ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -p <i>ppar_id</i> Specifies the PPAR-ID to be set. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. -r Specifies the PSB number linked to the LSB number of the specified PPAR. You cannot specify it in SPARC M10-1/M10-4.

-s *variable=value* Sets the hardware resources of the PSB linked to LSB. In *variable*, the items to be set are specified. In *value*, the values for *variable* are specified. Specify just one *variable* and *value* in a format separating them by equal sign (=). Do not put any spaces before and after "=".

You can specify any of the following for *variable*. For SPARC M10-1/M10-4, you can only set *policy*.

policy	Degradation range in the case that an abnormality is detected in the initial hardware diagnosis
no-mem	Whether to use memory on the logical domain
no-io	Whether to use I/O devices on the logical domain

If *policy* is specified in *variable*, you can specify either of the following in *value*.

fru	If an abnormality is detected in the diagnosis, this degrades the target Field Replaceable Unit (FRU).
psb	If an abnormality occurs in the diagnosis, this degrades the target PSB.
system	If an abnormality occurs in the diagnosis, this shuts down the target PPAR.

If *no-mem* is specified in *variable*, you can specify either of the following in *value*.

true	Prohibits using memory on the logical domain.
false	Allows using memory on the logical domain (Default).

If *no-io* is specified in *variable*, you can specify either of the following in *value*.

true	Prohibits using I/O devices on the logical domain
false	Allows using I/O devices on the logical domain (Default).

OPERANDS

The following operands are supported.

lsb

Specifies the LSB number to be set. You can specify an integer from 00 to 15 for *lsb*. You can make multiple specifications by separating them with spaces. Specify a unique value in PPAR for *lsb*. Specifying the same *lsb* causes an error. You cannot specify it in SPARC M10-1/M10-4.

EXTENDED DESCRIPTION

- If the PSB linked to the specified LSB is incorporated into PPAR configuration, the contents set in LSB cannot be changed. Change them after releasing PSB from PPAR configuration by *deleteboard(8)*.
- If the specified PPAR is in operation, the value of *policy* cannot be changed. Change it after shutdown of the specified PPAR.
- If the specified PPAR is in operation, the value of *policy* cannot be changed. Change it after shutdown of the specified PPAR.
- You can confirm the information of PCL set currently by using *showpcl(8)*.
- If *policy* is changed when degradation has already occurred, degradation may be different from expected one.

EXAMPLES

EXAMPLE 1 Link LSB 0 of PPAR-ID 0 to PSB 00-0, and LSB 1 to PSB 01-0.

```
XSCF> setpcl -p 0 -a 0=00-0 1=01-0
```

EXAMPLE 2 Set no-mem=true in LSB 0 and 1 of PPAR-ID 0.

```
XSCF> setpcl -p 0 -s no-mem=true 0 1
```

EXAMPLE 3 Set policy=system in PPAR-ID 0.

```
XSCF> setpcl -p 0 -s policy=system
```

EXAMPLE 4 Delete the PSBs linked to LSB 0 and 1 of PPAR-ID 0.

```
XSCF> setpcl -p 0 -r 0 1
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

addboard(8), **deleteboard(8)**, **setupfru(8)**, **showboards(8)**, **showfru(8)**, **showpcl(8)**

NAME	setpowercapping - Sets limitations for power consumption.
SYNOPSIS	<pre>setpowercapping [[-q] -{y n}] -s option= value [[-s option= value]...]</pre> <pre>setpowercapping [[-q] -{y n}] -c default</pre> <pre>setpowercapping -h</pre>
DESCRIPTION	<p>setpowercapping is a command to set limitations for power consumption of the system. All settings are reflected immediately.</p> <p>All of the settings will be applied immediately after the command execution.</p> <p>The settable items are below.</p> <ul style="list-style-type: none"> ■ Whether to enable/disable the power consumption limiting function Sets whether to enable/disable the power consumption limiting of the system. The default is off (disable). ■ Upper limit of power consumption Sets the upper limit of power consumption. You can specify wattage or percent. The default is 100 (%) by percent specification. <ul style="list-style-type: none"> ■ Upper limit of power consumption (Wattage specification) Sets the upper limit of power consumption by wattage. ■ Upper limit of power consumption (Percent specification) Sets the upper limit of power consumption by percentage. Converts the minimum power consumption value (0%) and maximum power consumption value (100%) of the system to the upper limit power value (watt). ■ Window time in the case that the upper limit is exceeded If the power consumption value of the system continues to exceed the upper limit of power consumption continuously, set the window time until it is judged as violation. The unit is second and the default is 30. ■ System operation at the time of violation Sets the system operation if the window time elapses with the power consumption value of the system exceeding the upper limit of power consumption. You can specify any of none, shutdown, and poff. The default is none. <p>The maximum power supply of the power supply unit (PSU), and the minimum and the maximum power consumption of the system can be confirmed by using the showenvironment(8).</p>
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>

OPTIONS

The following options are supported.

- c default Initializes the entire power consumption limiting function.
- h Displays the usage. Specifying this option with another option or operand causes an error.
- n Automatically responds to prompt with "n" (no).
- q Prevents display of messages, including prompt, for standard output.
- s *option=value* In *option*, the items to be set are specified. In *value*, the values for *option* are specified. Specify *option* and *value* in a format separating them by equal sign (=). Do not put any spaces before and after "=" You can make multiple specifications by separating them with spaces.

You can specify any of the following for *option*.

- activate_state Sets whether to limit power consumption.
- powerlimit_p Sets the upper limit of power consumption by percentage (%). You cannot specify this with powerlimit_w.
- powerlimit_w Sets the upper limit of power consumption by wattage. You cannot specify this with powerlimit_p.
- timelimit Sets the window time in the case that power consumption exceeds the upper limit.
- violation_actions Sets the system operation when the window time elapsed with the upper limit exceeded.

<p>If <code>activate_state</code> is specified in <i>option</i>, you can specify either of the following in <i>value</i>.</p> <table> <tr> <td><code>enabled</code></td><td>Limits power consumption.</td></tr> <tr> <td><code>disabled</code></td><td>Does not limit power consumption (default).</td></tr> </table> <p>If <code>powerlimit_p</code> is specified in <i>option</i>, you can specify an integer from 0 to 100 for <i>value</i>. You can specify a value which is larger than the maximum power consumption of the system, but cannot specify a value which is less than the minimum power consumption of the system.</p> <p>If <code>powerlimit_w</code> is specified in <i>option</i>, you can specify an integer from 0 to 99999 for <i>value</i>.</p> <p>If <code>timelimit</code> is specified in <i>option</i>, you can specify an integer from 10 to 99999 for <i>value</i>. The unit is second. Any of the following values also can be specified.</p> <table> <tr> <td><code>default</code></td><td>Sets the grace period for exceeding the upper limit of power consumption to 30 seconds.</td></tr> <tr> <td><code>none</code></td><td>Sets the grace period for exceeding the upper limit of power consumption to 0 second.</td></tr> </table> <p>If <code>violation_actions</code> is specified in <i>option</i>, you can specify either of the following in <i>value</i>.</p> <table> <tr> <td><code>none</code></td><td>Outputs only the message for exceeding the upper limit (Default).</td></tr> <tr> <td><code>shutdown</code></td><td>Shuts down the physical partition (PPAR) below the upper limit after outputting the message for exceeding the upper limit.</td></tr> <tr> <td><code>poff</code></td><td>Forcibly shuts down PPAR below the upper limit after outputting the message for exceeding the upper limit.</td></tr> </table> <p><code>-y</code> Automatically responds to prompt with "y" (yes).</p> <ul style="list-style-type: none"> ■ You can confirm the settings regarding power consumption limiting by using <code>showpowercapping(8)</code>. ■ If all of the following conditions are met while the Logical Domains (LDoms) Manager of a PPAR is halted, the performances of other PPARs may drop or the PPARs themselves may be shut down. <ul style="list-style-type: none"> ■ Case that the power consumption limiting function of the system is enabled 	<code>enabled</code>	Limits power consumption.	<code>disabled</code>	Does not limit power consumption (default).	<code>default</code>	Sets the grace period for exceeding the upper limit of power consumption to 30 seconds.	<code>none</code>	Sets the grace period for exceeding the upper limit of power consumption to 0 second.	<code>none</code>	Outputs only the message for exceeding the upper limit (Default).	<code>shutdown</code>	Shuts down the physical partition (PPAR) below the upper limit after outputting the message for exceeding the upper limit.	<code>poff</code>	Forcibly shuts down PPAR below the upper limit after outputting the message for exceeding the upper limit.		
<code>enabled</code>	Limits power consumption.															
<code>disabled</code>	Does not limit power consumption (default).															
<code>default</code>	Sets the grace period for exceeding the upper limit of power consumption to 30 seconds.															
<code>none</code>	Sets the grace period for exceeding the upper limit of power consumption to 0 second.															
<code>none</code>	Outputs only the message for exceeding the upper limit (Default).															
<code>shutdown</code>	Shuts down the physical partition (PPAR) below the upper limit after outputting the message for exceeding the upper limit.															
<code>poff</code>	Forcibly shuts down PPAR below the upper limit after outputting the message for exceeding the upper limit.															

- Case that the power consumption value of the system exceeds the upper limit of power consumption
- When you changed the configuration of the logical domain, execute the ldm add-spconfig on the control domain, to store the latest configuration information in XSCF. If you do not store the information, the PPAR stop processing which has been set by using the -s violation_actions may fail to work properly.
- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Enable the power consumption limiting of the system.

```
XSCF> setpowercapping -s activate_state=enabled
activate_state      :disabled    -> enabled
powerlimit          :500w       -> -
timelimit           :30         -> -
violation_actions  :none        -> -
The specified options will be changed.
Continue? [y|n]:y
configured.
activate_state      :enabled
powerlimit          :500w
timelimit           :30
violation_actions  :none
```

EXAMPLE 2 Set the upper limit of system power consumption to 75%.

```
XSCF> setpowercapping -s powerlimit_p=75
activate_state      :enabled    -> -
powerlimit          :25%        -> 75%
timelimit           :30         -> -
violation_actions  :none        -> -
The specified options will be changed.
Continue? [y|n]:y
configured.
activate_state      :enabled
powerlimit          :75%
timelimit           :30
violation_actions  :none
```

EXAMPLE 3 Set the upper limit of system power consumption to 1000 W and the window time in the case that power consumption exceeds the upper limit to 100 seconds.

```
XSCF> setpowercapping -s powerlimit_w=1000 -s timelimit=100
activate_state      :enabled    -> -
powerlimit          :500w       -> 1000w
timelimit           :30         -> 100
violation_actions  :none        -> -
```

```
The specified options will be changed.  
Continue? [y|n]:y  
configured.  
activate_state      :enabled  
powerlimit          :1000w  
timelimit           :100  
violation_actions   :none
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **showenvironment**(8), **showpowercapping**(8)

NAME	setpowerschedule - Sets the schedule operation information.				
SYNOPSIS	setpowerschedule {-p <i>ppar_id</i> -a} -c control={enable disable} setpowerschedule {-p <i>ppar_id</i> -a} -c recover={on off auto} setpowerschedule -h				
DESCRIPTION	<p><code>setpowerschedule</code> is a command to set information related to schedule operation.</p> <p>Schedule operation can be set for the entire physical partitions (PPAR) or each PPAR.</p>				
Privileges	<p>To execute this command, either of the following privileges is required.</p> <table> <tr> <td><code>plataadm</code></td> <td>Enables execution for all PPARs.</td> </tr> <tr> <td><code>pparadm</code></td> <td>Enables execution for PPARs for which you have administration privilege.</td> </tr> </table> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>	<code>plataadm</code>	Enables execution for all PPARs.	<code>pparadm</code>	Enables execution for PPARs for which you have administration privilege.
<code>plataadm</code>	Enables execution for all PPARs.				
<code>pparadm</code>	Enables execution for PPARs for which you have administration privilege.				
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Sets for all PPARs. -c control={enable disable} Enables/Disables schedule operation of the specified PPAR. To enable it, specify enable. To disabled it, specify disable. The default is off (disable). -c recover={on off auto} 				

Sets whether to turn on the power at the time of resumption of power. You can specify any of the following.

on Turns on the power and restores the same power supply status as before a power failure (Default).

off Does not turn on the power.

auto If the time of power recovery is within the scheduled operation period (within the scheduled period from power-on to power-off), power is turned on. If it is outside of the scheduled operation period, power is not turned on. If either power-on or power-off is not scheduled, it is regarded as outside of the scheduled operation period and power is not turned on.

Example 1: If it is scheduled to power on at 9 and to power off at 13

- If power recovered at 10: power will be turned on
- If power recovered at 15: power will not be turned on

Example 2: If it is scheduled to power on at 9 but has no power-off schedule

- If power recovered at 10 or at 15: power will not be turned on in either case

-h

Displays the usage. Specifying this option with another option or operand causes an error.

-p *ppar_id*

Specifies the PPAR-ID to set schedule operation. Depending on the system configuration, you can specify an integer from 0 to 15 for *ppar_id*.

OPERANDS

The following operands are supported.

timeout=offtimeout

Sets the shutdown wait time of Oracle Solaris, in the case of **-c forceoff=enable**. It specifies the wait time for *offtimeout*. You can specify an integer from 0 to 255 by minutes. The default is 10 (minutes).

EXTENDED DESCRIPTION

- In the uninterruptible power system (UPS) connection configuration, the schedule setting link function of the Power Chute Network Shutdown Enterprise (PCNS) is a different function from schedule setting by **setpowerschedule**. Sets only one of these functions for schedule. If both of them are set, the schedule set by the schedule setting link function of PCNS cannot be suspended by disabling the schedule operation set by **setpowerschedule** or suspending schedule operation (holiday setting).

- You can confirm the schedule operation information set currently by using `showpowerschedule(8)`.
- Specifying a non-existent PPAR-ID or invalid option or parameter causes an error.
- When you changed the configuration of the logical domain, execute the `1dm add-spconfig` on the control domain, to store the latest configuration information in XSCF. If you do not store the information, the automatic power-off processing may fail to work properly.

EXAMPLES

EXAMPLE 1 Enable the schedule operation of PPAR-ID 1.

```
XSCF> setpowerschedule -p 1 -c control=enable
XSCF>
```

EXAMPLE 2 Set so that the power of PPAR-ID 1 can be turned on according to schedule operation at the time of resumption of power.

```
XSCF> setpowerschedule -p 1 -c recover=auto
XSCF>
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

addpowerschedule (8), **deletepowerschedule (8)**, **showpowerschedule (8)**

`setpowerschedule(8)`

NAME	setpowerupdelay - Sets the warm-up operation time of the system and the wait time before start.												
SYNOPSIS	<pre>setpowerupdelay -p ppar_id -c warmup -s time setpowerupdelay -a -c warmup -s time setpowerupdelay -c wait -s time setpowerupdelay -h</pre>												
DESCRIPTION	<p>setpowerupdelay is a command to set the warm-up operation time of the system and the wait time before start.</p> <p>The wait time before start can be used for control such as starting the system after waiting for the temperature to become appropriate by air conditioning in the data center. If the input power of the system has already been turned on and the system is in operation, the set contents will be enabled next time when the system is started.</p> <p>The warm-up operation wait time is set for each physical partition (PPAR).</p>												
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>												
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-a</td><td>Sets a warm-up operation time for all PPARs.</td></tr> <tr> <td>-c warmup</td><td>Sets the warm-up operation time.</td></tr> <tr> <td>-c wait</td><td>Sets the wait time before the system is started.</td></tr> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-p <i>ppar_id</i></td><td>Specifies the PPAR to set the warm-up operation time.</td></tr> <tr> <td>-s <i>time</i></td><td>Specifies the warm-up operation time or the wait time before start by minutes. You can specify an integer from 0 to 255 for <i>time</i>.</td></tr> </table>	-a	Sets a warm-up operation time for all PPARs.	-c warmup	Sets the warm-up operation time.	-c wait	Sets the wait time before the system is started.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-p <i>ppar_id</i>	Specifies the PPAR to set the warm-up operation time.	-s <i>time</i>	Specifies the warm-up operation time or the wait time before start by minutes. You can specify an integer from 0 to 255 for <i>time</i> .
-a	Sets a warm-up operation time for all PPARs.												
-c warmup	Sets the warm-up operation time.												
-c wait	Sets the wait time before the system is started.												
-h	Displays the usage. Specifying this option with another option or operand causes an error.												
-p <i>ppar_id</i>	Specifies the PPAR to set the warm-up operation time.												
-s <i>time</i>	Specifies the warm-up operation time or the wait time before start by minutes. You can specify an integer from 0 to 255 for <i>time</i> .												
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ You can confirm the warm-up operation time and wait time before start set currently by using <code>showpowerupdelay(8)</code>. ■ If the power is turned on by using <code>testsbt(8)</code>, the warm-up operation time and wait time before start are ignored. To monitor these times at start, use <code>poweron(8)</code>. ■ If the system is powered on using the operation panel, the waiting time until the system starts is ignored. 												

EXAMPLES **EXAMPLE 1** Set the warm-up operation time to 10 minutes.

```
XSCF> setpowerupdelay -p 00 -c warmup -s 10
```

EXAMPLE 2 Set the wait time before start to 20 minutes.

```
XSCF> setpowerupdelay -c wait -s 20
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **poweron (8)**, **showpowerupdelay (8)**, **testsb (8)**

NAME	setpparmode - Sets the operation mode of the physical partition (PPAR).																
SYNOPSIS	setpparmode [[-q] -{y n}] -p <i>ppar_id</i> -m <i>function=mode</i> setpparmode -h																
DESCRIPTION	<p>setpparmode is a command to set the operation mode of PPAR.</p> <p>The type of the operation modes of PPAR are below.</p> <table> <tr> <td>Diagnosis level</td><td>Diagnosis level of Power-On Self-Test (POST). Set this while PPAR is not in operation. The default is standard. When the command is executed, the setting is reflected immediately.</td></tr> <tr> <td>Message level</td><td>Detailed level of the console message of the POST diagnosis. Set this while PPAR is not in operation. The default is standard. When the command is executed, the setting is reflected immediately.</td></tr> <tr> <td>Alive Check (the monitoring between XSCF and Hypervisor)</td><td>Whether to enable or disable Alive Check. The default is on (enable). When the command is executed, the setting is reflected immediately.</td></tr> <tr> <td>Operation after the Host Watchdog (the monitoring between Hypervisor and the control domain) timeout</td><td>Operation of PPAR at the time of Host Watchdog timeout. By default, PPAR is reset. When the command is executed, the setting is reflected immediately.</td></tr> <tr> <td>Break signal (STOP-A) control</td><td>Whether to enable or disable break signal transmission control. The default is on (enable). When the command is executed, the setting is reflected immediately.</td></tr> <tr> <td>Autoboot of the guest domain</td><td>Whether to autoboot the guest domain when PPAR is started. The default is on (enable). To reflect the setting, PPAR must be powered on or reboot.</td></tr> <tr> <td>Power-saving operation</td><td>Whether to enable or disable the low-power operation of CPU or memory. The default is off (disable). When the command is executed, the setting is reflected immediately.</td></tr> <tr> <td>I/O bus reconfiguration (ioreconfigure)</td><td>Whether to reconfigure I/O bus according to the bus configuration when PPAR is powered on or reset. The default is off (disable). Execute the command while PPAR is not stopped (in the status other than Powered Off). You cannot set it in SPARC M10-1.</td></tr> </table>	Diagnosis level	Diagnosis level of Power-On Self-Test (POST). Set this while PPAR is not in operation. The default is standard. When the command is executed, the setting is reflected immediately.	Message level	Detailed level of the console message of the POST diagnosis. Set this while PPAR is not in operation. The default is standard. When the command is executed, the setting is reflected immediately.	Alive Check (the monitoring between XSCF and Hypervisor)	Whether to enable or disable Alive Check. The default is on (enable). When the command is executed, the setting is reflected immediately.	Operation after the Host Watchdog (the monitoring between Hypervisor and the control domain) timeout	Operation of PPAR at the time of Host Watchdog timeout. By default, PPAR is reset. When the command is executed, the setting is reflected immediately.	Break signal (STOP-A) control	Whether to enable or disable break signal transmission control. The default is on (enable). When the command is executed, the setting is reflected immediately.	Autoboot of the guest domain	Whether to autoboot the guest domain when PPAR is started. The default is on (enable). To reflect the setting, PPAR must be powered on or reboot.	Power-saving operation	Whether to enable or disable the low-power operation of CPU or memory. The default is off (disable). When the command is executed, the setting is reflected immediately.	I/O bus reconfiguration (ioreconfigure)	Whether to reconfigure I/O bus according to the bus configuration when PPAR is powered on or reset. The default is off (disable). Execute the command while PPAR is not stopped (in the status other than Powered Off). You cannot set it in SPARC M10-1.
Diagnosis level	Diagnosis level of Power-On Self-Test (POST). Set this while PPAR is not in operation. The default is standard. When the command is executed, the setting is reflected immediately.																
Message level	Detailed level of the console message of the POST diagnosis. Set this while PPAR is not in operation. The default is standard. When the command is executed, the setting is reflected immediately.																
Alive Check (the monitoring between XSCF and Hypervisor)	Whether to enable or disable Alive Check. The default is on (enable). When the command is executed, the setting is reflected immediately.																
Operation after the Host Watchdog (the monitoring between Hypervisor and the control domain) timeout	Operation of PPAR at the time of Host Watchdog timeout. By default, PPAR is reset. When the command is executed, the setting is reflected immediately.																
Break signal (STOP-A) control	Whether to enable or disable break signal transmission control. The default is on (enable). When the command is executed, the setting is reflected immediately.																
Autoboot of the guest domain	Whether to autoboot the guest domain when PPAR is started. The default is on (enable). To reflect the setting, PPAR must be powered on or reboot.																
Power-saving operation	Whether to enable or disable the low-power operation of CPU or memory. The default is off (disable). When the command is executed, the setting is reflected immediately.																
I/O bus reconfiguration (ioreconfigure)	Whether to reconfigure I/O bus according to the bus configuration when PPAR is powered on or reset. The default is off (disable). Execute the command while PPAR is not stopped (in the status other than Powered Off). You cannot set it in SPARC M10-1.																

	<p>PPAR DR feature Set up the enabling/disabling of the incorporation or detachment of system boards (PSB) to / from a running PPAR configuration. By default this feature is disabled. To reflect the setup, it is necessary to power on or reboot the PPAR. This setup is not available for SPARC M10-1, SPARC M10-4.</p>
	<p>If any of the operation modes of PPAR is selected, the list of the current setting contents is displayed.</p>
Privileges	<p>To execute this command, any of the following privileges is required.</p> <ul style="list-style-type: none">■ Diagnosis level, message level, autoboot of the guest domain
	<p>fieldeng Enables execution for all PPARs.</p>
	<ul style="list-style-type: none">■ Alive Check, operation at the time of Host Watchdog timeout, break signal, autoboot of the guest domain, power-saving operation, reconfiguration of I/O buses, PPAR DR feature
	<p>platadm Enables execution for all PPARs.</p>
	<p>pparadm Enables execution for PPARs for which you have administration privilege.</p>
	<p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p>
	<p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p>

-m*function=mode* Sets the operation mode and value. Specify the operation mode for *function*. You can specify any of the following.

- diag**
Sets the diagnosis level of POST.
- message**
Sets the detailed level of the console message of POST diagnosis.
- alive_check**
Sets whether to enable or disable Alive Check.
- watchdog_reaction**
Sets the operation at the time of Host Watchdog timeout.
- break_signal**
Sets whether to enable or disable break signal control.
- guestboot**
Sets whether to enable or disable autoboot of the guest domain.
- elastic**
Sets whether to enable or disable the power-saving operation of CPU or memory.
- ioreconfigure**
Sets whether to enable or disable reconfiguration of I/O buses when PPAR is started or restarted. You cannot set it in SPARC M10-1.
- ppar_dr**
Enable or disable the PPAR DR feature. This feature cannot be setup on SPARC M10-1, SPARC M10-4.

If *diag* is specified in *function*, you can specify either of the following in *mode*. Set this while PPAR is not in operation.

off	Does not make a diagnosis.
min	Sets the diagnosis level to "standard" (Default).
max	Sets the diagnosis level to "Maximum."

If *message* is specified in *function*, you can specify either of the following in *mode*. Set this while PPAR is not in operation.

none	The diagnosis output is not displayed until a failure is detected.
min	Displays the limited volume of the diagnosis output.
normal	Displays an appropriate volume of the diagnosis output (Default).
max	Displays the complete diagnosis output including the names of diagnoses performed and the results.
debug	Displays a wide diagnosis output including the debug output of each diagnosis.

If *alive_check*, *break_signal*, *guestboot*, *elastic*, or *ppar_dr* is specified in *function*, you can specify either of the following for *mode*.

on	Enables host watchdog, break signal transmission control, autoboot of the guest domain, power-saving operation, or PPAR DR feature.
off	Disables host watchdog, break signal transmission control, autoboot of the guest domain, and power-saving operation, or PPAR DR feature.

EXTENDED DESCRIPTION	<p>If <code>watchdog_reaction</code> is specified in <i>function</i>, you can specify either of the following in <i>mode</i>.</p> <table> <tbody> <tr> <td><code>none</code></td><td>None.</td></tr> <tr> <td><code>dumpcore</code></td><td>Generates panic in the logical domain where an abnormality is detected.</td></tr> <tr> <td><code>reset</code></td><td>Resets the hardware of PPAR containing the logical domain where an abnormality is detected.</td></tr> </tbody> </table> <p>If <code>ioreconfigure</code> is specified in <i>function</i>, you can specify either of the following in <i>mode</i>.</p> <table> <tbody> <tr> <td><code>true</code></td><td>Every time the power of the system is turned on, XSCF confirms I/O buses and reconfigures them, if necessary.</td></tr> <tr> <td><code>false</code></td><td>XSCF does not reconfigure I/O buses.</td></tr> <tr> <td><code>nextboot</code></td><td>Only when the power is turned on next time, XSCF reconfigures the I/O buses. It is automatically set to <code>false</code> after reconfiguration.</td></tr> </tbody> </table> <p><code>-n</code> Automatically responds to prompt with "n" (no).</p> <p><code>-p ppar_id</code> Specifies the PPAR-ID to set the operation mode. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>.</p> <p><code>-q</code> Prevents display of messages, including prompt, for standard output.</p> <p><code>-y</code> Automatically responds to prompt with "y" (yes).</p> <ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ The operation mode set by <code>setpparmode</code> does not display the actual operation but the setting status. <p>The actual operation varies according to the status of the mode switch of the operation panel. If the mode switch of the operation panel is "Service," the operation mode of PPAR is set as follows regardless of the contents set by <code>setpparmode(8)</code>.</p> <ul style="list-style-type: none"> ■ Diagnosis level, message level, autoboot of the guest domain, power-saving operation, reconfiguration of I/O buses, PPAR DR feature: As set by <code>setpparmode</code> 	<code>none</code>	None.	<code>dumpcore</code>	Generates panic in the logical domain where an abnormality is detected.	<code>reset</code>	Resets the hardware of PPAR containing the logical domain where an abnormality is detected.	<code>true</code>	Every time the power of the system is turned on, XSCF confirms I/O buses and reconfigures them, if necessary.	<code>false</code>	XSCF does not reconfigure I/O buses.	<code>nextboot</code>	Only when the power is turned on next time, XSCF reconfigures the I/O buses. It is automatically set to <code>false</code> after reconfiguration.		
<code>none</code>	None.														
<code>dumpcore</code>	Generates panic in the logical domain where an abnormality is detected.														
<code>reset</code>	Resets the hardware of PPAR containing the logical domain where an abnormality is detected.														
<code>true</code>	Every time the power of the system is turned on, XSCF confirms I/O buses and reconfigures them, if necessary.														
<code>false</code>	XSCF does not reconfigure I/O buses.														
<code>nextboot</code>	Only when the power is turned on next time, XSCF reconfigures the I/O buses. It is automatically set to <code>false</code> after reconfiguration.														

- Alive Check and the operation after the Host Watchdog timeout: Disabled
- Break signal (STOP-A) transmission control: Sends a break signal regardless of the settings
- You can confirm the contents of the PPAR operation mode set currently by using showpparmode(8). The contents set by setpparmode is displayed when showpparmode(8) is executed after executing setpparmode.

EXAMPLES**EXAMPLE 1** Set the diagnosis level of PPAR-ID 0 to "None."

```
XSCF> setpparmode -p 0 -m diag=off
Diagnostic Level      :min      -> off
Message Level        :normal   -> -
Alive Check          :on       -> -
Watchdog Reaction    :reset    -> -
Break Signal         :on       -> -
Autoboot(Guest Domain) :on      -> -
Elastic Mode         :off     -> -
IOreconfigure        :true    -> -
PPAR DR              :off     -> -
The specified modes will be changed.
Continue? [y|n] :y
configured.
Diagnostic Level      :off
Message Level        :normal
Alive Check          :on (alive check:available)
Watchdog Reaction    :reset (watchdog reaction:reset)
Break Signal         :on (break signal:non-send)
Autoboot(Guest Domain) :on
Elastic Mode         :off
IOreconfigure        :true
PPAR DR              :off
```

EXAMPLE 2 Set the autoboot of the guest domain of PPAR-ID 0 to "On." Automatically responds to prompt with "y" (yes).

```
XSCF> setpparmode -y -p 0 -m guestboot=on
Diagnostic Level      :off      -> -
Message Level        :normal   -> -
Alive Check          :on       -> -
Watchdog Reaction    :reset    -> -
Break Signal         :on       -> -
Autoboot(Guest Domain) :off    -> on
Elastic Mode         :off     -> -
IOreconfigure        :true    -> -
PPAR DR              :off     -> -
The specified modes will be changed.
Continue? [y|n]:y
configured.
Diagnostic Level      :max
Message Level        :normal
Alive Check          :on (alive check:available)
```

```

Watchdog Reaction      :none (watchdog reaction:none)
Break Signal           :on (break signal:non-send)
Autoboot(Guest Domain) :on
Elastic Mode           :off
IOreconfigure          :true
PPAR DR                :off

```

EXAMPLE 3 Set the operation after the Host Watchdog of PPAR-ID 0 to "None."

```

XSCF> setpparmode -p 0 -m watchdog_reaction=none
Diagnostic Level       :max      -> -
Message Level          :normal   -> -
Alive Check             :on       -> -
Watchdog Reaction      :reset    -> none
Break Signal            :on       -> -
Autoboot(Guest Domain) :on       -> -
Elastic Mode            :off     -> -
IOreconfigure           :true    -> -
PPAR DR                 :off     -> -
The specified modes will be changed.
Continue? [y|n]:y
configured.
Diagnostic Level       :max
Message Level          :normal
Alive Check             :on (alive check:available)
Watchdog Reaction      :none (watchdog reaction:none)
Break Signal            :on (break signal:non-send)
Autoboot(Guest Domain) :on
Elastic Mode            :off
IOreconfigure           :true
PPAR DR                 :off

```

EXAMPLE 4 Enable the power-saving mode of PPAR-ID 0.

```

XSCF> setpparmode -p 0 -m elastic=on
Diagnostic Level       :max      -> -
Message Level          :normal   -> -
Alive Check             :on       -> -
Watchdog Reaction      :reset    -> -
Break Signal            :on       -> -
Autoboot(Guest Domain) :on       -> -
Elastic Mode            :off     -> on
IOreconfigure           :true    -> -
PPAR DR                 :off     -> -
The specified modes will be changed.
Continue? [y|n]:y
configured.
Diagnostic Level       :max
Message Level          :normal
Alive Check             :on (alive check:available)
Watchdog Reaction      :reset (watchdog reaction:reset)
Break Signal            :on (break signal:non-send)
Autoboot(Guest Domain) :on

```

Elastic Mode	:on
IOreconfigure	:true
PPAR DR	:off

EXAMPLE 5 Disable the I/O bus reconfiguration function of PPAR-ID 0.

```
XSCF> setpparmode -p 0 -m ioreconfigure=false
Diagnostic Level      :max      -> -
Message Level        :normal   -> -
Alive Check          :on       -> -
Watchdog Reaction    :reset    -> -
Break Signal         :on       -> -
Autoboot(Guest Domain) :on      -> -
Elastic Mode         :off     -> -
IOreconfigure        :true    -> false
PPAR DR              :off     -> -
The specified modes will be changed.
Continue? [y|n]:y
configured.
Diagnostic Level      :max
Message Level        :normal
Alive Check          :on (alive check:available)
Watchdog Reaction    :reset (watchdog reaction:reset)
Break Signal         :on (break signal:non-send)
Autoboot(Guest Domain) :on
Elastic Mode         :off
IOreconfigure        :false
PPAR DR              :off
```

EXAMPLE 6 Enable the PPAR DR feature of PPAR-ID 0.

```
XSCF> setpparmode -p 0 -m ppar_dr=on
Diagnostic Level      :max      -> -
Message Level        :normal   -> -
Alive Check          :on       -> -
Watchdog Reaction    :reset    -> -
Break Signal         :on       -> -
Autoboot(Guest Domain) :on      -> -
Elastic Mode         :off     -> -
IOreconfigure        :true    -> false
PPAR DR              :off     -> on
The specified modes will be changed.
Continue? [y|n]:y
configured.
Diagnostic Level      :max
Message Level        :normal
Alive Check          :on (alive check:available)
Watchdog Reaction    :reset (watchdog reaction:reset)
Break Signal         :on (break signal:non-send)
Autoboot(Guest Domain) :on
Elastic Mode         :off
IOreconfigure        :false
PPAR DR              :on
```

EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
--------------------	--

SEE ALSO	showpparmode (8)
-----------------	-------------------------

NAME	setpparparam - Execute forced rewriting of OpenBoot PROM environment variables and registration or deletion of boot scripts of the control domain.						
SYNOPSIS	<pre>setpparparam [[-q] -{y n}] -p <i>ppar_id</i> use-nvramrc setpparparam [[-q] -{y n}] -p <i>ppar_id</i> security-mode setpparparam [[-q] -{y n}] -p <i>ppar_id</i> set-defaults setpparparam [[-q] -{y n}] -p <i>ppar_id</i> -s bootscript <i>value</i> setpparparam [[-q] -{y n}] -p <i>ppar_id</i> -s bootscript -r setpparparam -h</pre>						
DESCRIPTION	<p>setpparparam is a command to execute forced rewriting of OpenBoot PROM environment variables and registration or deletion of boot scripts of the control domain.</p> <p>You can set the following OpenBoot PROM environment variables.</p> <table> <tr> <td><i>use-nvramrc?</i></td><td>Whether to execute the contents of NVRAM when PPAR is started or restarted</td></tr> <tr> <td><i>security-mode</i></td><td>Setting of the security level of the firmware</td></tr> <tr> <td><i>set-defaults</i></td><td>Whether to restore the OpenBoot PROM environment variables to the default</td></tr> </table>	<i>use-nvramrc?</i>	Whether to execute the contents of NVRAM when PPAR is started or restarted	<i>security-mode</i>	Setting of the security level of the firmware	<i>set-defaults</i>	Whether to restore the OpenBoot PROM environment variables to the default
<i>use-nvramrc?</i>	Whether to execute the contents of NVRAM when PPAR is started or restarted						
<i>security-mode</i>	Setting of the security level of the firmware						
<i>set-defaults</i>	Whether to restore the OpenBoot PROM environment variables to the default						
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><i>platadm,</i> <i>fieldeng</i></td><td>Enables execution for all physical partitions (PPARs).</td></tr> <tr> <td><i>pparadm</i></td><td>Enables execution for PPARs for which you have administration privilege.</td></tr> </table> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>	<i>platadm,</i> <i>fieldeng</i>	Enables execution for all physical partitions (PPARs).	<i>pparadm</i>	Enables execution for PPARs for which you have administration privilege.		
<i>platadm,</i> <i>fieldeng</i>	Enables execution for all physical partitions (PPARs).						
<i>pparadm</i>	Enables execution for PPARs for which you have administration privilege.						

OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -p <i>ppar_id</i> Specify the PPAR-ID of the target control domain. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. <p>Note – Set this while PPAR is not in operation.</p> <ul style="list-style-type: none"> -q Prevents display of messages, including prompt, for standard output. -r Deletes the set bootscript. -s <i>bootscript</i> Register or delete boot scripts. If specified along with <i>value</i>, the value of <i>value</i> is registered as the boot script. If specified along with -r, the registered boot script will be deleted. Only one boot script can be registered. If several boot scripts are specified, the last boot script will be enabled. -Y Automatically responds to prompt with "y" (yes).
OPERANDS	<p>The following operands are supported.</p> <ul style="list-style-type: none"> use-nvramrc Sets the environment variable use-nvramrc? to false. security-mode Sets the environment variable security-mode to none. set-defaults Restores the OpenBoot PROM environment variables to the default. <i>value</i> Specify the boot script to be registered. Enter the value enclosing it in double quotation marks (""). You can set it within 254 characters. When specifying the OpenBoot PROM environment variables, input a line feed after every setenv command.
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ Execute the setpparparam only when the target PPAR is powered off. An error is produced if it is executed when the PPAR is powered on. ■ The OpenBoot PROM variables can be rewritten by registering the setenv commands in the boot script. However, as the use-nvramrc? and security-mode variables are used before the execution of the boot script, these variables cannot be rewritten by the boot script.

- The variables that are setup with **setpparparam** are effective only at the next powering on of the PPAR. To execute forced rewriting of OpenBoot PROM environment variables and registration or deletion of boot scripts, set them again by using **setpparparam**.

EXAMPLES

- EXAMPLE 1** Set the OpenBoot PROM environment variable **use-nvramrc?** of PPAR-ID 0 to false.

```
XSCF> setpparparam -p 0 use-nvramrc
PPAR-ID of PPARs that will be affected:0
OpenBoot PROM variable use-nvramrc will be set to false.
Continue? [y|n] :
```

- EXAMPLE 2** Set the OpenBoot PROM environment variable **security-mode** of PPAR-ID 0 to none.

```
XSCF> setpparparam -p 0 security-mode
PPAR-ID of PPARs that will be affected:0
OpenBoot PROM variable security-mode will be set to none.
Continue? [y|n] :
```

- EXAMPLE 3** Initialize the OpenBoot PROM environment variables of PPAR-ID 0 to the default.

```
XSCF> setpparparam -p 0 set-defaults
PPAR-ID of PPARs that will be affected:0
All OpenBoot PROM variables will be reset to original default values.
Continue? [y|n] :
```

- EXAMPLE 4** Initialize the OpenBoot PROM environment variables of PPAR-ID 1 to the default. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> setpparparam -q -y -p 1 set-defaults
```

- EXAMPLE 5** Set up the boot script of PPAR-ID 0. To rewrite several environment variables, put a line feed after each **setenv** command and include the whole command in double quotes ("").

```
XSCF> setpparparam -p 0 -s bootscript "setenv auto-boot? true
setenv input-device virtual-console
setenv output-device virtual-console"
PPAR-ID of PPARs that will be affected:0
OpenBoot PROM variable bootscript will be changed.
Continue? [y|n] :
```

EXAMPLE 6 Clear the bootscript of PPAR-ID 0.

```
XSCF> setpparparam -p 0 -s bootscript -r
PPAR-ID of PPARS that will be affected:0
OpenBoot PROM variable bootscript will be cleared.
Continue? [y|n]:
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

setpparmode (8), **showpparparam (8)**

NAME	setprivileges - Assigns the user privileges.
SYNOPSIS	setprivileges <i>user</i> [<i>privileges</i>] [<i>pparprivilege @ ppars</i>] setprivileges -h
DESCRIPTION	<p>setprivileges is a command to assign the user privileges to the XSCF user account.</p> <p>It is only the user privileges of XSCF that can be changed by setprivileges. You can assign up to 100 user accounts to one privilege. You can set multiple user privileges for a user account separating them with spaces. For the list of user privileges, see "Operand."</p> <p><i>pparop</i>, <i>pparmgr</i>, and <i>pparamdm</i> privileges are the user privileges which can be specified for each physical partition (PPAR). For details, see "Operand" and Example 1.</p> <p>If no user privilege is specified, setprivileges deletes all privilege data on XSCF of the specified user account. If the reference of the user privileges to Lightweight Directory Access Protocol (LDAP) is enabled, the privilege data of the user account is referred to in LDAP.</p> <p>If none is assigned to the user account, no privilege is given to the target user account regardless of the contents of the privilege data in LDAP.</p>
Privileges	To execute this command, <i>useradm</i> privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.

OPERANDS

The following operands are supported.

pparprivilege@ppars

Specifies pparadm, pparmgr, or pparop privileges for one or more PPARs.

Specify the names of the user privileges which can be assigned to each PPAR in *pparprivilege*. It is specified with *@ppars*. You can specify any of the following.

pparadm

Enables all operations regarding hardware assigned to the PPARs to which privileges are assigned (assignment, assignment cancellation, power supply, etc.). It enables display of the statuses of all hardware assigned to the PPARs to which privileges are given. It enables execution of all operations regarding the PPARs to which privileges are given. It enables display of all statuses of the PPARs to which privileges are given.

pparmgr

Enables restarting, starting, and shutting down the PPARs to which privileges are given. It enables display of the statuses of all hardware assigned to the PPARs to which privileges are given. It enables display of all statuses of the PPARs to which privileges are given.

pparop

Enables display of the statuses of all hardware assigned to the PPARs which have privileges. It enables display of the statuses of all PPARs which have this privilege.

ppars

Specifies one or more PPARs for the appropriate value for *pparprivilege* attaching the @ sign and *ppars* descriptor. To specify PPAR, use it attaching PPAR-ID after the @ sign.

Example: pparadm@3-4

If PPARs are specified by range, specify by separating the beginning and end of the PPARs included in the range by "-" Example: pparadm@3-4

To specify multiple PPARs or PPAR ranges, separate them by commas (,). Overlapping specification of PPARs causes an error.

Example: pparadm@1-2,4

privileges

Specifies the user privileges which affect the entire system. You can specify any of the following.

auditadm	Enables display and setting of all audit statuses and audit trails.
auditop	Enables display of all audit statuses and audit trails.
fieldeng	Enables all operations limited to the field engineers and service engineers.
none	If privileges are set for the user in LDAP, no operation regarding the service processor requiring user privileges can be executed. The administrator can limit access to such operations on the service processor and PPAR by using this privilege.
platadm	Enables execution of the settings of all XSCFs excluding the contents which can be executed by the useradm and auditadm privileges. It enables assignment of hardware to PPAR and cancellation of assignment from PPAR to hardware. It enables operations regarding the power supply of PPAR and XSCF. It enables operations regarding fail-over of XSCF units. It enables display of all statuses of platforms.
platop	Enables display of all statuses of platforms but they cannot be changed.
useradm	Enables creation, deletion, enabling, and disabling of user accounts. It enables changes in user passwords and password policies. It enables changes in user privileges.

user

Specifies a valid user name.

EXAMPLES

EXAMPLE 1 Set the platadm privilege for the user account (JSmith), and the pparadm privilege for PPAR-ID 1 to 4 and 6.

```
XSCF> setprivileges jsmith platadm pparadm@1-4,6,9
```

EXAMPLE 2 Delete all privileges set in the user account (JSmith).

```
XSCF> setprivileges jsmith none
```

EXIT STATUS

The following exit values are returned.

0	Indicates normal end.
>0	Indicates error occurrence.

setprivileges(8)

SEE ALSO | **setpasswordpolicy(8), showuser(8)**

NAME	setremotepwrmgmt - Sets the remote power management function.												
SYNOPSIS	<pre>setremotepwrmgmt -c config [-v] [-u <i>user</i>] [-X <i>proxy</i> [-t <i>proxy_type</i>]] [-y -n] <i>configuration_file</i></pre> <pre>setremotepwrmgmt -c enable [-y -n]</pre> <pre>setremotepwrmgmt -c disable [-y -n]</pre> <pre>setremotepwrmgmt -h</pre>												
DESCRIPTION	<p>setremotepwrmgmt is a command to perform the following settings regarding the remote power management function.</p> <ul style="list-style-type: none"> ■ Constructing the remote power management group ■ Changing the settings of the remote power management group ■ Disabling the remote power management function of the remote power management group ■ Enabling the remote power management function of the remote power management group 												
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>												
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-c config</td><td>Reads the management information file of the remote power management group and constructs or changes the settings of the remote power management group by transferring the settings to the host controller. It is used for initialization, addition, removal, and replacement of the devices whose powers are to be linked.</td></tr> <tr> <td>-c disable</td><td>Disables the remote power management function of all the set remote power management groups. It is used when starting maintenance of the devices whose powers are to be linked.</td></tr> <tr> <td>-c enable</td><td>Enables the remote power management functions of all the set remote power management groups. Used when maintenance of the devices whose powers are to be linked is completed.</td></tr> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-n</td><td>Automatically responds to prompt with "n" (no).</td></tr> <tr> <td>-t proxy_type</td><td>Specifies the proxy type. It is used with the -X option. You can specify any of <code>http</code>, <code>socks4</code>, and <code>socks5</code>. The default is <code>http</code>.</td></tr> </table>	-c config	Reads the management information file of the remote power management group and constructs or changes the settings of the remote power management group by transferring the settings to the host controller. It is used for initialization, addition, removal, and replacement of the devices whose powers are to be linked.	-c disable	Disables the remote power management function of all the set remote power management groups. It is used when starting maintenance of the devices whose powers are to be linked.	-c enable	Enables the remote power management functions of all the set remote power management groups. Used when maintenance of the devices whose powers are to be linked is completed.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).	-t proxy_type	Specifies the proxy type. It is used with the -X option. You can specify any of <code>http</code> , <code>socks4</code> , and <code>socks5</code> . The default is <code>http</code> .
-c config	Reads the management information file of the remote power management group and constructs or changes the settings of the remote power management group by transferring the settings to the host controller. It is used for initialization, addition, removal, and replacement of the devices whose powers are to be linked.												
-c disable	Disables the remote power management function of all the set remote power management groups. It is used when starting maintenance of the devices whose powers are to be linked.												
-c enable	Enables the remote power management functions of all the set remote power management groups. Used when maintenance of the devices whose powers are to be linked is completed.												
-h	Displays the usage. Specifying this option with another option or operand causes an error.												
-n	Automatically responds to prompt with "n" (no).												
-t proxy_type	Specifies the proxy type. It is used with the -X option. You can specify any of <code>http</code> , <code>socks4</code> , and <code>socks5</code> . The default is <code>http</code> .												

<ul style="list-style-type: none"> -u <i>user</i> -v -X <i>proxy</i> -Y 	<p>Specifies your user name when logging in to remote FTP or HTTP server requiring authentication. The command will display a prompt for password entry.</p> <p>Displays detailed information. This option is used to diagnose network and server problems.</p> <p>Specifies the proxy server to use for transfer. If -t <i>proxy_type</i> is not specified together, the default proxy type is http. <i>proxy</i> is specified in the format of <i>servername:port</i>.</p> <p>Automatically responds to prompt with "y" (yes).</p>
---	--

OPERANDS

The following operands are supported.

configuration_file Specifies the URL where the management information file of the remote power management group to use for setting exists.

The following types of format are supported.

`http://server[:port]/path/file`
`https://server[:port]/path/file`
`ftp://server[:port]/path/file`
`file:///media/usb_msд/path/file`

EXTENDED DESCRIPTION

- While `setremotepwrmgmt` is executed, do not execute `setremotepwrmgmt` for the same group ID.
- If the remote power management device (host node) to be added to the remote power management group is registered to another group, delete the management information by using `clearremotepwrmgmt(8)` in advance.
- To execute -c config, -c enable, and -c disable by `setremotepwrmgmt`, set a network of the IPv4 format for all remote power management devices in the target remote power management group and turn on the resident power.
- Set the format of the management information file to CSV. For details on the format of the management information file, see the *Fujitsu M10/PARC M10 Systems System Operation and Administration Guide*.
- It is necessary to create the management information file for each group. If one management information file has multiple group IDs, it causes an error.
- If the password to access the distribution destination of the information is not set in the management information file and the default user is not specified, it is required to enter the password when distributing the information of the remote power management group.
- In the first configuration of the remote power management group, execute `setremotepwrmgmt` in the following procedure.

1. Execute `setremotepwrmgmt -c config` and construct the remote power management group.
2. Execute `setremotepwrmgmt -c enable` and enable the remote power management function of the constructed remote power management group.
- To update a constructed remote power management group, execute `setremotepwrmgmt` in the following procedure.
 1. Execute `setremotepwrmgmt -c disable` and disable the remote power management function of the constructed remote power management group to be updated.
 2. Execute `setremotepwrmgmt -c config` and update the settings of the remote power management group.
 3. Execute `setremotepwrmgmt -c enable` and enable the remote power management function of the updated remote power management group.
- If `-c config` is specified and the target remote power management group has been constructed and the remote power management function is `enable`, it causes an error.
- If `-c enable` or `-c disable` is specified and no remote power management group is constructed, it causes an error.
- When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Construct the remote power management group 1 reading the management information file on the FTP server.

```
XSCF> setremotepwrmgmt -c config ftp://dataserver/data/
rmpmgp.1.conf
Download successful: 29184Byte at 1016.857KB/s
Checking file...
MD5: e619e6dd367c888507427e58cdb8e0a1

The following Remote power management group setting will be applied:
GroupID :01
NodeID NodeType      NodeIdentName          PowerLinkage
Operation
-----
001    Master HOST XXXXXXXXXXXXXXXXXXXXXXXXXX Enable      IPMI
002    PwrLinkBox XXXXXXXXXXXXXXXXXXXXXXXXXX Enable     IPMI
003    Others      XXXXXXXXXXXXXXXXXXXXXXXXXX Enable     IPMI
-----
Continue? [y|n]: y
Enter password for user [xxx] on host [xx.xx.xx.xx]:
Enter password for user [xxx] on host [yy.yy.yy.yy]:
Enter password for user [xxx] on host [zz.zz.zz.zz]:
```

```
:  
The command completed successfully.  
XSCF>
```

EXAMPLE 2 Construct the remote power management group 2 reading the management information file on the USB memory.

```
XSCF> setremoteprwmgmt -c config file:///media/usb_msd/path/  
rpmpgroup.2.conf  
Mounted USB device  
Download successful: 29184Byte at 1016.857KB/s  
Checking file...  
MD5: e619e6dd367c888507427e58cdb8e0a1  
  
The following Remote Power Management Group setting will be applied:  
GroupID :02  
NodeID NodeType      NodeIdentName          PowerLinkage  
Operation  
-----  
001   Master HOST XXXXXXXXXXXXXXXXXXXXXXXXXX Enable           IPMI  
002   I/O      XXXXXXXXXXXXXXXXXXXXXXXXXX Enable           IPMI  
-----  
-----  
Continue? [y|n]: y  
Enter password for user [xxx] on host [xx.xx.xx.xx]:  
Enter password for user [xxx] on host [yy.yy.yy.yy]:  
Enter password for user [xxx] on host [zz.zz.zz.zz]:  
:  
The command completed successfully.  
XSCF>
```

EXAMPLE 3 Enable the remote power management function.

```
XSCF> setremoteprwmgmt -c enable  
Remote power management is enabled. Continue? [y|n]: y  
The command completed successfully.  
XSCF>
```

EXAMPLE 4 Disable the remote power management function.

```
XSCF> setremoteprwmgmt -c disable  
Remote power management is disabled. Continue? [y|n]: y  
The command completed successfully.  
XSCF>
```

EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	clearremotepwrmgmt(8) , getremotepwrmgmt(8) , showremotepwrmgmt(8)

NAME	setroute - Sets the routing information of the XSCF network interface.
SYNOPSIS	setroute -c {add del} -n <i>address</i> [-m <i>address</i>] [-g <i>address</i>] <i>interface</i> setroute -h
DESCRIPTION	setroute is a command to set the routing information of the XSCF network interface. Up to eight sets of the routing information can be registered per network interface. If the number exceeds eight, it causes an error.
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. -c {add del} Specifies the function for the routing information. You can specify either of the following. Omitting this causes an error. add Adds the routing information. del Deletes the routing information. -g <i>address</i> Specifies the gateway address used for routing. <i>address</i> is specified in standard format using four sets of integers separated by periods (.). For example, for <i>xxx.xxx.xxx.xxx</i> , an integer from 0 to 255 is specified for each <i>xxx</i> . This can be specified using zero suppression. You cannot specify a loop-back address (127.0.0.0/8), network address, or broadcast address.

-h	Displays the usage. Specifying this option with another option or operand causes an error.
-m <i>address</i>	<p>Specifies the netmask to be the destination of the routing information. <i>address</i> is specified in standard format using four sets of integers separated by periods (.). For example, for <i>xxx.xxx.xxx.xxx</i>, an integer from 0 to 255 is specified for each <i>xxx</i>. This can be specified using zero suppression. If the netmask is specified, the network applying the netmask to the address specified by -n is set as the target of routing.</p> <p>If -m option is omitted or 0.0.0.0 is specified for the netmask when the destination IP address is other than 0.0.0.0, the following netmasks are set depending on the address specified by the -n option.</p> <ul style="list-style-type: none"> ■ If the specified address is Class A <ul style="list-style-type: none"> If the host part of the address (lower 24 bits) is 0 (Example: 20.0.0.0) <ul style="list-style-type: none"> A netmask value of 255.0.0.0 is set. If the host part of the address (lower 24 bits) is other than 0 (Example: 20.18.108.10) <ul style="list-style-type: none"> A netmask value of 255.255.255.255 is set. ■ If the specified address is Class B <ul style="list-style-type: none"> If the host part of the address (lower 16 bits) is 0 (Example: 136.18.0.0) <ul style="list-style-type: none"> A netmask value of 255.255.0.0 is set. If the host part of the address (lower 16 bits) is other than 0 (Example: 136.18.108.10) <ul style="list-style-type: none"> A netmask value of 255.255.255.255 is set. ■ If the specified address is Class C <ul style="list-style-type: none"> If the host part of the address (lower 8 bits) is 0 (Example: 200.18.108.0) <ul style="list-style-type: none"> A netmask value of 255.255.255.0 is set. If the host part of the address (lower 8 bits) is other than 0 (Example: 200.18.108.10) <ul style="list-style-type: none"> A netmask value of 255.255.255.255 is set. <p>If 0.0.0.0 is specified by the -n option, specify 0.0.0.0 for the -m option or omit the -m option.</p>

	-n address	Specifies the IP address to be the destination of the routing information. <i>address</i> is specified in standard format using four sets of integers separated by periods (.). For example, for xxx.xxx.xxx.xxx, an integer from 0 to 255 is specified for each <i>xxx</i> . This can be specified using zero suppression. If 0.0.0.0 is specified in <i>address</i> , the default routing information is set. However, Class D and E address (224.0.0.0 to 255.255.255.255) cannot be specified.																								
OPERANDS	The following operands are supported.																									
	<i>interface</i>	Specifies the network interface to be set. You can specify any of the following. <ul style="list-style-type: none"> ■ For SPARC M10-4S (with crossbar box) <table> <tr><td>xbbox#80-lan#0</td><td>XBBOX#80-LAN#0</td></tr> <tr><td>xbbox#80-lan#1</td><td>XBBOX#80-LAN#1</td></tr> <tr><td>xbbox#81-lan#0</td><td>XBBOX#81-LAN#0</td></tr> <tr><td>xbbox#81-lan#1</td><td>XBBOX#81-LAN#1</td></tr> </table> ■ For SPARC M10-4S (without crossbar box) <table> <tr><td>bb#00-lan#0</td><td>BB#00-LAN#0</td></tr> <tr><td>bb#00-lan#1</td><td>BB#00-LAN#1</td></tr> <tr><td>bb#01-lan#0</td><td>BB#01-LAN#0</td></tr> <tr><td>bb#01-lan#1</td><td>BB#01-LAN#1</td></tr> </table> ■ For SPARC M10-1/M10-4 <table> <tr><td>bb#00-lan#0</td><td>BB#00-LAN#0</td></tr> <tr><td>lan#0</td><td>Abbreviated form of bb#00-lan#0</td></tr> <tr><td>bb#01-lan#0</td><td>BB#00-LAN#1</td></tr> <tr><td>lan#1</td><td>Abbreviated form of bb#00-lan#1</td></tr> </table> 	xbbox#80-lan#0	XBBOX#80-LAN#0	xbbox#80-lan#1	XBBOX#80-LAN#1	xbbox#81-lan#0	XBBOX#81-LAN#0	xbbox#81-lan#1	XBBOX#81-LAN#1	bb#00-lan#0	BB#00-LAN#0	bb#00-lan#1	BB#00-LAN#1	bb#01-lan#0	BB#01-LAN#0	bb#01-lan#1	BB#01-LAN#1	bb#00-lan#0	BB#00-LAN#0	lan#0	Abbreviated form of bb#00-lan#0	bb#01-lan#0	BB#00-LAN#1	lan#1	Abbreviated form of bb#00-lan#1
xbbox#80-lan#0	XBBOX#80-LAN#0																									
xbbox#80-lan#1	XBBOX#80-LAN#1																									
xbbox#81-lan#0	XBBOX#81-LAN#0																									
xbbox#81-lan#1	XBBOX#81-LAN#1																									
bb#00-lan#0	BB#00-LAN#0																									
bb#00-lan#1	BB#00-LAN#1																									
bb#01-lan#0	BB#01-LAN#0																									
bb#01-lan#1	BB#01-LAN#1																									
bb#00-lan#0	BB#00-LAN#0																									
lan#0	Abbreviated form of bb#00-lan#0																									
bb#01-lan#0	BB#00-LAN#1																									
lan#1	Abbreviated form of bb#00-lan#1																									

EXTENDED DESCRIPTION

- In the following cases, *setroute* causes an error.
 - Case that more than 8 routings are to be set
 - Case that the netmask specified by -m *addr* does not correspond to any of the following
 - Only the most significant bit is 1.
 - 1 from the most significant bit is repeated.
 - All bits are 0.

- Case that the routing information is set in the take-over IP (lan#0 or lan#1) for other than SPARC M10-1/M10-4
- Only the routing information added by setroute can be deleted.
- If the gateway addresses of the routing information have any addresses not included in each XSCF-LAN network, executing applynetwork(8) causes an error.
- If the subnets of the IP address to be the destination of the routing information and subnet of the SSCP link are overlapping, executing applynetwork(8) causes an error.
- To reflect the set routing information in XSCF, execute applynetwork(8). Reflect it in XSCF by applynetwork(8), use rebootxscf(8) to reset XSCF and then setting is completed.
- You can confirm the routing information of the XSCF network interface set currently by using showroute(8).

EXAMPLES

EXAMPLE 1 Add the routing with the destination and netmask set to 192.168.1.0 and 255.255.255.0, respectively, to XBBOX#80-LAN#0.

```
XSCF> setroute -c add -n 192.168.1.0 -m 255.255.255.0 xbbox#80-lan#0
```

EXAMPLE 2 Add the routing with the destination and netmask set to 192.168.1.0 and 255.255.255.0, respectively, to BB#00-LAN#0 of SPARC M10-1/M10-4.

```
XSCF> setroute -c add -n 192.168.1.0 -m 255.255.255.0 lan#0
```

EXAMPLE 3 Add the routing with the destination and gateway set to 192.168.1.0 and 192.168.1.1, respectively, to XBBOX #80-LAN#1.

```
XSCF> setroute -c add -n 192.168.1.0 -g 192.168.1.1 xbbox#80-lan#1
```

EXAMPLE 4 Add the routing with the destination set to 192.168.1.0 and the default netmask (255.255.255.0) to XBBOX #80-LAN#1.

```
XSCF> setroute -c add -n 192.168.1.0 -m 255.255.255.0 xbbox#80-lan#1
```

EXAMPLE 5 Delete the routing with the destination set to 192.168.1.0 and the default netmask (255.255.255.0) to XBBOX #80-LAN#1.

```
XSCF> setroute -c del -n 192.168.1.0 -m 255.255.255.0 xbbox#80-lan#1
```

EXAMPLE 6 Add the routing with the destination set to 192.168.1.4 to BB#00-LAN#1.

```
XSCF> setroute -c add -n 192.168.1.4 bb#00-lan#1
```

EXAMPLE 7 Delete the routing with the destination set to 192.168.1.4 to BB#00-LAN#1.

```
XSCF> setroute -c del -n 192.168.1.4 bb#00-lan#1
```

EXAMPLE 8 Add the routing with the gateway set to 192.168.10.1 by default to BB#00-LAN#1.

```
XSCF> setroute -c add -n 0.0.0.0 -g 192.168.10.1 bb#00-lan#1
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

applynetwork (8), **rebootxscf (8)**, **setsscp (8)**, **showroute (8)**

`setroute(8)`

NAME	setservicetag - Enables or disables the servicetag agents.
SYNOPSIS	setservicetag -c {enable disable} [-v] setservicetag -h
DESCRIPTION	setservicetag is a command to enable or disable the servicetag agents. The new settings take effect after the XSCF is reset by using rebootxscf(8) . Servicetags provide information -- platform, type, chassis serial number, etc, on platforms that support it.
Privileges	To execute this command, platadm privilege is required. Refer to setprivileges(8) for more information.
OPTIONS	The following options are supported: -c enable Enables the servicetag agents. -c disable Disables the servicetag agents. -h Displays usage statement. When used with other options or operands, an error occurs. -v Specifies verbose output.
EXAMPLES	EXAMPLE 1 Enabling the servicetag agents. <pre>XSCF> setservicetag -c enable Settings will take effect the next time the XSCF is rebooted.</pre> EXAMPLE 2 Disabling the servicetag agents. <pre>XSCF> setservicetag -c disable Settings will take effect the next time the XSCF is rebooted.</pre>
EXIT STATUS	The following exit values are returned: 0 Successful completion. >0 An error occurred.
SEE ALSO	showservicetag (8)

NAME	setsmt - Sets the Simple Mail Transfer Protocol (SMTP) service.
SYNOPSIS	setsmt [-v] setsmt [-s <i>variable= value</i>]... setsmt -h
DESCRIPTION	setsmt is a command to set the SMTP service. If this is used without specifying any options, it is required to enter the SMTP e-mail server name to be used, port name to be used for e-mail for transmission, and Reply-To address. Confirm that the e-mail address specified here is valid. If the -s option is specified, you can set up the SMTP setting value non-interactively. Setting the e-mail server and port by using setsmt enables transmission of test mail setting e-mail report by setemailreport(8) .
Privileges	To execute this command, platadm privilege is required. For details on user privileges, see setprivileges(8) .

OPTIONS	<p>The following options are supported.</p> <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p> <p>-s <i>variable=value</i> Sets SMTP. You can specify either of the following for <i>variable</i>.</p> <ul style="list-style-type: none"> mailserver Specifies the IP address or server name. If a server name is specified, it is necessary to enable name-resolution. port Specifies the port address for reply. auth Specifies the authentication method. The valid values are below. <code>none, pop, smtp-auth</code> user Specifies the user name to be the authentication information for the SMP mail server. password Specifies the password to be the authentication information for the SMP mail server. replyaddress Specifies the only one address for reply. For the e-mail addresses that are used with the setsmt, see EXTENDED DESCRIPTION. popserver Specifies an IP address or a server name for the popserver. Server name, if specified, must be resolvable. <p>-v Displays detailed information.</p>
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ You can confirm the information of SMTP set currently by using showsmt(8). ■ The e-mail addresses that are used with the setsmt should be in the following format, which is based on "3.4.1. Addr-Spec Specification" of RFC5322. <ul style="list-style-type: none"> ■ The local-part and the domain should be combined by the "@" character in this format: local-part@domain, the local-part should not contain more than 64 characters, the domain should not contain more than 255 characters and the mail address as a whole should not contain more than 256 characters ■ The following character strings can be used in the local-part: <ul style="list-style-type: none"> - abcdefghijklmnopqrstuvwxyz

- ABCDEFGHIJKLMNOPQRSTUVWXYZ
- 0123456789
- !#\$%&'^-/?^_`{|}~.

The dot (.) cannot be used as the first or last character of the local-part. Moreover, two or more of this character cannot be used consecutively.

- The domain should be specified as a combination of its constituent labels, added by a dot (.), in this format: label1.label2.
- The dot (.) cannot be used as the first or last character of the domain part. Moreover, two or more of this character cannot be used consecutively.
- The labels, which are part of domains, may contain the following characters:
 - abcdefghijklmnopqrstuvwxyz
 - ABCDEFGHIJKLMNOPQRSTUVWXYZ
 - 0123456789
 - .-
- The hyphen (-) cannot be used as the first character of a label.
- Only one address for reply can be specified. The multiple addresses cannot be specified.

Note – Depending on the mail server, the above symbols may not be used.

Note – The following formats as defined in RFC5322 are not supported:

- 3.2.1. quoted-pairs, as defined in "Quoted Characters".
- 3.2.2. CFWS, FWS, comment, as defined in "Folding White Space and Comments".
- 3.2.4. quoted-strings, as defined in "Quoted Strings".
- 3.4.1. domain-literal, as defined in "Addr-Spec Specification".
4. The obsolete formats described in "Obsolete Syntax".

EXAMPLES

EXAMPLE 1 Set up the mail server without specifying the authentication information in the non-interactive mode.

```
XSCF> setsmt -s mailserver=10.4.1.1 -s auth=none
```

EXAMPLE 2 Set up the authentication information in the non-interactive mode.

```
XSCF> setsmt -s auth=pop -s user=jsmith -s password=*****
```

EXAMPLE 3 Set up the SMTP authentication information in the interactive mode.

```
XSCF> setsmt
Mail Server [10.4.1.1]:
Port [25]:
Authentication Mechanism [none]: smtp-auth
```

```
User Name []: jsmith
Password []: *****
Reply Address [useradm@company.com] :
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **setemailreport(8), setnameserver(8), showsmtplib(8)**

NAME	setsnmp - Manages the SNMP agent.
SYNOPSIS	<pre>setsnmp enable [mib_name] setsnmp disable [mib_name] setsnmp addtraphost -t type -s community-string [-p trap-port] traphost setsnmp remtraphost -t type [-s community-string] [-p trap-port] traphost setsnmp addv3traphost -u username -x authentication-protocol {-n engine_id -i} [-x encryption-protocol] [-a authentication-password] [-e encryption-password] [-p trap-port] traphost setsnmp remv3traphost -u username [-p trap-port] traphost setsnmp enablelev1v2c read-only-community-string setsnmp disablelev1v2c setsnmp [-l system-location] [-c system-contact] [-d system-description] [-p agent-port] setsnmp default setsnmp -h</pre>
DESCRIPTION	setsnmp is a command to not only define the setting value of the SNMP agent but also enable or disable the SNMP agent.
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -c system-contact Specifies the contact of the system of the agent. -d system-description Specifies the explanation of the system of the agent. -h Displays the usage. Specifying this option with another option or operand causes an error. -l system-location Specifies the location of the system of the agent. -p agent-port Specifies the listen port of the agent. The default is 161. -s community-string Works much like the password controlling access to the SNMP v1 and v2 agents. It is an interceptable plain text character string. <code>addv3traphost</code> is used to encrypt and hide the password.

OPERANDS

The following operands are supported.

addtraphost Enables transmission of the selected type of trap from the SNMP agent to the target host. If *trap-port* is not specified, the default is 162. Community string is required.

addtraphost has the following options and operands.

-p *trap-port*

Specifies the ID of trap port. The default is 162.

-s *community-string*

Works much like the password controlling access to the SNMP v1 and v2 agents. It is an interceptable plain text character string. **addv3traphost** is used to encrypt and hide the password.

-t *type*

Specifies the type of trap. The valid types of trap are below.

- **v1** = The agent sends the SNMPv1 trap.
- **v2** = The agent sends the SNMPv2 trap.
- **inform** = The agent sends information notification.

traphost

Specifies the traphost name or the IP address.

addv3traphost Enables the transmission or notification of the SNMPv3 trap from the SNMP agent to the target host. It is necessary to select the authentication protocol. The valid protocols are below.

MD5 = Uses the Message Digest 5 (MD5) algorithm for authentication.

SHA = Uses Secure Hash Algorithm (SHA) for authentication.

The encryption protocol is to be selected. The valid protocols are as follows. If none of these protocols are specified, the Data Encryption Standard (DES) protocol is used.

DES = Use Data Encryption Standard (DES) for encryption.

AES= Use Advanced Encryption Standard (AES) for encryption.

If no password option is used, it is required to enter the password. The password is read but not echoed to the screen. addv3traphost has the following options and operands.

-a *authentication-password*

Sets the authentication password. It needs to have eight or more characters.

-e *encryption-password*

Sets the encryption password.

-i

Requests the receiving host for acknowledgment.

-n *engine_id*

Sets the ID of the local agent to send trap. You can specify the engine ID of the local SNMP agent, but even if not specified, this needs to match the engine ID expected by the receiving host. It needs to begin with "0x" and be composed of an even number of hex characters. If not, it causes an error.

-p *trap-port*

Specifies the ID of trap port. The default is 162.

-r *authentication-protocol*

Sets the authentication protocol.

-u *username*

Specifies the user name.

-x *encryption-protocol*

Specifies the encryption protocol.

traphost

Specifies the traphost name or the IP address.

default	Shuts down the SNMP agent and restores the settings of SNMP to the default. After using this operand, it is necessary to reconfigure SNMP before restarting the SNMP agent.
disable	<p>Shuts down the SNMP agent, if used alone.</p> <p>If it is used with the value ALL of <i>mib_name</i> of the option, the SNMP agent is shut down.</p> <p>If it is used with other than the value ALL of <i>mib_name</i> of the option, the support for the target MIB module is deleted. If the support for another MIB module is maintained, the SNMP agent remains enabled. If the supports for both MIB modules are deleted, the SNMP agent is disabled and shut down. Just one <i>mib_name</i> can be specified at a time.</p>
<i>mib_name</i>	This is the name of the MIB module to be disabled. The valid MIB modules are below.
	<ul style="list-style-type: none"> ■ SP_MIB = XSCF extension MIB ■ ALL = All MIB modules in this list
disablelev1v2c	Disables the communication of the SNMP agent using SNMPv1 or SNMPv2c. SNMP communication using these versions are not secure.
enable	<p>To use it alone, enable the SNMP agent to support all MIB modules.</p> <p>If it is used with the value ALL of <i>mib_name</i> of the option, the SNMP agent supporting all MIB modules is activated.</p> <p>If it is used with other than the value ALL of <i>mib_name</i> of the option, the support for the target MIB module is added and the SNMP agent is enabled, if necessary. Just one <i>mib_name</i> can be specified at a time.</p>
<i>mib_name</i>	This is the name of the MIB module to be enabled. The MIB modules which can be specified are below.
	<ul style="list-style-type: none"> ■ SP_MIB = XSCF extension MIB ■ ALL = All MIB modules in this list

	enablev1v2c	Enables the communication of the SNMP agent using SNMPv1 or SNMPv2c. SNMP communication using these versions are not secure. Therefore, the agent executes SNMPv3 by default. This agent is read only. The only community string requested is read only.
	remtraphost	Disables transmission of the selected type of trap from the SNMP agent to the target host. remtraphost has the following options and operands.
	-p trap-port	Specify the trap port ID. If omitted, it is considered as if all the trap ports have been specified.
	-s community-string	Specify the community string. If omitted, it is considered as if all the community strings have been specified.
	-t type	Specifies the type of trap. The valid types of trap are below.
		<ul style="list-style-type: none"> ■ v1 = The agent sends the SNMPv1 trap. ■ v2 = The agent sends the SNMPv2 trap. ■ inform = The agent sends information notification.
	<i>traphost</i>	Specifies the traphost name or the IP address.
	remv3traphost	Disables the transmission of the SNMPv3 trap from the SNMP agent to the target host. remv3traphost has the following options and operands.
	-u username	Specifies the user name.
	-p trap-port	Specify the trap port ID. If omitted, it is considered as if all the trap ports have been specified.
	<i>traphost</i>	Specifies the traphost name or the IP address.
EXTENDED DESCRIPTION	More trap hosts cannot be registered when the total number of characters in the entries, which are registered by executing the following three commands, exceed 8000.	
	<ul style="list-style-type: none"> ■ Registered trap hosts by setsnmp(8) ■ Registered users by setsnmpusm(8) ■ Registered groups, views and accesses by setsnmpvacm(8) 	

The present SNMP agent setting information can be confirmed by showsnmp(8), showsnmpusm(8) and showsnmpvacm(8).

EXAMPLES

EXAMPLE 1 Set the system information.

```
XSCF> setsnmp -l sandiego -c username@company.com -d ff1
```

EXAMPLE 2 Set the SNMPv3 trap host using the password option.

```
XSCF> setsnmp addv3traphost -u jsmith -n 0x### -r SHA -a xxxxxxxx  
-e yyyyyyyy fiche
```

EXAMPLE 3 Set the SNMPv3 trap host without the password option.

```
XSCF> setsnmp addv3traphost -u bob -i -r SHA fiche  
Enter the trap authentication passphrase:  
Enter the trap encryption passphrase:
```

EXAMPLE 4 Enable the SNMP agent.

```
XSCF> setsnmp enable SP_MIB
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

showsnmp (8)

NAME	setsnmpusm - Sets the User-based Security Model (USM) of the SNMPv3 agent.
SYNOPSIS	setsnmpusm create -a <i>authentication_protocol</i> [-x <i>encryption-protocol</i>] [-p <i>authentication_password</i>] [-e <i>encryprtion_password</i>] <i>user</i> setsnmpusm delete <i>user</i> setsnmpusm clone -u <i>clone_user</i> <i>user</i> setsnmpusm passwd [-c {auth encrypt}] [-o <i>old_password</i>] [-n <i>new_password</i>] <i>user</i> setsnmpusm -h
DESCRIPTION	setsnmpusm is a command to set the USM of the SNMP agent.
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
OPERANDS	The following operands are supported. clone The specified user comes to be recognized by the agent with the same settings as the specified <i>clone_user</i> in the subsequent SNMP communication. -u <i>clone_user</i> Specifies the user name to create clone. <i>user</i> Specifies another user name to create a clone of <i>clone_user</i> .

	create	Creates the user to be recognized by the agent with the specified settings in the subsequent SNMP communication. If it is used without specifying the -e option or -p option, the prompt to require the password is displayed and the password is read, but it is not echoed to the screen. In the setsnmpusm , either Advanced Data Encryption (AES) or Data Encryption Standard (DES) can be used as encryption protocols to be used in SNMP connections. When none of these protocols are specified, DES is used by default. Moreover, either Message Digest 5 (MD5) algorithm or Secure Hash Algorithm (SHA) can be used as authentication protocols in such connections.
	<i>user</i>	Specifies the user name.
	-a <i>authentication_protocol</i>	Specifies the authentication protocol. You can specify either of MD5 or SHA.
	-e <i>encryption_password</i>	Specifies the encryption password. Specify 8 or more characters.
	-p <i>authentication_password</i>	Specifies the authentication password. Specify 8 or more characters.
	-x <i>encryption_protocol</i>	Setup the encryption protocol. Either DES or AES can be specified. When none is specified, DES is used.
	delete	Makes the specified user unrecognized by the agent in the subsequent SNMP communication.
	<i>user</i>	Specifies the user name.

	<table border="0" style="width: 100%;"> <tr> <td style="vertical-align: top; width: 30%; padding-right: 10px;"> <p>passwd</p> </td><td> <p>Changes the password of the specified user. Either authentication password or encryption password can be changed. If the -c option is not specified, both are applicable. If the -c option is not specified, the authentication password needs to match the encryption password. If not, it causes an error. If no option is specified, the prompt to require the password is displayed. The password is read but not displayed on the screen.</p> <p>-c auth encrypt</p> <p>Specifies the password to be changed. For the authentication password and encryption password, specify auth and encrypt, respectively.</p> <p>-n new_password</p> <p>Specifies a new password. Specify 8 or more characters.</p> <p>-o old_password</p> <p>Specifies an old password.</p> <p><i>user</i></p> <p>Specifies the user name.</p> </td></tr> </table>	<p>passwd</p>	<p>Changes the password of the specified user. Either authentication password or encryption password can be changed. If the -c option is not specified, both are applicable. If the -c option is not specified, the authentication password needs to match the encryption password. If not, it causes an error. If no option is specified, the prompt to require the password is displayed. The password is read but not displayed on the screen.</p> <p>-c auth encrypt</p> <p>Specifies the password to be changed. For the authentication password and encryption password, specify auth and encrypt, respectively.</p> <p>-n new_password</p> <p>Specifies a new password. Specify 8 or more characters.</p> <p>-o old_password</p> <p>Specifies an old password.</p> <p><i>user</i></p> <p>Specifies the user name.</p>
<p>passwd</p>	<p>Changes the password of the specified user. Either authentication password or encryption password can be changed. If the -c option is not specified, both are applicable. If the -c option is not specified, the authentication password needs to match the encryption password. If not, it causes an error. If no option is specified, the prompt to require the password is displayed. The password is read but not displayed on the screen.</p> <p>-c auth encrypt</p> <p>Specifies the password to be changed. For the authentication password and encryption password, specify auth and encrypt, respectively.</p> <p>-n new_password</p> <p>Specifies a new password. Specify 8 or more characters.</p> <p>-o old_password</p> <p>Specifies an old password.</p> <p><i>user</i></p> <p>Specifies the user name.</p>		
EXTENDED DESCRIPTION	<p>More users cannot be registered when the total number of characters in the entries, which are registered by executing the following three commands, exceed 8000.</p> <ul style="list-style-type: none"> ■ Registered trap hosts by setsnmp(8) ■ Registered users by setsnmpusm(8) ■ Registered groups, views and accesses by setsnmpvacm(8) 		
EXAMPLES	<p>EXAMPLE 1 Add a user specifying the password.</p> <pre>XSCF> setsnmpusm create -a SHA -p xxxxxxxx -e yyyyyyyy jsmith</pre> <p>EXAMPLE 2 Add a user without specifying the password.</p> <pre>XSCF> setsnmpusm create -a SHA bob Enter the user authentication passphrase: Enter the user encryption passphrase:</pre> <p>EXAMPLE 3 Create a clone of the user.</p> <pre>XSCF> setsnmpusm clone -u sue joe</pre> <p>EXAMPLE 4 Delete a user.</p> <pre>XSCF> setsnmpusm delete joe</pre>		

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO	showsntp (8)
-----------------	---------------------

NAME	setsnmpvacm - Sets the View-based Access Control Model (VACM) settings of the SNMPv3 agent.												
SYNOPSIS	<pre>setsnmpvacm creategroup -u <i>username</i> <i>groupname</i> setsnmpvacm deletegroup -u <i>username</i> <i>groupname</i> setsnmpvacm createview -s <i>OID_subtree</i> [-e] [-m <i>OID_Mask</i>] <i>viewname</i> setsnmpvacm deleteview -s <i>OID_subtree</i> <i>viewname</i> setsnmpvacm createaccess -r <i>read_viewname</i> <i>groupname</i> setsnmpvacm deleteaccess <i>groupname</i> setsnmpvacm -h</pre>												
DESCRIPTION	<p>setsnmpvacm is a command to set the VACM of the SNMP agent.</p> <p>To execute this command, the basic knowledge of SNMP is required.</p>												
Privileges	<p>To execute this command, <code>platadm</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>												
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. 												
OPERANDS	<p>The following operands are supported.</p> <table> <tr> <td><code>createaccess</code></td> <td>Sets access to the MIB view of the specified group.</td> </tr> <tr> <td> <i>-r read_viewname</i></td> <td>Specifies the SNMP agent view.</td> </tr> <tr> <td> <i>groupname</i></td> <td>Specifies a valid group name.</td> </tr> <tr> <td><code>creategroup</code></td> <td>Sets up the view access of the group of the specified user.</td> </tr> <tr> <td> <i>-u username</i></td> <td>Specifies a valid user name.</td> </tr> <tr> <td> <i>groupname</i></td> <td>Specifies a valid group name.</td> </tr> </table>	<code>createaccess</code>	Sets access to the MIB view of the specified group.	<i>-r read_viewname</i>	Specifies the SNMP agent view.	<i>groupname</i>	Specifies a valid group name.	<code>creategroup</code>	Sets up the view access of the group of the specified user.	<i>-u username</i>	Specifies a valid user name.	<i>groupname</i>	Specifies a valid group name.
<code>createaccess</code>	Sets access to the MIB view of the specified group.												
<i>-r read_viewname</i>	Specifies the SNMP agent view.												
<i>groupname</i>	Specifies a valid group name.												
<code>creategroup</code>	Sets up the view access of the group of the specified user.												
<i>-u username</i>	Specifies a valid user name.												
<i>groupname</i>	Specifies a valid group name.												

	createview	Sets up the view of the exported MIB information regarding the SNMP agent. The view access to this agent is read only. The view is identified by the MIB OID subtree and you can limit a specific part of the subtree using the OID mask.
	-e	Specifies the view to be excluded. The default is the view to be included.
	-m <i>OID_Mask</i>	Specifies a valid OID subtree mask. By default, the mask is ff (entire subtree).
	-s <i>OID_subtree</i>	Specifies the MIB OID subtree. In the entire MIB tree, the value begins with .1.
	<i>viewname</i>	Specifies a valid view name.
	deleteaccess	Deletes the access entry.
	<i>groupname</i>	Specifies a valid group name.
	deletegroup	Deletes a group.
	-u <i>username</i>	Specifies a valid user name.
	<i>groupname</i>	Specifies a valid group name.
	deleteview	Deletes a view.
	-s <i>OID_subtree</i>	Specifies the MIB OID subtree. In the entire MIB tree, the value begins with .1.
	<i>viewname</i>	Specifies a valid view name.

EXTENDED DESCRIPTION

More groups, views or accesses cannot be registered when the total number of characters in the entries, which are registered by executing the following three commands, exceed 8000.

- Registered trap hosts by setsnmp(8)
- Registered users by setsnmpusm(8)
- Registered groups, views and accesses by setsnmpvacm(8)

The present SNMP agent setting information can be confirmed by showsnmp(8), showsnmpusm(8) and showsnmpvacm(8).

EXAMPLES

EXAMPLE 1 Create a group of view access.

```
XSCF> setsnmpvacm creategroup -u jsmith admin
```

EXAMPLE 2 Create a view of the entire MIB.

```
XSCF> setsnmpvacm createview -s .1 all_view
```

EXAMPLE 3 Create a view excluding the subtree.

```
XSCF> setsnmpvacm createview -e -s .1.3.6.1.2.1.1 -m fe excl_view
```

EXAMPLE 4 Create access to the MIB view.

```
XSCF> setsnmpvacm createaccess -r all admin
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO [showsnpvacm \(8\)](#)

NAME	setsscp - Assigns the IP address of the SP to SP communication protocol (SSCP).
SYNOPSIS	<pre>setsscp setsscp [-x <i>xbbox_num</i>] [-n <i>bb_num</i>] -i <i>address</i> [[-m <i>netmask</i>] -N <i>network_id</i>] setsscp -b <i>bb_id</i> -i <i>address</i> -N <i>network_id</i> setsscp -c default setsscp -r -b <i>bb_id</i> [-N <i>network_id</i>] setsscp -h</pre>
DESCRIPTION	<p>setsscp is a command to assign an IP address to an SSCP link.</p> <p>setsscp is designed to be used only for the purpose of the initial setting. When executing this command, do not turn on the power of the physical partition (PPAR).</p> <p>For SPARC M10-4S (without crossbar boxes), there are three networks of SSCP links as shown in the following.</p> <ul style="list-style-type: none"> ■ Network between BB#00 and each SPARC M10-4S chassis (Network ID 0) ■ Network between BB#01 and each SPARC M10-4S chassis (Network ID 1) ■ Network between BB#00 and BB#01 (Network ID 2) <p>For SPARC M10-4S (with crossbar boxes), there are five networks as shown in the following.</p> <ul style="list-style-type: none"> ■ Network between XBBOX#80 and each SPARC M10-4S chassis (Network ID 0) ■ Network between XBBOX#81 and each SPARC M10-4S chassis (Network ID 1) ■ Network between XBBOX#80 and each crossbar box (Network ID 2) ■ Network between XBBOX#81 and each crossbar box (Network ID 3) ■ Network between XBBOX#80 and XBBOX#81 (Network ID 4) <p>Note – To use the specified IP address after changing the IP address of SSCP after using setsscp, it is necessary to execute applynetwork(8) and rebootxscf(8). For other than SPARC M10-1/M10-4, it is also necessary to set the IP address of the SSCP link for the crossbar box or SPARC M10-4S composing the system.</p> <p>setsscp cannot be used for SPARC M10-1/M10-4.</p>
Privileges	<p>To execute this command, platadm or fieldeng privilege is required.</p> <p>For details on user privileges, see setprivileges(8).</p>

OPTIONS

The following options are supported.

- b *bb_id* Specifies the target BB-ID. For SPARC M10-4S (without crossbar boxes), you can specify an integer from 0 to 3. For SPARC M10-4S (with crossbar boxes), you can specify an integer from 0 to 15 as SPARC M10-4S, and 80 to 83 as crossbar box, respectively. It is specified by combination of the -i *address* and -N options or with the -r option.
- c *default* Restores the entire SSCP links to the default.
- h Displays the usage. Specifying this option with another option or operand causes an error.
- i *address* Specifies the IP address by dotted decimal notation of IPv4. Specifies four sets of integers from 0 to 255 placing periods (.) between them. However, Class D and E address (224.0.0.0 to 255.255.255.255) cannot be specified. The integer can be specified using zero suppression.
 - To specify this with the -m *netmask*, specify the network addresses of all SSCP links in the system.
 - To specify this with -b *bb_id*, specify the IP addresses unique to individual SPARC M10-4S or crossbar boxes in each network used in SSCP.

-m netmask	<p>Specifies the netmask addresses of all SSCP links in the system. It is specified with the -i address and -N options.</p> <p>Specifies four sets of integers from 0 to 255 for netmask placing periods (.) between them. The integer can be specified using zero suppression.</p> <p>If omitted, the following netmasks are set.</p> <ul style="list-style-type: none">■ For SPARC M10-4S (without crossbar box)<ul style="list-style-type: none">■ If the network ID specified by -N is 0 or 1 A netmask value of 255.255.255.248 is set.■ If the network ID specified by -N is 2 A netmask value of 255.255.255.252 is set.■ For SPARC M10-4S (with crossbar box)<ul style="list-style-type: none">■ If the network ID specified by -N is 0 or 1 A netmask value of 255.255.255.224 is set.■ If the network ID specified by -N is 2 or 3 A netmask value of 255.255.255.248 is set.■ If the network ID specified by -N is 4 A netmask value of 255.255.255.252 is set.
-n bb_num	<p>If -N is not specified, the specified netmask is automatically divided by the above-mentioned netmasks and assigned to each network in order.</p> <p>Specifies the number of SPARC M10-4S to be set. SPARC M10-4S (without crossbar box), you can specify a figure from 1 to 4. If not specified, the maximum value which can be specified is specified. For SPARC M10-4S (with crossbar box), you can specify a figure from 1 to 16. If not specified, 16 is specified.</p>

-N <i>network_id</i>	Specifies the ID of the SSCP link network subject to setting. For <i>network_id</i> , specify a figure from 0 to 2 and 0 to 4 in the case of SPARC M10-4S (without crossbar box) and SPARC M10-4S (with crossbar box), respectively. If omitted, all networks are specified. If the -b option is specified without the -r option, it cannot be omitted.
-r	It is used with -b <i>bb_id</i> , and deletes the IP address of the specified SPARC M10-4S or crossbar box.
-x <i>xbbox_num</i>	Specifies the number of crossbar boxes to be set. This cannot be specified for SPARC M10-4S (without crossbar box). For SPARC M10-4S (with crossbar box), you can specify 1, 2, or 4. If not specified, the maximum value which can be specified is specified.

EXTENDED DESCRIPTION

- If `setsscp` has never been executed, the default value is set as the IP address of the SSCP link. The default values are below.
 - For SPARC M10-4S (without crossbar box)
 - Network ID 0 (netmask: 255.255.255.248)

BB#00	169.254.1.1
BB#01	169.254.1.2
BB#02	169.254.1.3
BB#03	169.254.1.4
 - Network ID 1 (netmask: 255.255.255.248)

BB#00	169.254.1.9
BB#01	169.254.1.10
BB#02	169.254.1.11
BB#03	169.254.1.12
 - Network ID 1 (netmask: 255.255.255.248)

BB#00	169.254.1.9
BB#01	169.254.1.10
BB#02	169.254.1.11
BB#03	169.254.1.12
 - For SPARC M10-4S (with crossbar box)

- Network ID 0 (netmask: 255.255.255.224)
XBBOX#80 169.254.1.1
BB#00 169.254.1.2
:
BB#14 169.254.1.16
BB#15 169.254.1.17
- Network ID 1 (netmask: 255.255.255.224)
XBBOX#81 169.254.1.33
BB#00 169.254.1.34
:
BB#14 169.254.1.48
BB#15 169.254.1.49
- Network ID 2 (netmask: 255.255.255.248)
XBBOX#80 169.254.1.65
XBBOX#81 169.254.1.66
XBBOX#82 169.254.1.67
XBBOX#83 169.254.1.68
- Network ID 3 (netmask: 255.255.255.248)
XBBOX#80 169.254.1.73
XBBOX#81 169.254.1.74
XBBOX#82 169.254.1.75
XBBOX#83 169.254.1.76
- Network ID 4 (netmask: 255.255.255.252)
XBBOX#80 169.254.1.81
XBBOX#81 169.254.1.82

- Executing `setsscp` with nothing specified starts the interactive mode and displays the prompt to enter the IP addresses of SSCPs in order.

- If SSCP has been set in the past, the current setting is displayed. If the displayed setting is appropriate, you can use it by pressing [Enter] key.
- The network address to be used for all SSCP links can be set by using the *-i address* and *-m netmask*. In this operation mode, the IP addresses used in each SSCP link unique to the crossbar box and SPARC M10-4S are automatically selected from the address range indicated by the network address. Assignment is performed in order from XBBOX#80. Collectively setting the network addresses used for all SSCP links requires a netmask which can retain a host part equivalent to or larger than 255.255.255.224 and 255.255.255.128 for SPARC M10-4S (without and with crossbar boxes, respectively).
- For SPARC M10-4S (without crossbar box), up to 10 IP addresses in the following configuration are used as the address space of all SSCP link networks.

Network ID	Number of IPs required for the maximum configuration	Netmask required for the maximum configuration
0	4	255.255.255.248
1	4	255.255.255.248
2	2	255.255.255.252

For SPARC M10-4S (with crossbar box), up to 44 IP addresses in the following configuration are used.

Network ID	Number of IPs required for the maximum configuration	Netmask required for the maximum configuration
0	17	255.255.255.224
1	17	255.255.255.224
2	4	255.255.255.248
3	4	255.255.255.248
4	2	255.255.255.252

- To set the IP addresses of the links unique to individual crossbar boxes and SPARC M10-4S separately from all of the other SSCP address setting values, use the *-b bb_id*, *-N network_id*, and *-i address*.
- To change the setting value of netmask, it is necessary to execute the interactive mode or collective setting.
- If a value out of the range of network addresses set in advance is used for an SSCP link unique to a crossbar box or SPARC M10-4S, an error occurs.
- To add the crossbar boxes or SPARC M10-4S, it is necessary to assign the IP address of the SSCP link before executing addfru(8).
- If the assigned IP address overlaps with the IP address of another SSCP link, it causes an error of applynetwork(8).

- When deleting the IP address of the SSCP link of a crossbar box or SPARC M10-4S installed in the system, executing `applynetwork(8)` causes an error. `applynetwork(8)` determines whether the crossbar box or SPARC M10-4S to be deleted is included in the system.
- Setting a loopback address (127.0.0.0/8), broadcast address, or Class D or E address (224.0.0.0 to 255.255.255.25) in *address* causes an error.
- If the netmask value specified by `-m addr` does not match either of the following, it causes an error.
 - Only the most significant bit is 1.
 - 1 is placed in a row from the most significant bit.
- If the subnets of the SSCP network and another network overlap, the conditions in which executing `applynetwork(8)` causes an error are below.
 - Case that some of `xbbox#80-lan#0`, `xbbox#80-lan#1`, and the SSCP link have the same subnet
 - Case that some of `xbbox#81-lan#0`, `xbbox#81-lan#1`, and the SSCP link have the same subnet
 - Case that some of `xbbox#80-lan#0`, `xbbox#81-lan#1`, and the SSCP link have the same subnet
 - Case that some of `xbbox#81-lan#0`, `xbbox#80-lan#1`, and the SSCP link have the same subnet
 - Case that some of `bb#00-lan#0`, `bb#00-lan#1`, and the SSCP link have the same subnet
 - Case that some of `bb#01-lan#0`, `bb#01-lan#1`, and the SSCP link have the same subnet
 - Case that some of `bb#00-lan#0`, `bb#01-lan#1`, and the SSCP link have the same subnet
 - Case that some of `bb#01-lan#0`, `bb#00-lan#1`, and the SSCP link have the same subnet
- If the subnets of the IP address to be the destination of the routing information and subnet of the SSCP link are overlapping, executing `applynetwork(8)` causes an error.
- If the number of SPARC M10-4S or crossbar boxes under the maximum configuration quantity is set in the interactive mode, the IP addresses of the SPARC M10-4S or crossbar boxes not set, which have been set in the past, are deleted.
- If the number of SPARC M10-4S or crossbar boxes under the maximum configuration quantity is set by collective setting, the IP addresses of the SPARC M10-4S or crossbar boxes not set, which have been set in the past, are deleted. However, if the ID of the SSCP link network is also specified, only the IP addresses of the SPARC M10-4S or crossbar boxes of the corresponding SSCP link network, which have been set in the past, are deleted.

- When specifying `-N network_id`, `-b bb_id`, and `-n bb_num`, `-x xbbox_num` must be within the following range and otherwise it causes an error.

- For SPARC M10-4S (without crossbar box)

<code>-N network_id</code>	<code>-b bb_id range</code>	<code>-n bb_num range</code>	<code>-x xbbox_num range</code>
0	0 to 3	1 to 4	This cannot be specified.
1	0 to 3	1 to 4	This cannot be specified.
2	0 to 1	1 to 2	This cannot be specified.

- For SPARC M10-4S (with crossbar box)

<code>-N network_id</code>	<code>-b bb_id range</code>	<code>-n bb_num range</code>	<code>-x xbbox_num range</code>
0	0 to 15, 80	1 to 16	1
1	0 to 15, 81	1 to 16	1
2	80 to 83	This cannot be specified.	2,4
3	80 to 83	This cannot be specified.	2,4
4	80 to 81	This cannot be specified.	2

EXAMPLES

Note – The IP addresses shown in the following examples are samples. To specify the IP address of SSCP, specify an IP address not used on the Local Area Network (LAN). For details on the IP address of SSCP, see *Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide*.

EXAMPLE 1 Set the SSCP link using the interactive mode in a configuration composed of eight SPARC M10-4Ss.

```
XSCF> setsscp
How many XB-Box[4] > 2 [Enter]
How many BB[16] > 8 [Enter]
SSCP network ID:0 address [169.254.1.0      ] > 10.1.1.0 [Enter]
SSCP network ID:0 netmask [255.255.255.224] > 255.255.255.0 [Enter]
xbbox#80-if#0 address [10.1.1.1      ] > [Enter]
bb#00-if#0 address [10.1.1.2      ] > [Enter]
bb#01-if#0 address [10.1.1.3      ] > [Enter]
bb#02-if#0 address [10.1.1.4      ] > [Enter]
bb#03-if#0 address [10.1.1.5      ] > [Enter]
bb#04-if#0 address [10.1.1.6      ] > [Enter]
bb#05-if#0 address [10.1.1.7      ] > [Enter]
bb#06-if#0 address [10.1.1.8      ] > [Enter]
bb#07-if#0 address [10.1.1.9      ] > [Enter]
```

```

SSCP network ID:1 address [169.254.1.32] > 10.2.1.0[Enter]
SSCP network ID:1 netmask [255.255.255.224] > 255.255.255.0[Enter]
xbbox#81-if#1 address [10.2.1.1] > [Enter]
bb#00-if#1 address [10.2.1.2] > [Enter]
bb#01-if#1 address [10.2.1.3] > [Enter]
bb#02-if#1 address [10.2.1.4] > [Enter]
bb#03-if#1 address [10.2.1.5] > [Enter]
bb#04-if#1 address [10.2.1.6] > [Enter]
bb#05-if#1 address [10.2.1.7] > 10.2.1.20[Enter]
bb#06-if#1 address [10.2.1.8] > [Enter]
bb#07-if#1 address [10.2.1.9] > [Enter]

SSCP network ID:2 address [169.254.1.64] > 169.254.1.32[Enter]
SSCP network ID:2 netmask [255.255.255.248] > [Enter]
xbbox#80-if#2 address [169.254.1.33] > [Enter]
xbbox#81-if#2 address [169.254.1.34] > [Enter]

SSCP network ID:3 address [169.254.1.72] > 10.3.1.0[Enter]
SSCP network ID:3 netmask [255.255.255.248] > [Enter]
xbbox#80-if#3 address [10.3.1.1] > [Enter]
xbbox#81-if#3 address [10.3.1.2] > [Enter]

SSCP network ID:4 address [169.254.1.80] > [Enter]
SSCP network ID:4 netmask [255.255.255.252] > [Enter]
xbbox#80-if#4 address [169.254.1.81] > [Enter]
xbbox#81-if#4 address [169.254.1.82] > [Enter]

```

EXAMPLE 2 Assign an address to all SSCP links in a configuration composed of 16 SPARC M10-4Ss. (IP addresses from 192.168.1.1 to 192.168.1.82 are assigned.)

```
XSCF> setsscp -i 192.168.1.0 -x 4 -n 16
```

EXAMPLE 3 Assign an address to all SSCP links of network ID 1 in a configuration composed of 16 SPARC M10-4Ss.

```
XSCF> setsscp -m 255.255.255.0 -i 192.168.3.0 -x 1 -n 16 -N 1
```

EXAMPLE 4 Assign 192.168.1.20 to the IP address of network ID 0 of XBBOX#80 after assigning an IP address to all SSCP links of network ID 1 in a configuration composed of 16 SPARC M10-4Ss.

```
XSCF> setsscp -i 192.168.1.0 -x 4 -n 16
XSCF> setsscp -b 80 -N 0 -i 192.168.1.20
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **addfru(8)**, **applynetwork(8)**, **rebootxscf(8)**, **setnetwork(8)**, **setroute(8)**,
showsscp(8)

NAME	setssh - Sets Secure Shell (SSH) service used in the XSCF network.
SYNOPSIS	<pre>setssh [[-q] {-y n}] -c {enable disable} setssh -c addpubkey [-u <i>user_name</i>] setssh -c delpubkey {-a -s <i>line</i>} [-u <i>user_name</i>] setssh [[-q] {-y n}] -c genhostkey [-b <i>bits</i>] setssh -h</pre>
DESCRIPTION	<p>setssh is a command to set SSH service used in the XSCF network.</p> <p>In XSCF, only SSH2 is supported. In multi-XSCF configuration, the settings are automatically reflected in the standby XSCFs.</p> <p>The following contents can be set.</p> <ul style="list-style-type: none"> ■ Start or halt of SSH service ■ Generation of the host keys required for the SSH service <p>You can specify either of 2048 bits or 4096 bits. The size of the DSA host key is fixed to 4096 bits.</p> <ul style="list-style-type: none"> ■ Registration of the user public key <p>The user public key can be registered for each user account. It is also allowed to register multiple user public keys for one user account. The maximum number of characters per user account including line feeds available for registration of user public keys is 8191.</p>
Privileges	<p>To execute this command, any of the following privileges is required.</p> <ul style="list-style-type: none"> ■ Start or halt of SSH service and generation of the host key: <i>platadm</i> ■ Registration or deletion of user public keys of other user accounts: <i>useradm</i> ■ Registration or deletion of user public keys of user accounts which are currently logging in: No privileges are required. <p>For details on user privileges, see setprivileges(8).</p>

OPTIONS	The following options are supported.
-a	Deletes all of the registered user public keys. It is specified with -c delpubkey.
-b <i>bits</i>	Specifies the size of the host key to be created. For <i>bits</i> , you can specify 2048 or 4096. If omitted, it is recognized as 2048 bits.
-c addpubkey	Registers user public keys.
-c delpubkey	Deletes user public keys.
-c genhostkey	Generates the host key.
-c {enable disable}	Specifies the operation for SSH service. You can specify any of the following.
enable	Starts SSH service.
disable	Halts SSH service.
-h	Displays the usage. Specifying this option with another option or operand causes an error.
-n	Automatically responds to prompt with "n" (no).
-q	Prevents display of messages, including prompt, for standard output.
-s <i>line</i>	Specifies the user public key number to be deleted. In <i>line</i> , the number displayed when executing showssh -c pubkey is specified. It is specified with -c delpubkey.
-u <i>user_name</i>	Specifies the user account name to register or delete user public keys. It is specified with -c addpubkey or -c delpubkey. If the -u option is omitted, the user public keys of the user account logging in currently are the targets.
-Y	Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ Start of SSH service is reflected just after executing setssh and the service is started. ■ Halt of SSH service is reflected just after executing setssh. If any, the SSH sessions opened at the time of halting the service are disconnected. ■ Active Directory and LDAP/SSL users cannot register user public keys. Connect to and login SSH of XSCF not by authentication with the user public key but password authentication.

- When you generate the host key, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, enter "y." To cancel, enter "n."
- If a host key is generated when another one has already been generated, a prompt to ask whether to update it is displayed. To update, enter "y." To cancel, enter "n."
- setssh can register just one user public key at a time.
- Input of the user public key when executing setssh is finished by pressing [Enter] key and then [Ctrl] + [D] key (EOF).
- If the XSCF units are duplexed, the settings are automatically reflected in the standby XSCFs. A failure of the standby XSCFs causes an error and then the settings are reflected only in the active XSCF.
- You can confirm the contents of SSH service set currently by using showssh(8).

EXAMPLES**EXAMPLE 1** Start SSH service.

```
XSCF> setssh -c enable
Continue? [y|n] :y
```

EXAMPLE 2 Start SSH service. The prompt is automatically given a "y" response.

```
XSCF> setssh -y -c enable
Continue? [y|n] :y
```

EXAMPLE 3 Start SSH service. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> setssh -q -y -c enable
```

EXAMPLE 4 Halt SSH service.

```
XSCF> setssh -c disable
Continue? [y|n] :y
```

EXAMPLE 5 Generate the host key.

```
XSCF> setssh -c genhostkey
Host key create. Continue? [y|n] :y
```

EXAMPLE 6 Generate the host key. The prompt is automatically given a "y" response.

```
XSCF> setssh -c genhostkey -y
Host key create. Continue? [y|n] :y
```

EXAMPLE 7 Generate the host key. The confirmation message is hidden and the prompt is

automatically given a "y" response.

```
XSCF> setssh -c genhostkey -q -y
```

EXAMPLE 8 Generate the host key of 4096 bits.

```
XSCF> setssh -c genhostkey -b 4096
Host key create. Continue? [y|n] :y
```

EXAMPLE 9 Register user public keys. Input of the public key is finished by pressing [Enter] key and then [Ctrl] + [D] key (EOF).

```
XSCF> setssh -c addpubkey
Please input a public key:
ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAIAEAzFh95SohrDgpnN7zFCJCVNy+jaZPTjNDxcid
QGbihYDCBttiI4151Y0Sv85FJwDpSNHNKoVLMYLjtBmUMPbGgGVB61qskSv/
FeV44hefNCZMiXGItIIpK
P0nBK4XJpCFoFbPXNUHDw1rTD9icD5U/wRFGSRRxFI+Ub5oLRxN8+A8=
abcd@example.com
[Enter]
[Ctrl]+[D]
```

EXAMPLE 10 Register a user public key specifying the user name. Input of the public key is finished by pressing [Enter] key and then [Ctrl] + [D] key (EOF).

```
XSCF> setssh -c addpubkey -u efg
Please input a public key:
ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAIAEAzFh95SohrDgpnN7zFCJCVNy+jaZPTjNDxcid
QGbihYDCBttiI4151Y0Sv85FJwDpSNHNKoVLMYLjtBmUMPbGgGVB61qskSv/
FeV44hefNCZMiXGItIIpK
P0nBK4XJpCFoFbPXNUHDw1rTD9icD5U/wRFGSRRxFI+Ub5oLRxN8+A8=
efgh@example.com
[Enter]
[Ctrl]+[D]
```

EXAMPLE 11 Delete a user public key specifying the public key number.

```
XSCF> setssh -c delpubkey -s 1
1 ssh-rsa
AAAAB3NzaC1yc2EAAAABIwAAIAEAzFh95SohrDgpnN7zFCJCVNy+jaZPTjNDxcid
QGbihYDCBttiI4151Y0Sv85FJwDpSNHNKoVLMYLjtBmUMPbGgGVB61qskSv/
FeV44hefNCZMiXGItIIpK
P0nBK4XJpCFoFbPXNUHDw1rTD9icD5U/wRFGSRRxFI+Ub5oLRxN8+A8=
abcd@example.com
```

EXAMPLE 12 Delete all user public keys.

```
XSCF> setssh -c delpubkey -a
```

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO	showssh(8)
-----------------	-------------------

NAME	setteln - Starts or halts Telnet service used in the XSCF network.				
SYNOPSIS	setteln [[-q] {-y n}] -c {enable disable} setteln -h				
DESCRIPTION	setteln is a command to start or halt Telnet service used in the XSCF network. In multi-XSCF configuration, the settings are automatically reflected in the standby XSCFs.				
Privileges	To execute this command, <code>platadm</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .				
OPTIONS	The following options are supported. -c {enable disable} Specifies whether to start or halt Telnet service. You can specify either of the following. Omitting this causes an error. <table style="margin-left: 20px;"> <tr> <td style="vertical-align: top;">enable</td> <td>Starts Telnet service.</td> </tr> <tr> <td style="vertical-align: top;">disable</td> <td>Halts Telnet service.</td> </tr> </table> -h Displays the usage. Specifying this option with another option or operand causes an error. -n Automatically responds to prompt with "n" (no). -q Prevents display of messages, including prompt, for standard output.	enable	Starts Telnet service.	disable	Halts Telnet service.
enable	Starts Telnet service.				
disable	Halts Telnet service.				
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When Telnet service is enabled, Telnet service is started immediately. ■ Halt of Telnet service is reflected just after execution of <code>setteln</code>. At this time, the Telnet sessions in operation are disconnected, if any. ■ You can confirm the contents of Telnet service set currently by using <code>showtelnet(8)</code>. 				
EXAMPLES	<p>EXAMPLE 1 Start Telnet service.</p> <pre>XSCF> setteln -c enable Continue? [y n] :y</pre> <p>EXAMPLE 2 Halt Telnet service.</p> <pre>XSCF> setteln -c disable Continue? [y n] :y</pre>				

EXAMPLE 3 Halt Telnet service. The prompt is automatically given a "y" response.

```
XSCF> setteln -y -c disable
Continue? [y|n] :y
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO [showtelnet \(8\)](#)

NAME	settimezone - Sets the time zone and daylight saving time of XSCF.
SYNOPSIS	<pre>settimezone -c settz -s <i>timezone</i> settimezone -c settz -a [-M] settimezone -c adddst -b <i>std</i> -o <i>offset</i> -d <i>dst</i> [-p <i>offset</i>] -f <i>date</i> [/<i>time</i>] -t <i>date</i> [/<i>time</i>] settimezone -c deldst -b <i>std</i> -o <i>offset</i> settimezone -h</pre>
DESCRIPTION	<p>settimezone is a command to set the time zone and daylight saving time of XSCF. The time zone prepared as standard complies with the POSIX standard.</p>
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the list of the settable time zones. It is specified with -c settz. -b <i>std</i> Specifies the abbreviation of the standard time of the time zone. <i>std</i> is specified in alphabet from 3 to 7 characters. This can be specified in a format compliant with RFC2822. It is specified with -c adddst or -c deldst. -c adddst Manually sets the time zone and daylight saving time. The daylight saving time is set based on the time zone information specified by the -b, -o, -d, -p, -f, and -t options. If the daylight saving time is set manually, the time zone information set by -c settz is ignored. Logging in XSCF again after executing settimezone reflects the contents of the settings. -c deldst Deletes the time zone and daylight saving time set manually. If the daylight saving time set manually is deleted, XSCF comes to operate in the time zone set by -c settz. Logging in XSCF again after executing settimezone reflects the contents of the settings. -c settz Sets a time zone compliant with the POSIX standard. The time zone is reflected just after executing settimezone. -d <i>dst</i> Specifies the daylight saving time zone name. <i>dst</i> is specified in alphabet from 3 to 7 characters. This can be specified in a format compliant with RFC2822. It is specified with -c adddst.

-f date [/time]	<p>Specifies the start time of the daylight saving time. It is specified with -c adddst. It is specified in the same format as that of <i>date</i> of -t option. <i>date</i> can be specified in any of the following formats.</p> <p><i>Jn</i></p> <p><i>Jn</i>: Specifies the date to start the daylight saving time. You can specify a figure from 1 to 365 with January 1 regarded as 1 for <i>n</i>. In leap years, February 29 is not counted. 365 indicates December 31 even in leap years.</p> <p><i>Mm.w.d</i></p> <p><i>Mm</i>: Specifies the month to start the daylight saving time. You can specify a figure from 1 to 12 for <i>m</i></p> <p><i>w</i>: Specifies the week to start the daylight saving time. 1 indicates the first week and 5 indicates the last week. You can specify a figure from 1 to 5.</p> <p><i>d</i>: Specifies the day of the week to start the daylight saving time. 0 indicates Sunday and 6 indicates Saturday. You can specify a figure from 0 to 6.</p> <p><i>n</i></p> <p><i>n</i>: Specifies the date to start the daylight saving time. You can specify a figure from 1 to 365 with January 2 regarded as 1. In leap years, February 29 is counted.</p> <p>Specifies the time for <i>time</i>. This can be specified using the following format.</p> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;"><i>hh:mm:ss</i></td><td>This is specified in the format of "hh:mm:ss." <i>hh</i> is from 0 to 23. <i>mm</i> is 0 to 59. <i>ss</i> is 0 to 59. If omitted, it is 02:00:00.</td></tr> </table>	<i>hh:mm:ss</i>	This is specified in the format of "hh:mm:ss." <i>hh</i> is from 0 to 23. <i>mm</i> is 0 to 59. <i>ss</i> is 0 to 59. If omitted, it is 02:00:00.
<i>hh:mm:ss</i>	This is specified in the format of "hh:mm:ss." <i>hh</i> is from 0 to 23. <i>mm</i> is 0 to 59. <i>ss</i> is 0 to 59. If omitted, it is 02:00:00.		
-h	Displays the usage. Specifying this option with another option or operand causes an error.		
-M	Displays text one screen at a time.		

<p>-o offset</p> <p>-p offset</p> <p>-s timezone</p>	<p>Specifies the offset between the time zone and Greenwich Mean Time (GMT). It is specified with -c adddst or -c deldst. <i>offset</i> can be specified using the following format.</p> <p>GMT{+ -}hh[:mm[:ss]]</p> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">GMT</td><td>Greenwich Mean Time</td></tr> <tr> <td>{+ -}</td><td>To set a standard time earlier than GMT, specify -. (To set a local time on the east of Greenwich, the value of offset shall be - (minus).) To set a standard time later than GMT, specify +. (To set a local time on the west of Greenwich, the value of offset shall be + (plus).)</td></tr> <tr> <td>hh[:mm[:ss]]</td><td>Specifies the offset time. <i>hh</i> is from 0 to 23. <i>mm</i> and <i>ss</i> are from 0 to 59.</td></tr> </table> <p>Specifies the offset between the daylight saving time and Greenwich Mean Time (GMT). It is specified with -c adddst. If omitted, it becomes one hour earlier than the offset time specified by -o option. <i>offset</i> can be specified using the following format.</p> <p>GMT{+ -}hh[:mm[:ss]]</p> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">GMT</td><td>Greenwich Mean Time</td></tr> <tr> <td>{+ -}</td><td>To set a standard time earlier than GMT, specify -. (To set a local time on the east of Greenwich, the value of offset shall be - (minus).) To set a standard time later than GMT, specify +. (To set a local time on the west of Greenwich, the value of offset shall be + (plus).)</td></tr> <tr> <td>hh[:mm[:ss]]</td><td>Specifies the offset time. <i>hh</i> is from 0 to 23. <i>mm</i> and <i>ss</i> are from 0 to 59.</td></tr> </table> <p>Specifies the time zone. It is specified with -c settz. For <i>timezone</i>, you can specify any of the time zones displayed by the -a option.</p>	GMT	Greenwich Mean Time	{+ -}	To set a standard time earlier than GMT, specify -. (To set a local time on the east of Greenwich, the value of offset shall be - (minus).) To set a standard time later than GMT, specify +. (To set a local time on the west of Greenwich, the value of offset shall be + (plus).)	hh[:mm[:ss]]	Specifies the offset time. <i>hh</i> is from 0 to 23. <i>mm</i> and <i>ss</i> are from 0 to 59.	GMT	Greenwich Mean Time	{+ -}	To set a standard time earlier than GMT, specify -. (To set a local time on the east of Greenwich, the value of offset shall be - (minus).) To set a standard time later than GMT, specify +. (To set a local time on the west of Greenwich, the value of offset shall be + (plus).)	hh[:mm[:ss]]	Specifies the offset time. <i>hh</i> is from 0 to 23. <i>mm</i> and <i>ss</i> are from 0 to 59.
GMT	Greenwich Mean Time												
{+ -}	To set a standard time earlier than GMT, specify -. (To set a local time on the east of Greenwich, the value of offset shall be - (minus).) To set a standard time later than GMT, specify +. (To set a local time on the west of Greenwich, the value of offset shall be + (plus).)												
hh[:mm[:ss]]	Specifies the offset time. <i>hh</i> is from 0 to 23. <i>mm</i> and <i>ss</i> are from 0 to 59.												
GMT	Greenwich Mean Time												
{+ -}	To set a standard time earlier than GMT, specify -. (To set a local time on the east of Greenwich, the value of offset shall be - (minus).) To set a standard time later than GMT, specify +. (To set a local time on the west of Greenwich, the value of offset shall be + (plus).)												
hh[:mm[:ss]]	Specifies the offset time. <i>hh</i> is from 0 to 23. <i>mm</i> and <i>ss</i> are from 0 to 59.												

-t date [/time] Specifies the time to finish the daylight saving time. It is specified with **-t adddst**. It is specified in the same format as that of *date* of **-f** option. *date* can be specified in any of the following formats.

Jn

Jn: Specifies the date to finish the daylight saving time. You can specify a figure from 1 to 365 with January 1 regarded as 1 for *n*. In leap years, February 29 is not counted. 365 indicates December 31 even in leap years.

Mm.w.d

Mm: Specifies the month to finish the daylight saving time. You can specify a figure from 1 to 12 for *m*

w: Specifies the week to finish the daylight saving time. 1 indicates the first week and 5 indicates the last week. You can specify a figure from 1 to 5.

d: Specifies the day of the week to finish the daylight saving time. 0 indicates Sunday and 6 indicates Saturday. You can specify a figure from 0 to 6.

n

n: Specifies the date to finish the daylight saving time. You can specify a figure from 1 to 365 with January 2 regarded as 1. In leap years, February 29 is counted.

Specifies the time for *time*. This can be specified using the following format.

hh:mm:ss

This is specified in the format of "hh:mm:ss." *hh* is from 0 to 23. *mm* is 0 to 59. *ss* is 0 to 60. If omitted, it is 02:00:00.

EXTENDED DESCRIPTION

- You cannot specify an effective number of years for the time zone or daylight saving time. To change the daylight saving time every year, it is necessary to specify it again by **settimezone**.
- If the daylight saving time is not set, it is not affected by the time zone.
- To set the daylight saving time by "**-c adddst**," specify the start and end in the same format.
- When setting the daylight saving time by **-c adddst**, the following cases cause an error.
 - Case that the period between the start and end is shorter than 14 days in *Jn* or *n* format
 - Case that the start and end is in the same month and the period is shorter than two weeks in the *Mm.w.d* format

- Case that an offset smaller than `-p offset` is specified in `-o offset`
- Case that the difference in the offsets of `-o offset` and `-p offset` is longer than 24 hours
- If the standard time set by `settimezone` is added to the offset time, it becomes GMT.
- You can confirm the time zone set currently by using `showtimezone(8)`.
- To reflect the daylight saving time information changed by the `-c adddst` and `-c deldst` options, logout from XSCF and login again.

EXAMPLES**EXAMPLE 1** Set the time zone to "Asia/Tokyo."

```
XSCF> settimezone -c settz -s Asia/Tokyo
Asia/Tokyo
```

EXAMPLE 2 Display the list of the settable time zones.

```
XSCF> settimezone -c settz -a
Africa/Abidjan
Africa/Accra
Africa/Addis_Ababa
Africa/Algiers
Africa/Asmara
Africa/Asmera
Africa/Bamako
Africa/Bangui
.
.
```

EXAMPLE 3 Set the daylight saving time information with setting the time zone abbreviation to JST, offset from GMT to +9, daylight saving time zone name to JDT, daylight saving time to one hour earlier, and period to 2:00 on the last Sunday of March (JST) to 2:00 on the last Sunday of October (JDT).

```
XSCF> settimezone -c adddst -b JST -o GMT-9 -d JDT -f M3.5.0 -t
M10.5.0
JST-9JDT,M3.5.0,M10.5.0
```

EXAMPLE 4 Set the daylight saving time information with setting the time zone abbreviation to JST, offset from GMT to +9, daylight saving time zone name to JDT, offset from the daylight saving time of GMT to +10 hours, and period to 0:00 on the first Sunday of April (JST) to 0:00 on the first Sunday of September (JDT).

```
XSCF> settimezone -c adddst -b JST -o GMT-9 -d JDT -p GMT-10 -f
M4.1.0/00:00:00 -t M9.1.0/00:00:00
JST-9JDT-10,M4.1.0/00:00:00,M9.1.0/00:00:00
```

EXAMPLE 5 Delete the daylight saving time information set currently.

```
XSCF> settimezone -c deldst -b JST -o GMT-9
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **setdate (8)**, **showdate (8)**, **showtimezone (8)**

NAME	setupfru - Sets the hardware of devices.				
SYNOPSIS	setupfru [-m {y n}] <i>device location</i> setupfru -h				
DESCRIPTION	<p>setupfru is a command to set the hardware of the specified device.</p> <p>You can specify a system board (PSB) as the device.</p> <p>The following contents can be set for PSB to make PSB available for the system after addition.</p>				
	<table> <tr> <td>Memory mirror mode</td> <td>The mirror mode is the mode to divide the memory mounted in PSB into two and mirror the data. Since memory is divided into two, the memory size becomes half but it improves the reliability of data. It specifies whether to set the mode of memory to the mirror mode.</td> </tr> </table>	Memory mirror mode	The mirror mode is the mode to divide the memory mounted in PSB into two and mirror the data. Since memory is divided into two, the memory size becomes half but it improves the reliability of data. It specifies whether to set the mode of memory to the mirror mode.		
Memory mirror mode	The mirror mode is the mode to divide the memory mounted in PSB into two and mirror the data. Since memory is divided into two, the memory size becomes half but it improves the reliability of data. It specifies whether to set the mode of memory to the mirror mode.				
Privileges	<p>To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>				
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-m {y n}</td> <td>Specifies whether to set the mode of memory mounted in PSB to the mirror mode. To set it to the mirror mode, specify y. Not to set it to the mirror mode, specify n. If the -m option is omitted, the previous setting is taken over. If <code>sb</code> is specified in <i>device</i>, the setting is reflected in all CPUs under the specified PSB. If <code>cpu</code> is specified in <i>device</i>, the setting is reflected only in the specified CPUs.</td> </tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-m {y n}	Specifies whether to set the mode of memory mounted in PSB to the mirror mode. To set it to the mirror mode, specify y. Not to set it to the mirror mode, specify n. If the -m option is omitted, the previous setting is taken over. If <code>sb</code> is specified in <i>device</i> , the setting is reflected in all CPUs under the specified PSB. If <code>cpu</code> is specified in <i>device</i> , the setting is reflected only in the specified CPUs.
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
-m {y n}	Specifies whether to set the mode of memory mounted in PSB to the mirror mode. To set it to the mirror mode, specify y. Not to set it to the mirror mode, specify n. If the -m option is omitted, the previous setting is taken over. If <code>sb</code> is specified in <i>device</i> , the setting is reflected in all CPUs under the specified PSB. If <code>cpu</code> is specified in <i>device</i> , the setting is reflected only in the specified CPUs.				

OPERANDS	<p>The following operands are supported.</p> <table> <tr> <td><i>device</i></td><td>Specifies the device to be set. You can specify either of the following.</td></tr> <tr> <td>sb</td><td>PSB</td></tr> <tr> <td>cpu</td><td>CPU in PSB</td></tr> <tr> <td><i>location</i></td><td>Specifies the location where the device is mounted.</td></tr> <tr> <td colspan="2">sb is specified in the following format.</td></tr> <tr> <td><i>xx-y</i></td><td></td></tr> <tr> <td><i>xx</i></td><td>Specify an integer from 00 to 15 for it.</td></tr> <tr> <td><i>y</i></td><td>It is fixed to 0.</td></tr> <tr> <td colspan="2">cpu is specified in the following format.</td></tr> <tr> <td><i>xx-y-z</i></td><td></td></tr> <tr> <td><i>xx</i></td><td>Specify an integer from 00 to 15 for it.</td></tr> <tr> <td><i>y</i></td><td>It is fixed to 0.</td></tr> <tr> <td><i>z</i></td><td>Specify an integer from 0 to 3 for it.</td></tr> </table>	<i>device</i>	Specifies the device to be set. You can specify either of the following.	sb	PSB	cpu	CPU in PSB	<i>location</i>	Specifies the location where the device is mounted.	sb is specified in the following format.		<i>xx-y</i>		<i>xx</i>	Specify an integer from 00 to 15 for it.	<i>y</i>	It is fixed to 0.	cpu is specified in the following format.		<i>xx-y-z</i>		<i>xx</i>	Specify an integer from 00 to 15 for it.	<i>y</i>	It is fixed to 0.	<i>z</i>	Specify an integer from 0 to 3 for it.
<i>device</i>	Specifies the device to be set. You can specify either of the following.																										
sb	PSB																										
cpu	CPU in PSB																										
<i>location</i>	Specifies the location where the device is mounted.																										
sb is specified in the following format.																											
<i>xx-y</i>																											
<i>xx</i>	Specify an integer from 00 to 15 for it.																										
<i>y</i>	It is fixed to 0.																										
cpu is specified in the following format.																											
<i>xx-y-z</i>																											
<i>xx</i>	Specify an integer from 00 to 15 for it.																										
<i>y</i>	It is fixed to 0.																										
<i>z</i>	Specify an integer from 0 to 3 for it.																										
EXTENDED DESCRIPTION	You can confirm the contents regarding the hardware of the devices set currently by using showfru(8) .																										
EXAMPLES	<p>EXAMPLE 1 Set the modes of all CPUs under PSB 01-0 to the memory mirror mode.</p> <pre>XSCF> setupfru -m y sb 01-0</pre> <p>EXAMPLE 2 Set the mode of the CPU of PSB 02-0 CPU chip 1 to the memory mirror mode.</p> <pre>XSCF> setupfru -m y cpu 02-0-1</pre>																										
EXIT STATUS	The following exit values are returned.																										
	<table> <tr> <td>0</td><td>Indicates normal end.</td></tr> <tr> <td>>0</td><td>Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.																						
0	Indicates normal end.																										
>0	Indicates error occurrence.																										
SEE ALSO	addboard(8) , deleteboard(8) , setpcl(8) , showboards(8) , showpcl(8) , showfru(8)																										

NAME	showad - show Active Directory configuration and messages
SYNOPSIS	showad showad cert [-v] [-i n] showad log [-M] [-C] [-S start_record_number] [-E end_record_number] showad log -f showad group administrator [-i n] showad group operator [-i n] showad group custom [-i n] showad userdomain [-i n] showad dnslocatorquery [-i n] showad defaultrole showad server [-i n] showad -h
DESCRIPTION	showad(8) displays Active Directory configuration and diagnostic messages.
Privileges	You must have useradm privileges to run this command. Refer to setprivileges(8) for more information.
OPTIONS	<p>The following options are supported:</p> <ul style="list-style-type: none"> -f Displays diagnostic messages in real time. When this option is used, the command does not terminate. Each diagnostic message is displayed when it is registered. To stop the real-time display, press Ctrl-C. -h Displays usage statement. When used with other options or operands, an error occurs. -i n Sets an index marker, value 1 - 5. When executed without -i , or with -i and no value, showad walks sequentially through items 1 through 5. Exceptions: When used without -i , the command showad cert displays the certificate information for the Primary server, and showad server displays the Primary server configuration. -v Specifies verbose output. Used only with the cert operand to display the full certificate.

-C	Appends to end of output the number of records in the log.
-E	Specifies the last record number to display, where <i>end_record_number</i> can be any record number in the log. Use -C to obtain the number of records in the log.
-M	Displays text by page, like the more(1) command does.
-S	Specifies the first record to display, where <i>start_record_number</i> can be any record number in the log. Use -C to obtain the number of records in the log.

OPERANDS

The following operands are supported:

cert	Display current server certificates.
log	Display diagnostic messages.
group administrator	Display current group configurations.
group operator	Display current group configurations.
group custom	Display current group configurations.
userdomain	Display current userdomain settings.
dnslocatorquery	Display current DNS locator query configuration.
defaultrole	Display current defaultrole setting.
server	Display current Active Directory server settings.

EXAMPLES

EXAMPLE 1 Displays the current state of the active directory.

```
XSCF> showad
dnslocatormode: disabled
expsearchmode: disabled
state: enabled
strictcertmode: disabled
timeout: 4
logdetail: none
```

EXAMPLE 2 Displays certificate information for the Primary server.

```
XSCF> showad cert
Primary Server:
certstatus = certificate present
issuer = C=US, ST=California, L=San Diego, O=aCompany,
OU=System Group, CN=John User serial number = 0 (00000000)
subject = C=US, ST=California, L=San Diego, O=aCompany,
OU=System Group, CN=John User serial number = 0 (00000000)
```

```
valid from = Apr 18 05:38:36 2009 GMT
valid until = Apr 16 05:38:36 2019 GMT
version = 3 (0x02)
```

EXAMPLE 3 Displays specified diagnostic messages.

```
XSCF> showad log -S 5 -E 10
Thu Sep 2 01:43 2009 (ActDir): -error- authentication status: auth-ERROR
Thu Sep 2 01:44 2009 (ActDir): -error- authentication status: auth-ERROR
Thu Sep 2 01:47 2009 (ActDir): -error- authentication status: auth-ERROR
Thu Sep 2 01:51 2009 (ActDir): -error- authentication status: auth-ERROR
Thu Sep 2 01:52 2009 (ActDir): -error- authentication status: auth-ERROR
Thu Sep 2 01:55 2009 (ActDir): -error- authentication status: auth-ERROR
```

EXAMPLE 4 Displays configuration for administrator group 3.

```
XSCF> showad group administrator -i 3
Administrator Group 3
name: CN=pSuperAdmin,OU=Groups,DC=sales,DC=company,DC=com
```

EXAMPLE 5 Displays alternate server 1 setting. A port number of 0 indicates that the default port for Active Directory is used.

```
XSCF> showad server -i 1
Alternate Server 1
address: (none)
port: 0
```

EXAMPLE 6 Displays the dnslocatorquery 1 configuration.

```
XSCF> showad dnslocatorquery -i 1
service 1: \_ldap._tcp.gc._msdcs.<DOMAIN>. <PORT:3269>
```

EXIT STATUS The following exit values are returned:

- | | |
|----|------------------------|
| 0 | Successful completion. |
| >0 | An error occurred. |

SEE ALSO **setad**(8)

showad(8)



NAME	showaltitude - Displays the altitude of the system.
SYNOPSIS	showaltitude showaltitude -h
DESCRIPTION	<p>showaltitude is a command to display the altitude of the system set currently. If showaltitude is executed without specifying the option, the altitude of the device is displayed. The displayed altitude is the value set by setaltitude(8). The altitude is displayed by 100 meters (m).</p>
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXTENDED DESCRIPTION	You can set the altitude of the system by using setaltitude(8) .
EXAMPLES	EXAMPLE 1 Display the altitude of the system. <pre>XSCF> showaltitude 1000m</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setaltitude (8)

showaltitude(8)



NAME	showaudit - Displays the current status of the audit system.
SYNOPSIS	showaudit showaudit [all] showaudit [-a <i>users</i>] [-c { <i>classes</i> all}] [-e { <i>events</i> all}] [-g] [-m] [-p] [-s] [-t] showaudit -h
DESCRIPTION	showaudit displays the current status of the system audit. If showaudit is executed without specifying the option, it is displayed whether writing of audit records is enabled or disabled.
Privileges	To execute this command, <code>auditadm</code> or <code>audittop</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .

OPTIONS

The following options are supported.

- a *users* Displays the audit record generation policy of the specified user. *users* is the comma-separated list of the valid user names.
 - c *classes* Displays the audit record generation policy of the specified audit class. *classes* is a comma-separated list of audit classes. Classes can be specified with a number or name. The prefix of ACS_ can be omitted. For example, the classes of audit-related events can be expressed as ACS_AUDIT, AUDIT or 2.
- The valid classes are below.
- | | |
|-------------------|--|
| all | All classes |
| ACS_SYSTEM(1) | System-related event |
| ACS_WRITE(2) | Command that can change the status |
| ACS_READ(4) | Command to display the current status |
| ACS_LOGIN(8) | Login-related event |
| ACS_AUDIT(16) | Audit-related event |
| ACS_PPAR(32) | Physical partition (PPAR) administration-related event |
| ACS_USER(64) | User administration-related event |
| ACS_PLATFORM(128) | Platform administration-related event |
| ACS_MODES(256) | Mode-related event |
- e *events* Displays the audit record generation policy of the specified audit events. *events* is a comma-separated list of audit events. Events can be specified with a number or name. The prefix of AEV_ can be omitted. For example, the event of SSH login can be expressed as AEV_LOGIN_SSH, LOGIN_SSH, or 4.
- For the list of valid events, see showaudit -e all.
- g Displays the global audit record generation policy of the user.
 - h Displays the usage. Specifying this option with another option or operand causes an error.
 - m Displays the destination address of the e-mail to be sent if the usage of the local audit area reaches the threshold.

<p>-p</p> <p>-s</p> <p>-t</p>	<p>Displays the policy to be followed if the audit trail reaches the full capacity.</p> <p>Displays the following audit statuses.</p> <ul style="list-style-type: none"> ■ Area used by the local audit record ■ Free space left for the local audit record ■ Number of the audit record deleted (after the previous boot) since the audit trail reaches the full capacity <p>Displays the threshold to issue a warning for the usage of the local region.</p>
--	---

OPERANDS

The following operands are supported.

<p>all</p>	<p>Displays the following information.</p> <ul style="list-style-type: none"> ■ Whether writing of audit trail is set to enable or disable. This information is the same as that which is displayed when showaudit is executed without specifying any options. ■ All information displayed when showaudit is executed specifying the -a, -c all, -e all, -g, -m, -p, -s, and -t options.
-------------------	--

EXAMPLES

EXAMPLE 1 Display the audit status.

```
XSCF> showaudit
Auditing: enabled
```

EXAMPLE 2 Display all class information regarding login audit.

```
XSCF> showaudit -c LOGIN
Events:
AEV_LOGIN_BUI           enabled
AEV_LOGIN_CONSOLE        enabled
AEV_LOGIN_SSH            enabled
AEV_LOGIN_TELNET         enabled
AEV_LOGOUT               enabled
AEV_AUTHENTICATE         enabled
```

EXAMPLE 3 Display all event information.

```
XSCF> showaudit -e all
Events:
AEV_AUDIT_START          enabled
AEV_AUDIT_STOP            enabled
AEV_ENTER_MODE             enabled
AEV_EXIT_MODE              enabled
```

AEV_LOGIN_BUI	enabled
AEV_LOGIN_CONSOLE	enabled
AEV_LOGIN_SSH	enabled
AEV_LOGIN_TELNET	enabled
AEV_LOGOUT	enabled
AEV_AUTHENTICATE	enabled
AEV_addboard	enabled
AEV_addfru	enabled
[...]	

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **setaudit (8), viewaudit (8)**

NAME	showautologout - Displays the session timeout time of the XSCF shell.
SYNOPSIS	showautologout showautologout -h
DESCRIPTION	showautologout is a command to display the session timeout time set in the XSCF shell. Displays the session timeout time by minutes. If the session timeout time is not set by setautologout(8) , it is set to 10 minutes by default.
Privileges	To execute this command, any of the following privileges is required. useradm, platadm, plaptop, auditadm, auditop, pparadm, pparmgr, pparop, fieldeng For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	EXAMPLE 1 Display the session timeout time of the login shell. (If set to 30 minutes) XSCF> showautologout 30min EXAMPLE 2 Display the session timeout time of the login shell. (In the default status) XSCF> showautologout 10min
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setautologout(8)

showautologout(8)

NAME	showbbstatus - Display the status of the SPARC M10 Systems chassis.
SYNOPSIS	showbbstatus showbbstatus -h
DESCRIPTION	showbbstatus is a command to display the status of the currently-operated SPARC M10 Systems chassis.
Privileges	To execute this command, any of the following privileges is required. useradm, platadm, plaptop, fieldeng Enables execution for all PPARs. pparamadm, pparamgr, pparop Enables execution for PPARs for which you have access privilege. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	EXAMPLE 1 Display the SPARC M10 Systems status of its own device. XSCF> showbbstatus BB#01 (Standby)
	EXAMPLE 2 Display the SPARC M10 Systems status of its own device (when the master XSCF and the standby XSCF cannot be synchronised). XSCF> showbbstatus BB#00 (Master) Cannot communicate with Standby XSCF. Please check Standby XSCF's state.
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.

showbbstatus(8)

NAME	showboards - Displays the information of the system board (PSB).																								
SYNOPSIS	showboards [-v] -a [-c sp] showboards [-v] -p <i>ppar_id</i> [-c sp] showboards [-v] <i>psb</i> showboards -h																								
DESCRIPTION	<p>showboards is a command to display the information of PSB.</p> <p>Displays the information of all PSBs currently incorporated into, assigned to, or mounted in the physical partition (PPAR). If PPAR is specified, only the information defined in the PPAR configuration information (PCL) is displayed.</p> <p>The following information is displayed.</p> <table> <tr> <td>PSB</td> <td>PSB number</td> </tr> <tr> <td></td> <td>This is displayed in the format below.</td> </tr> <tr> <td></td> <td><i>xx-y:</i></td> </tr> <tr> <td></td> <td> <i>xx</i> Integer from 00 to 15</td> </tr> <tr> <td></td> <td> <i>y</i> It is fixed to 0</td> </tr> <tr> <td>PPAR-ID</td> <td>PPAR-ID</td> </tr> <tr> <td></td> <td>Any of the following is displayed.</td> </tr> <tr> <td></td> <td> 00-15 PPAR-ID to which PSB is assigned</td> </tr> <tr> <td></td> <td> SP PSB does not belong to PPAR and is in the system board pool status</td> </tr> <tr> <td></td> <td> Other This is displayed if the PSB is set in the PCL of a PPAR to which access privilege has been granted, and at the same time, belongs to a PPAR to which no access privilege has been granted.</td> </tr> <tr> <td>LSB</td> <td>Logical System Board (LSB) number defined in PPAR</td> </tr> <tr> <td></td> <td>An integer from 00 to 15 is displayed.</td> </tr> </table>	PSB	PSB number		This is displayed in the format below.		<i>xx-y:</i>		<i>xx</i> Integer from 00 to 15		<i>y</i> It is fixed to 0	PPAR-ID	PPAR-ID		Any of the following is displayed.		00-15 PPAR-ID to which PSB is assigned		SP PSB does not belong to PPAR and is in the system board pool status		Other This is displayed if the PSB is set in the PCL of a PPAR to which access privilege has been granted, and at the same time, belongs to a PPAR to which no access privilege has been granted.	LSB	Logical System Board (LSB) number defined in PPAR		An integer from 00 to 15 is displayed.
PSB	PSB number																								
	This is displayed in the format below.																								
	<i>xx-y:</i>																								
	<i>xx</i> Integer from 00 to 15																								
	<i>y</i> It is fixed to 0																								
PPAR-ID	PPAR-ID																								
	Any of the following is displayed.																								
	00-15 PPAR-ID to which PSB is assigned																								
	SP PSB does not belong to PPAR and is in the system board pool status																								
	Other This is displayed if the PSB is set in the PCL of a PPAR to which access privilege has been granted, and at the same time, belongs to a PPAR to which no access privilege has been granted.																								
LSB	Logical System Board (LSB) number defined in PPAR																								
	An integer from 00 to 15 is displayed.																								

	Assignment	Assignment status of PSB to PPAR
		Any of the following is displayed.
	Unavailable	PSB is in the system board pool status (not assigned to PPAR) and corresponds to any of "Undiagnosed," "Diagnosing," or "Abnormal diagnosis." Unimplemented PSB also becomes Unavailable.
	Available	PSB is in the system board pool status and the diagnosis has been normally completed.
	Assigned	PSB is assigned to PPAR.
Pwr		PSB is turned on
		Either of the following is displayed.
	n	In the power-off status
	y	In the power-on status
Conn		PSB is connected to the PPAR configuration
		Either of the following is displayed.
	n	Not connected to the corresponding PPAR or in the system board pool status
	y	Connected to the corresponding PPAR
Conf		Operating status of Oracle Solaris
		Either of the following is displayed.
	n	PSB is not operating in Oracle Solaris.
	y	PSB is operating in Oracle Solaris.
Test		Status of the initial diagnosis of PSB
		Any of the following is displayed.
	Unmount	Recognition is impossible because it is not mounted or a failure occurred
	Unknown	Not diagnosed
	Testing	The initial diagnosis is in progress.
	Passed	The initial diagnosis is normally completed.
	Failed	An abnormality occurred in the initial diagnosis. PSB cannot be used or are degraded.

	Fault	Degradation status of PSB Any of the following is displayed. Normal Normal status Degraded There is a degraded part. PSB can be operated. Faulted PSB cannot be operated due to an abnormality or cannot be controlled due to a communication abnormally.
		If it is specified with the -v option, the following information is displayed as the detailed status of PSB.
	R	Dynamic Reconfiguration (DR) reservation status of PSB for PPAR * DR processing is reserved. If PPAR is restarted, the PPAR configuration is changed by incorporation or release of PSB.
Privileges		To execute this command, any of the following privileges is required. <code>platadm, plaptop, fieldeng</code> Enables execution for all PPARs and PSBs. <code>pparadm, pparamgr, pparop</code> Enables execution for PPARs for which you have access privilege.
		For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS		The following options are supported.
	-a	Displays the statuses of all PSBs incorporated into, assigned to, or mounted in PPAR.
	-c sp	Displays the PSB of the system board pool. System board pool means the status in which PSB does not belong to any PPARs.
	-h	Displays the usage. Specifying this option with another option or operand causes an error.
	-p <i>ppar_id</i>	Specifies the PPAR-ID to display the status. Only the information defined in the PCL of the specified PPAR is displayed. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .
	-v	Displays the detailed information of PSB.

OPERANDS

The following operands are supported.

psb Specifies the PSB number to be displayed. The specification format is below.

xx-y

xx Integer from 00 to 15

y It is fixed to 0

EXTENDED DESCRIPTION

If PPAR is specified, only the PSB information defined in PCL is displayed.

EXAMPLES

EXAMPLE 1 Display the information of all PSBs mounted.

```
XSCF> showboards -a
PSB  PPAR-ID(LSB) Assignment  Pwr  Conn Conf Test      Fault
-----
00-0 00(00)      Assigned     y     y     y     Passed   Normal
01-0 SP          Unavailable n     n     n     Testing  Normal
02-0 Other        Assigned     y     y     n     Passed   Degraded
03-0 SP          Unavailable n     n     n     Failed  Faulted
```

EXAMPLE 2 Display the detailed information of all PSBs mounted.

```
XSCF> showboards -v -a
PSB  R PPAR-ID(LSB) Assignment  Pwr  Conn Conf Test      Fault
-----
00-0 * 00(00)    Assigned     y     y     y     Passed   Normal
01-0  SP         Unavailable n     n     n     Testing  Normal
02-0  Other       Assigned     y     y     n     Passed   Degraded
03-0  SP         Unavailable n     n     n     Failed  Faulted
```

EXAMPLE 3 Display the information of PSB 00-0.

```
XSCF> showboards 00-0
PSB  PPAR-ID(LSB) Assignment  Pwr  Conn Conf Test      Fault
-----
00-0 00(00)      Assigned     y     y     y     Passed   Normal
```

EXAMPLE 4 Display the detailed information of PSB 00-0.

```
XSCF> showboards -v 00-0
PSB  R PPAR-ID(LSB) Assignment  Pwr  Conn Conf Test      Fault
-----
00-0 * 00(00)    Assigned     y     y     y     Passed   Normal
```

EXAMPLE 5 Display the PSB of the system board pool.

```
XSCF> showboards -a -c sp
PSB  PPAR-ID(LSB) Assignment  Pwr Conn Conf Test   Fault
-----
01-0 SP          Unavailable n   n   n   Testing Normal
03-0 SP          Unavailable n   n   n   Failed   Faulted
```

EXAMPLE 6 Display the PSB defined in PPAR-ID 0 and in the system board pool status.

```
XSCF> showboards -P 0 -c sp
PSB  PPAR-ID(LSB) Assignment  Pwr Conn Conf Test   Fault
-----
01-0 SP          Available  n   n   n   Passed  Normal
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

addboard(8), **deleteboard(8)**, **setpcl(8)**, **setupfru(8)**, **showfru(8)**, **showpcl(8)**

showboards(8)



NAME	showcod - Displays the CPU Activation information.										
SYNOPSIS	showcod [-v] -s cpu showcod [-v] -p <i>ppar_id</i> showcod [-v] [-M] showcod -h										
DESCRIPTION	<p>showcod is a command to display the CPU Activation information. The CPU Activation information includes the numbers of the CPU Activation which have been installed and the CPU Activation assigned for the physical partition (PPAR). The numbers of the CPU Activations which have been installed and the CPU Activations assigned to PPAR are displayed for each type of resources. The types of resources are CPU.</p> <p>If showcod is executed without specifying -p <i>ppar_id</i>, the CPU Activation information of all PPARs is displayed.</p>										
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td>platadm, platop</td> <td>Enables execution for all PPARs.</td> </tr> <tr> <td>pparadm, pparamgr, pparop</td> <td>Enables execution for PPARs for which you have access privilege.</td> </tr> </table> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>	platadm, platop	Enables execution for all PPARs.	pparadm, pparamgr, pparop	Enables execution for PPARs for which you have access privilege.						
platadm, platop	Enables execution for all PPARs.										
pparadm, pparamgr, pparop	Enables execution for PPARs for which you have access privilege.										
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-M</td> <td>Displays text one screen at a time.</td> </tr> <tr> <td>-p <i>ppar_id</i></td> <td>Specifies PPAR-ID. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>.</td> </tr> <tr> <td>-s cpu</td> <td>Displays the CPU Activation information.</td> </tr> <tr> <td>-v</td> <td>Displays detailed information. If the -v option is specified, the breakdown of keys is displayed.</td> </tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-p <i>ppar_id</i>	Specifies PPAR-ID. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .	-s cpu	Displays the CPU Activation information.	-v	Displays detailed information. If the -v option is specified, the breakdown of keys is displayed.
-h	Displays the usage. Specifying this option with another option or operand causes an error.										
-M	Displays text one screen at a time.										
-p <i>ppar_id</i>	Specifies PPAR-ID. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .										
-s cpu	Displays the CPU Activation information.										
-v	Displays detailed information. If the -v option is specified, the breakdown of keys is displayed.										
EXTENDED DESCRIPTION	<p>The following parameters are displayed as the types of resource.</p> <table> <tr> <td>PROC</td> <td>CPU core resource</td> </tr> </table>	PROC	CPU core resource								
PROC	CPU core resource										

EXAMPLES	<p>EXAMPLE 1 Display all CPU Activations information (in the case that the pparadm, pparmgr, or pparop privilege is owned for PPAR-ID 1).</p> <pre>XSCF> showcod PROC Permits reserved for PPAR 1: 0</pre> <p>EXAMPLE 2 Display all CPU Activations information in detail (in the case that the pparadm, pparmgr, or pparop privilege is owned for PPAR-ID 1).</p> <pre>XSCF> showcod -v PROC Permits assigned for PPAR 1: 0 [Permanent 0cores]</pre> <p>EXAMPLE 3 Display the CPU Activations information of all CPUs in detail (in the case that the platadm or platop privilege is owned).</p> <pre>XSCF> showcod -v -s cpu PROC Permits installed : 8 cores PROC Permits assigned for PPAR 0 : 4 [Permanent 4cores] PROC Permits assigned for PPAR 1 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 2 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 3 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 4 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 5 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 6 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 7 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 8 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 9 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 10 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 11 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 12 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 13 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 14 : 0 [Permanent 0cores] PROC Permits assigned for PPAR 15 : 0 [Permanent 0cores]</pre>				
EXIT STATUS	<p>The following exit values are returned.</p> <table> <tr> <td data-bbox="352 1166 381 1200">0</td><td data-bbox="540 1166 799 1200">Indicates normal end.</td></tr> <tr> <td data-bbox="352 1218 396 1252">>0</td><td data-bbox="540 1218 856 1252">Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	<p>addcodactivation(8), deletecodactivation(8), setcod(8), showcodactivation(8), showcodactivationhistory(8), showcodusage(8)</p>				

NAME	showcodactivation - Displays the current CPU Activation key information stored in the XSCF.						
SYNOPSIS	showcodactivation [-r -v] [-i <i>key-index</i>] [-M] showcodactivation -h						
DESCRIPTION	<p>showcodactivation is a command to display the CPU Activation key information stored in the XSCF.</p> <p>If showcodactivation is executed with nothing specified, the current CPU Activation key information is displayed.</p> <p>Note – For details on the CPU Activation key, see the <i>Fujitsu M10/SPARC M10 Systems System Operation and Administration Guide</i>.</p>						
Privileges	<p>To execute this command, <code>platadm</code> or <code>platop</code> privilege is required.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>						
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -i <i>key-index</i> Displays the CPU Activation key information of the administration number specified in <i>Key-index</i>. -M Displays text one screen at a time. -r Displays the CPU Activation key information in the format of raw data stored in the XSCF. -v Displays detailed information. The CPU Activation key information is displayed in both of the table format and raw data format. 						
EXTENDED DESCRIPTION	<p>If <code>showcodactivation</code> is used, the following information is displayed.</p> <table> <tr> <td>Index</td> <td>Administration number in the XSCF of the CPU Activation key.</td> </tr> <tr> <td>Description</td> <td>Type of resources (processor). For CPU Activation, <code>PROC</code> is displayed.</td> </tr> <tr> <td>Count</td> <td>Number of the CPU Activations given to resources.</td> </tr> </table>	Index	Administration number in the XSCF of the CPU Activation key.	Description	Type of resources (processor). For CPU Activation, <code>PROC</code> is displayed.	Count	Number of the CPU Activations given to resources.
Index	Administration number in the XSCF of the CPU Activation key.						
Description	Type of resources (processor). For CPU Activation, <code>PROC</code> is displayed.						
Count	Number of the CPU Activations given to resources.						

EXAMPLES**EXAMPLE 1** Display the CPU Activation key information.

```
XSCF> showcodactivation
Index   Description Count
-----
1  PROC           1
2  PROC           0
```

EXAMPLE 2 Display the CPU Activation key information of the administration number 2 in the raw data format.

```
XSCF> showcodactivation -r -i 2
*Index2
Product: SPARC M10-1
SequenceNumber: 116
Cpu noExpiration 2
Text-Signature-SHA256-RSA2048:
SBxYBSmB32E1ctOidgWV09nGFnWKNtCJ5N3WSlowbRUYlVVySvjncfOrDNteFLzo
.
.
1TSgrjnee9FyEYITT+ddJQ==
```

EXAMPLE 3 Display the CPU Activation key information in the raw data format.

```
XSCF> showcodactivation -r
Permanent Keys:
*Index1
Product: SPARC M10-1
SequenceNumber: 116
Cpu noExpiration 2
Text-Signature-SHA256-RSA2048:
SBxYBSmB32E1ctOidgWV09nGFnWKNtCJ5N3WSlowbRUYlVVySvjncfOrDNteFLzo
.
.
1TSgrjnee9FyEYITT+ddJQ==
*Index2
.
.
```

EXAMPLE 4 Display the detailed CPU Activation key information.

```
XSCF> showcodactivation -v
Index   Description Count
-----
1  PROC           1
Product SPARC M10-1
SequenceNumber: 116
Cpu noExpiration 2
Text-Signature-SHA256-RSA2048:
SBxYBSmB32E1ctOidgWV09nGFnWKNtCJ5N3WSlowbRUYlVVySvjncfOrDNteFLzo
.
.
```

```
1TSgrjnee9FyEYITT+ddJQ==  
-----  
    2 PROC           1  
Product SPARC M10-1  
SequenceNumber: 116  
Cpu noExpiration 2  
Text-Signature-SHA256-RSA2048:  
SBxYBSmB32E1ctOidgWV09nGFnWKNtCJ5N3WSlowbRUYlVVySvjncfOrDNteFLzo  
.  
.  
1TSgrjnee9FyEYITT+ddJQ==
```

EXAMPLE 5 Display the CPU Activation key information of the administration number 2.

```
XSCF> showcodactivation -i 2  
Index   Description Count  
-----  
    2 PROC           1
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **addcodactivation (8)**, **deletecodactivation (8)**, **setcod (8)**, **showcod (8)**, **showcodactivationhistory (8)**, **showcodusage (8)**

showcodactivation(8)



NAME	showcodactivationhistory - Displays the the Capacity on Demand (CoD) logs.
SYNOPSIS	showcodactivationhistory [-M] showcodactivationhistory [-v] -m mail_address showcodactivationhistory [-v] [-u user] [-p proxy [-t proxy_type]] target_url showcodactivationhistory -h
DESCRIPTION	showcodactivationhistory is a command to display the records regarding addition and deletion of CPU Activations keys in the CoD logs.
Privileges	To execute this command, any of the following privileges is required. platadm, platop, fieldeng For details on user privileges, see setprivileges(8).
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. -m <i>mail_address</i> Specifies the email address to which the CoD log is to be sent. -p <i>proxy</i> Specifies the proxy server to be used for transfers. The default transfer type is <code>http</code>, unless modified using the <code>-t proxy_type</code>. The value for proxy must be in the format <i>servername[:port]</i>. -t <i>proxy_type</i> Use with the <code>-p</code> to specify proxy type as <code>http</code>, <code>socks4</code>, or <code>socks5</code>. The default is <code>http</code>. -u <i>user</i> Specifies the user name when logging in to a remote ftp or http server that requires authentication. Prompts for a password. -v Displays details of network activity, which might be helpful in diagnosing network or server problems.
OPERANDS	<p>The following operands are supported.</p> <ul style="list-style-type: none"> <i>target_url</i> Specifies the URL to be the output destination of the CoD logs. The following types of format are supported. <ul style="list-style-type: none"> <code>http://server[:port]/path/file</code> <code>https://server[:port]/path/file</code> <code>ftp://server[:port]/path/file</code> <code>file:///media/usb_msд/path/file</code>

EXAMPLES	<p>EXAMPLE 1 Output the CoD logs.</p> <pre>XSCF> showcodactivationhistory 11/30/2012 01:42:41PM PST: Report Generated SPARC M10-1 SN: 843a996d 10/02/2012 02:08:49PM PST: Activation history initialized: PROC 0 cores 10/15/2012 01:36:13PM PST: Capacity added: PROC 3 cores 10/15/2012 01:46:13PM PST: Capacity added: PROC 0 cores 11/07/2012 01:36:23PM PST: Capacity deleted: PROC 3 cores 11/07/2012 01:46:23PM PST: Capacity deleted: PROC 0 cores 11/27/2012 21:26:22PM PST: Configuration restored: PROC 6 cores 11/28/2012 01:37:12PM PST: Capacity added: PROC 1 cores 11/28/2012 01:47:12PM PST: Capacity added: PROC 4 cores 11/30/2012 01:37:19PM PST: Capacity added: PROC 4 cores 11/30/2012 01:41:19PM PST: Capacity added: PROC 1 cores 11/30/2012 01:42:41PM PST: Summary: PROC 10 cores Signature: yU27yb0oth41UL7hleA2vHL7S1aX4pmkBTIXesD1XEs</pre> <p>EXAMPLE 2 Sending the CoD logs to the specified user via email.</p> <pre>XSCF> showcodactivationhistory -m sysadmin@comany.com XSCF></pre> <p>EXAMPLE 3 Sending the CoD logs to the specified URL via FTP.</p> <pre>XSCF> showcodactivationhistory -u admin ftp://somehost/tmp/ history.txt Password: file transfer complete</pre>				
EXIT STATUS	The following exit values are returned.				
	<table> <tr> <td data-bbox="352 1016 381 1050">0</td><td data-bbox="568 1016 828 1050">Indicates normal end.</td></tr> <tr> <td data-bbox="352 1067 381 1102">>0</td><td data-bbox="568 1067 885 1102">Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	addcodactivation (8) , deletecodactivation (8) , setcod (8) , setsmtip (8) , showcod (8) , showcodactivation (8) , showcodusage (8)				

NAME	showcodusage - Display the usage information of CPU core resources.												
SYNOPSIS	showcodusage [-v] [-M] [-p {resource ppar all}] showcodusage -h												
DESCRIPTION	<p>showcodusage is a command to display the usage information of CPU core resource.</p> <p>If showcodusage is executed with nothing specified, the overview of the CPU Activation in use and installed is displayed with the current status of CPU core resources.</p>												
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td>platadm, platop, fieldeng</td><td>Enables execution for all physical partitions (PPARs).</td></tr> <tr> <td>pparamdm, pparamgr, pparop</td><td>Enables execution for PPARs for which you have access privilege.</td></tr> </table>	platadm, platop, fieldeng	Enables execution for all physical partitions (PPARs).	pparamdm, pparamgr, pparop	Enables execution for PPARs for which you have access privilege.								
platadm, platop, fieldeng	Enables execution for all physical partitions (PPARs).												
pparamdm, pparamgr, pparop	Enables execution for PPARs for which you have access privilege.												
	For details on user privileges, see setprivileges(8) .												
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-M</td><td>Displays text one screen at a time.</td></tr> <tr> <td>-p all</td><td>Displays all usage information of CPU core resources.</td></tr> <tr> <td>-p ppar</td><td>It displays the usage information of CPU core resources for each PPAR. Number of CPU core resources used in the PPAR, the number of CPU core resources installed in the PPAR and the number of CPU core activations allotted to the PPAR are included in the displayed information.</td></tr> <tr> <td>-p resource</td><td>Usage information of CPU core resources is displayed according to the respective types.</td></tr> <tr> <td>-v</td><td>Displays detailed information.</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-p all	Displays all usage information of CPU core resources.	-p ppar	It displays the usage information of CPU core resources for each PPAR. Number of CPU core resources used in the PPAR, the number of CPU core resources installed in the PPAR and the number of CPU core activations allotted to the PPAR are included in the displayed information.	-p resource	Usage information of CPU core resources is displayed according to the respective types.	-v	Displays detailed information.
-h	Displays the usage. Specifying this option with another option or operand causes an error.												
-M	Displays text one screen at a time.												
-p all	Displays all usage information of CPU core resources.												
-p ppar	It displays the usage information of CPU core resources for each PPAR. Number of CPU core resources used in the PPAR, the number of CPU core resources installed in the PPAR and the number of CPU core activations allotted to the PPAR are included in the displayed information.												
-p resource	Usage information of CPU core resources is displayed according to the respective types.												
-v	Displays detailed information.												

EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ If showcodusage -p resource is used, the usage information of CPU core resources regarding the system is displayed. 	
Resource	Type of usable CPU core resources (processor)	The following parameters are displayed.
In Use	PROC	CPU core resources. The unit is cores.
Installed	Number of the CPU core resources currently used in the system	
COD Permitted	If communication with Hypervisor cannot be established, the number of the CPU core resources currently used in the system becomes 0.	
Status	Number of the CPU core resources installed to the system	
OK	Number of the CPU Activations which have been installed	Any of the following CoD statuses
VIOLATION	Indicates that there is enough number of CPU Activations for the CPU core resources in use. In addition, the number of the remaining CPU Activations which can be used.	There are some violation of CPU Activation. The number of the CPU core resources in use which exceeds the number of the CPU Activations available is displayed. May occur if the total number of used CPU core resources exceeds the total number of CPU Activations, that can be allotted to the whole system.
<ul style="list-style-type: none"> ■ If showcodusage -p ppar is used, the following usage information of CPU core resources regarding each PPAR is displayed. 		
PPAR-ID/ Resource	Each PPAR and type of CPU core resources	The CPU core resources with Unused displayed are those not used in PPAR.
In Use	Number of the CPU core resources currently used in PPAR	If connection cannot be established with the hypervisor, the number of CPU core resources that is presently used in the PPAR will be 0.
Installed	Number of the CPU core resources installed to PPAR	

EXAMPLES

	Assigned	Number of the CPU core resources assigned to PPAR
--	----------	---

Users with privileges regarding the platform can display the overview of the usage information on both resources and PPAR. Users with privileges regarding PPAR can only display the overview of the key information for which they have the privilege and reports of the CPU core Activation not in use.

EXAMPLE 1 Display the usage information of CPU core resources for each resource type.

```
XSCF> showcodusage -p resource
Resource In Use Installed CoD Permitted Status
----- ----- ----- -----
PROC      4        4          16 OK: 12 cores available
```

EXAMPLE 2 Display the usage information of CPU core resources for each PPAR (In case of a 5BB configuration on SPARC M10-4S).

```
XSCF> showcodusage -p ppar
PPAR-ID/Resource In Use Installed Assigned
----- -----
0 - PROC       15      64      32 cores
1 - PROC       16      32      32 cores
2 - PROC       16      32      32 cores
3 - PROC       16      32      32 cores
4 - PROC        0       0       0 cores
Unused - PROC    0       0      32 cores
```

EXAMPLE 3 Display the usage information of CPU core resources for each resource and PPAR (In case the following command is executed by a user who holds platform privileges).

```
XSCF> showcodusage -p all
Resource In Use Installed CoD Permitted Status
----- -----
PROC      63      160          61 VIOLATION: 2 cores in excess
PPAR-ID/Resource In Use Installed Assigned
----- -----
0 - PROC       15      64      32 cores
1 - PROC       16      64      32 cores
2 - PROC       15      32      32 cores
3 - PROC       15      32      32 cores
4 - PROC        0       0       0 cores
5 - PROC        0       0       0 cores
6 - PROC        0       0       0 cores
7 - PROC        0       0       0 cores
8 - PROC        0       0       0 cores
9 - PROC        0       0       0 cores
10 - PROC      0       0       0 cores
11 - PROC      0       0       0 cores
12 - PROC      0       0       0 cores
```

showcodusage(8)

13 - PROC	0	0	0 cores
14 - PROC	0	0	0 cores
15 - PROC	0	0	0 cores
Unused - PROC	0	0	32 cores

EXAMPLE 4 Display the usage information of CPU core resources for each resource and PPAR (In case of a CPU core activation violation on SPARC M10-4S).

```
XSCF> showcodusage -p all
Resource In Use Installed CoD Permitted Status
----- -----
PROC      63      160      160 16 OK: 97 cores available
PPAR-ID/Resource In Use Installed Assigned
----- -----
0 - PROC      15      64      32 cores
1 - PROC      16      64      32 cores
2 - PROC      15      32      32 cores
3 - PROC      15      32      32 cores
4 - PROC      0       0       0 cores
5 - PROC      0       0       0 cores
6 - PROC      0       0       0 cores
7 - PROC      0       0       0 cores
8 - PROC      0       0       0 cores
9 - PROC      0       0       0 cores
10 - PROC     0       0       0 cores
11 - PROC     0       0       0 cores
12 - PROC     0       0       0 cores
13 - PROC     0       0       0 cores
14 - PROC     0       0       0 cores
15 - PROC     0       0       0 cores
Unused - PROC 0       0       32 cores
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

addcodactivation(8), **deletecodactivation(8)**, **setcod(8)**, **showcod(8)**,
showcodactivation(8), **showcodactivationhistory(8)**, **showcodusage(8)**

NAME	showconsolepath - Displays the information of the domain console that is currently connected to the physical partition (PPAR).														
SYNOPSIS	showconsolepath -a showconsolepath -p <i>ppar_id</i> showconsolepath -h														
DESCRIPTION	<p>showconsolepath is a command to display the information of the domain consoles currently connected to PPAR.</p> <p>The following contents are displayed.</p> <table> <tr> <td>User</td> <td>XSCF user accounts connected to the domain consoles</td> </tr> <tr> <td>PPAR-ID</td> <td>PPAR ID</td> </tr> <tr> <td>RO/RW</td> <td>Type of domain console</td> </tr> <tr> <td></td> <td>ro Read-only console</td> </tr> <tr> <td></td> <td>rw Writable console</td> </tr> <tr> <td>escape</td> <td>Escape sign set in console</td> </tr> <tr> <td>Date</td> <td>Date and time when XSCF connected to the domain console</td> </tr> </table>	User	XSCF user accounts connected to the domain consoles	PPAR-ID	PPAR ID	RO/RW	Type of domain console		ro Read-only console		rw Writable console	escape	Escape sign set in console	Date	Date and time when XSCF connected to the domain console
User	XSCF user accounts connected to the domain consoles														
PPAR-ID	PPAR ID														
RO/RW	Type of domain console														
	ro Read-only console														
	rw Writable console														
escape	Escape sign set in console														
Date	Date and time when XSCF connected to the domain console														
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>useradm, platadm, plaptop, Enables execution for all PPARs. fieldeng</p> <p>pparamdm, pparamgr, pparop Enables execution for PPARs for which you have access privilege.</p> <p>For details on user privileges, see setprivileges(8).</p>														
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the information of the consoles connected to all accessible PPARs. -h Displays the usage. Specifying this option with another option or operand causes an error. -p <i>ppar_id</i> Specifies the PPAR-ID to display the information. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. 														

EXTENDED DESCRIPTION	To one PPAR, just one writable console can be connected while multiple read-only consoles can be connected.
EXAMPLES	EXAMPLE 1 Display the information of the consoles connected to all accessible PPARs. <pre>XSCF> showconsolepath -a User PPAR-ID ro/rw escape Date nakagawa 00 rw @ Fri Jul 29 21:23:34 hana 00 ro # Fri Jul 29 09:49:12 k-okano 00 ro # Fri Jul 29 18:21:50 yuuki 01 rw Fri Jul 29 10:19:18 uchida 01 ro * Fri Jul 29 13:30:41</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	console (8), sendbreak (8)

NAME	showdate - Displays the date and time of the XSCF clock.
SYNOPSIS	showdate [-u] showdate -h
DESCRIPTION	showdate is a command to display the date and time of the XSCF clock.
Privileges	To execute this command, any of the following privileges is required. useradm, platadm, plaptop, Enables execution for all PPARs. auditadm, auditop, fieldeng pparamadm, pparamgr, pparop Enables execution for PPARs for which you have access privilege. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error. -u Specifies the time in the Universal Coordinated Time (UTC). If omitted, the local time is applicable.
EXTENDED DESCRIPTION	You can set the date and time of the XSCF clock by using setdate(8) .
EXAMPLES	EXAMPLE 1 Display the current time in local time (JST).
	XSCF> showdate Sat Oct 20 14:53:00 JST 2012
	EXAMPLE 2 Display the current time in UTC.
	XSCF> showdate -u Sat Oct 20 05:56:15 UTC 2012
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setdate (8) , settimezone (8) , showtimezone (8)

showdate(8)



NAME	showdateoffset - Displays the difference between the system time and the Hypervisor time of each physical partition (PPAR).
SYNOPSIS	<pre>showdateoffset -p <i>ppar_id</i> showdateoffset [-a] showdateoffset -h</pre>
DESCRIPTION	<p>showdateoffset is a command to display the difference between the system time managed by the XSCF clock and the Hyper visor time managed by each PPAR clock, by seconds.</p> <p>In XSCF, the difference between the system time and the Hypervisor time of each PPAR is stored. If the system time is set by <code>setdate(8)</code>, etc., the difference between the Hypervisor time of each PPAR and the system time is updated.</p> <p>The difference of the time is retained even if PPAR or the system is restarted.</p>
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p><code>useradm</code>, <code>platadm</code>, <code>platop</code>, Enables execution for all PPARs. <code>fieldeng</code></p> <p><code>pparamadm</code>, <code>pparmgr</code>, <code>pparop</code> Enables execution for PPARs for which you have access privilege.</p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the differences form the Hypervisor times of all PPARs. Even if the option is omitted, the difference from the Hypervisor times of all PPARs as in the case that the -a option is specified. -h Displays the usage. Specifying this option with another option or operand causes an error. -p <i>ppar_id</i> Specifies the PPAR-ID to display the difference from the system time. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>.
EXAMPLES	<p>EXAMPLE 1 Display the difference between the system time and the Hypervisor time of PPAR-ID 1.</p> <pre>XSCF> showdateoffset -p 1 PPAR-ID Domain Date Offset 01 0 sec</pre>

EXAMPLE 2 Display the differences between the system time and the Hypervisor times of all PPARs.

```
XSCF> showdateoffset -a
PPAR-ID      Domain Date Offset
00            0 sec
01            0 sec
02            0 sec
03            0 sec
04            0 sec
05            0 sec
06            0 sec
07            0 sec
08            0 sec
09            0 sec
10            0 sec
11            0 sec
12            0 sec
13            0 sec
14            0 sec
15            0 sec
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **resetdateoffset (8)**

NAME	showdomainconfig - Displays the configuration information of the logical domain of the specified physical partition (PPAR).														
SYNOPSIS	showdomainconfig -p <i>ppar_id</i> [-M] showdomainconfig -h														
DESCRIPTION	<p>showdomainconfig is a command to display the logical domain configuration information.</p> <p>The following setting values are displayed.</p> <table> <tr> <td>Index</td><td>Administration number in the XSCF of logical domain configuration</td></tr> <tr> <td>PPAR-ID</td><td>PPAR ID</td></tr> <tr> <td>Booting config (Current)</td><td>Logical domain configuration name used in the PPAR currently in operation</td></tr> <tr> <td>Booting config (Next)</td><td>Logical domain configuration name used next time when PPAR is started</td></tr> <tr> <td>config_name</td><td>Logical domain configuration name</td></tr> <tr> <td>date_created</td><td>Date and time to create logical domain configuration</td></tr> <tr> <td>domains</td><td>Number of the logical domains included in logical domain configuration</td></tr> </table>	Index	Administration number in the XSCF of logical domain configuration	PPAR-ID	PPAR ID	Booting config (Current)	Logical domain configuration name used in the PPAR currently in operation	Booting config (Next)	Logical domain configuration name used next time when PPAR is started	config_name	Logical domain configuration name	date_created	Date and time to create logical domain configuration	domains	Number of the logical domains included in logical domain configuration
Index	Administration number in the XSCF of logical domain configuration														
PPAR-ID	PPAR ID														
Booting config (Current)	Logical domain configuration name used in the PPAR currently in operation														
Booting config (Next)	Logical domain configuration name used next time when PPAR is started														
config_name	Logical domain configuration name														
date_created	Date and time to create logical domain configuration														
domains	Number of the logical domains included in logical domain configuration														
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>useradm, platadm, platop, fieldeng, pparadm, pparmgr, pparop</p> <p>For details on user privileges, see setprivileges(8).</p>														
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. -p <i>ppar_id</i> Specifies the PPAR-ID to display the logical domain configuration information. Depending on the system configuration, you can specify only one integer from 0 to 15 for <i>ppar_id</i>. 														

EXAMPLES

EXAMPLE 1 Display the logical domain configuration information set in PPAR-ID 0.

```
XSCF> showdomainconfig -p 0
PPAR-ID      :0
Booting config
  (Current)   :ldm-set1
  (Next)      :ldm-set2
-----
-----
Index       :1
config_name :factory-default
domains     :1
date_created:-
-----
-----
Index       :2
config_name :ldm-set1
domains     :8
date_created:'2012-08-08 11:34:56'
-----
-----
Index       :3
config_name :ldm-set2
domains     :20
date_created:'2012-08-09 12:43:56'
-----
-----
Index       :4
config_name :initial
domains     :256
date_created:'2012-08-08 11:34:56'
XSCF>
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

setdomainconfig (8)

NAME	showdomainstatus - Displays the status of the current logical domain.																				
SYNOPSIS	showdomainstatus -p <i>ppar_id</i> [-M] [-g <i>domainname</i>] showdomainstatus -h																				
DESCRIPTION	<p>showdomainstatus is a command to display the status of the current logical domain.</p> <p>The statuses to be displayed are below.</p> <ul style="list-style-type: none"> ■ Logical Domain Name Host name of logical domain. If the number of characters in the host name exceeds 21, the characters after the 21st characters are not displayed. If the logical domain has not been started, "-" is displayed. ■ Status Operating status of the current logical domain. The following statuses are displayed. <table> <tbody> <tr> <td>Host Stopped</td> <td>The logical domain is stopped</td> </tr> <tr> <td>Solaris booting</td> <td>In the status in which the Oracle Solaris of the logical domain is starting</td> </tr> <tr> <td>Solaris running</td> <td>In the status in which the Oracle Solaris of the logical domain is running</td> </tr> <tr> <td>Solaris halting</td> <td>In the status in which the Oracle Solaris of the logical domain is executing the shutdown processing</td> </tr> <tr> <td>Solaris suspended</td> <td>In the status in which the Oracle Solaris of the logical domain is suspended</td> </tr> <tr> <td>Solaris powering down</td> <td>In the status in which the Oracle Solaris of the logical domain is executing the power-off processing</td> </tr> <tr> <td>Solaris rebooting</td> <td>In the status in which the Oracle Solaris of the logical domain is being reset</td> </tr> <tr> <td>Solaris panicking</td> <td>In the status in which a panic is occurring in the Oracle Solaris of the logical domain</td> </tr> <tr> <td>Solaris debugging</td> <td> In the status in which the kmdb prompt of the logical domain is stopped In the status in which Kernel Debug is running </td> </tr> <tr> <td>OpenBoot initializing</td> <td>In the status in which the OpenBoot PROM of the logical domain is executing the initialization processing</td> </tr> </tbody> </table>	Host Stopped	The logical domain is stopped	Solaris booting	In the status in which the Oracle Solaris of the logical domain is starting	Solaris running	In the status in which the Oracle Solaris of the logical domain is running	Solaris halting	In the status in which the Oracle Solaris of the logical domain is executing the shutdown processing	Solaris suspended	In the status in which the Oracle Solaris of the logical domain is suspended	Solaris powering down	In the status in which the Oracle Solaris of the logical domain is executing the power-off processing	Solaris rebooting	In the status in which the Oracle Solaris of the logical domain is being reset	Solaris panicking	In the status in which a panic is occurring in the Oracle Solaris of the logical domain	Solaris debugging	In the status in which the kmdb prompt of the logical domain is stopped In the status in which Kernel Debug is running	OpenBoot initializing	In the status in which the OpenBoot PROM of the logical domain is executing the initialization processing
Host Stopped	The logical domain is stopped																				
Solaris booting	In the status in which the Oracle Solaris of the logical domain is starting																				
Solaris running	In the status in which the Oracle Solaris of the logical domain is running																				
Solaris halting	In the status in which the Oracle Solaris of the logical domain is executing the shutdown processing																				
Solaris suspended	In the status in which the Oracle Solaris of the logical domain is suspended																				
Solaris powering down	In the status in which the Oracle Solaris of the logical domain is executing the power-off processing																				
Solaris rebooting	In the status in which the Oracle Solaris of the logical domain is being reset																				
Solaris panicking	In the status in which a panic is occurring in the Oracle Solaris of the logical domain																				
Solaris debugging	In the status in which the kmdb prompt of the logical domain is stopped In the status in which Kernel Debug is running																				
OpenBoot initializing	In the status in which the OpenBoot PROM of the logical domain is executing the initialization processing																				

	OpenBoot Running	In the status in which the OpenBoot PROM of the logical domain has completed initialization or the operation is stopped by the ok prompt
	OpenBoot Primary Boot Loader	In the status in which the Oracle Solaris of the logical domain is loading
	OpenBoot Running OS Boot	In the status in which the Oracle Solaris of the logical domain is in transition
	OS Started. No state support	In the status in which SUNW, soft-state-supported CIF has not been executed and SUNW, set-trap-table CIF is in execution
	OpenBoot Running Host Halted	In the status in which the Oracle Solaris of the logical domain is executing init 0
	OpenBoot Exited	In the status in which the ok prompt of the logical domain is executing reset-all
	OpenBoot Host Received Break	In the status in which the Oracle Solaris of the logical domain called enter service
	OpenBoot Failed	In the status in which an error occurred in the initialization of the logical domain by OpenBoot PROM
	Unknown	In the status in which the host name matching that of the logical domain specified by the option by the user is not found and unknown
	-	It includes the status in which add-spconfig has not been executed by Logical Domains (LDom) Manager.
	-	In the status in which no physical partition (PPAR) is defined
Privileges	To execute this command, any of the following privileges is required.	
	useradm, platadm, platop, Enables execution for all PPARs. fieldeng	
	pparamgr, pparop Enables execution for PPARs for which you have access privilege.	
	For details on user privileges, see <code>setprivileges(8)</code> .	

OPTIONS

The following options are supported.

- g *domainname*** Specifies the host name of the logical domain to be displayed. If the -g option is omitted, the information of all logical domains under the PPAR to be displayed is displayed.
- h** Up to 255 characters can be used to specify *domainname*. To include "#" in *domainname*, specify a backslash (\) just before it like "\#." To include ";" specify a backslash (\) just before it like "\;." To include "(" specify a backslash (\) just before it like "\(. To include ")", specify a backslash (\) just before it like "\).)" To include a symbol, specify it by enclosing the entire value in single quotation marks ('') or double quotation marks (""). (e.g. 'guest01').
- M** Displays text one screen at a time.
- p *ppar_id*** Displays the usage. Specifying this option with another option or operand causes an error.
- p *ppar_id*** Specifies the PPAR-ID to display the status. Depending on the system configuration, you can specify an integer from 0 to 15 for *ppar_id*.

EXAMPLES

EXAMPLE 1 Display the statuses of all logical domains on PPAR-ID 0.

```
XSCF> showdomainstatus -p 0
Logical Domain Name      Status
primary                  Solaris running
guest00                  Solaris running
guest01                  Solaris booting
guest02                  Solaris powering down
guest03                  Solaris panicking
guest04                  Shutdown Started
guest05                  OpenBoot initializing
guest06                  OpenBoot Primary Boot Loader
```

EXAMPLE 2 Display the statuses of the logical domain whose name is guest01 on PPAR-ID 0.

```
XSCF> showdomainstatus -p 0 -g guest01
Logical Domain Name      Status
guest01                  Solaris powering down
```

EXAMPLE 3 Displays the status of the logical domain named as guest01 on PPAR-ID 0 (no PSB is assigned to PPAR).

```
XSCF> showdomainstatus -p 0 -g guest01
```

showdomainstatus(8)

```
Logical Domain Name      Status
-
PPAR 0 is not configured.
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **showpparstatus (8)**

NAME	showdualpowerfeed - Displays the status of the dual power feed mode.
SYNOPSIS	showdualpowerfeed showdualpowerfeed -h
DESCRIPTION	showdualpowerfeed is a command to display the status of the dual power feed mode. Note – The SPARC M10 Systems have redundant Power Supply Units. Even when the dual power feed mode is displayed as enabled or disabled by showdualpowerfeed, it won't make any changes on the system behavior including redundancy management of power. This function can be used as "memo" for administrator to distinguish whether a customer's facility is configured as dual power feed or not. The dual power feed mode can be set by <code>setdualpowerfeed(8)</code> .
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	<p>EXAMPLE 1 On the SPARC M10-1, displays the current setting of dual power feed mode.</p> <pre>XSCF> showdualpowerfeed BB#00: Dual power feed is enabled.</pre> <p>EXAMPLE 2 On the SPARC M10-4S (with crossbar boxes), displays the current setting of dual power feed mode.</p> <pre>XSCF> showdualpowerfeed BB#00:Dual power feed is disabled. BB#01:Dual power feed is disabled. BB#02:Dual power feed is disabled. BB#03:Dual power feed is disabled. BB#04:Dual power feed is disabled. BB#05:Dual power feed is disabled. BB#06:Dual power feed is disabled. BB#07:Dual power feed is disabled. BB#08:Dual power feed is disabled. BB#09:Dual power feed is disabled. BB#10:Dual power feed is disabled.</pre>

showdualpowerfeed(8)

```
BB#11:Dual power feed is disabled.  
BB#12:Dual power feed is disabled.  
BB#13:Dual power feed is disabled.  
BB#14:Dual power feed is disabled.  
BB#15:Dual power feed is disabled.  
XBBOX#80:Dual power feed is disabled.  
XBBOX#81:Dual power feed is disabled.  
XBBOX#82:Dual power feed is disabled.  
XBBOX#83:Dual power feed is disabled.
```

EXAMPLE 3 On the SPARC M10-4S (without crossbar boxes), displays the current setting of dual power feed mode.

```
XSCF> showdualpowerfeed  
BB#00:Dual power feed is enabled.  
BB#01:Dual power feed is enabled.
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

setdualpowerfeed (8)

NAME	showemailreport - Displays the settings data of the e-mail report.
SYNOPSIS	showemailreport [-v] showemailreport -h
DESCRIPTION	showemailreport is a command to display the settings data of the e-mail report. If it is used without specifying any options, the settings data of the current e-mail report is displayed.
Privileges	To execute this command, any of the following privileges is required. <code>platadm</code> , <code>platop</code> , <code>fieldeng</code> For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. <code>-h</code> Displays the usage. Specifying this option with another option or operand causes an error. <code>-v</code> Displays detailed information.
EXAMPLES	EXAMPLE 1 Display the settings of the e-mail report. <code>XSCF> showemailreport</code> EMail Reporting: enabled Email Recipient Address: admin@company.com, adm2@company.com
EXIT STATUS	The following exit values are returned. <code>0</code> Indicates normal end. <code>>0</code> Indicates error occurrence.
SEE ALSO	setemailreport (8)

showemailreport(8)

NAME	showenvironment - Displays the intake-air temperature and humidity, temperature sensor information, voltage sensor information, and fan rotation information of the system.														
SYNOPSIS	showenvironment [-M] [temp volt Fan power air] showenvironment -h														
DESCRIPTION	<p>showenvironment is a command to display the following information.</p> <p>The following information is displayed.</p> <table> <tr> <td>Environment information</td><td>Intake-air temperature of the system</td></tr> <tr> <td>Humidity information</td><td>Intake-air temperature of the system and exhaust-air temperatures of each component</td></tr> <tr> <td></td><td>You can confirm the exhaust-air temperatures of the following components. SPARC M10-1 Mother board unit (MBU), CPU, DIMM, SW, SAS SPARC M10-1/M10-4 (without crossbar box) CMUU, CMUL, CPU, DIMM, SW, SAS, XBChip SPARC M10-4S (with crossbar box) Display information of SPARC M10-4S (with crossbar box) and temperature information inside the crossbar box</td></tr> <tr> <td>Voltage information</td><td>Voltage sensor value Displays the margin settings information if voltage margin is set.</td></tr> <tr> <td>Fan rotation information</td><td>Rotation status and rotation speed of fan</td></tr> <tr> <td>Power monitor</td><td>Power consumption information</td></tr> <tr> <td>Air flow</td><td>Exhaust-air amount of the system</td></tr> </table>	Environment information	Intake-air temperature of the system	Humidity information	Intake-air temperature of the system and exhaust-air temperatures of each component		You can confirm the exhaust-air temperatures of the following components. SPARC M10-1 Mother board unit (MBU), CPU, DIMM, SW, SAS SPARC M10-1/M10-4 (without crossbar box) CMUU, CMUL, CPU, DIMM, SW, SAS, XBChip SPARC M10-4S (with crossbar box) Display information of SPARC M10-4S (with crossbar box) and temperature information inside the crossbar box	Voltage information	Voltage sensor value Displays the margin settings information if voltage margin is set.	Fan rotation information	Rotation status and rotation speed of fan	Power monitor	Power consumption information	Air flow	Exhaust-air amount of the system
Environment information	Intake-air temperature of the system														
Humidity information	Intake-air temperature of the system and exhaust-air temperatures of each component														
	You can confirm the exhaust-air temperatures of the following components. SPARC M10-1 Mother board unit (MBU), CPU, DIMM, SW, SAS SPARC M10-1/M10-4 (without crossbar box) CMUU, CMUL, CPU, DIMM, SW, SAS, XBChip SPARC M10-4S (with crossbar box) Display information of SPARC M10-4S (with crossbar box) and temperature information inside the crossbar box														
Voltage information	Voltage sensor value Displays the margin settings information if voltage margin is set.														
Fan rotation information	Rotation status and rotation speed of fan														
Power monitor	Power consumption information														
Air flow	Exhaust-air amount of the system														
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>useradm, platadm, plaptop, fieldeng</p> <p>For details on user privileges, see setprivileges(8).</p>														

OPTIONS	The following options are supported.														
	<ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. 														
OPERANDS	The following operands are supported.														
	<table border="0"> <tr> <td>temp volt Fan</td> <td>Specifies the type of the information to be displayed. Any of the following types can be specified. If omitted, the information of the intake-air temperature of the system is displayed.</td> </tr> <tr> <td> power air</td> <td></td> </tr> <tr> <td>temp</td> <td>Displays the temperature information.</td> </tr> <tr> <td>volt</td> <td>Displays the voltage information.</td> </tr> <tr> <td>Fan</td> <td>Displays the rotation information of fan.</td> </tr> <tr> <td>power</td> <td>Displays the power consumption information.</td> </tr> <tr> <td>air</td> <td>Displays the exhaust-air amount of the system.</td> </tr> </table>	temp volt Fan	Specifies the type of the information to be displayed. Any of the following types can be specified. If omitted, the information of the intake-air temperature of the system is displayed.	 power air		temp	Displays the temperature information.	volt	Displays the voltage information.	Fan	Displays the rotation information of fan.	power	Displays the power consumption information.	air	Displays the exhaust-air amount of the system.
temp volt Fan	Specifies the type of the information to be displayed. Any of the following types can be specified. If omitted, the information of the intake-air temperature of the system is displayed.														
 power air															
temp	Displays the temperature information.														
volt	Displays the voltage information.														
Fan	Displays the rotation information of fan.														
power	Displays the power consumption information.														
air	Displays the exhaust-air amount of the system.														
EXTENDED DESCRIPTION	The information displayed by the power and air operands does not include the information of the PCI Expansion Unit or the peripheral I/O devices.														
EXAMPLES	<p>EXAMPLE 1 Display the intake-air temperature of the system.</p> <pre>XSCF> showenvironment BB#00 Temperature:30.71C BB#01 Temperature:29.97C</pre> <p>EXAMPLE 2 Display the temperature information of the system and each component in SPARC M10-4S (with crossbar box).</p> <pre>XSCF> showenvironment temp BB#00 Temperature:30.71C CMUU CPU#0 CPU#0:45.21C CPU#0:45.42C CPU#0:43.24C CPU#0:47.11C CPU#1 CPU#1:45.21C CPU#1:45.42C CPU#1:43.24C</pre>														

```

CPU#1:47.11C
MEM#00A:55.25C
MEM#00B:53.21C
MEM#01A:52.12C
MEM#01B:55.31C
CMUL
CPU#0
    CPU#0:45.21C
    CPU#0:45.42C
    CPU#0:43.24C
    CPU#0:47.11C
CPU#1
    CPU#1:45.21C
    CPU#1:45.42C
    CPU#1:43.24C
    CPU#1:47.11C
    MEM#00A:55.25C
    MEM#00B:53.21C
    MEM#01A:52.12C
    MEM#01B:55.31C
    SW#0:45.55C
    SW#1:45.55C
    SW#2:45.55C
    SW#3:45.55C
    SAS#0:52.23C
XBU#0
    XB#0
        XB#0:52.12C
        XB#0:52.12C
XBU#1
    XB#0
        XB#0:52.12C
        XB#0:52.12C
BB#01
    Temperature:30.71C
    CMUU
    CPU#0
        CPU#0:45.21C
        CPU#0:45.42C
        CPU#0:43.24C
        CPU#0:47.11C
    CPU#1
        CPU#1:45.21C
        CPU#1:45.42C
        CPU#1:43.24C
        CPU#1:47.11C
        MEM#00A:55.25C
        MEM#00B:53.21C
        MEM#01A:52.12C
        MEM#01B:55.31C
    CMUL
    CPU#0
        CPU#0:45.21C
        CPU#0:45.42C

```

```
showenvironment(8)
```

```
          CPU#0:43.24C
          CPU#0:47.11C
CPU#1
          CPU#1:45.21C
          CPU#0:45.42C
          CPU#0:43.24C
          CPU#0:47.11C
MEM#00A:55.25C
MEM#00B:53.21C
MEM#01A:52.12C
MEM#01B:55.31C
SW#0:45.55C
SW#1:45.55C
SW#2:45.55C
SW#3:45.55C
SAS#0:52.23C
XBU#0
XB#0
          XB#0:52.12C
          XB#0:52.12C
XBU#1
XB#0
          XB#0:52.12C
          XB#0:52.12C
XBBOX#80
Temperature:30.71C
XBU#0
XB#0
          XB#0:52.12C
          XB#0:52.12C
XB#1
          XB#1:52.12C
          XB#1:52.12C
XBBOX#81
Temperature:30.71C
XBU#0
XB#0
          XB#0:52.12C
          XB#0:52.12C
XB#1
          XB#1:52.12C
          XB#1:52.12C
XSCF>
```

EXAMPLE 3 Display the voltage information of the system and each component in SPARC M10-1.

```
XSCF> showenvironment volt
MBU
  0.89V Power Supply Group:0.890V
  0.90V#0 Power Supply Group:0.900V
  0.90V#1 Power Supply Group:0.900V
  0.91V Power Supply Group:0.910V
```

```

1.0V#0 Power Supply Group:1.000V
1.0V#1 Power Supply Group:1.000V
1.2V#0 Power Supply Group:1.200V
1.2V#1 Power Supply Group:1.200V
1.35V#0 Power Supply Group:1.350V
1.35V#1 Power Supply Group:1.350V
1.5V#0 Power Supply Group:1.500V
1.5V#1 Power Supply Group:1.500V
1.8V Power Supply Group:1.800V
PSUBP
3.3V Power Supply Group:3.300V
5.0V Power Supply Group:5.000V
PSU#0
12V Power Supply Group:12.000V
PSU#1
12V Power Supply Group:12.000V
XSCF>

```

EXAMPLE 4 Display the voltage information of the system and each component in SPARC M10-4S (with crossbar box).

```

XSCF> showenvironment volt
BB#00
CMUL
0.89V-0 Power Supply Group:0.890V
0.89V-1 Power Supply Group:0.890V
0.90V#0-0 Power Supply Group:0.900V
0.90V#0-1 Power Supply Group:0.900V
0.90V#1 Power Supply Group:0.900V
0.90V#2 Power Supply Group:0.900V
0.91V#0-0 Power Supply Group:0.910V
0.91V#0-1 Power Supply Group:0.910V
0.91V#1-0 Power Supply Group:0.910V
0.91V#1-1 Power Supply Group:0.910V
1.0V#0 Power Supply Group:1.000V
1.0V#1 Power Supply Group:1.000V
1.2V Power Supply Group:1.200V
1.35V#0-0 Power Supply Group:1.350V
1.35V#0-1 Power Supply Group:1.350V
1.35V#1-0 Power Supply Group:1.350V
1.35V#1-1 Power Supply Group:1.350V
1.5V-0 Power Supply Group:1.500V
1.5V-1 Power Supply Group:1.500V
1.8V#0 Power Supply Group:1.800V
1.8V#1 Power Supply Group:1.800V
3.3V#0 Power Supply Group:3.300V
3.3V#1 Power Supply Group:3.300V
5.0V#0 Power Supply Group:5.000V
5.0V#1 Power Supply Group:5.000V
5.0V#2 Power Supply Group:5.000V
CMUU
0.89V-0 Power Supply Group:0.890V
0.89V-1 Power Supply Group:0.890V

```

showenvironment(8)

0.90V-0 Power Supply Group:0.900V
0.90V-1 Power Supply Group:0.900V
0.91V#0-0 Power Supply Group:0.910V
0.91V#0-1 Power Supply Group:0.910V
0.91V#1-0 Power Supply Group:0.910V
0.91V#1-1 Power Supply Group:0.910V
1.35V#0-0 Power Supply Group:1.350V
1.35V#0-1 Power Supply Group:1.350V
1.35V#1-0 Power Supply Group:1.350V
1.35V#1-1 Power Supply Group:1.350V
1.5V-0 Power Supply Group:1.500V
1.5V-1 Power Supply Group:1.500V
5.0V#1 Power Supply Group:5.000V
5.0V#2 Power Supply Group:5.000V
PSUBP
5.0V Power Supply Group:5.000V
XBU
0.85V Power Supply Group:0.850V
0.9V Power Supply Group:0.900V
1.5V Power Supply Group:1.500V
3.3V Power Supply Group:3.300V
THB
0.9V Power Supply Group:0.900V
1.8V Power Supply Group:1.800V
3.3V Power Supply Group:3.300V
BB#01
CMUL
0.89V-0 Power Supply Group:0.890V
0.89V-1 Power Supply Group:0.890V
0.90V#0-0 Power Supply Group:0.900V
0.90V#0-1 Power Supply Group:0.900V
0.90V#1 Power Supply Group:0.900V
0.90V#2 Power Supply Group:0.900V
0.91V#0-0 Power Supply Group:0.910V
0.91V#0-1 Power Supply Group:0.910V
0.91V#1-0 Power Supply Group:0.910V
0.91V#1-1 Power Supply Group:0.910V
1.0V#0 Power Supply Group:1.000V
1.0V#1 Power Supply Group:1.000V
1.2V Power Supply Group:1.200V
1.35V#0-0 Power Supply Group:1.350V
1.35V#0-1 Power Supply Group:1.350V
1.35V#1-0 Power Supply Group:1.350V
1.35V#1-1 Power Supply Group:1.350V
1.5V-0 Power Supply Group:1.500V
1.5V-1 Power Supply Group:1.500V
1.8V#0 Power Supply Group:1.800V
1.8V#1 Power Supply Group:1.800V
3.3V#0 Power Supply Group:3.300V
3.3V#1 Power Supply Group:3.300V
5.0V#0 Power Supply Group:5.000V
5.0V#1 Power Supply Group:5.000V
5.0V#2 Power Supply Group:5.000V
CMUU

```

0.89V-0 Power Supply Group:0.890V
0.89V-1 Power Supply Group:0.890V
0.90V-0 Power Supply Group:0.900V
0.90V-1 Power Supply Group:0.900V
0.91V#0-0 Power Supply Group:0.910V
0.91V#0-1 Power Supply Group:0.910V
0.91V#1-0 Power Supply Group:0.910V
0.91V#1-1 Power Supply Group:0.910V
1.35V#0-0 Power Supply Group:1.350V
1.35V#0-1 Power Supply Group:1.350V
1.35V#1-0 Power Supply Group:1.350V
1.35V#1-1 Power Supply Group:1.350V
1.5V-0 Power Supply Group:1.500V
1.5V-1 Power Supply Group:1.500V
5.0V#1 Power Supply Group:5.000V
5.0V#2 Power Supply Group:5.000V
PSUBP
5.0V Power Supply Group:5.000V
XBU
0.85V Power Supply Group:0.850V
0.9V Power Supply Group:0.900V
1.5V Power Supply Group:1.500V
3.3V Power Supply Group:3.300V
THB
0.9V Power Supply Group:0.900V
1.8V Power Supply Group:1.800V
3.3V Power Supply Group:3.300V
XBBOX#80
XBU#0
0.85V#0 Power Supply Group:0.850V
0.85V#0 Power Supply Group:0.850V
0.9V#0 Power Supply Group:0.900V
0.9V#1 Power Supply Group:0.900V
1.5V Power Supply Group:1.500V
3.3V Power Supply Group:3.300V
XBBOX#81
XBU#0
0.85V#0 Power Supply Group:0.850V
0.85V#0 Power Supply Group:0.850V
0.9V#0 Power Supply Group:0.900V
0.9V#1 Power Supply Group:0.900V
1.5V Power Supply Group:1.500V
3.3V Power Supply Group:3.300V
XSCF>

```

EXAMPLE 5 Display the voltage information in the case that the voltage margin settings are performed.

```

XSCF> showenvironment volt
margin:+10%
PSU
12V Power Supply Group:12.000V
5.0V Power Supply Group:5.000V

```

EXAMPLE 6 Display the fan rotation information of the system in SPARC M10-4S (with crossbar box).

```
XSCF> showenvironment Fan
BB#00
    FANU#0:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#1:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#2:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#3:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#4:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    PSU#0
        PSU#0: 3878rpm
    PSU#1
        PSU#0: 3878rpm
BB#01
    FANU#0:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#1:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#2:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#3:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#4:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    PSU#0
        PSU#0: 3878rpm
    PSU#1
        PSU#0: 3878rpm
XBBOX#80
    FANU#0:Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#1:Low speed (Level-4)
```

```
FAN#0: 4101rpm
FAN#1: 4101rpm
FANU#2: Low speed (Level-4)
    FAN#0: 4101rpm
    FAN#1: 4101rpm
FANU#3: Low speed (Level-4)
    FAN#0: 4101rpm
    FAN#1: 4101rpm
FANU#4: Low speed (Level-4)
    FAN#0: 4101rpm
    FAN#1: 4101rpm
FANU#5: Low speed (Level-4)
    FAN#0: 4101rpm
    FAN#1: 4101rpm
FANU#6: Low speed (Level-4)
    FAN#0: 4101rpm
    FAN#1: 4101rpm
FANU#7: Low speed (Level-4)
    FAN#0: 4101rpm
    FAN#1: 4101rpm
PSU#0
    PSU#0: 3878rpm
PSU#1
    PSU#0: 3878rpm
XBBOX#81
    FANU#0: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#1: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#2: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#3: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#4: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#5: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#6: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
    FANU#7: Low speed (Level-4)
        FAN#0: 4101rpm
        FAN#1: 4101rpm
PSU#0
    PSU#0: 3878rpm
PSU#1
    PSU#0: 3878rpm
```

```
show environment(8)
```

EXAMPLE 7 Display the power consumption information of the system.

```
XSCF> showenvironment power
Power Supply Maximum      :1000W
Installed Hardware Minimum:718W
Peak Permitted             :3725W
BB#00
    Permitted AC power consumption:1000W
    Actual AC power consumption   :38W
BB#01
    Permitted AC power consumption:470W
    Actual AC power consumption:430W
```

EXAMPLE 8 Display the exhaust-air amount of the system.

```
XSCF> showenvironment air
BB#00
    Air Flow:53CMH
BB#01
    Air Flow:53CMH
```

EXIT STATUS The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO [setpowercapping\(8\)](#), [showpowercapping\(8\)](#)

NAME	showfru - Displays the contents of settings regarding the hardware devices.																																								
SYNOPSIS	showfru <i>device location</i> showfru -a [-M] showfru -h																																								
DESCRIPTION	<p>showfru is a command to display the contents set in the hardware of the devices by <i>setupfru(8)</i>.</p> <p>The contents of the specified device or all devices can be displayed. You can specify a physical system board (PSB) as the device.</p> <p>The following contents are displayed.</p> <table> <tr> <td>Device</td> <td>Device name</td> </tr> <tr> <td></td> <td>Any of the following values is displayed.</td> </tr> <tr> <td></td> <td>sb PSB</td> </tr> <tr> <td></td> <td>cpu CPU in PSB</td> </tr> <tr> <td>Location</td> <td>Position where the device is mounted</td> </tr> <tr> <td></td> <td>This is displayed in the format below.</td> </tr> <tr> <td></td> <td>■ If Device is sb</td> </tr> <tr> <td></td> <td> <i>xx-y:</i></td> </tr> <tr> <td></td> <td> <i>xx</i> Integer from 00 to 15</td> </tr> <tr> <td></td> <td> <i>y</i> It is fixed to 0.</td> </tr> <tr> <td></td> <td>■ If Device is cpu</td> </tr> <tr> <td></td> <td> <i>xx-y-z:</i></td> </tr> <tr> <td></td> <td> <i>xx</i> Integer from 00 to 15</td> </tr> <tr> <td></td> <td> <i>y</i> It is fixed to 0.</td> </tr> <tr> <td></td> <td> <i>z</i> Integer from 0 to 3</td> </tr> <tr> <td>Memory Mirror Mode</td> <td>Mirror mode of the memory set in PSB</td> </tr> <tr> <td></td> <td>Either of the following values is displayed.</td> </tr> <tr> <td></td> <td> yes Memory mirror mode</td> </tr> <tr> <td></td> <td> no Not in the memory mirror mode</td> </tr> <tr> <td>Privileges</td> <td> <p>To execute this command, <i>platadm</i> or <i>fieldeng</i> privilege is required.</p> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p> </td></tr> </table>	Device	Device name		Any of the following values is displayed.		sb PSB		cpu CPU in PSB	Location	Position where the device is mounted		This is displayed in the format below.		■ If Device is sb		<i>xx-y:</i>		<i>xx</i> Integer from 00 to 15		<i>y</i> It is fixed to 0.		■ If Device is cpu		<i>xx-y-z:</i>		<i>xx</i> Integer from 00 to 15		<i>y</i> It is fixed to 0.		<i>z</i> Integer from 0 to 3	Memory Mirror Mode	Mirror mode of the memory set in PSB		Either of the following values is displayed.		yes Memory mirror mode		no Not in the memory mirror mode	Privileges	<p>To execute this command, <i>platadm</i> or <i>fieldeng</i> privilege is required.</p> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>
Device	Device name																																								
	Any of the following values is displayed.																																								
	sb PSB																																								
	cpu CPU in PSB																																								
Location	Position where the device is mounted																																								
	This is displayed in the format below.																																								
	■ If Device is sb																																								
	<i>xx-y:</i>																																								
	<i>xx</i> Integer from 00 to 15																																								
	<i>y</i> It is fixed to 0.																																								
	■ If Device is cpu																																								
	<i>xx-y-z:</i>																																								
	<i>xx</i> Integer from 00 to 15																																								
	<i>y</i> It is fixed to 0.																																								
	<i>z</i> Integer from 0 to 3																																								
Memory Mirror Mode	Mirror mode of the memory set in PSB																																								
	Either of the following values is displayed.																																								
	yes Memory mirror mode																																								
	no Not in the memory mirror mode																																								
Privileges	<p>To execute this command, <i>platadm</i> or <i>fieldeng</i> privilege is required.</p> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>																																								

OPTIONS	The following options are supported.																												
	<ul style="list-style-type: none"> -a Displays the contents of all devices. -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. 																												
OPERANDS	The following operands are supported.																												
	<table border="0"> <tr> <td><i>device</i></td><td>Specifies the device to be displayed. The following devices can be specified.</td></tr> <tr> <td></td><td style="text-align: center;">sb PSB</td></tr> <tr> <td></td><td style="text-align: center;">cpu CPU in PSB</td></tr> <tr> <td><i>location</i></td><td>Specifies the location where the <i>device</i> is mounted.</td></tr> <tr> <td></td><td>This is specified using the following format.</td></tr> <tr> <td></td><td style="padding-left: 20px;">■ If <i>device</i> is sb</td></tr> <tr> <td></td><td style="padding-left: 40px;"><i>xx-y:</i></td></tr> <tr> <td></td><td style="padding-left: 60px;"><i>xx</i> Integer from 00 to 15</td></tr> <tr> <td></td><td style="padding-left: 60px;"><i>y</i> It is fixed to 0.</td></tr> <tr> <td></td><td style="padding-left: 20px;">■ If <i>device</i> is cpu</td></tr> <tr> <td></td><td style="padding-left: 40px;"><i>xx-y-z:</i></td></tr> <tr> <td></td><td style="padding-left: 60px;"><i>xx</i> Integer from 00 to 15</td></tr> <tr> <td></td><td style="padding-left: 60px;"><i>y</i> It is fixed to 0.</td></tr> <tr> <td></td><td style="padding-left: 60px;"><i>z</i> Integer from 0 to 3</td></tr> </table>	<i>device</i>	Specifies the device to be displayed. The following devices can be specified.		sb PSB		cpu CPU in PSB	<i>location</i>	Specifies the location where the <i>device</i> is mounted.		This is specified using the following format.		■ If <i>device</i> is sb		<i>xx-y:</i>		<i>xx</i> Integer from 00 to 15		<i>y</i> It is fixed to 0.		■ If <i>device</i> is cpu		<i>xx-y-z:</i>		<i>xx</i> Integer from 00 to 15		<i>y</i> It is fixed to 0.		<i>z</i> Integer from 0 to 3
<i>device</i>	Specifies the device to be displayed. The following devices can be specified.																												
	sb PSB																												
	cpu CPU in PSB																												
<i>location</i>	Specifies the location where the <i>device</i> is mounted.																												
	This is specified using the following format.																												
	■ If <i>device</i> is sb																												
	<i>xx-y:</i>																												
	<i>xx</i> Integer from 00 to 15																												
	<i>y</i> It is fixed to 0.																												
	■ If <i>device</i> is cpu																												
	<i>xx-y-z:</i>																												
	<i>xx</i> Integer from 00 to 15																												
	<i>y</i> It is fixed to 0.																												
	<i>z</i> Integer from 0 to 3																												
EXTENDED DESCRIPTION	You can set the hardware of the devices by using <code>setupfru(8)</code> .																												
EXAMPLES	<p>EXAMPLE 1 Display the information set in all devices.</p> <pre>XSCF> showfru -a Device Location Memory Mirror Mode sb 00-0 cpu 00-0-0 yes cpu 00-0-1 yes cpu 00-0-2 yes cpu 00-0-3 yes sb 01-0 cpu 01-0-0 yes cpu 01-0-1 yes cpu 01-0-2 yes</pre>																												

```

      cpu 01-0-3 yes
sb   02-0
      cpu 02-0-0 no
      cpu 02-0-1 no
      cpu 02-0-2 no
      cpu 02-0-3 no
sb   03-0
      cpu 03-0-0 yes
      cpu 03-0-1 yes
      cpu 03-0-2 no
      cpu 03-0-3 no
.
.
XSCF>

```

EXAMPLE 2 Display the information set in the specified device (PSB).

```

XSCF> showfru sb 01-0
Device Location Memory Mirror Mode
sb   01-0
      cpu 01-0-0 yes
      cpu 01-0-1 yes
      cpu 01-0-2 yes
      cpu 01-0-3 yes
XSCF>

```

EXAMPLE 3 Display the information set in the specified device (CPU).

```

XSCF> showfru cpu 01-0-3
Device Location Memory Mirror Mode
sb   01-0
      cpu 01-0-3 yes
XSCF>

```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

addboard(8), deleteboard(8), setpcl(8), setupfru(8), showboards(8), showpcl(8)

showfru(8)

NAME	showhardconf - Displays the information of the Field Replaceable Unit (FRU) mounted on the server.						
SYNOPSIS	showhardconf [-u] [-M] showhardconf -h						
DESCRIPTION	<p>showhardconf is a command to display the information of each FRU.</p> <p>The information to be displayed is below.</p> <ul style="list-style-type: none"> ■ Current configuration and status ■ Number of the mounted units ■ Physical partition (PPAR) information ■ PCI Expansion Unit information (Displayed only if the power of PPAR is on) ■ PCI card information (Displayed only if the power of PPAR is on) 						
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>useradm, platadm, platop, Enables execution for all PPARs. fieldeng</p> <p>pparadm, pparamgr, pparop Enables execution for PPARs for which you have access privilege.</p> <p>For details on user privileges, see setprivileges(8).</p>						
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-M</td> <td>Displays text one screen at a time.</td> </tr> <tr> <td>-u</td> <td>Displays the number of each mounted FRU. In addition, the operation frequency is displayed for the CPU module. The DIMM type and size are displayed for the memory. If omitted, the current configuration and status information and PPAR information of each FRU are displayed.</td> </tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-u	Displays the number of each mounted FRU. In addition, the operation frequency is displayed for the CPU module. The DIMM type and size are displayed for the memory. If omitted, the current configuration and status information and PPAR information of each FRU are displayed.
-h	Displays the usage. Specifying this option with another option or operand causes an error.						
-M	Displays text one screen at a time.						
-u	Displays the number of each mounted FRU. In addition, the operation frequency is displayed for the CPU module. The DIMM type and size are displayed for the memory. If omitted, the current configuration and status information and PPAR information of each FRU are displayed.						

EXTENDED DESCRIPTION

- If the configuration, status information, and PPAR information of FRU is displayed, an asterisk (*) indicating an abnormality and any of the following statuses are displayed for the units in which a failure or degradation occurred.

Status	Contents
Faulted	In the status in which the unit is not in operation due to a failure.
Degraded	A part of the unit has failed or degraded, but the unit is running.
Deconfigured	Due to the failure or degradation of another unit, the target unit and components of its underlying layer has been degraded, though there is no problem in them.
Maintenance	Maintenance work is in progress. addfru(8), replacefru(8), or initbb(8) is operating.
Normal	In the status in which the unit is in normal operation.

- For SPARC M10-4S, if the mode switches on the operator panels of the master chassis and chassis whose XSCFs are standby do not match, an asterisk (*) is displayed on the operator panel units of the master chassis and chassis whose XSCFs are standby.

EXAMPLES

EXAMPLE 1 Display the FRU information of SPARC M10-1.

```
XSCF> showhardconf
SPARC M10-1;
+ Serial:2101151008A; Operator_Panel_Switch:Locked;
+ System_Power:Off; System_Phase:Cabinet Power Off;
Partition#0 PPAR_Status:Powered Off;
MBU Status:Normal; Ver:2004h; Serial:USDA-P00007 ;
+ FRU-Part-Number:CA20366-B10X 002AB/LGA-MBU -01 ;
+ Power_Supply_System: Dual ;
+ Memory_Size:32 GB;
CPU#0 Status:Normal; Ver:4142h; Serial: 00010448;
+ Freq:2.800 GHz; Type:0x10;
+ Core:16; Strand:2;
MEM#00A Status:Normal;
+ Code:ce8002M393B5270DH0-YH9 0000-85A8EFD9;
+ Type:01; Size:4 GB;
MEM#01A Status:Normal;
+ Code:ce8002M393B5270DH0-YH9 0000-85A8EF57;
+ Type:01; Size:4 GB;

.
.

MEM#12A Status:Normal;
+ Code:ce8002M393B5270DH0-YH9 0000-85A8EEAD;
+ Type:01; Size:4 GB;
MEM#13A Status:Normal;
```

```

+ Code:ce8002M393B5270DH0-YH9  0000-85A8EEB5;
+ Type:01; Size:4 GB;
PCI#0 Name_Property:fibre-channel;
+ Vendor-ID:14e4; Device-ID:1648;
+ Subsystem_Vendor-ID:10cf; Subsystem-ID:13a0;
+ Model: LPe1250-F8-FJ;
PCI#1 Status:Normal; Name_Property:;
+ Vendor-ID:14e4; Device-ID:1648;
+ Subsystem_Vendor-ID:10cf; Subsystem-ID:13a0;
+ Model: LPe1250-F8-FJ;
+ Connection:PCIBOX#X07P;
PCIBOX#X0DF Status:Faulted; Ver:0512 Serial:XCX0DF;
+ FRU-Part-Number:CF00541-0314 05  /501-6937-05;
IOB Status:Normal; Serial:XX00KA; Type:PCI-X;
+ FRU-Part-Number:CF00541-0316 03  /501-6938-05;
LINKBOARD Status:Faulted; Ver:0512 Serial:XCX0DF;
+ FRU-Part-Number:CF00541-0314 05  /501-6937-05;
PCI#0 Name_Property:fibre-channel;
+ Vendor-ID:14e4; Device-ID:1648;
+ Subsystem_Vendor-ID:10cf; Subsystem-ID:13a0;
+ Model: LPe1250-F8-FJ;
FANBP#0 Status:Normal; Serial:7867000297;
+ FRU-Part-Number:CA20393-B50X A2 ;
PSUBP#0 Status:Normal; Serial:7867000297;
+ FRU-Part-Number:CA20393-B50X A2 ;
PSU#0 Status:Normal; Serial:LL0807;
+ FRU-Part-Number:CF00300-2001 02  /300-2001-02;
PSU#1 Status:Normal; Serial:LL0381;
+ FRU-Part-Number:CF00300-2001 02  /300-2001-02;
FANU#0 Status:Normal;
+ FRU-Part-Number:;;
FANU#2 Status:Normal;
+ FRU-Part-Number:;;
OPNL Status:Normal; Ver:0102; Serial:PP0629L068
+ FRU-Part-Number:CA20393-B50X A2 ;
PSUBP Status:Normal; Ver:0102; Serial:PP0629L068
+ FRU-Part-Number:CA20393-B50X A2 ;
PSU#0 Status:Normal; Ver:0102; Serial:0000000-ASTECB18 ;
+ FRU-Part-Number:CF00300-1898 0002 /300-1898-00-02;
+ Power_Status:ON; AC:200 V;
PSU#1 Status:Normal; Ver:0102; Serial:0000000-ASTECB18 ;
+ FRU-Part-Number:CF00300-1898 0002 /300-1898-00-02;
+ Power_Status:ON; AC:200 V;
FANU#0 Status:Normal;
FANU#1 Status:Normal;
FANU#2 Status:Normal;
FANU#3 Status:Normal;
FANU#4 Status:Normal;

```

EXAMPLE 2 Display the number of FRUs mounted in SPARC M10-1.

```
XSCF> showhardconf -u
SPARC M10-1; Memory_Size:32 GB;
+-----+-----+
|       FRU           | Quantity |
+-----+-----+
| MBU          | 1        |
| CPU          | 1        |
|             Freq:2.800 GHz; | ( 1)    |
| MEM          | 8        |
|             Type:01; Size:4 GB; | ( 8)    |
| PCICARD      | 0        |
| LINKCARD     | 0        |
| PCIBOX       | 0        |
| IOB          | 0        |
| LINKBOARD    | 0        |
| PCI          | 0        |
| FANBP        | 0        |
| PSU          | 0        |
| FAN          | 0        |
| OPNL          | 1        |
| PSUBP         | 1        |
| PSU          | 2        |
| FANU          | 4        |
+-----+-----+
```

EXAMPLE 3 Display the FRU information of SPARC M10-4S (with crossbar box).

```
XSCF> showhardconf
SPARC M10-4S;
+ Serial:2081230011; Operator_Panel_Switch:Locked;
+ System_Power:On; System_Phase:Cabinet Power On;
  Partition#0 PPAR_Status:Powered Off;
  Partition#1 PPAR_Status:Initialization Phase;
BB#00 Status:Normal; Role:Slave; Ver:2003h; Serial:2081231002;
+ FRU-Part-Number:CA07361-D202 A1 ; ;
+ Power_Supply_System:Single;
+ Memory_Size:256 GB;
CMUL Status:Normal; Ver:0101h; Serial:PP123002Z4 ;
+ FRU-Part-Number:CA07361-D941 A8 ; ;
+ Memory_Size:128 GB;
CPU#0 Status:Normal; Ver:4142h; Serial:00010448;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
CPU#1 Status:Normal; Ver:4142h; Serial:00010418;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
MEM#00A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0AD54;
+ Type:01; Size:4 GB;
MEM#01A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0AD67;
```

```

+ Type:01; Size:4 GB;

.

.

.

MEM#16B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D37530;
+ Type:01; Size:4 GB;
MEM#17B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D3752D;
+ Type:01; Size:4 GB;
CMUU Status:Normal; Ver:0101h; Serial:PP123002ZB ;
+ FRU-Part-Number:CA07361-D951 A4 ; ;
+ Memory_Size:128 GB;
CPU#0 Status:Normal; Ver:4142h; Serial:00010478;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
CPU#1 Status:Normal; Ver:4142h; Serial:00010505;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
MEM#00A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0AFA1;
+ Type:01; Size:4 GB;
MEM#01A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0B057;
+ Type:01; Size:4 GB;

.

.

.

MEM#16B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D37652;
+ Type:01; Size:4 GB;
MEM#17B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D37520;
+ Type:01; Size:4 GB;
PCI#0 Name_Property:fibre-channel;
+ Vendor-ID:14e4; Device-ID:1648;
+ Subsystem_Vendor-ID:10cf; Subsystem-ID:13a0;
+ Model: LPe1250-F8-FJ;
XBU#0 Status:Normal; Ver:0101h; Serial:PP123002ZQ ;
+ FRU-Part-Number:CA07361-D102 A1 ; ;
XBU#1 Status:Normal; Ver:0101h; Serial:PP123002ZN ;
+ FRU-Part-Number:CA07361-D102 A1 ; ;
OPNL Status:Normal; Ver:0101h; Serial:PP1230020A ;
+ FRU-Part-Number:CA07361-D012 A1 ; ;
PSUBP Status:Normal; Ver:0101h; Serial:PP123002ZS ;
+ FRU-Part-Number:CA07361-D202 A1 ; ;
PSU#0 Status:Normal; Ver:303443h; Serial:MD12190452 ;
+ FRU-Part-Number:CA01022-0761 / ; ;
+ Power_Status:ON; AC:200 V;
PSU#1 Status:Normal; Ver:303443h; Serial:MD12190454 ;
+ FRU-Part-Number:CA01022-0761 / ; ;
+ Power_Status:ON; AC:200 V;
FANU#0 Status:Normal;
FANU#1 Status:Normal;

```

showhardconf(8)

```
FANU#2 Status:Normal;
FANU#3 Status:Normal;
FANU#4 Status:Normal;
BB#01 Status:Normal; Role:Slave; Ver:0101h; Serial:7867000297;
+ FRU-Part-Number:CA20393-B50X A2 ;
+ Power_Supply_System:Single;
+ Memory_Size:256 GB;
CMUL Status:Normal; Ver:0101h; Serial:PP123002Z4 ;
+ FRU-Part-Number:CA07361-D941 A8 ;
+ Memory_Size:128 GB;
CPU#0 Status:Normal; Ver:4142h; Serial:00010448;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
CPU#1 Status:Normal; Ver:4142h; Serial:00010418;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
MEM#00A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0AD54;
+ Type:01; Size:4 GB;
MEM#01A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0AD67;
+ Type:01; Size:4 GB;

.
.

MEM#16B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D37530;
+ Type:01; Size:4 GB;
MEM#17B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D3752D;
+ Type:01; Size:4 GB;
CMUU Status:Normal; Ver:0101h; Serial:PP123002ZB ;
+ FRU-Part-Number:CA07361-D951 A4 ;
+ Memory_Size:128 GB;
CPU#0 Status:Normal; Ver:4142h; Serial:00010478;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
CPU#1 Status:Normal; Ver:4142h; Serial:00010505;
+ Freq:3.000 GHz; Type:0x10;
+ Core:16; Strand:2;
MEM#00A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0AF41;
+ Type:01; Size:4 GB;
MEM#01A Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-85D0B057;
+ Type:01; Size:4 GB;

.
.

MEM#16B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D37652;
+ Type:01; Size:4 GB;
MEM#17B Status:Normal;
+ Code:ce8002M393B5270DH0-YK0 0000-87D37520;
```

```

        + Type:01; Size:4 GB;
PCI#0 Name_Property:fibre-channel;
        + Vendor-ID:14e4; Device-ID:1648;
        + Subsystem_Vendor-ID:10cf; Subsystem-ID:13a0;
        + Model: LPe1250-F8-FJ;
PCI#1 Name_Property:fibre-channel;
        + Vendor-ID:14e4; Device-ID:1648;
        + Subsystem_Vendor-ID:10cf; Subsystem-ID:13a0;
        + Model: LPe1250-F8-FJ;
XBU#0 Status:Normal; Ver:0101h; Serial:PP123002ZQ ;
        + FRU-Part-Number:CA07361-D102 A1 ;
XBU#1 Status:Normal; Ver:0101h; Serial:PP123002ZN ;
        + FRU-Part-Number:CA07361-D102 A1 ;
OPNL Status:Normal; Ver:0101h; Serial:PP1230020A ;
        + FRU-Part-Number:CA07361-D012 A1 ;
PSUBP Status:Normal; Ver:0101h; Serial:PP123002ZS ;
        + FRU-Part-Number:CA07361-D202 A1 ;
PSU#0 Status:Normal; Ver:303443h; Serial:MD12190452 ;
        + FRU-Part-Number:CA01022-0761 / ;
        + Power_Status:ON; AC:200 V;
PSU#1 Status:Normal; Ver:303443h; Serial:MD12190454 ;
        + FRU-Part-Number:CA01022-0761 / ;
        + Power_Status:ON; AC:200 V;
FANU#0 Status:Normal;
FANU#1 Status:Normal;
FANU#2 Status:Normal;
FANU#3 Status:Normal;
FANU#4 Status:Normal;
XBBOX#80 Status:Normal; Role:Master; Ver:0101h; Serial:7867000297;
        + FRU-Part-Number:CA07361-D011 A0 /NOT-FIXD-01 ;
        + Power_Supply_System:Single;
XBU#0 Status:Normal; Serial:PP0629L068
        + FRU-Part-Number:CA20393-B50X A2 ;
XSCFU Status:Normal; Ver:0101h; Serial:7867000262 ;
        + FRU-Part-Number:CA20393-B56X A0 ;
XBBPU Status:Normal; Serial:PP0629L068
        + FRU-Part-Number:CA20393-B50X A2 ;
XSCFIFU Status:Normal; Ver:0101h; Serial:PP12040198 ;
        + FRU-Part-Number:CA20365-B52X 001AA/NOT-FIXD-01 ; Type: A ;
OPNL Status:Normal; Serial:PP0629L068
        + FRU-Part-Number:CA20393-B50X A2 ;
PSU#0 Status:Normal; Ver:303443h; Serial:MD12190452 ;
        + FRU-Part-Number:CF00300-1898 0002 /300-1898-00-02;
        + Power_Status:ON; AC:200 V;
PSU#1 Status:Normal; Ver:0201 Serial:0000000-ASTECB18 ;
        + FRU-Part-Number:CF00300-1898 0002 /300-1898-00-02;
        + Power_Status:ON; AC:200 V;
FANU#0 Status:Normal;
FANU#1 Status:Normal;
FANU#2 Status:Normal;
FANU#3 Status:Normal;
XBBOX#81 Status:Normal; Role:Standby; Ver:0101h; Serial:7867000297;
        + FRU-Part-Number:CA20393-B50X A2 ;
XBU#0 Status:Normal; Ver:0201 Serial:PP0629L068

```

showhardconf(8)

```
+ FRU-Part-Number:CA20393-B50X A2 ;
XSCFU Status:Normal; Ver:0101h; Serial:7867000262 ;
+ FRU-Part-Number:CA20393-B56X A0
XBBPU Status:Normal; Ver:0201 Serial:PP0629L068
+ FRU-Part-Number:CA20393-B50X A2 ;
XSCFIFU Status:Normal; Ver:0101h; Serial:PP12040198 ;
+ FRU-Part-Number:CA20365-B52X 001AA/NOT-FIXD-01 ; Type: A ;
OPNL Status:Normal; Ver:0201 Serial:PP0629L068
+ FRU-Part-Number:CA20393-B50X A2 ;
PSU#0 Status:Normal; Ver:0201 Serial:0000000-ASTECB18 ;
+ FRU-Part-Number:CF00300-1898 0002 /300-1898-00-02;
+ Power_Status:ON; AC:200 V;
PSU#1 Status:Normal; Ver:0201 Serial:0000000-ASTECB18 ;
+ FRU-Part-Number:CF00300-1898 0002 /300-1898-00-02;
+ Power_Status:ON; AC:200 V;
FANU#0 Status:Normal;
FANU#1 Status:Normal;
FANU#2 Status:Normal;
FANU#3 Status:Normal;
```

EXAMPLE 4 Display the number of FRUs mounted in SPARC M10-4S (with crossbar box).

```
XSCF> showhardconf -u
SPARC M10-4S; Memory_Size:720 GB;
+-----+-----+
|       FRU      | Quantity |
+-----+-----+
|   BB          |      2  |
|   CMUL         |      2  |
|     CPU        |      4  |
|       Freq:3.000 GHz; | ( 4) |
|     MEM         |      64 |
|       Type:01; Size:4 GB; | ( 64) |
|   CMUU         |      4  |
|     CPU        |      4  |
|       Freq:3.000 GHz; | ( 4) |
|     MEM         |      64 |
|       Type:01; Size:4 GB; | ( 64) |
|   PCICARD      |      3  |
|   LINKCARD     |      0  |
|   PCIBOX       |      0  |
|     IOB         |      0  |
|     LINKBOARD   |      0  |
|     PCI         |      0  |
|     FANBP       |      0  |
|     PSU         |      0  |
|     FAN          |      0  |
|   XBU          |      4  |
|   OPNL         |      2  |
|   PSUBP        |      2  |
|     PSU         |      4  |
|     FANU        |     10 |
|   XBBOX        |      2  |
```

XBU		2	
XSCFU		2	
OPNL		2	
XBBPU		2	
XSCFIFU		2	
PSU		2	
FAN		8	

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

NAME	showhostname - Displays the host names set in the master chassis and chassis whose XSCF is standby.
SYNOPSIS	showhostname { -a xsclu} showhostname -h
DESCRIPTION	showhostname is a command to display the host names set currently in the master chassis and chassis whose XSCF is standby. The host name is displayed in the Fully Qualified Domain Name (FQDN) format.
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -a Displays the host names set in the master chassis and chassis whose XSCF is standby. The chassis name specified with the -a option becomes invalid. -h Displays the usage. Specifying this option with another option or operand causes an error.
OPERANDS	The following operands are supported. <ul style="list-style-type: none"> <i>xscfu</i> Specifies the chassis name to be displayed. Depending on the system configuration, you can specify either of the following. If the chassis name is specified with the -a option, it becomes invalid. <ul style="list-style-type: none"> ■ For configuration with SPARC M10-4S (with crossbar box) For XBBOX#80, specify "xbbox#80." For XBBOX#81, specify "xbbox#81." ■ For configuration with SPARC M10-4S (without crossbar box) For BB#00, specify "bb#00." For BB#01, specify "bb#01."
EXTENDED DESCRIPTION	By using the sethostname(8) , you can set the host name of the master chassis and the chassis on which XSCF is in the standby status.
EXAMPLES	EXAMPLE 1 Display the host name which has been set to the master chassis and the

chassis on which XSCF is in the standby status.

```
XSCF> showhostname -a
bb#00:scf0-hostname.example.com
bb#01:scf1-hostname.example.com
```

EXAMPLE 2 Display the host name set in XBBOX#80.

```
XSCF> showhostname xbbox#80
xbbox#80:scf0-hostname.example.com
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

sethostname (8)

NAME	showhttps - Displays the status of the HTTPS service set in the XSCF network.										
SYNOPSIS	showhttps [-M] showhttps -t [-M] showhttps -h										
DESCRIPTION	<p>showhttps is a command to display the status of the HTTPS service set currently in the XSCF network.</p> <p>You can confirm whether HTTPS service is in operation and the installation status of the information required for authentication. If it is installed, the date of installation is also displayed.</p> <p>The following statuses are displayed.</p> <table> <tr> <td>HTTPS status</td><td>Whether HTTPS service is in operation</td></tr> <tr> <td>Server key</td><td>Whether the private key of the Web server is installed</td></tr> <tr> <td>CA key</td><td>Whether the private key of the certificate authority is installed</td></tr> <tr> <td>CA cert</td><td>Whether the certificate of the certificate authority is installed</td></tr> <tr> <td>CSR</td><td>Web server certificate request</td></tr> </table>	HTTPS status	Whether HTTPS service is in operation	Server key	Whether the private key of the Web server is installed	CA key	Whether the private key of the certificate authority is installed	CA cert	Whether the certificate of the certificate authority is installed	CSR	Web server certificate request
HTTPS status	Whether HTTPS service is in operation										
Server key	Whether the private key of the Web server is installed										
CA key	Whether the private key of the certificate authority is installed										
CA cert	Whether the certificate of the certificate authority is installed										
CSR	Web server certificate request										
Privileges	No privileges are required to execute this command.										
	For details on user privileges, see setprivileges(8) .										
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-M</td><td>Displays text one screen at a time.</td></tr> <tr> <td>-t</td><td>Displays the set certificate.</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-t	Displays the set certificate.				
-h	Displays the usage. Specifying this option with another option or operand causes an error.										
-M	Displays text one screen at a time.										
-t	Displays the set certificate.										
EXTENDED DESCRIPTION	You can set the HTTPS service of the XSCF network by using sethttps(8) .										
EXAMPLES	<p>EXAMPLE 1 Display the status of HTTPS service and the installation status of the key.</p> <pre>XSCF> showhttps HTTPS status: enabled Server key: installed in Apr 24 12:34:56 JST 2010 CA key: installed in Apr 24 12:00:34 JST 2010 CA cert: installed in Apr 24 12:00:34 JST 2010 CSR:</pre>										

showhttps(8)

```
-----BEGIN CERTIFICATE REQUEST-----
MIIBwjCCASSCAQAwgYExCzAJBgNVBAYTAmpMQ4wDAYDVQQIEwVzdGF0ZTERMA8G
A1UEBxMIBg9jYWxpdHkxFATBgNVBAoTDG9yZ2FuaXphdGlvbjEPMA0GA1UECxMG
b3JnYW5pMQ8wDQYDVQQDEwZjb21tb24xFjAUBgkqhkiG9w0BCQEWB2V1Lm1haWww
gZ8wDQYJKoZIhvcaNAQEBBQADgY0AMIGJAoGBAJ5D57X/k42LcipTWBWzv2GrxaVM
5GEyx3bdBW8/7WZhnd3uiZ9+ANlvRAuw/YYY7I/pAD+NQJesBcBjuyj9x+IiJl9F
MrI5fR8pOIywV0dbMPCar09rrU45bVeZhTyi+uQOdWL0X/Dhq0fm2BpYuh9WukT5
pTEg+2dABg8UdHmNAGMBAAGgADANBgkqhkiG9w0BAQQFAAOBgQAux1jH3dyB6Xho
PgBuVIakDzIKEPipK9qQFc57YI43uRBGRubu0AHEcLVue5yTu6G5SxHTCq07tV5g
38UHSg5Kqy9QuWHWMri/hxm0kQ4gBpApjNb6F/B+ngBE3j/thGbEuvJb+0wbycvu
5jrhB/ZV9k8X/MbDOxSx/U5nf+Zuyw==
-----END CERTIFICATE REQUEST-----
```

EXAMPLE 2 Display the set certificate.

```
XSCF> showhttps -t
Certificate:
    Data:
        Version: 3 (0x2)
        Serial Number:
            cb:92:cc:ee:79:6c:d3:09
        Signature Algorithm: sha256WithRSAEncryption
        Issuer: C=JP, ST=Kanagawa, O=Kawasaki, OU=luna2, CN=luna2
                ization Validation CA
        Validity
            Not Before: Feb 20 07:36:15 2012 GMT
            Not After : Feb 19 07:36:15 2013 GMT
        Subject: C=JP, ST=Kanagawa, O=Fujitsu, OU=Fujitsu, CN=XSCF/
                emailAddress=hoge@hoge
        Subject Public Key Info:
            Public Key Algorithm: rsaEncryption
            Public-Key: (2048 bit)
            Modulus:
                00:c7:5f:f1:61:ad:ba:4b:64:25:7e:49:ba:7a:6c:
                d4:5c:b1:8c:2d:15:9f:8a:2f:70:c8:cc:4a:3d:2c:
                bd:0a:b7:f8:1d:4a:12:93:ea:22:d5:be:85:69:d7:
                0b:31:a8:1a:ae:34:c6:f6:e8:a1:c8:cc:02:08:be:
                bc:2b:e9:34:8f:f2:ee:4a:93:26:a0:47:93:7e:b7:
                f8:3f:73:24:55:45:02:14:f7:c2:d8:56:f7:a1:cf:
                2f:2d:3e:d4:ff:05:1a:82:25:34:1f:f2:1a:83:91:
                a7:35:98:7d:2a:92:53:6b:19:75:91:86:b5:2e:ef:
                e9:79:ec:a0:5c:bc:88:1c:7b:53:2f:ab:a2:18:77:
                84:42:1e:4c:80:c4:91:28:fe:0a:35:8d:27:f9:90:
                46:22:70:71:10:0d:03:cb:2e:5c:e9:27:20:b3:d5:
                bd:15:39:16:c1:18:7a:a7:13:8f:40:e8:1e:5d:39:
                71:bc:ca:4b:ac:c3:74:9f:03:5e:b3:3c:1c:c8:2e:
                1b:bf:31:c4:4b:33:9a:07:d4:28:e3:f2:6d:19:37:
                10:33:4f:04:85:3b:40:ce:b2:be:f4:16:c1:7c:a9:
                6a:5e:fc:c0:ae:a1:e8:49:a5:b4:ac:37:e3:3f:ca:
                cf:c1:5d:fa:00:8e:d3:33:1f:13:7d:76:b1:ad:ce:
                e4:27
            Exponent: 65537 (0x10001)
        X509v3 extensions:
```

```

X509v3 Basic Constraints:
    CA:FALSE
Netscape Cert Type:
    SSL Server
Netscape Comment:
    OpenSSL Generated Certificate
X509v3 Subject Key Identifier:
    DE:71:13:37:5D:74:7E:D5:B8:C0:96:F8:AF:A7:FB:AB:EA:B9:DB
:07
X509v3 Authority Key Identifier:
    keyid:BE:0D:11:61:59:98:0B:2F:29:42:88:6F:94:38:7C:D0:6A
:FC:EB:4B

Signature Algorithm: sha1WithRSAEncryption
b9:6d:06:3a:b5:71:51:9d:15:b6:55:08:64:76:9e:13:69:1b:
ce:6b:b4:be:aa:48:49:55:29:c3:6f:9e:b1:ca:0c:6f:96:c3:
e9:f7:fd:91:03:ce:a3:b5:d8:27:58:a4:a3:81:f1:60:81:3a:
fb:75:5e:36:a6:5d:05:3d:bd:cf:6b:34:13:41:c2:68:94:51:
f2:4b:1a:02:50:e6:bc:8c:48:d2:87:84:cf:12:8b:de:2d:da:
10:b5:1b:41:94:b6:c4:83:1e:1c:ae:0d:0c:dc:01:21:91:49:
8c:44:4c:1d:2f:52:3a:b0:19:da:ed:5b:6a:aa:b2:05:bc:76:
3c:f4:90:35:97:81:5c:bf:64:cb:a4:5d:ed:78:cf:97:b1:8a:
43:7b:4b:82:4f:21:83:60:28:18:b1:87:ba:4f:a9:7c:f4:ac:
47:a2:81:ac:70:e7:50:b9:ec:52:ab:66:72:ef:c5:c9:98:89:
4b:ae:3a:fe:d3:46:be:8b:b8:c8:7c:99:2a:8e:7f:8c:ec:10:
b6:cb:60:8c:4b:b7:8f:c0:5d:4b:44:45:cb:48:35:69:b3:7c:
37:c2:33:fe:dd:a4:9f:19:6d:a3:0e:cd:79:7c:05:6e:1b:44:
d9:b6:21:76:6f:6a:1e:fc:0d:1f:7f:e9:61:9a:70:70:9f:f5:
17:42:f7:b6

```

EXAMPLE 3 Display the set certificate (in the case that no certificate is set).

```
XSCF> showhttps -t
No certificate.
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

sethttps (8)

`showhttps(8)`

NAME	showldap - display the Lightweight Directory Access Protocol (LDAP) configuration for the Service Processor
SYNOPSIS	showldap showldap [-c] showldap -h
DESCRIPTION	showldap(8) displays the Service Processor LDAP configuration. When invoked without options, showldap displays all LDAP configuration except for the certificate chain and the password used when binding to the LDAP server.
Privileges	You must have <code>useradm</code> or <code>fieldeng</code> privileges to run this command. Refer to <code>setprivileges(8)</code> for more information.
OPTIONS	The following options are supported: - c Displays the LDAP server certification chain. - h Displays usage statement. When used with other options or operands, an error occurs.
EXAMPLES	<p>EXAMPLE 1 Displaying All LDAP Configuration Data</p> <pre>XSCF> showldap Bind Name: <i>user</i> Base Distinguishing Name: ou=people,dc=company,dc=com LDAP Search Timeout: 60 Bind password: Set LDAP Servers: ldap://company.com:389 CERTS: None</pre> <p>EXAMPLE 2 Displaying All LDAP Configuration Data</p> <pre>XSCF> showldap -c There are no certificates configured.</pre>
EXIT STATUS	The following exit values are returned: 0 Successful completion. >0 An error occurred.

SEE ALSO

setldap (8)

NAME	showldapssl - show LDAP/SSL configuration and messages
SYNOPSIS	<pre>showldapssl showldapssl cert [-v] [-i n] showldapssl log [-M] [-C] [-S start_record_number] [-E end_record_number] showldapssl log -f showldapssl group administrator [-i n] showldapssl group operator [-i n] showldapssl group custom [-i n] showldapssl userdomain [-i n] showldapssl usermap showldapssl defaultrole showldapssl server [-i n] showldapssl -h</pre>
DESCRIPTION	showldapssl(8) displays the LDAP/SSL configuration and diagnostic messages.
Privileges	<p>You must have useradm privileges to run this command.</p> <p>Refer to setprivileges(8) for more information.</p>
OPTIONS	<p>The following options are supported:</p> <ul style="list-style-type: none"> -f Displays diagnostic messages in real time. When this option is used, the command does not terminate. Each diagnostic message is displayed when it is registered. To stop the real-time display, press Ctrl-C. -h Displays usage statement. When used with other options or operands, an error occurs. -i <i>n</i> Sets an index marker, value 1 - 5. When executed without -i , or with -i and no value, showldapssl walks sequentially through items 1 through 5. Exceptions: When used without -i , the command showldapssl cert displays the certificate information for the Primary server, and showldapssl server displays the Primary server configuration. -v Specifies verbose output. Used only with the cert operand to display the full certificate.

-C	Appends to end of output the number of records in the log.
-E	Specifies the last record number to display, where <i>end_record_number</i> can be any record number in the log. Use -C to obtain the number of records in the log.
-M	Displays text by page, like the more(1) command does.
-S	Specifies the first record to display, where <i>start_record_number</i> can be any record number in the log. Use -C to obtain the number of records in the log.

OPERANDS

The following operands are supported:

cert	Display current server certificates.
log	Display diagnostic messages.
group administrator	Display current group configurations.
group operator	Display current group configurations.
group custom	Display current group configurations.
userdomain	Display current userdomain settings.
usermap	Display current user mapping settings.
defaultrole	Display current defaultrole setting.
server	Display current LDAP/SSL server settings.

EXAMPLES

EXAMPLE 1 Displays the current state of LDAP/SSL.

```
XSCF> showldapssl
usermapmode: enabled
state: enabled
strictcertmode: enabled
timeout: 4
logdetail: none
```

EXAMPLE 2 Displays certificate information for the Primary server.

```
XSCF> showldapssl cert
Primary Server:
certstatus = certificate present
issuer = C=US, ST=California, L=San Diego, O=aCompany,
OU=System Group, CN=John User serial number = 0 (00000000)
subject = C=US, ST=California, L=San Diego, O=aCompany,
OU=System Group, CN=John User serial number = 0 (00000000)
```

```
valid from = Apr 18 05:38:36 2009 GMT
valid until = Apr 16 05:38:36 2019 GMT
version = 3 (0x02)
```

EXAMPLE 3 Displays specified diagnostic messages.

```
XSCF> showldapssl log -S 5 -E 10
Thu Sep 2 01:43 2009 (LdapSSL): -error- authentication status: auth-ERROR
Thu Sep 2 01:44 2009 (LdapSSL): -error- authentication status: auth-ERROR
Thu Sep 2 01:47 2009 (LdapSSL): -error- authentication status: auth-ERROR
Thu Sep 2 01:51 2009 (LdapSSL): -error- authentication status: auth-ERROR
Thu Sep 2 01:52 2009 (LdapSSL): -error- authentication status: auth-ERROR
Thu Sep 2 01:55 2009 (LdapSSL): -error- authentication status: auth-ERROR
```

EXAMPLE 4 Displays configuration for administrator group 3.

```
XSCF> showldapssl group administrator -i 3
Administrator Group 3
name: CN=pSuperAdmin,OU=Groups,DC=sales,DC=company,DC=com
```

EXAMPLE 5 Displays alternate server 1 setting. A port number of 0 indicates that the default port for LDAP/SSL is used.

```
XSCF> showldapssl server -i 1
Alternate Server 1
address: (none)
port: 0
```

EXAMPLE 6 Displays the optional user mapping settings.

```
XSCF> showldapssl usermap
attributeInfo: (&(objectclass=person) (uid=<USERNAME>))
binddn: cn=Manager,dc=company,dc=com
bindpw: Set
searchbase: ou=people,dc=company,dc=com
```

EXIT STATUS

The following exit values are returned:

- | | |
|----|------------------------|
| 0 | Successful completion. |
| >0 | An error occurred. |

SEE ALSO

setldapssl (8)

`showldapssl(8)`

NAME	showlocator - Displays the status of the CHECK LED on the operation panel.
SYNOPSIS	showlocator [-a -b <i>bb_id</i>] showlocator -h
DESCRIPTION	showlocator is a command to display the blinking status of the CHECK LEDs of the operation panels mounted in SPARC M10 Systems chassis and crossbar boxes (XBBOXs). Any of the following statuses is displayed.
	off (Off) Indicates that it is normal, the input power is being off, or the power fails. Blinking (Blinking) Indicates that it is a chassis subject to maintenance. On (Lighted) Indicates that an abnormality is detected.
Privileges	To execute this command, any of the following privileges is required. useradm, platadm, plaptop, fieldeng For details on user privileges, see <i>setprivileges(8)</i> .
OPTIONS	The following options are supported. -a Displays the statuses of all CHECK LEDs connected currently. -b <i>bb_id</i> Displays the status of the CHECK LEDs of the SPARC M10 Systems chassis and crossbar boxes corresponding to the specified <i>bb_id</i> . If omitted, the status of the CHECK LED of the chassis itself is displayed. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXTENDED DESCRIPTION	You can set the blinking status of CHECK LED by using <i>setlocator(8)</i> .
EXAMPLES	EXAMPLE 1 Display the status of CHECK LED of BB-ID 10. XSCF> showlocator -b 10 BB#10: Locator LED status: Blinking

EXAMPLE 2 Display the statuses of all CHECK LEDs.

```
XSCF> showlocator -a
XB-Box#80 : Locator LED status: Blinking
:
BB#00 : Locator LED status: Blinking
BB#01 : Locator LED status: Off
BB#02 : Locator LED status: On
:
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO [setlocator \(8\)](#)

NAME	showloginlockout - Displays the time set in the lockout function of the user account.
SYNOPSIS	showloginlockout showloginlockout -h
DESCRIPTION	showloginlockout is a command to display the time by minutes when login is prohibited after failing in login three times in a row.
Privileges	To execute this command, useradm privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXTENDED DESCRIPTION	The user can attempt login three times in a row. If the third attempt fails, login is prohibited for the time set by setloginlockout(8) . showloginlockout displays the set lockout time by minutes. If the set lockout time elapses, attempt to log in is allowed again.
EXAMPLES	EXAMPLE 1 Display the timeout time of lockout. XSCF> showloginlockout 90 minutes
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setloginlockout (8)

showloginlockout(8)

NAME	showlogs - Displays the specified log.						
SYNOPSIS	<pre>showlogs [-t time [-T time]] [-v -V -S] [-r] [-M] error showlogs [-t time [-T time]] -p timestamp] [-v] [-r] [-M] event showlogs [-t time [-T time]] [-r] [-M] power showlogs {-a -b bb_id} [-t time [-T time]] [-r] [-M] env showlogs [-r] [-M] monitor showlogs -p ppar_id [-t time [-T time]] [-r] [-M] {console ipl panic} showlogs -h</pre>						
DESCRIPTION	<p>showlogs is a command to display the specified log.</p> <p>The logs are displayed in chronological order of time stamps by default. The following logs can be specified for each unit of collection.</p> <table> <tr> <td>System unit</td> <td> <ul style="list-style-type: none"> ■ Error log (Scan logs may be included.) ■ Power log ■ Event log ■ Monitoring log </td> </tr> <tr> <td>SPARC M10 Systems chassis</td> <td> <ul style="list-style-type: none"> ■ Temperature history </td> </tr> <tr> <td>Physical partition (PPAR) unit</td> <td> <ul style="list-style-type: none"> ■ Console message log ■ Panic message log ■ IPL message log </td> </tr> </table>	System unit	<ul style="list-style-type: none"> ■ Error log (Scan logs may be included.) ■ Power log ■ Event log ■ Monitoring log 	SPARC M10 Systems chassis	<ul style="list-style-type: none"> ■ Temperature history 	Physical partition (PPAR) unit	<ul style="list-style-type: none"> ■ Console message log ■ Panic message log ■ IPL message log
System unit	<ul style="list-style-type: none"> ■ Error log (Scan logs may be included.) ■ Power log ■ Event log ■ Monitoring log 						
SPARC M10 Systems chassis	<ul style="list-style-type: none"> ■ Temperature history 						
Physical partition (PPAR) unit	<ul style="list-style-type: none"> ■ Console message log ■ Panic message log ■ IPL message log 						
Privileges	<p>To execute this command, any of the following privileges is required.</p> <ul style="list-style-type: none"> ■ Error log, event log, temperature history, monitoring log platadm, platop, fieldeng ■ Power log <p>platadm, platop, fieldeng Enables execution for all PPARs.</p> <p>pparamd, pparamgr Enables execution for PPARs for which you have administration privilege.</p>						

- Console message log, panic message log, IPL message log

`platadm, platop, fieldeng` Enables execution for all PPARs.

`pparamdm, pparamgr, pparop` Enables execution for PPARs for which you have access privilege.

- Scan log

`fieldeng`

For details on user privileges, see `setprivileges(8)`.

OPTIONS

The following options are supported.

- a All chassis on the system are subject. This can be specified for the temperature history.
- b *bb_id* Specifies only one BB-ID to display the log. This can be specified for the temperature history. The *bb_id*, on the SPARC M10-1/M10-4, fixed to 0. On the SPARC M10-4S, you can specify an integer from 0 to 15, and from 80 to 83 in case of crossbar box.
- h Displays the usage. Specifying this option with another option or operand causes an error.
- M Displays text one screen at a time.
- p *ppar_id* Specifies a single PPAR-ID to display. This can be specified for the console message log, panic message log, and IPL message log. Depending on the system configuration, you can specify an integer from 0 to 15 for *ppar_id*.
- P *timestamp* If the log is displayed alone, specify the time stamp of the log. This can be specified for the error log and event log.

timestamp is specified in any of the following formats.

`yyyy-mm-dd,hh:mm:ss`
The value is specified in the year-month-day,hour:minute:second format.
`mm/dd/yy,hh:mm:ss`
The value is specified in the month/day/year,hour:minute:second format.
`Monddhh:mm:ssyyyy`
The value is specified in the month-name,day,hour:minute:second,year format.

-r	Displays logs in reverse chronological order of time stamps. By default, logs are displayed in chronological order of time stamps.
-s	Displays the scan log attached to an error log. Only the users with <code>fieldeng</code> privilege can specify it. It cannot be specified with the <code>-v</code> or <code>-V</code> option.
-t <i>time</i>	Specifies the starting date and time for specifying the display range of logs. Any of the following specification formats is applied. <i>yyyy-mm-dd,hh:mm</i> The value is specified in the year-month-day,hour:minute format. <i>mm/dd/yy,hh:mm</i> The value is specified in the month/day/year,hour:minute format. <i>Monddhh:mmyyyy</i> The value is specified in the month-name,day,hour:minute,year format. <i>yyyy-mm-dd,hh:mm:ss</i> The value is specified in the year-month-day,hour:minute:second format. <i>mm/dd/yy hh:mm:ss</i> The value is specified in the month/day,year,hour:minute:second format. <i>Monddhh:mm:ssyyyy</i> The value is specified in the month-name,day,hour:minute:second,year format.
	Even if it is specified with the <code>-r</code> option, the specifications of the <code>-t</code> and <code>-T</code> option will never be reversed. It cannot be used for monitoring logs.

-T time -v -V	<p>Specifies the ending date and time for specifying the display range of logs. Any of the following specification formats is applied.</p> <p><i>yyyy-mm-dd,hh:mm</i> The value is specified in the year-month-day,hour:minute format. <i>mm/dd/yy, hh:mm</i> The value is specified in the month/day/year,hour:minute format. <i>Monddhh:mmyyyy</i> The value is specified in the month-name,day,hour:minute,year format. <i>yyyy-mm-dd, hh:mm:ss</i> The value is specified in the year-month-day,hour:minute:second format. <i>mm/dd/yy, hh:mm:ss</i> The value is specified in the month/day/year,hour:minute:second format. <i>Monddhh:mm:ssyyyy</i> The value is specified in the month-name,day,hour:minute:second,year format.</p> <p>Even if it is specified with the -r option, the specifications of the -t and -T option will never be reversed. It cannot be used for monitoring logs.</p> <p>Displays detailed information. In addition to normal display, the detailed diagnosis code (Diagnostic Code) is displayed. It cannot be specified with the -V or -S option. This can be specified for the error log and event log.</p> <p>Displays more detailed information. If the machine administration detail log information, the PCI card information, and the I/O error fault log information have been collected, those are displayed in addition to the information displayed by the -v option. They may not be collected depending on the type of error event. It cannot be specified with the -v or -S option. This can be specified for the error log.</p>
--	--

OPERANDS

The following operands are supported.

error	Displays the error log. (Scan logs may be included.)
event	Displays the event log.
power	Displays the power log.

EXTENDED DESCRIPTION	<table border="0"> <tr> <td style="width: 15%;">env</td><td>Displays the temperature history.</td></tr> <tr> <td>monitor</td><td>Displays the monitoring log.</td></tr> <tr> <td>console</td><td>Displays the console message log.</td></tr> <tr> <td>ipl</td><td>Displays the IPL message log.</td></tr> <tr> <td>panic</td><td>Displays the panic message log.</td></tr> </table>	env	Displays the temperature history.	monitor	Displays the monitoring log.	console	Displays the console message log.	ipl	Displays the IPL message log.	panic	Displays the panic message log.
env	Displays the temperature history.										
monitor	Displays the monitoring log.										
console	Displays the console message log.										
ipl	Displays the IPL message log.										
panic	Displays the panic message log.										
	Each log is displayed in the following format.										
	<ul style="list-style-type: none"> ■ Error log 										
	<p style="margin-left: 20px;">Default</p> <pre>Date: Oct 20 17:45:31 JST 2012 Code: xxxxxxxx-xxxxxxxxxxxxxxxxxx-xxxxxxxxxxxxxxxxxxxx Status: Alarm Occurred: Oct 20 17:45:31.000 JST 2012 FRU: PSU#1,PSU#2,PSU#3,* Msg: ACFAIL occurred (ACS=3) (FEP type = A1)</pre>										
	<p>If -v option is specified</p> <pre>Date: Oct 20 17:45:31 JST 2012 Code: xxxxxxxx-xxxxxxxxxxxxxxxxxx-xxxxxxxxxxxxxxxxxxxx Status: Alarm Occurred: Oct 20 17:45:31.000 JST 2012 FRU: PSU#1,PSU#2,PSU#3,* Msg: ACFAIL occurred (ACS=3) (FEP type = A1) Diagnostic Code: xxxxxxxx xxxxxxxx xxxx xxxxxxxx xxxxxxxx xxxx xxxxxxxx xxxxxxxx xxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxx</pre>										
	<p>If the -V option is specified</p> <pre>Date: Oct 20 17:45:31 JST 2012 Code: xxxxxxxx-xxxxxxxxxxxxxxxxxx-xxxxxxxxxxxxxxxxxxxx Status: Alarm Occurred: Oct 20 17:45:31.000 JST 2012 FRU: PSU#1,PSU#2,PSU#3,* Msg: ACFAIL occurred (ACS=3) (FEP type = A1) Diagnostic Code: xxxxxxxx xxxxxxxx xxxx xxxxxxxx xxxxxxxx xxxx xxxxxxxx xxxxxxxx xxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxx Diagnostic Messages :</pre>										

If the **-S** option is specified

```
Date: Oct 20 17:45:31 JST 2012
Code: xxxxxxxx-xxxxxxxxxxxxxxxxxxxx-xxxxxxxxxxxxxxxxxxxx
Status: Alarm Occurred: Oct 20 17:45:31.000 JST 2012
FRU: PSU#1,PSU#2,PSU#3,*
Msg: ACFAIL occurred (ACS=3) (FEP type = A1)
Diagnostic Code:
    xxxxxxxx xxxxxxxx xxxx
    xxxxxxxx xxxxxxxx xxxx
    xxxxxxxx xxxxxxxx xxxx
    xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
    xxxxxxxx xxxxxxxx xxxx
Detail log: SCAN MINOR RC 2K
0000: xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
0010: xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
:
:
```

Date: Date log collected (month day hour:minute:second TimeZone year)
This is displayed in local time.

Code: Error code
This is displayed in 25 bytes.

Status: Error status
Any of the following is displayed.

Warning	Partial degradation or warning of the unit
Alarm	Failure or abnormality of the unit
Information	Notification
Notice	System status notification

Occurred: Error occurrence date (in the 'month day hour:minute:second time-zone year' format). This is displayed in local time.

FRU: Alleged unit

The first, second, and third alleged units are displayed separated by a comma (,). If the fourth alleged unit exists, asterisk (*) is displayed. It depends on the point of detection whether the units subsequent to the second one are displayed.

Msg: Contents of error

Diagnostic Code:	Detailed code of error This is displayed in hexadecimal.
Diagnostic Messages:	Detailed message This is displayed if the log has a detailed message.
Detail log:	Scan log code This is displayed if the log has a scan log.

■ Power log

Date	Event	Cause	ID	Switch
Oct 20 17:25:31 JST 2012	Cabinet Power On	Operator	00	Service
Oct 20 17:35:31 JST 2012	PPAR Power On	Operator	00	Locked
Oct 20 17:45:31 JST 2012	PPAR Power Off	Software Request	00	Locked
Oct 20 17:50:31 JST 2012	Cabinet Power Off	Self Reset	00	Service
:				
:				

Date:	Date log collected (month day hour:minute:second TimeZone year) This is displayed in local time.	
Event:	Power status Any of the following statuses is displayed.	
	SCF Reset	In the status in which XSCF is reset
	PPAR Power On	In the status in which the power of PPAR is on
	PPAR Power Off	In the status in which the power of PPAR is off
	PPAR Reset	In the status in which PPAR is restarted
	Cabinet Power On	The chassis power is on
	Cabinet Power Off	The chassis power is off
	XIR	In the status in which eXtended Internal Reset is executed

Cause:	Cause of Event Any of the following is displayed. Self Reset, Power On, System Reset, Panel, Scheduled, IPMI, Power Recover, Operator, Software Request, Alarm, Fatal	
ID:	PPAR-ID or BB-ID In the case of Event for all SPARC M10 Systems chassis or PPARs, "--" is displayed. If Event is Cabinet Power On or Cabinet Power Off, BB-ID is displayed. An integer from 00 to 15 or 80 to 83 is displayed for BB-ID. If Event is PPAR Power On or PPAR Power Off, or PPAR Reset, PPAR-ID is displayed. An integer from 00 to 15 is displayed for PPAR-ID.	
Switch:	Status of the mode switch of the operator panel Any of the following statuses is displayed. Locked Mode during normal operation Service Service mode	
■ Event log		
Default		
Date		
Oct 20 17:45:31 JST 2012	Message	
Oct 20 17:55:31 JST 2012	System power on	
:	System power off	
:		
If -v option is specified		
Date		
Oct 20 17:45:31 JST 2012	Message	
Switch= Service	System power on	
Code=xxxx xxxx xxxx xxxx xxxx xxxx xxxx xxxx		
xxxx xxxx xxxx xxxx xxxx xxxx xxxx		
xxxx xxxx		

Date:	Date log collected (month day hour:minute:second TimeZone year) This is displayed in local time.	
Message:	Event message	
Switch:	Status of the mode switch of the operator panel Any of the following statuses is displayed.	
	Locked	Mode during normal operation
	Service	Service mode
Code:	Detailed event information This is displayed in hexadecimal.	

■ Temperature history

BB#00

Date	Temperature	Power
Oct 20 17:45:31 JST 2012	32.56 (C)	System Power On
Oct 20 17:55:31 JST 2012	32.56 (C)	System Power Off
:		

BB#xx: BB-ID is displayed by an integer from 0 to 15, or from 80 to 83, depending on the system configuration.

Date: Date log collected (month day hour:minute:second TimeZone year)
This is displayed in local time.

Temperature: Intake-air temperature
This is displayed to two decimal places. The unit is Celsius (degrees C).

Power: Power status of the system
Either of the following statuses is displayed.

Cabinet Power On	In the status in which the power of the chassis is on
Cabinet Power OFF	In the status in which the power of the chassis is off

■ Monitoring log

Oct 20 17:45:31 JST 2012	monitor message
Oct 20 17:55:31 JST 2012	monitor message
:	

The date and monitoring message are displayed by one message with one line. For the date, the date the log was collected is displayed in local time (month day hour:minute:second TimeZone year).

- Console message log

```
PPAR-ID: 00
Oct 20 17:45:31 JST 2012      console message
Oct 20 17:55:31 JST 2012      console message
:
:
```

[First line]

PPAR-ID: PPAR ID

Depending on the system configuration, an integer from 00 to 15 is displayed.

[Second and subsequent lines]

The date and console message are displayed by one message with one line.

For the date, the date the log was collected is displayed in local time (month day hour:minute:second TimeZone year).

- Panic message log

```
<<panic>>
Date: Oct 20 18:45:31 JST 2012      PPAR-ID: 00
Oct 20 17:45:31 JST 2012      panic message
Oct 20 17:55:31 JST 2012      panic message
:
```

[Second line]

Date: Date panic occurred (month day hour:minute:second TimeZone year)

This is displayed in local time.

PPAR-ID: PPAR ID

Depending on the system configuration, an integer from 00 to 15 is displayed.

[Third and subsequent lines]

The date and panic message are displayed by one message with one line.

For the date, the date the log was collected is displayed in local time (month day hour:minute:second TimeZone year).

■ IPL message log

```
<<ipl>>
Date: Oct 20 18:45:31 JST 2012      PPAR-ID: 00
Oct 20 17:45:31 JST 2012      ipl message
Oct 20 17:55:31 JST 2012      ipl message
:
```

[Second line]

Date: Date IPL occurred (month day hour:minute:second TimeZone year)

This is displayed in local time.

PPAR-ID: PPAR ID

Depending on the system configuration, an integer from 00 to 15 is displayed.

[Third and subsequent lines]

The date and IPL message are displayed by one message with one line.

For the date, the date the log was collected is displayed in local time (month day hour:minute:second TimeZone year).

EXAMPLES

EXAMPLE 1 Display the error log.

```
XSCF> showlogs error
Date: Oct 20 12:45:31 JST 2012
Code: 00112233-445566778899aabbc -8899aabbcceeff0011223344
Status: Alarm                                Occurred: Oct 20 12:45:31.000 JST 2012
FRU: PSU#1,PSU#2
Msg: ACFAIL occurred (ACS=3) (FEP type = A1)
Date: Oct 20 15:45:31 JST 2012
Code: 00112233-445566778899aabbc -8899aabbcceeff0011223344
Status: Alarm                                Occurred: Oct 20 12:45:31.000 JST 2012
FRU: PSU#1,PSU#2
Msg: ACFAIL occurred (ACS=3) (FEP type = A1)
Date: Oct 20 17:45:31 JST 2012
Code: 00112233-445566778899aabbc -8899aabbcceeff0011223344
Status: Warning                               Occurred: Oct 20 15:45:31.000 JST 2012
FRU: PSU#1,PSU#2, PSU#3,*
Msg: ACFAIL occurred (ACS=3) (FEP type = A1)
```

Example 2 Display the error log of the specified time stamp in detail (-v).

```
XSCF> showlogs error -P Oct2012:45:312012 -v
Date: Oct 20 12:45:31 JST 2012
Code: 00112233-445566778899aabbc -8899aabbcceeff0011223344
Status: Alarm                                Occurred: Oct 20 12:45:31.000 JST 2012
FRU: IOU#0/PCI#3
Msg: offline(vendor=FUJITSU, product=MAJ3182MC)
```

showlogs(8)

```
Diagnostic Code:  
    00112233 44556677 8899  
    00112233 44556677 8899  
    00112233 44556677 8899  
    00112233 44556677 8899aabb ccddeeff  
    00112233 44556677 8899
```

Example 3 Display the error log of the specified time stamp in more detail (-v).

```
XSCF> showlogs error -P Oct2012:45:312012 -v  
Date: Oct 20 12:45:31 JST 2012  
Code: 00112233-445566778899aabbcc-8899aabbcceeff0011223344  
Status: Alarm Occurred: Oct 20 12:45:31.000 JST 2012  
FRU: IOU#0/PCI#3  
Msg: offline(vendor=FUJITSU, product=MAJ3182MC)  
Diagnostic Code:  
    00112233 44556677 8899  
    00112233 44556677 8899  
    00112233 44556677 8899  
    00112233 44556677 8899aabb ccddeeff  
    00112233 44556677 8899  
Diagnostic Messages  
    Jul 11 16:17:42 plato10 root: [ID 702911 user.error] WARNING: /  
    pci@83,4000/scsi@2/sd@0,0 (sd47):  
    Jul 11 16:17:42 plato10 root: [ID 702911 user.error] incomplete  
    write- givin up
```

Example 4 Display the power log.

```
XSCF> showlogs power  
Date Event Cause ID Switch  
Oct 20 17:25:31 JST 2012 Cabinet Power On Operator 00 Service  
Oct 20 17:35:31 JST 2012 PPAR Power On Operator 00 Locked  
Oct 20 17:45:31 JST 2012 PPAR Power Off Software Request 00 Locked  
Oct 20 17:50:31 JST 2012 Cabinet Power Off Self Reset 00 Service
```

Example 5 Display power logs in reverse chronological order of time stamps.

```
XSCF> showlogs power -r  
Date Event Cause ID Switch  
Oct 20 17:50:31 JST 2012 Cabinet Power On Operator 00 Service  
Oct 20 17:45:31 JST 2012 PPAR Power On Operator 00 Locked  
Oct 20 17:35:31 JST 2012 PPAR Power Off Software Request 00 Locked  
Oct 20 17:25:31 JST 2012 Cabinet Power Off Self Reset 00 Service
```

Example 6 Display the power logs within the specified range.

```
XSCF> showlogs power -t Oct2017:302012 -T Oct2017:492012  
Date Event Cause ID Switch  
Oct 20 17:35:31 JST 2012 PPAR Power Off Software Request 00 Locked  
Oct 20 17:45:31 JST 2012 PPAR Power On Operator 00 Locked
```

Example 7 Display the power logs within the specified range. Display them in reverse chronological order of time stamps.

```
XSCF> showlogs power -t Oct2017:302012 -T Oct2017:492012 -r
Date           Event          Cause        ID  Switch
Oct 20 17:45:31 JST 2012    PPAR Power On   Operator    00  Locked
Oct 20 17:35:31 JST 2012    PPAR Power Off  Software Request 00  Locked
```

Example 8 Display power logs specifying the starting date and time for display.

```
XSCF> showlogs power -t Oct2017:302012
Date           Event          Cause        ID  Switch
Oct 20 17:35:31 JST 2012    PPAR Power On   Operator    00  Locked
Oct 20 17:45:31 JST 2012    PPAR Power Off  Software Request 00  Locked
Oct 20 17:50:31 JST 2012    Cabinet Power Off Self Reset  00  Service
```

Example 9 Display the console message log of the specified PPAR-ID.

```
XSCF> showlogs console -p 00
PPAR-ID: 00
Oct 20 17:45:31 JST 2012      Executing last command: boot
Oct 20 17:55:31 JST 2012      Boot device: /pci@83,4000/FJSV,uls@2,1/
disk@0,0:a File and args:
Oct 20 17:55:32 JST 2012      SunOS Release 5.10 Version Generic 64-bit
```

Example 10 Display the temperature history of the specified BB-ID.

```
XSCF> showlogs env -b 0
BB#00
Date           Temperature  Power
Oct 20 17:45:31 JST 2012    32.56(C)   Cabinet Power On
Oct 20 17:55:31 JST 2012    32.56(C)   Cabinet Power Off
```

Example 11 Display the temperature histories of all SPARC M10-4S chassis

```
XSCF> showlogs env -a
BB#00
Date           Temperature  Power
Oct 20 17:45:31 JST 2012    32.56(C)   Cabinet Power On
Oct 20 17:55:31 JST 2012    32.56(C)   Cabinet Power Off
BB#01
Date           Temperature  Power
Oct 20 17:45:31 JST 2012    32.56(C)   Cabinet Power On
Oct 20 17:55:31 JST 2012    32.56(C)   Cabinet Power Off
.
.
.
XB-Box#83
Date           Temperature  Power
Oct 20 17:45:31 JST 2012    32.56(C)   Cabinet Power On
Oct 20 17:55:31 JST 2012    32.56(C)   Cabinet Power Off
```

Note – The displayed codes and messages may be different from the actual display.

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

NAME	showlookup - display the configuration for authentication and privileges lookup
SYNOPSIS	showlookup showlookup -h
DESCRIPTION	showlookup(8) displays configuration settings for authentication and privileges.
Privileges	You must have useradm or fieldeng privileges to run this command. Refer to setprivileges(8) for more information.
OPTIONS	The following option is supported: -h Displays usage statement.
EXAMPLES	EXAMPLE 1 Displaying Settings for Authentication and Privileges XSCF> showlookup Privileges lookup:Local only Authentication lookup: Local and LDAP
EXIT STATUS	The following exit values are returned: 0 Successful completion. >0 An error occurred.
SEE ALSO	setlookup (8)

showlookup(8)

NAME	showmonitorlog - Displays the contents of the monitoring message log in real time.				
SYNOPSIS	showmonitorlog showmonitorlog -h				
DESCRIPTION	<p>showmonitorlog is a command to display the contents of the monitoring message log in real time. It is similar to "tail -f."</p> <p>If showmonitorlog is executed, the command is not terminated to display the monitoring message log and the XSCF shell is occupied. If a message is registered in a monitoring message log, the content is displayed. If the command is executed, nothing is displayed until a monitoring log is registered next time.</p> <p>To terminate real-time display, press [Ctrl]+[C] key.</p>				
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>platadm, plaptop, fieldeng</p> <p>For details on user privileges, see setprivileges(8).</p>				
OPTIONS	<p>The following options are supported.</p> <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p>				
EXAMPLES	<p>EXAMPLE 1 Display the contents of the monitoring message log in real time.</p> <pre>XSCF> showmonitorlog Jun 23 12:17:18 PAPL-SERVER Warning: /BB#0/CMUL,/UNSPECIFIED:SCF:SCF SPI FMEM access error Jul 10 14:13:32 PAPL-SERVER Alarm: /BB#0/CMUU:SCF:Critical low voltage error Jul 11 13:40:20 PAPL-SERVER Information: /BB#0/XBU#0:ANALYZE:CPU-XB interface correctable error Jul 11 13:46:21 PAPL-SERVER Notice: /FIRMWARE,/BB#0/CMUL:SCF:SCF process down detected Jul 11 15:31:54 PAPL-SERVER Event: SCF:System powered on . .</pre>				
EXIT STATUS	<p>The following exit values are returned.</p> <table> <tr> <td>0</td><td>Indicates normal end.</td></tr> <tr> <td>>0</td><td>Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				

`showmonitorlog(8)`

NAME	shownameserver - Displays the name servers and search paths set in the XSCF network.
SYNOPSIS	shownameserver shownameserver -h
DESCRIPTION	shownameserver is a command to display the list of the IP addresses of the name server and search paths set currently in the XSCF network.
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXTENDED DESCRIPTION	You can set the name servers and search paths of the XSCF network by using setnameserver(8) .
EXAMPLES	EXAMPLE 1 Display the name servers set currently in the XSCF network. We take as an example the case that three name servers and five search paths are set. <pre>XSCF> shownameserver nameserver 192.168.1.2 nameserver 10.18.108.10 nameserver 10.24.1.2 search example1.com search example2.com search example3.com search example4.com search example5.com</pre> EXAMPLE 2 Display the name servers set currently in the XSCF network. We take as an example the case that no name server or search path is set. <pre>XSCF> shownameserver nameserver --- search ---</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.

SEE ALSO

setnameserver (8)

NAME	shownetwork - Displays the information of the network interface set in the XSCF.												
SYNOPSIS	shownetwork [-M] [-a -i interface] shownetwork -h												
DESCRIPTION	shownetwork is a command to display the information of the network interface set currently in the XSCF. You can display the information of the specified network interface or all network interfaces. The following information is displayed.												
	<table> <tr> <td>xscf#<i>x-y</i></td><td>XSCF network interface name</td></tr> <tr> <td>HWaddr</td><td>MAC address (Displayed in hexadecimal)</td></tr> <tr> <td>inet addr</td><td>IP address</td></tr> <tr> <td>Bcast</td><td>Broadcast</td></tr> <tr> <td>Mask</td><td>Netmask</td></tr> <tr> <td>UP/DOWN</td><td>Whether the network interface is valid</td></tr> </table>	xscf# <i>x-y</i>	XSCF network interface name	HWaddr	MAC address (Displayed in hexadecimal)	inet addr	IP address	Bcast	Broadcast	Mask	Netmask	UP/DOWN	Whether the network interface is valid
xscf# <i>x-y</i>	XSCF network interface name												
HWaddr	MAC address (Displayed in hexadecimal)												
inet addr	IP address												
Bcast	Broadcast												
Mask	Netmask												
UP/DOWN	Whether the network interface is valid												
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .												
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the information set in all XSCF network interfaces. -h Displays the usage. Specifying this option with another option or operand causes an error. -i Displays the status of the current XSCF network. -M Displays text one screen at a time. 												

OPERANDS

The following operands are supported.

interface Specifies the network interface to be displayed. You can specify any of the following depending on the system configuration. If it is specified with the -a option, it becomes invalid.

- For SPARC M10-4S (with crossbar box)

xbbox#80-lan#0	XBBOX#80-LAN#0
xbbox#80-lan#1	XBBOX#80-LAN#1
lan#0	Take-over IP address of XBBOX#80-LAN#0 and XBBOX#81-LAN#0
xbbox#81-lan#0	XBBOX#81-LAN#0
xbbox#81-lan#1	XBBOX#81-LAN#1
lan#1	Take-over IP addresses of XBBOX#80-LAN#1 and XBBOX#81-LAN#1

- For SPARC M10-4S (without crossbar box)

bb#00-lan#0	BB#00-LAN#0
bb#00-lan#1	BB#00-LAN#1
lan#0	Take-over IP addresses of BB#00-LAN#0 and BB#01-LAN#0
bb#01-lan#0	BB#01-LAN#0
bb#01-lan#1	BB#01-LAN#1
lan#1	Take-over IP addresses of BB#00-LAN#1 and BB#01-LAN#1

- For SPARC M10-1/M10-4

bb#00-lan#0	BB#00-LAN#0
lan#0	Abbreviated form of bb#00-lan#0
bb#00-lan#1	BB#00-LAN#1
lan#1	Abbreviated form of bb#00-lan#1

EXTENDED DESCRIPTION

- The take-over IP address means IP addresses which can be used without switch of XSCF recognized in multi-XSCF configuration. If each LAN port of an active XSCF unit is set in lan#0 and lan#1, you can access them by the names, lan#0 and lan#1.
- For SPARC M10-1/M10-4, lan#0 is fixed to bb#0-lan#0 and lan#1 is fixed to bb#0-lan#1.
- For SPARC M10-4S, if the take-over IP address is disabled by *setnetwork(8)*, nothing is displayed even with the take-over IP address specified by *shownetwork*.

- You can set the XSCF network interface by using `setnetwork(8)`.

EXAMPLES

EXAMPLE 1 Display the information set in LAN#1 of XBBOX#80.

```
XSCF> shownetwork xbbox#80-lan#1
xbbox#80-lan#1
    Link encap:Ethernet HWaddr 00:00:00:12:34:56
      inet addr:192.168.10.11 Bcast: 192.168.10.255
    Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
          RX packets:54424 errors:0 dropped:0 overruns:0 frame:0
          TX packets:14369 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:20241827 (19.3 MiB) TX bytes:2089769 (1.9 MiB)
          Base address:0x1000
```

EXAMPLE 2 Display the information set in LAN#0 of XBBOX#80.

```
XSCF> shownetwork xbbox#80-lan#0
xbbox#80-lan#0
    Link encap:Ethernet HWaddr 00:00:00:12:34:56 E0:00:C4:00:8B
      inet addr: 192.168.11.10 Bcast: 192.168.11.255
    Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
          RX packets:54424 errors:0 dropped:0 overruns:0 frame:0
          TX packets:14369 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:12241827 (11.3 MiB) TX bytes:1189769 (0.9 MiB)
          Base address:0x1000
```

EXAMPLE 3 Display the information set in the take-over IP address of LAN#0.

```
XSCF> shownetwork lan#0
lan#0      Link encap:Ethernet HWaddr 00:00:00:12:34:56
           inet addr:192.168.1.10 Bcast:192.168.1.255
    Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
          Base address:0xe000
```

EXAMPLE 4 Display the status of the XSCF network.

```
XSCF> shownetwork -i
Active Internet connections (without servers)
Proto Recv-Q Send-Q Local Address           Foreign Address         State
tcp        0      0 xx.xx.xx.xx:telnet       xxxx:1617           ESTABLISHED
```

EXAMPLE 5 For SPARC M10-4S (without crossbar box), display the set information.

```
XSCF> shownetwork -a
bb#00-lan#0
    Link encap:Ethernet HWaddr 00:00:00:12:34:56
```

shownetwork(8)

```
        inet addr: 192.168.11.10  Bcast: 192.168.11.255
Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:54424 errors:0 dropped:0 overruns:0 frame:0
          TX packets:14369 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:12241827 (11.3 MiB)  TX bytes:1189769 (0.9 MiB)
          Base address:0x1000

lan#0      Link encap:Ethernet  HWaddr 00:00:00:12:34:56
           inet addr:192.168.11.11    Bcast:192.168.11.255
Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          Base address:0xe000

bb#00-lan#1
          Link encap:Ethernet  HWaddr 00:00:00:12:34:57
          inet addr:192.168.10.10  Bcast: 192.168.10.255
Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:54424 errors:0 dropped:0 overruns:0 frame:0
          TX packets:14369 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:20241827 (19.3 MiB)  TX bytes:2089769 (1.9 MiB)
          Base address:0x1000

lan#1      Link encap:Ethernet  HWaddr 00:00:00:12:34:57
           inet addr:192.168.10.11    Bcast:192.168.10.255
Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          Base address:0xe000

bb#01-lan#0
          HWaddr 00:00:00:12:34:59
          inet addr:192.168.10.12  Mask:255.255.255.0

bb#01-lan#1
          HWaddr 00:00:00:12:34:60
```

EXIT STATUS

The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO

setnetwork (8)

NAME	showntp - Displays the NTP information set in the XSCF network.
SYNOPSIS	showntp {-l -a <i>address</i> -s -m} showntp -h
DESCRIPTION	<p>showntp is a command to display the NTP information set currently in the XSCF network.</p> <p>The following information can be displayed.</p> <ul style="list-style-type: none">■ NTP server registered in the XSCF network■ Synchronization status with the upper NTP servers■ Whether NTP service is provided to the client■ stratum value set in the XSCF network■ Whether the preferred server is specified■ Clock address of the local clock set in XSCF
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays all NTP servers set currently in the XSCF network. -h Displays the usage. Specifying this option with another option or operand causes an error. -l Displays whether it is synchronized with the NTP server -m Displays whether the preferred server is specified (perfer) and clock address of the local clock (localaddr). In perfer, either of the following is displayed. <ul style="list-style-type: none"> on The preferred server is specified. off The preferred server is not specified. In localaddr, the least significant byte of the clock address of the local clock 127.127.1.u is displayed by a figure from 0 to 3. -s Displays the stratum value set in XSCF.

OPERANDS

The following operands are supported.

address Specifies the IP address or host name of the NTP server to be displayed. If the -a option is specified, it becomes invalid.

To specify them by the IP address, *address* can be specified in a format using four sets of integers separated by periods (.).

xxx.xxx.xxx.xxx

xxx Specifies an integer from 0 to 255. This can be specified using zero suppression.

To specify them by the host name, specify *address* within 64 characters in a format separating the label elements by periods (.). For the label element, you can use alphanumeric characters and hyphens (-). However, make the specification using an alphabetic character for the beginning, and an alphanumeric character for the end of the element. (Based on RFC 1034.) Depending on the DNS server, the server name needs to be name-resolvable.

EXTENDED DESCRIPTION

- If the preferred server is not specified, there is no prefer information in the NTP server displayed by showntp.
- You can set the NTP server of the XSCF network by using setntp(8).
- If showntp is executed after executing setntp(8), the contents set by setntp(8) are displayed. To confirm the settings information of the NTP currently in operation, execute this command with the -l option.

EXAMPLES

EXAMPLE 1 Display all registered NTP servers. If -m prefer=off is set by setntp, the characters prefer are not displayed.

```
XSCF> showntp -a
client : enable
server : disable

server ntp1.example.com prefer
server ntp2.example.com
```

EXAMPLE 2 Confirm synchronization with the NTP server and display the result.

```
XSCF> showntp -l
remote          refid      st t when poll reach    delay    offset   jitter
=====
*192.168.0.27  192.168.1.56  2 u 27 64 377  12.929  -2.756  1.993
+192.168.0.57  192.168.1.86  2 u 32 64 377  13.030  2.184  94.421
127.127.1.0    .LOCL.       5 l 44 64 377  0.000  0.000  0.008
```

EXAMPLE 3 Display the stratum value set in the XSCF network.

```
XSCF> showntp -s
stratum : 5
```

EXAMPLE 4 Display whether the preferred server is specified and the clock address of the local clock.

```
XSCF> showntp -m
prefer : on
localaddr : 0
```

EXAMPLE 5 Confirm synchronization if the NTP server is not synchronized with the upper NTP servers and the service is not provided to the client.

```
XSCF> showntp -l
NTP is unavailable.
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

setntp (8), setnameserver (8)



NAME	showpacketfilters - Displays the IP packet filtering rules set in the XSCF network.
SYNOPSIS	showpacketfilters { -a -l } [-M] showpacketfilters -h
DESCRIPTION	showpacketfilters is a command to displays the IP packet filtering rules set in the XSCF network.
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -a Displays the IP packet filtering rules set in the XSCF network. -h Displays the usage. Specifying this option with another option or operand causes an error. -l Displays the operation status of the IP packet filtering rules set in the XSCF network. -M Displays text one screen at a time.
EXTENDED DESCRIPTION	You can set the IP packet filtering rules used in the XSCF network by using setpacketfilters(8) .
EXAMPLES	<p>EXAMPLE 1 For SPARC M10-4S (with crossbar box), display the IP packet filtering rules set in the XSCF network.</p> <pre>XSCF> showpacketfilters -a -s 172.16.0.0/255.255.0.0 -i xbbox#80-lan#0 -j DROP -s 172.16.0.0/255.255.0.0 -i xbbox#81-lan#0 -j DROP -s 10.10.10.10/255.255.255.255 -j DROP -s 192.168.100.0/255.255.255.0 -i xbbox#80-lan#1 -j ACCEPT -s 192.168.100.0/255.255.255.0 -i xbbox#81-lan#1 -j ACCEPT -i xbbox#80-lan#1 -j DROP -i xbbox#81-lan#1 -j DROP</pre> <p>EXAMPLE 2 For SPARC M10-4S (with crossbar box), display the operation status of the IP packet filtering rules of the XSCF network.</p> <pre>XSCF> showpacketfilters -l pkts bytes target prot in source 0 0 DROP all xbbox#80-lan#0 172.16.0.0/255.255.0.0 0 0 DROP all * 10.10.10.10 0 0 ACCEPT all xbbox#80-lan#1 192.168.100.0/255.255.255.0 0 0 DROP all xbbox#80-lan#1 0.0.0.0/0.0.0.0</pre> <pre>pkts bytes target prot in source</pre>

showpacketfilters(8)

```
0      0  DROP      all  xbbox#81-lan#0 172.16.0.0/255.255.0.0
0      0  DROP      all  *          10.10.10.10
0      0  ACCEPT    all  xbbox#81-lan#1 192.168.100.0/255.255.255.0
0      0  DROP      all  xbbox#81-lan#1 0.0.0.0/0.0.0.0
XSCF>
```

EXIT STATUS

The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO

setpacketfilters (8)

NAME	showpasswordpolicy - Displays the current password policy setting.
SYNOPSIS	showpasswordpolicy showpasswordpolicy -h
DESCRIPTION	showpasswordpolicy is a command to display the password policy setting. The pam_cracklib module, date of the effective period, and number of the passwords stored in the password history are included.
Privileges	To execute this command, useradm privilege is required. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	EXAMPLE 1 Display the password policy setting. XSCF> showpasswordpolicy Mindays: 0 Maxdays: 99999 Warn: 7 Inactive: -1 Expiry: 0 Retry: 3 Difok: 10 Minlen: 9 Dcredit: 1 Ucredit: 1 Lcredit: 1 Ocredit: 1 Remember: 3
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setpasswordpolicy (8)

`showpasswordpolicy(8)`

NAME	showpciboxdio - Displays each PCI slot setting of whether to enable the direct I/O function for PCI card mounted on PCI Expansion unit.
SYNOPSIS	<pre>showpciboxdio [-a -b <i>bb_id</i>] [-M] all</pre> <pre>showpciboxdio [-a -b <i>bb_id</i>] [-M] <i>slot_no...</i></pre> <pre>showpciboxdio -h</pre>
DESCRIPTION	<p>showpciboxdio is a command to display the enable/disable setting information of the direct I/O function for each PCI card mounted on the PCI Expansion unit.</p> <p>This command is not supported on SPARC M10-1.</p>
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p><i>platadm</i>, <i>platop</i>, <i>fieldeng</i></p> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the setting information of the direct I/O function for all SPARC M10-4/M10-4S. When omitting both -a and -b options, the setting information of the current SPARC M10-4/M10-4S is displayed. -b <i>bb_id</i> Specifies a BB-ID of the target server to be displayed. On SPARC M10-4, only 0 can be specified for <i>bb_id</i>. On SPARC M10-4S, an integer 0-15 can be specified for <i>bb_id</i> depending on the system configuration. When omitting both -a and -b options, the setting information of the current SPARC M10-4/M10-4S is displayed. -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time.
OPERANDS	<ul style="list-style-type: none"> all Displays the settings of all PCI slots on the specified server. This operand cannot be used with the <i>slot_no</i> at the same time. <i>slot_no</i> Specifies the number of a PCI slot to be displayed. An integer 0-10 can be specified in no particular order. Plural slot numbers can be specified at the same time by inserting space characters. This operand cannot be used with the <i>all</i> at the same time.

EXTENDED DESCRIPTION

- showpciboxdio cannot be executed for any crossbar box. And omitting -a and -b *bb_id* fails with an error when operating on the crossbar box.
- This command can be executed only in the case where the power of a PPAR, in which the target server's physical system board (PSB) is included, is turned off. In other cases, the command fails with an error. When the power of the PPAR is not turned off, an error occurs and the settings will be reflected at the next boot.
- The configured settings will be ignored when 8-10 is specified for the slot number in SPARC M10-4S.
- You can configure each PCI slot setting of whether to enable the direct I/O function for PCI card mounted on PCI Expansion unit by using setpciboxdio(8).

EXAMPLES

EXAMPLE 1 Displaying setting information of PCI slots 2, 3, and 7 of BB-ID 2.

```
XSCF> showpciboxdio -b 2 2 3 7
PCI slot Direct I/O via PCIBOX
BB#02
 2      enabled
 3      enabled
 7      disabled
```

EXAMPLE 2 Displaying the setting information of all PCI slots on SPARC M10-4.

```
XSCF> showpciboxdio -a
PCI slot Direct I/O via PCIBOX
BB#00
 0      enabled
 1      enabled
 2      enabled
 3      enabled
 4      enabled
 5      enabled
 6      enabled
 7      disabled
 8      enabled
 9      enabled
10      enabled
```

EXAMPLE 3 Displaying the setting information of all PCI slots of all servers that can be connected according to the system configuration.

```
XSCF> showpciboxdio -a
PCI slot Direct I/O via PCIBOX
BB#00
 0      enabled
 1      enabled
 2      enabled
 3      enabled
 4      disabled
```

```
5      enabled
6      enabled
7      enabled
8      disabled
9      disabled
10     disabled
BB#01
0      enabled
1      enabled
2      enabled
3      enabled
4      enabled
5      enabled
6      enabled
7      enabled
8      enabled
9      enabled
10     enabled
BB#02
0      enabled
1      enabled
2      disabled
3      disabled
4      enabled
5      enabled
6      enabled
7      disabled
8      disabled
9      disabled
10     disabled
BB#03
0      enabled
1      enabled
2      enabled
3      enabled
4      enabled
5      enabled
6      enabled
7      disabled
8      enabled
9      enabled
10     enabled
```

EXIT STATUS The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO [setpciboxdio\(8\)](#)

showpciboxdio(8)

NAME	showpcl - Displays the physical partition (PPAR) configuration information (PCL) that is currently set.																																		
SYNOPSIS	<pre>showpcl [-v] -a [-M] showpcl [-v] -p ppar_id [[-1 lsb]...] showpcl -h</pre>																																		
DESCRIPTION	<p>showpcl is a command to display the PCL set by <code>setpcl(8)</code>.</p> <p>PCL is hardware resource information which can be set in PPAR or logical system boards (LEB) composing PPAR.</p> <p>LSB is the unit of system boards recognized by Hypervisor. It is indicated by an independent integer from 00 to 15 for each PPAR.</p> <p>The system board (PSB) means the boards recognized by system and mounted as hardware.</p> <p>showpcl command can display the following information in PCL.</p> <table> <tr> <td>PPAR-ID</td> <td>PPAR ID</td> </tr> <tr> <td>LSB</td> <td>LSB number. An integer from 00 to 15 is displayed.</td> </tr> <tr> <td>PSB</td> <td>PSB number corresponding to LSB. This is displayed in the format below.</td> </tr> <tr> <td></td> <td><i>xx-y:</i></td> </tr> <tr> <td></td> <td> <i>xx</i> Integer from 00 to 15</td> </tr> <tr> <td></td> <td> <i>y</i> It is fixed to 0</td> </tr> <tr> <td>Status</td> <td>Operating status of PPAR. Any of the following is displayed.</td> </tr> <tr> <td></td> <td>Powered Off</td> </tr> <tr> <td></td> <td> In the power-off status</td> </tr> <tr> <td></td> <td>Initialization Phase</td> </tr> <tr> <td></td> <td> In the status in which POST is in operation</td> </tr> <tr> <td></td> <td>Initialization Complete</td> </tr> <tr> <td></td> <td> In the status in which POST is completed</td> </tr> <tr> <td></td> <td>Running</td> </tr> <tr> <td></td> <td> In the status in which POST is completed and Oracle Solaris is running</td> </tr> <tr> <td></td> <td>Hypervisor Abort</td> </tr> <tr> <td></td> <td> The status between occurrence of Hypervisor Abort and PPAR reset</td> </tr> </table>	PPAR-ID	PPAR ID	LSB	LSB number. An integer from 00 to 15 is displayed.	PSB	PSB number corresponding to LSB. This is displayed in the format below.		<i>xx-y:</i>		<i>xx</i> Integer from 00 to 15		<i>y</i> It is fixed to 0	Status	Operating status of PPAR. Any of the following is displayed.		Powered Off		In the power-off status		Initialization Phase		In the status in which POST is in operation		Initialization Complete		In the status in which POST is completed		Running		In the status in which POST is completed and Oracle Solaris is running		Hypervisor Abort		The status between occurrence of Hypervisor Abort and PPAR reset
PPAR-ID	PPAR ID																																		
LSB	LSB number. An integer from 00 to 15 is displayed.																																		
PSB	PSB number corresponding to LSB. This is displayed in the format below.																																		
	<i>xx-y:</i>																																		
	<i>xx</i> Integer from 00 to 15																																		
	<i>y</i> It is fixed to 0																																		
Status	Operating status of PPAR. Any of the following is displayed.																																		
	Powered Off																																		
	In the power-off status																																		
	Initialization Phase																																		
	In the status in which POST is in operation																																		
	Initialization Complete																																		
	In the status in which POST is completed																																		
	Running																																		
	In the status in which POST is completed and Oracle Solaris is running																																		
	Hypervisor Abort																																		
	The status between occurrence of Hypervisor Abort and PPAR reset																																		

	If the -v option is specified, the following information is added.
Cfg-policy	Degradation range in the case that an abnormality is detected in the initial hardware diagnosis. Any of the following is displayed.
FRU	Degradation occurs by part such as CPU and memory (Default).
PSB	Degrades by PSB.
System	Degrades by PPAR.
No-Mem	Whether to make the logical domain use the memory mounted in LSB. Either of the following is displayed.
True	Does not allow use of memory.
False	Allows use of memory (Default).
No-IO	Whether to make the logical domain use the I/O devices mounted in LSB. Either of the following is displayed.
True	Does not allow use of I/O devices.
False	Allows use of I/O devices (Default).
Privileges	To execute this command, any of the following privileges is required.
platadm , platop , fieldeng	Enables execution for all PPARs.
pparamdm , pparmgr , pparop	Enables execution for PPARs for which you have access privilege.
	For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported.
-a	Displays the information of all PPARs.
-h	Displays the usage. Specifying this option with another option or operand causes an error.
-l lsb	Specifies the LSB number to be displayed. <i>lsb</i> is specified by an integer from 0 to 15. You can specify multiple values for the -l option by separating them with spaces. If the -l option is omitted, all LSBs in PPAR are subject.

	<ul style="list-style-type: none"> -M Displays text one screen at a time. It is similar to more command. -p <i>ppar_id</i> Specifies the PPAR-ID to be displayed. Depending on the system configuration, an integer from 0 to 15 is displayed for <i>ppar_id</i>. -v Displays additionally the information of Cfg-policy, No-Mem, and No-IO of PCL.
EXTENDED DESCRIPTION	You can set PCL by using <code>setpcl(8)</code> .
EXAMPLES	<p>EXAMPLE 1 Display the PCL information set in PPAR-ID 0.</p> <pre>XSCF> showpcl -p 0 PPAR-ID LSB PSB Status 00 Running 00 00-0 04 01-0 08 02-0 12 03-0</pre> <p>EXAMPLE 2 Display the detailed information of the PCL for PPAR-ID 0.</p> <pre>XSCF> showpcl -v -p 0 PPAR-ID LSB PSB Status No-Mem No-IO Cfg-policy 00 Running System 00 - 01 - 02 - 03 - 04 01-0 False False 05 - 06 - 07 - 08 02-0 True False 09 - 10 - 11 - 12 03-0 False True 13 - 14 - 15 -</pre> <p>EXAMPLE 3 Display the detailed information of the PCL for PPAR.</p> <pre>XSCF> showpcl -v -a PPAR-ID LSB PSB Status No-Mem No-IO Cfg-policy 00 Running System</pre>

showpcl(8)

00	-		
01	00-0	False	False
.			

01		Powered Off	
			unknown
00	01-0	True	True
.			

15		Running	
			System
00	15-0	True	True

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

addboard(8), deleteboard(8), setpcl(8), setupfru(8), showboards(8), showfru(8)

NAME	showpowercapping - Displays the status of power consumption limitation.
SYNOPSIS	showpowercapping showpowercapping -h
DESCRIPTION	<p>showpowercapping is a command to display the status of power consumption limitation of the system.</p> <p>The following statuses are displayed.</p> <ul style="list-style-type: none"> ■ Whether the power consumption limiting function is enabled or disabled Displays whether to enable/disable the power consumption limiting function of the system. ■ Upper limit of power consumption <ul style="list-style-type: none"> ■ Upper limit of power consumption (Wattage) Displays the upper limit of power consumption by wattage. ■ Upper limit of power consumption (%) Displays the upper limit of power consumption by percentage. Converts the minimum power consumption value (0%) and maximum power consumption value (100%) of the system to the upper limit power value (watt). If the upper limit of the power consumption of setpowercapping(8) is set by wattage specification, no value is displayed. ■ Window time for exceeding the upper limit Displays the window time (second) until recognition as violation after the power consumption value of the system exceeds the upper limit of power consumption. ■ System operation at the time of violation Displays the system operation (display of warning message, shutdown processing, and forcible power-off processing) when the window time for exceeding the upper limit elapsed while the power consumption value of the system exceeds the upper limit of power consumption. <p>You can confirm the minimum power consumption value and maximum power consumption value of the system by showenvironment(8).</p>
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>useradm, plataadm, platop, fieldeng</p> <p>For details on user privileges, see setprivileges(8).</p>

showpowercapping(8)

OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	EXAMPLE 1 Display the status of power consumption limitation of the system. (If the upper limit of power consumption of setpowercapping(8) is set by percent specification) <pre>XSCF> showpowercapping activate_state :enabled powerlimit :25% timelimit :30 violation_actions :none XSCF></pre> EXAMPLE 2 Display the status of power consumption limitation of the system. (If the upper limit of power consumption of setpowercapping(8) is set by wattage specification) <pre>XSCF> showpowercapping activate_state :enabled powerlimit :1000w timelimit :300 violation_actions :poff XSCF></pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setpowercapping (8) , showenvironment (8)

NAME	showpowerschedule - Displays the schedule operation information.								
SYNOPSIS	showpowerschedule {-p <i>ppar_id</i> -a} -m state showpowerschedule {-p <i>ppar_id</i> -a} -m list [-v] [-M] showpowerschedule -h								
DESCRIPTION	<p>showpowerschedule is a command to display the schedule operation information.</p> <p>The types of the displayed contents are the following two.</p> <ul style="list-style-type: none"> ■ Information regarding the schedule operation settings <ul style="list-style-type: none"> ■ PPAR-ID ■ Whether schedule operation is enabled/disabled ■ Number of the set schedules ■ Setting of the power recovery mode ■ Information regarding the schedule <ul style="list-style-type: none"> ■ Schedule ID ■ PPAR-ID ■ Specification method ■ Period/Date of specification ■ Power-on time ■ Power-off time 								
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><i>platadm</i>, <i>platop</i></td> <td>Enables execution for all PPARs.</td> </tr> <tr> <td><i>pparadm</i>, <i>pparmgr</i>, <i>pparop</i></td> <td>Enables execution for PPARs for which you have accessible privilege.</td> </tr> </table> <p>For details on user privileges, see <i>setprivileges(8)</i>.</p>	<i>platadm</i> , <i>platop</i>	Enables execution for all PPARs.	<i>pparadm</i> , <i>pparmgr</i> , <i>pparop</i>	Enables execution for PPARs for which you have accessible privilege.				
<i>platadm</i> , <i>platop</i>	Enables execution for all PPARs.								
<i>pparadm</i> , <i>pparmgr</i> , <i>pparop</i>	Enables execution for PPARs for which you have accessible privilege.								
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-a</td> <td>Displays the schedule information of all physical partitions (PPARs).</td> </tr> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-M</td> <td>Displays text one screen at a time.</td> </tr> <tr> <td>-m list</td> <td>Displays the schedule information.</td> </tr> </table>	-a	Displays the schedule information of all physical partitions (PPARs).	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-m list	Displays the schedule information.
-a	Displays the schedule information of all physical partitions (PPARs).								
-h	Displays the usage. Specifying this option with another option or operand causes an error.								
-M	Displays text one screen at a time.								
-m list	Displays the schedule information.								

	-m state	Displays the schedule operation settings.
	-p <i>ppar_id</i>	Displays the information of the specified <i>ppar_id</i> . Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .
	-v	Displays the information of the next power-on time and power-off time of PPAR.
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ To change the schedule operation information, use <code>setpowerschedule(8)</code>. ■ To set the schedule, use <code>addpowerschedule(8)</code>. To delete it, use <code>deletepowerschedule(8)</code>. ■ Specifying a non-existent <i>ppar_id</i> or invalid option causes an error. 	
EXAMPLES	<p>EXAMPLE 1 Display the schedule status which sets to all PPARs.</p> <pre>XSCF> showpowerschedule -a -m state PPAR-ID schedule member recover mode ----- 0 disable - on 1 enable 2 auto 2 enable 1 on 3 disable - off XSCF></pre> <p>EXAMPLE 2 Display the schedule list of PPAR-ID 1. (If the command is executed at 0 o'clock on January 1st without the -v option.)</p> <pre>XSCF> showpowerschedule -p 1 -m list ID# PPAR-ID Type Term/Date OnTime/OffTime Pattern ----- 15 1 Daily Dec 01 - Mar 01 06:00 / 22:00 - 16 1 Monthly Nov - Feb 08:00 / ---:-- 01-01 1 1 Daily Jan 01 - Dec 31 09:00 / 21:30 - 17 1 Monthly Nov - Feb ---:-- / 20:00 29-29 4 1 Weekly Feb - Apr 07:10 / 19:50 sun,mon,tue,wed,thu,fri,sat 10 1 Special Mar 04 2013 00:00 / 23:50 - 6 1 Monthly May - May 09:20 / 18:40 01-05 11 1 Holiday May 04 2013 ---:-- / ---:-- - 12 1 Weekly Jun - Aug 07:10 / ---:-- mon 13 1 Weekly Jun - Aug ---:-- / 19:50 fri XSCF></pre> <p>EXAMPLE 3 Display the schedule lists of all PPARs.(If the command is executed at 0</p>	

o'clock on January 1st with the -v option.)

```
XSCF> showpowerschedule -a -m list -v
PPAR-ID 1 Next Power On= Jan 01 06:00 2013 Next Power Off= Jan 01 21:30 2013
PPAR-ID 2 Next Power On= May 01 09:20 2013 Next Power Off= Mar 01 28:40 2013

ID# PPAR-ID Type Term/Date OnTime/OffTime Pattern
----- -----
15 1 Daily Dec 01 - Mar 01 06:00 / 22:00 -
16 1 Monthly Nov - Feb 08:00 / --- 01-01
1 1 Daily Jan 01 - Dec 31 09:00 / 21:30 -
17 1 Monthly Nov - Feb --- / 20:00 29-29
4 1 Weekly Feb - Apr 07:10 / 19:50 mon,tue,wed,thu,fri
10 1 Special Mar 04 2013 00:00 / 23:50 -
6 2 Monthly May - May 09:20 / 18:40 01-05
11 2 Holiday May 04 2013 --- / --- -
12 2 Weekly Jun - Aug 07:10 / --- mon
13 2 Weekly Jun - Aug --- / 19:50 fri
XSCF>
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

addpowerschedule (8), **deletepowerschedule (8)**, **setpowerschedule (8)**

showpowerschedule(8)



NAME	showpowerupdelay - Displays the warm-up time and wait time for air conditioning of the system that is currently set.				
SYNOPSIS	showpowerupdelay showpowerupdelay -h				
DESCRIPTION	<p>showpowerupdelay is a command to display the warm-up time and wait time for air conditioning of the system that is currently set.</p> <p>The following contents are displayed.</p> <table> <tr> <td>warmup time</td> <td>Warm-up time. The setting value of each physical partition (PPAR) is displayed.</td> </tr> <tr> <td>wait time</td> <td>Wait time for air conditioning</td> </tr> </table>	warmup time	Warm-up time. The setting value of each physical partition (PPAR) is displayed.	wait time	Wait time for air conditioning
warmup time	Warm-up time. The setting value of each physical partition (PPAR) is displayed.				
wait time	Wait time for air conditioning				
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>platadm, plaptop, pparadm, pparmgr, pparop, fieldeng</p> <p>For details on user privileges, see setprivileges(8).</p>				
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.		
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
EXTENDED DESCRIPTION	You can set the warm-up time and wait time for air conditioning of the system by using setpowerupdelay(8) .				
EXAMPLES	<p>EXAMPLE 1 Display the warm-up time and wait time for air conditioning of the system.</p> <pre>XSCF> showpowerupdelay warmup time : PPAR#00 :10 minute(s) PPAR#01 :10 minute(s) : PPAR#15 :15 minute(s) wait time : 20 minute(s)</pre>				
EXIT STATUS	<p>The following exit values are returned.</p> <table> <tr> <td>0</td> <td>Indicates normal end.</td> </tr> <tr> <td>>0</td> <td>Indicates error occurrence.</td> </tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	setpowerupdelay (8)				

showpowerupdelay(8)



NAME	showpparinfo - Display the resource information of the physical partition (PPAR).												
SYNOPSIS	showpparinfo -p <i>ppar_id</i> [-M] showpparinfo -h												
DESCRIPTION	<p>showpparinfo is a command to display resource information regarding CPU and memory inside the PPAR.</p> <p>The resource information displayed by showpparinfo is as the following:</p> <table><tr><td>PPAR# Information</td><td>Resource information inside the PPAR. The following information is displayed.</td></tr><tr><td>CPU(s)</td><td>Total number of CPU chips that are allotted to the PPAR.</td></tr><tr><td>CPU Cores</td><td>Total number of CPU cores that are allotted to the PPAR.</td></tr><tr><td>CPU Threads</td><td>Total number of CPU threads that are allotted to the PPAR.</td></tr><tr><td>Memory size (GB)</td><td>Amount of memory in GB that is allotted to the PPAR.</td></tr><tr><td>CoD Assigned (Cores)</td><td>Total number of CPU core activations that are allotted to the PPAR.</td></tr></table>	PPAR# Information	Resource information inside the PPAR. The following information is displayed.	CPU(s)	Total number of CPU chips that are allotted to the PPAR.	CPU Cores	Total number of CPU cores that are allotted to the PPAR.	CPU Threads	Total number of CPU threads that are allotted to the PPAR.	Memory size (GB)	Amount of memory in GB that is allotted to the PPAR.	CoD Assigned (Cores)	Total number of CPU core activations that are allotted to the PPAR.
PPAR# Information	Resource information inside the PPAR. The following information is displayed.												
CPU(s)	Total number of CPU chips that are allotted to the PPAR.												
CPU Cores	Total number of CPU cores that are allotted to the PPAR.												
CPU Threads	Total number of CPU threads that are allotted to the PPAR.												
Memory size (GB)	Amount of memory in GB that is allotted to the PPAR.												
CoD Assigned (Cores)	Total number of CPU core activations that are allotted to the PPAR.												

CPU(s)	Information on CPUs that are mounted on the PSB, that are allotted to the PPAR. The following information is displayed.
	PID Allotted PPAR-ID. Displayed as an integer from 00 to 15.
	PSB Allotted PSB number. Displayed in the format of xx-y (where xx is the BB-ID which is an integer from 00 to 15 and y is the PSB number (fixed as 0)).
	CPU# CPU chip number. Displayed as an integer from 0 to 3.
	Cores Total number (integer) of CPU cores under CPU chip.
	Threads Product of the number of CPU cores and the number of threads in each core, under CPU chip.
	Memory Information on memory that is mounted on the PSB and allotted to the PPAR.
	PID Allotted PPAR-ID. Displayed as an integer from 00 to 15.
Memory	PSB Allotted PSB number. Displayed in the format of xx-y (where xx is the BB-ID which is an integer from 00 to 15 and y is the PSB number (fixed as 0)).
	install size GB Amount of memory in GB that is allotted to the PSB.

	IO Devices	Information on PCI card that is mounted on the CPU memory unit (CMU) and allotted to the PPAR. The internal on-board devices are not displayed. Displayed when PPAR is powered on. The following information is displayed.
	PID	Allotted PPAR-ID. Displayed as an integer from 00 to 15.
	PSB	Allotted PSB number. Displayed in the format of xx-y (where xx is the BB-ID which is an integer from 00 to 15 and y is the PSB number (fixed as 0)).
	device	Location of mounting and category of PCI card is displayed.
Privileges		To execute this command, any of the following privileges is required.
	platadm, plaptop, fieldeng	Enables execution for all PPARs.
	pparamdm, pparamgr, pparop	Enables execution for PPARs for which you have access privilege.
		For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS		The following options are supported.
	-h	Displays the usage. Specifying this option with another option or operand causes an error.
	-M	Displays text one screen at a time.
	-p <i>ppar_id</i>	Specifies the PPAR-ID to display the status. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .
EXTENDED DESCRIPTION		<ul style="list-style-type: none"> ■ Display information on resources that are incorporated in PPAR when the PPAR is powered on. ■ Display information on resources that are assigned in a powered off PPAR.
EXAMPLES	EXAMPLE 1	Display information on powered off PPAR#0 (2BB configuration).
	<pre>XSCF> showpparinfo -p 0 PPAR#00 Information: ----- CPU (s) : 8</pre>	

showpparinfo(8)

```
CPU Cores : 128
CPU Threads : 256
Memory size (GB) : 2432
CoD Assigned (Cores) : 128

CPU(s):
-----
PID PSB CPU# Cores Threads
00 00-0 1 16 32
00 00-0 2 16 32
00 00-0 3 16 32
00 01-0 0 16 32
00 01-0 1 16 32
00 01-0 2 16 32
00 01-0 3 16 32

Memory:
-----
install
PID PSB size GB
00 00-0 1216
00 01-0 1216

IO Devices:
-----
PID PSB device
```

EXAMPLE 2 Display information on powered on PPAR#0 (2BB configuration).

```
XSCF> showpparinfo -p 0
PPAR#00 Information:
-----
CPU(s) : 8
CPU Cores : 128
CPU Threads : 256
Memory size (GB) : 2432
CoD Assigned (Cores) : 128

CPU(s):
-----
PID PSB CPU# Cores Threads
00 00-0 1 16 32
00 00-0 2 16 32
00 00-0 3 16 32
00 01-0 0 16 32
00 01-0 1 16 32
00 01-0 2 16 32
00 01-0 3 16 32

Memory:
-----
install
PID PSB size GB
```

```
00 00-0      1216
00 01-0      1216

IO Devices:
-----
PID PSB      device
00 00-0 PCI#0 Name_Property:pci;
00 00-0 PCI#0 PCIBOX#0008;
00 00-0 PCI#0 PCIBOX#0008 PCI#1 Name_Property:network;
00 00-0 PCI#0 PCIBOX#0008 PCI#4 Name_Property:network;
00 00-0 PCI#0 PCIBOX#0008 PCI#7 Name_Property:network;
00 00-0 PCI#1 Name_Property:network;
00 01-0 PCI#0 Name_Property:LSI,sas;
```

EXIT STATUS

The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO

showhardconf(8), **showstatus(8)**



NAME	showpparmode - Displays the operation mode of the physical partition (PPAR) that is currently set.																																												
SYNOPSIS	showpparmode -p <i>ppar_id</i> [-v] showpparmode -h																																												
DESCRIPTION	<p>showpparmode is a command to display the operation mode set currently in the specified PPAR.</p> <p>The following statuses are displayed.</p> <table> <tr> <td>HOST-ID</td> <td>Host ID</td> </tr> <tr> <td></td> <td>If no host ID is assigned, a hyphen (-) is displayed.</td> </tr> <tr> <td>Diagnostics Level</td> <td>Diagnostics level of the self-diagnosis test (POST)</td> </tr> <tr> <td></td> <td>Any of the following is displayed.</td> </tr> <tr> <td></td> <td>off None</td> </tr> <tr> <td></td> <td>min Standard (default)</td> </tr> <tr> <td></td> <td>max Maximum</td> </tr> <tr> <td>Message Level</td> <td>Detailed level of the console message of the POST diagnosis</td> </tr> <tr> <td></td> <td>Any of the following is displayed.</td> </tr> <tr> <td></td> <td>none None</td> </tr> <tr> <td></td> <td>min Limited volume</td> </tr> <tr> <td></td> <td>normal Normal volume (default)</td> </tr> <tr> <td></td> <td>max Maximum volume</td> </tr> <tr> <td></td> <td>debug Debug output</td> </tr> <tr> <td>Host Watchdog operation at the time of timeout</td> <td>Operation of PPAR at the time of host watchdog timeout</td> </tr> <tr> <td></td> <td>Any of the following is displayed.</td> </tr> <tr> <td></td> <td>none None</td> </tr> <tr> <td></td> <td>dumpcore Generates panic</td> </tr> <tr> <td></td> <td>reset Resets the PPAR (default)</td> </tr> <tr> <td>Break Signal</td> <td>Whether the break signal is enabled or disabled</td> </tr> <tr> <td></td> <td>on Enabled (default)</td> </tr> <tr> <td></td> <td>off Disabled</td> </tr> </table>	HOST-ID	Host ID		If no host ID is assigned, a hyphen (-) is displayed.	Diagnostics Level	Diagnostics level of the self-diagnosis test (POST)		Any of the following is displayed.		off None		min Standard (default)		max Maximum	Message Level	Detailed level of the console message of the POST diagnosis		Any of the following is displayed.		none None		min Limited volume		normal Normal volume (default)		max Maximum volume		debug Debug output	Host Watchdog operation at the time of timeout	Operation of PPAR at the time of host watchdog timeout		Any of the following is displayed.		none None		dumpcore Generates panic		reset Resets the PPAR (default)	Break Signal	Whether the break signal is enabled or disabled		on Enabled (default)		off Disabled
HOST-ID	Host ID																																												
	If no host ID is assigned, a hyphen (-) is displayed.																																												
Diagnostics Level	Diagnostics level of the self-diagnosis test (POST)																																												
	Any of the following is displayed.																																												
	off None																																												
	min Standard (default)																																												
	max Maximum																																												
Message Level	Detailed level of the console message of the POST diagnosis																																												
	Any of the following is displayed.																																												
	none None																																												
	min Limited volume																																												
	normal Normal volume (default)																																												
	max Maximum volume																																												
	debug Debug output																																												
Host Watchdog operation at the time of timeout	Operation of PPAR at the time of host watchdog timeout																																												
	Any of the following is displayed.																																												
	none None																																												
	dumpcore Generates panic																																												
	reset Resets the PPAR (default)																																												
Break Signal	Whether the break signal is enabled or disabled																																												
	on Enabled (default)																																												
	off Disabled																																												

	Autoboot (Guest Domain)	Whether the guest domain autoboot is enabled or disabled when PPAR is started
	on	Enabled (default)
	off	Disabled
	Elastic Mode	Whether the low-power operation of CPU or memory is enabled or disabled
	on	Enabled
	off	Disabled (default)
	IOreconfigure	Whether to reconfigure I/O buses when PPAR is started or reset
		Any of the following is displayed.
	true	Enabled
	false	Disabled
	nextboot	Enabled only when the next boot
	PPAR DR	Displays whether the feature of incorporation / detachment of system boards (PSB) to / from a running PPAR is enabled / disabled
		PPAR DR (Current)
		Display the setup status of the PPAR DR feature on the presently running PPAR.
		The setup status of the PPAR DR feature on a powered off PPAR (PPAR DR (Current)) is displayed as "-".
		PPAR DR (Next)
		Display the setup information of the PPAR DR feature on the next starting or resetting of the target PPAR.
	Ethernet Address	Ethernet (MAC) address of PPAR
		This address is used if the environment variable of OpenBoot PROM, local-mac-address?, is false. This information is displayed only if the -v option is specified. However, if the Ethernet (MAC) address is not assigned, a hyphen "-" is displayed.
Privileges	To execute this command, any of the following privileges is required.	
	platadm, fieldeng	Enables execution for all PPARs.
	pparadm	Enables execution for PPARs for which you have administration privilege.

	<p>For details on user privileges, see <code>setprivileges(8)</code>.</p> <p>OPTIONS</p> <p>The following options are supported.</p> <table border="0" data-bbox="375 260 1336 508"> <tr> <td data-bbox="375 260 491 295"><code>-h</code></td><td data-bbox="587 260 1336 321">Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td data-bbox="375 338 491 373"><code>-p ppar_id</code></td><td data-bbox="587 338 1336 425">Specifies the PPAR-ID to be displayed. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>.</td></tr> <tr> <td data-bbox="375 442 491 476"><code>-v</code></td><td data-bbox="587 442 1336 508">Displays detailed information. If the <code>-v</code> option is specified, the Ethernet (MAC) address of PPAR is also displayed.</td></tr> </table> <p>EXTENDED DESCRIPTION</p> <ul style="list-style-type: none"> ■ The operation mode displayed by <code>showpparmode</code> does not indicate the actual operation but the setting status. The actual operation varies according to the status of the mode switch of the operator panel. If the mode switch of the operator panel is "Service," the operation mode of PPAR is set as follows regardless of the contents displayed by <code>showpparmode</code>. <ul style="list-style-type: none"> ■ Diagnosis level, Host Watchdog timeout, autoboot of the guest domain, power-saving operation, I/O bus reconfiguration, PPAR DR feature: As the display of <code>showpparmode</code> ■ Alive Check: Disabled ■ Break signal (STOP-A): Sending a signal ■ You can set the operation mode of PPAR by using <code>setpparmode(8)</code>. <p>EXAMPLES</p> <p>EXAMPLE 1 Display the operation mode of the PPAR set in PPAR-ID 0 (When PPAR is running).</p> <pre>XSCF> showpparmode -p 0 Host-ID :0f010f10 Diagnostic Level :min Message Level :normal Alive Check :on Watchdog Reaction :reset Break Signal :on Autoboot(Guest Domain) :on Elastic Mode :off IOreconfigure :true PPAR DR(Current) :off PPAR DR(Next) :off Ethernet Address :00:0b:5d:e2:01:0c XSCF></pre> <p>EXAMPLE 2 Display the detailed information of the operation mode of the PPAR set in</p>	<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.	<code>-p ppar_id</code>	Specifies the PPAR-ID to be displayed. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .	<code>-v</code>	Displays detailed information. If the <code>-v</code> option is specified, the Ethernet (MAC) address of PPAR is also displayed.
<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.						
<code>-p ppar_id</code>	Specifies the PPAR-ID to be displayed. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i> .						
<code>-v</code>	Displays detailed information. If the <code>-v</code> option is specified, the Ethernet (MAC) address of PPAR is also displayed.						

PPAR-ID 0 (When PPAR is running).

```
XSCF> showpparmode -p 0 -v
Host-ID : 8099010c
Diagnostic Level : min
Message Level : normal
Alive Check : off
Watchdog Reaction : reset
Break Signal : off
Autoboot(Guest Domain) : on
Elastic Mode : off
IOreconfigure : true
PPAR DR(Current) : off
PPAR DR(Next) : on
Ethernet Address : 00:0b:5d:e2:01:0c
XSCF>
```

EXAMPLE 3 Display the detailed information of the operation mode of the PPAR set in PPAR-ID 0 (When the host ID and the ethernet address are unassigned and the PPAR is powered off).

```
XSCF> showpparmode -p 0 -v
Host-ID : -
Diagnostic Level : min
Message Level : normal
Alive Check : off
Watchdog Reaction : reset
Break Signal : off
Autoboot(Guest Domain) : on
Elastic Mode : off
IOreconfigure : true
PPAR DR(Current) : -
PPAR DR(Next) : on
Ethernet Address : -
XSCF>
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO [setpparmode \(8\)](#)

NAME	showpparparam - Displays the OpenBoot PROM environmental variable and the boot script of the control domain which will be set at the subsequent startup of the specified physical partition (PPAR).						
SYNOPSIS	<pre>showpparparam -p <i>ppar_id</i> showpparparam -p <i>ppar_id</i> -c auto-boot showpparparam -h</pre>						
DESCRIPTION	<p>showpparparam is a command to display the setup value of the specified physical partition's control domain's OpenBoot PROM environment variables and boot script (the script that is executed at the starting of the OpenBoot PROM), which are setup at the next start.</p> <p>Note – When you changed the value of the environmental variable from OpenBoot PROM while the PPAR is in operation, it will not be applied to the showpparparam output. When you start up the PPAR next time, the value you changed in OpenBoot PROM will be set.</p> <p>The following setting values are displayed.</p>						
	<table> <tr> <td><code>use-nvramrc</code></td><td>Displays the setting value of the OpenBoot PROM environment variable <code>use-nvramrc?</code> of the control domain.</td></tr> <tr> <td><code>security-mode</code></td><td>Displays the setting value of the OpenBoot PROM environment variable <code>security-mode</code> of the control domain.</td></tr> <tr> <td><code>bootscript</code></td><td>Displays the registered boot script.</td></tr> </table>	<code>use-nvramrc</code>	Displays the setting value of the OpenBoot PROM environment variable <code>use-nvramrc?</code> of the control domain.	<code>security-mode</code>	Displays the setting value of the OpenBoot PROM environment variable <code>security-mode</code> of the control domain.	<code>bootscript</code>	Displays the registered boot script.
<code>use-nvramrc</code>	Displays the setting value of the OpenBoot PROM environment variable <code>use-nvramrc?</code> of the control domain.						
<code>security-mode</code>	Displays the setting value of the OpenBoot PROM environment variable <code>security-mode</code> of the control domain.						
<code>bootscript</code>	Displays the registered boot script.						
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tr> <td><code>useradm, platadm, platop, fieldeng</code></td><td>Enables execution for all PPARs.</td></tr> <tr> <td><code>pparamadm, pparamgr, pparop</code></td><td>Enables execution for PPARs for which you have accessible privilege.</td></tr> </table> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>	<code>useradm, platadm, platop, fieldeng</code>	Enables execution for all PPARs.	<code>pparamadm, pparamgr, pparop</code>	Enables execution for PPARs for which you have accessible privilege.		
<code>useradm, platadm, platop, fieldeng</code>	Enables execution for all PPARs.						
<code>pparamadm, pparamgr, pparop</code>	Enables execution for PPARs for which you have accessible privilege.						
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td><code>-h</code></td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td><code>-c auto-boot</code></td><td>Displays the setting value of OpenBoot PROM environment variables <code>auto-boot?</code>.</td></tr> <tr> <td><code>-p <i>ppar_id</i></code></td><td>Specifies the PPAR-ID to be displayed.</td></tr> </table>	<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.	<code>-c auto-boot</code>	Displays the setting value of OpenBoot PROM environment variables <code>auto-boot?</code> .	<code>-p <i>ppar_id</i></code>	Specifies the PPAR-ID to be displayed.
<code>-h</code>	Displays the usage. Specifying this option with another option or operand causes an error.						
<code>-c auto-boot</code>	Displays the setting value of OpenBoot PROM environment variables <code>auto-boot?</code> .						
<code>-p <i>ppar_id</i></code>	Specifies the PPAR-ID to be displayed.						

EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ A hyphen "-" will be displayed as the value of the OpenBoot PROM environment variables which are not set will be displayed. ■ showpparparam will display the setup values that was set up with setpparparam(8), as long as they are valid. Here "validity" means the time frame when OpenBoot PROM environment variables are rewritten and the registered boot script had completed execution, at the time of the next start of the PPAR.
EXAMPLES	<p>EXAMPLE 1 Display the setting value OpenBoot PROM environment variables and the boot script of the control domain set in PPAR-ID 0.</p> <pre>XSCF> showpparparam -p 0 use-nvramrc :false security-mode :none bootscript : setenv auto-boot? true setenv input-device virtual-console setenv output-device virtual-console</pre> <p>EXAMPLE 2 Display the setting OpenBoot PROM environment variables auto-boot? of the control domain set in PPAR-ID 0.</p> <pre>XSCF> showpparparam -p 0 -c auto-boot auto-boot? :true</pre>
EXIT STATUS	The following exit values are returned. <p>0 Indicates normal end. >0 Indicates error occurrence.</p>
SEE ALSO	setpparparam (8)

NAME	showpparprogress - Shows the detailed status of physical partitions (PPAR) in the middle of power control sequences.																																
SYNOPSIS	showpparprogress -p <i>ppar_id</i> showpparprogress -h																																
DESCRIPTION	<p>showpparprogress is a command to display the detailed status of physical partitions (PPAR) in powering on, powering off and resetting sequences.</p> <p>The PPAR states displayed by the "showpparprogress" command are as follows:</p> <table> <thead> <tr> <th colspan="2">PPAR Power On Processing Before powering on a PPAR</th> </tr> </thead> <tbody> <tr> <td>PPAR Power On</td> <td>Powering on a PPAR has started</td> </tr> <tr> <td>XBBOX Reset</td> <td>Resetting of a crossbar box chassis has started</td> </tr> <tr> <td>PSU On</td> <td>Powering on a Power Unit (PSU) has started</td> </tr> <tr> <td>CMU Reset Start</td> <td>Resetting of a CPU Memory Unit (CMU) has started</td> </tr> <tr> <td>XB Reset 1</td> <td>Resetting of a CrossBar Unit (XBU) has started (1/3)</td> </tr> <tr> <td>XB Reset 2</td> <td>Resetting of a CrossBar Unit (XBU) has started (2/3)</td> </tr> <tr> <td>XB Reset 3</td> <td>Resetting of a CrossBar Unit (XBU) has started (3/3)</td> </tr> <tr> <td>CPU Reset 1</td> <td>Resetting of CPU has started (1/2)</td> </tr> <tr> <td>CPU Reset 2</td> <td>Resetting of CPU has started (2/2)</td> </tr> <tr> <td>Reset released</td> <td>Constraints on resetting has been removed</td> </tr> <tr> <td>CPU Start</td> <td>CPU has started</td> </tr> <tr> <td>PPAR Power Off</td> <td>Powering off of PPAR has started</td> </tr> <tr> <td>CPU Stop</td> <td>CPU has stopped</td> </tr> <tr> <td>PSU Off</td> <td>Powering off of PSU has started</td> </tr> <tr> <td>PPAR reset</td> <td>Resetting of PPAR has started</td> </tr> </tbody> </table> <p>The showpparprogress shows detailed power control sequences in real time. The command terminates as soon as power control sequences comes to an end.</p>	PPAR Power On Processing Before powering on a PPAR		PPAR Power On	Powering on a PPAR has started	XBBOX Reset	Resetting of a crossbar box chassis has started	PSU On	Powering on a Power Unit (PSU) has started	CMU Reset Start	Resetting of a CPU Memory Unit (CMU) has started	XB Reset 1	Resetting of a CrossBar Unit (XBU) has started (1/3)	XB Reset 2	Resetting of a CrossBar Unit (XBU) has started (2/3)	XB Reset 3	Resetting of a CrossBar Unit (XBU) has started (3/3)	CPU Reset 1	Resetting of CPU has started (1/2)	CPU Reset 2	Resetting of CPU has started (2/2)	Reset released	Constraints on resetting has been removed	CPU Start	CPU has started	PPAR Power Off	Powering off of PPAR has started	CPU Stop	CPU has stopped	PSU Off	Powering off of PSU has started	PPAR reset	Resetting of PPAR has started
PPAR Power On Processing Before powering on a PPAR																																	
PPAR Power On	Powering on a PPAR has started																																
XBBOX Reset	Resetting of a crossbar box chassis has started																																
PSU On	Powering on a Power Unit (PSU) has started																																
CMU Reset Start	Resetting of a CPU Memory Unit (CMU) has started																																
XB Reset 1	Resetting of a CrossBar Unit (XBU) has started (1/3)																																
XB Reset 2	Resetting of a CrossBar Unit (XBU) has started (2/3)																																
XB Reset 3	Resetting of a CrossBar Unit (XBU) has started (3/3)																																
CPU Reset 1	Resetting of CPU has started (1/2)																																
CPU Reset 2	Resetting of CPU has started (2/2)																																
Reset released	Constraints on resetting has been removed																																
CPU Start	CPU has started																																
PPAR Power Off	Powering off of PPAR has started																																
CPU Stop	CPU has stopped																																
PSU Off	Powering off of PSU has started																																
PPAR reset	Resetting of PPAR has started																																
Privileges	<p>To execute this command, any of the following privileges is required.</p> <table> <tbody> <tr> <td><i>useradm</i>, <i>platadm</i>, <i>platop</i>, <i>fieldeng</i></td> <td>Enables execution for all PPARs.</td> </tr> <tr> <td><i>pparadm</i>, <i>pparmgr</i>, <i>pparop</i></td> <td>Enables execution for PPARs for which you have access privilege.</td> </tr> </tbody> </table>	<i>useradm</i> , <i>platadm</i> , <i>platop</i> , <i>fieldeng</i>	Enables execution for all PPARs.	<i>pparadm</i> , <i>pparmgr</i> , <i>pparop</i>	Enables execution for PPARs for which you have access privilege.																												
<i>useradm</i> , <i>platadm</i> , <i>platop</i> , <i>fieldeng</i>	Enables execution for all PPARs.																																
<i>pparadm</i> , <i>pparmgr</i> , <i>pparop</i>	Enables execution for PPARs for which you have access privilege.																																

For details on user privileges, see `setprivileges(8)`.

OPTIONS

The following options are supported.

- h Displays the usage. Specifying this option with another option or operand causes an error.
- p *ppar_id* Specify the PPAR-ID, whose status is to be displayed. A *ppar_id* must be a whole number between 0 and 15, depending on the system configuration.

EXTENDED DESCRIPTION

- If a non-existent PPAR-ID is specified, the command will be terminated without displaying anything.
- Execute [Ctrl]+[C] to terminate the command.
- The status of logical domains can be displayed by the `showdomainstatus(8)` command.
- If a PPAR has already been powered on and powering off of the PPAR has not been started, the "This PPAR is powered on" message is displayed and the command is terminated.
- If a PPAR has already been powered off and powering on of the PPAR has not been started, the "This PPAR is powered off" message is displayed and the command is terminated.

EXAMPLES

EXAMPLE 1 Shows the status of a PPAR in a powering on sequence (in the middle of the sequence).

```
XSCF> showpparprogress -p 0
PPAR Power On Preprocessing PPAR#0 [ 1/12]
PPAR Power On PPAR#0 [ 2/12]
XBBOX Reset PPAR#0 [ 3/12]
PSU On PPAR#0 [ 4/12]
CMU Reset Start PPAR#0 [ 5/12]
XB Reset 1 PPAR#0 [ 6/12]
XB Reset 2 PPAR#0 [ 7/12]
XB Reset 3 PPAR#0 [ 8/12]
/
```

EXAMPLE 2 Shows the status of a PPAR in a powering on sequence (in case of a successful power on).

```
XSCF> showpparprogress -p 0
PPAR Power On Preprocessing PPAR#0 [ 1/12]
PPAR Power On PPAR#0 [ 2/12]
XBBOX Reset PPAR#0 [ 3/12]
PSU On PPAR#0 [ 4/12]
CMU Reset Start PPAR#0 [ 5/12]
XB Reset 1 PPAR#0 [ 6/12]
XB Reset 2 PPAR#0 [ 7/12]
```

```

XB Reset 3          PPAR#0 [ 8/12]
CPU Reset 1         PPAR#0 [ 9/12]
CPU Reset 2         PPAR#0 [10/12]
Reset released      PPAR#0 [11/12]
CPU Start           PPAR#0 [12/12]
The sequence of power control is completed.
XSCF>

```

EXAMPLE 3 Shows the status of a PPAR in a powering off sequence (in case of a successful power off).

```

XSCF> showpparprogress -p 0
PPAR Power Off      PPAR#0 [ 1/ 3]
CPU Stop             PPAR#0 [ 2/ 3]
PSU Off              PPAR#0 [ 3/ 3]
The sequence of power control is completed.
XSCF>

```

EXAMPLE 4 Shows the status of a PPAR in a power resetting sequence (in case of a successful power reset).

```

XSCF> showpparprogress -p 0
PPAR reset           PPAR#0 [ 1/13]
CPU Stop              PPAR#0 [ 2/13]
PSU Off               PPAR#0 [ 3/13]
XBBOX Reset           PPAR#0 [ 4/13]
PSU On                PPAR#0 [ 5/13]
CMU Reset Start       PPAR#0 [ 6/13]
XB Reset 1             PPAR#0 [ 7/13]
XB Reset 2             PPAR#0 [ 8/13]
XB Reset 3             PPAR#0 [ 9/13]
CPU Reset 1            PPAR#0 [10/13]
CPU Reset 2            PPAR#0 [11/13]
Reset released         PPAR#0 [12/13]
CPU Start              PPAR#0 [13/13]
The sequence of power control is completed.
XSCF>

```

EXAMPLE 5 Shows the status of a PPAR in a power resetting sequence (in case of the occurrence of a reset due to degradation of some parts).

```

XSCF> showpparprogress -p 0
PPAR reset           PPAR#0 [ 1/13]
CPU Stop              PPAR#0 [ 2/13]
PSU Off               PPAR#0 [ 3/13]
XBBOX Reset           PPAR#0 [ 4/13]
PSU On                PPAR#0 [ 5/13]
CMU Reset Start       PPAR#0 [ 6/13]
* Power control sequence has been restarted
PPAR reset           PPAR#0 [ 1/13]
CPU Stop              PPAR#0 [ 2/13]
PSU Off               PPAR#0 [ 3/13]

```

showpparprogress(8)

```
XBBOX Reset          PPAR#0 [ 4/13]
PSU On              PPAR#0 [ 5/13]
CMU Reset Start    PPAR#0 [ 6/13]
XB Reset 1          PPAR#0 [ 7/13]
XB Reset 2          PPAR#0 [ 8/13]
XB Reset 3          PPAR#0 [ 9/13]
CPU Reset 1         PPAR#0 [10/13]
CPU Reset 2         PPAR#0 [11/13]
Reset released     PPAR#0 [12/13]
CPU Start           PPAR#0 [13/13]
The sequence of power control is completed.
XSCF>
```

EXAMPLE 6 Shows the status of a PPAR in a powering on sequence (in case of the occurrence of a reset due to degradation of some parts).

```
XSCF> showpparprogress -p 0
PPAR reset          PPAR#0 [ 1/13]
CPU Stop             PPAR#0 [ 2/13]
PSU Off              PPAR#0 [ 3/13]
XBBOX Reset          PPAR#0 [ 4/13]
PSU On               PPAR#0 [ 5/13]
CMU Reset Start     PPAR#0 [ 6/13]
* Power control sequence has been restarted
PPAR reset          PPAR#0 [ 1/13]
CPU Stop             PPAR#0 [ 2/13]
PSU Off              PPAR#0 [ 3/13]
XBBOX Reset          PPAR#0 [ 4/13]
PSU On               PPAR#0 [ 5/13]
CMU Reset Start     PPAR#0 [ 6/13]
XB Reset 1           PPAR#0 [ 7/13]
XB Reset 2           PPAR#0 [ 8/13]
XB Reset 3           PPAR#0 [ 9/13]
CPU Reset 1          PPAR#0 [10/13]
CPU Reset 2          PPAR#0 [11/13]
Reset released      PPAR#0 [12/13]
CPU Start            PPAR#0 [13/13]
The sequence of power control is completed.
XSCF>
```

EXAMPLE 7 Shows the status of a PPAR in a powering on sequence (in case of an unsuccessful power on).

```
XSCF> showpparprogress -p 0
PPAR Power On Preprocessing PPAR#0 [ 1/12]
PPAR Power On          PPAR#0 [ 2/12]
XBBOX Reset            PPAR#0 [ 3/12]
PSU On                 PPAR#0 [ 4/12]
CMU Reset Start        PPAR#0 [ 5/12]
The sequence of power control is terminated.
XSCF>
```

EXAMPLE 8 Shows the status of a PPAR in a powering on sequence (in case of a termination of the command).

```
XSCF> showpparprogress -p 0
PPAR Power On Preprocessing PPAR#0 [ 1/12]
PPAR Power On PPAR#0 [ 2/12]
XBBOX Reset PPAR#0 [ 3/12]
PSU On PPAR#0 [ 4/12]
CMU Reset Start PPAR#0 [ 5/12]
XB Reset 1 PPAR#0 [ 6/12]
/^C
XSCF>
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO **poweroff(8)**, **poweron(8)**, **reset(8)**

showpparprogress(8)



NAME	showpparstatus - Displays the status of the current physical partition (PPAR).												
SYNOPSIS	showpparstatus -p <i>ppar_id</i> showpparstatus -a showpparstatus -h												
DESCRIPTION	<p>showpparstatus is a command to display the status of current PPAR.</p> <p>Any of the following statuses is displayed for each PPAR.</p> <table> <tr> <td>Powered Off</td> <td>In the power-off status</td> </tr> <tr> <td>Initialization Phase</td> <td>In the status in which POST is in operation</td> </tr> <tr> <td>Initialization Complete</td> <td>In the status in which Power-On Self-Test (POST) is completed</td> </tr> <tr> <td>Running</td> <td>In the status in which POST is completed and Oracle Solaris is running.</td> </tr> <tr> <td>Hypervisor Aborted</td> <td>The status between occurrence of Hypervisor Abort and PPAR reset</td> </tr> <tr> <td>-</td> <td>Other than those above (when PPAR is not defined)</td> </tr> </table>	Powered Off	In the power-off status	Initialization Phase	In the status in which POST is in operation	Initialization Complete	In the status in which Power-On Self-Test (POST) is completed	Running	In the status in which POST is completed and Oracle Solaris is running.	Hypervisor Aborted	The status between occurrence of Hypervisor Abort and PPAR reset	-	Other than those above (when PPAR is not defined)
Powered Off	In the power-off status												
Initialization Phase	In the status in which POST is in operation												
Initialization Complete	In the status in which Power-On Self-Test (POST) is completed												
Running	In the status in which POST is completed and Oracle Solaris is running.												
Hypervisor Aborted	The status between occurrence of Hypervisor Abort and PPAR reset												
-	Other than those above (when PPAR is not defined)												
Privileges	<p>To execute this command, any of the following privileges is required.</p> <p>useradm, platadm, platop, Enables execution for all PPARs. fieldeng</p> <p>pparamgr, pparop Enables execution for PPARs for which you have access privilege.</p> <p>For details on user privileges, see setprivileges(8).</p>												
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the statuses of all accessible PPARs. -h Displays the usage. Specifying this option with another option or operand causes an error. -p <i>ppar_id</i> Specifies the PPAR-ID to display the status. Depending on the system configuration, you can specify an integer from 0 to 15 for <i>ppar_id</i>. 												

EXTENDED DESCRIPTION	You can confirm the status of the logical domain by using showdomainstatus(8) .
EXAMPLES	EXAMPLE 1 Display the statuses of all PPARs. <pre>XSCF> showpparstatus -a PPAR-ID PPAR Status 00 Powered Off 01 Initialization Phase 02 Initialization Phase 03 Running 04 - 05 Hypervisor Aborted 06 Running 07 Initialization Complete 08 Initialization Phase 09 Initialization Phase 10 - 11 Powered Off 12 Running 13 Running 14 Powered Off 15 -</pre>
EXIT STATUS	The following exit values are returned.
	0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	poweroff(8) , poweron(8) , reset(8) , showdomainstatus(8) , showpcl(8)

NAME	showremotepwrmgmt - Displays the settings of the remote power management function and the power status of the Node.																																	
SYNOPSIS	showremotepwrmgmt [-a -G <i>groupid</i> [-N <i>nodeid</i>]] [-M] showremotepwrmgmt -h																																	
DESCRIPTION	<p>showremotepwrmgmt is a command to display the management information of remote power management group and the power status of the specified node.</p> <p>In showremotepwrmgmt, the following information is displayed.</p> <p>[Remote Power Management Group Information]</p> <table> <tr> <td>GroupID</td> <td colspan="2">This is the group ID of the specified remote power management group. An integer from 01 to 32 is displayed.</td> </tr> <tr> <td>Remote Power Management Status</td> <td>Enable</td> <td>The remote power management function enabled</td> </tr> <tr> <td></td> <td>Disable</td> <td>The remote power management function disabled</td> </tr> <tr> <td>NodeID</td> <td colspan="2">Node ID of the specified node. An integer from 001 to 128 as a decimal is displayed.</td> </tr> <tr> <td>NodeType</td> <td colspan="2">This is the type of the specified node. Any of the following nodes is displayed.</td> </tr> <tr> <td></td> <td>Master HOST</td> <td>Server device (Master HOST Node)</td> </tr> <tr> <td></td> <td>HOST</td> <td>Server device (HOST Node)</td> </tr> <tr> <td></td> <td>I/O</td> <td>I/O device (I/O Node)</td> </tr> <tr> <td></td> <td>PwrLinkBox</td> <td>Remote power management box (I/O Node)</td> </tr> <tr> <td></td> <td>Others</td> <td>Other node</td> </tr> <tr> <td>NodeIdentName</td> <td colspan="2">This is the unique ID or name to identify a node. The maximum number of bytes is 32.</td> </tr> </table>	GroupID	This is the group ID of the specified remote power management group. An integer from 01 to 32 is displayed.		Remote Power Management Status	Enable	The remote power management function enabled		Disable	The remote power management function disabled	NodeID	Node ID of the specified node. An integer from 001 to 128 as a decimal is displayed.		NodeType	This is the type of the specified node. Any of the following nodes is displayed.			Master HOST	Server device (Master HOST Node)		HOST	Server device (HOST Node)		I/O	I/O device (I/O Node)		PwrLinkBox	Remote power management box (I/O Node)		Others	Other node	NodeIdentName	This is the unique ID or name to identify a node. The maximum number of bytes is 32.	
GroupID	This is the group ID of the specified remote power management group. An integer from 01 to 32 is displayed.																																	
Remote Power Management Status	Enable	The remote power management function enabled																																
	Disable	The remote power management function disabled																																
NodeID	Node ID of the specified node. An integer from 001 to 128 as a decimal is displayed.																																	
NodeType	This is the type of the specified node. Any of the following nodes is displayed.																																	
	Master HOST	Server device (Master HOST Node)																																
	HOST	Server device (HOST Node)																																
	I/O	I/O device (I/O Node)																																
	PwrLinkBox	Remote power management box (I/O Node)																																
	Others	Other node																																
NodeIdentName	This is the unique ID or name to identify a node. The maximum number of bytes is 32.																																	

Power	This is the power status of the specified node. Either of the followings is displayed.	
	ON	Power-on
	OFF	Power-off
PowerLinkage	This is the power-on link flag for the specified node. Any of the followings is displayed	
	Disable	Remote power management disabled
	Enable	Power-on/Power-off link enabled
	Enable(Power-On Link)	Only power-on link enabled
	Enable(Power-Off Link)	Only power-off link enabled
Operation	This is the power-on method. Either of the followings is displayed	
	IPMI	Power-on by IPMI
	WakeUpOnLAN	Power-on by Wake-On LAN

[Power Status Information]

Displays the power status information of the node, and subnode(s) when there is any subnode. Subnodes are displayed in the format as "SubNode#xx", in which "xx" represents its PPAR-ID. Either of the following is displayed for the power status.

ON	Power-on
OFF	Power-off

[IPMI Information]

IPMI UserName	This is the IPMI user name of the controller to control the node to be linked. The maximum number of bytes is 20.
IPMI IP address	This is the IP address of the IPMI port of the controller to control the node to be linked. This is displayed in the IPv4 format.
IPMI Slave Address	This is the IPMI Slave Address of the controller to control the node to be linked. This is displayed in hexadecimal.
	For Slave Address, see the IPMI specification "Intelligent Platform Management Interface Specification Second Generation v2.0."
IPMI MAC Address	This is the IPMI MAC address of the controller to control the node to be linked.

Privileges	<p>To execute this command, any of the following privileges is required.</p> <p><code>platadmin, plaptop, fieldeng</code></p> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p>
	<p>-a Displays the management information of all the set remote power management groups. This is the same as that displayed when executing <code>showremotepwrmgmt</code> without specifying any options.</p>
-G <i>groupid</i>	<p>Specifies one or more group IDs of the remote power management group to be displayed. A figure from 1 to 32 can be specified.</p>
	<p>e.g. <code>-G 1</code></p>
	<p>To specify multiple remote power management groups by range, specify the group IDs of the remote power management groups included in the range separating the beginning and end by hyphens (-).</p>
	<p>e.g. <code>-G 2-10</code></p>
	<p>To specify multiple remote power management groups or ranges of remote power management groups, specify them separating by commas (,). Overlapping specification causes an error.</p>
	<p>e.g. <code>-G 1,3,5</code></p>
-h	<p>Displays the usage. Specifying this option with another option or operand causes an error.</p>
-M	<p>Displays text one screen at a time.</p>
-N <i>nodeid</i>	<p>Specifies one node of the remote power management device registered to the remote power management group specified by the -G option and to be displayed. 1A figure from 1 to 128 can be specified.</p>
	<p>e.g. <code>-N 1</code></p>
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ Execution specifying a remote power management group not constructed by the "-G" option causes an error. ■ If this is executed for all remote power management groups by the -a option and no remote power management group is constructed (initial status or after executing <code>clearremotepwrmgmt (8)</code>), it causes an error.

showremotepwrmgmt(8)

- If this is executed specifying the remote power management device subject to display by the -N option, and the -G option specified at the same time is specified by range, it causes an error.

EXAMPLES

EXAMPLE 1 Display the information of all the registered remote power management groups.

```
XSCF> showremotepwrmgmt
```

```
[Remote Power Management Group#01 Information]
Remote Power Management Status : [Enable]
```

NodeID	NodeType	NodeIdentName	Power	PowerLinkage	Operation
001	Master HOST	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI
002	PwrLinkBox	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI
003	Others	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI

```
[Remote Power Management Group#02 Information]
Remote Power Management Status : [Enable]
```

NodeID	NodeType	NodeIdentName	Power	PowerLinkage	Operation
001	Master HOST	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI
002	I/O	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI

```
[Remote Power Management Group#03 Information]
Remote Power Management Status : [Enable]
```

NodeID	NodeType	NodeIdentName	Power	PowerLinkage	Operation
000	Master HOST	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI
001	HOST	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI
002	PwrLinkBox	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	OFF	Disable	IPMI
003	Others	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	OFF	Disable	IPMI

```
XSCF>
```

EXAMPLE 2 Display the information of the remote power management group 2.

```
XSCF> showremotepwrmgmt -G 2
```

```
[Remote Power Management Group#02 Information]
Remote Power Management Status : [Enable]
```

NodeID	NodeType	NodeIdentName	Power	PowerLinkage	Operation
001	Master HOST	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI
002	I/O	XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	ON	Enable	IPMI

```
XSCF>
```

EXAMPLE 3 Display the information of the remote power management devices (Node ID = 1) included in the remote power management group 2 (without sub nodes).

```
XSCF> showremotepwrmgmt -G 2 -N 1
Remote Power Management Group Information
  GroupID : [02]
  Remote Power Management Status : [Enable]
  NodeID : [001]
  NodeType : [Master HOST]
  NodeIdentName : [XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX]
  PowerLinkage : [Enable]
  Operation : [IPMI]

Power Status Information
  Node#002 : [ON]

IPMI Information
  IPMI UserName : [pwm]

Controller#0
  LAN#0
    IPMI IP address : [xxx.xxx.xxx.xxx]
    IPMI SlaveAddress : [00]
    IPMI MAC Address : [00:00:00:00:00:00]

  LAN#1
    IPMI IP address : [xxx.xxx.xxx.xxx]
    IPMI SlaveAddress : [00]
    IPMI MAC Address : [00:00:00:00:00:00]

Controller#1
  LAN#0
    IPMI IP address : [xxx.xxx.xxx.xxx]
    IPMI SlaveAddress : [00]
    IPMI MAC Address : [00:00:00:00:00:00]

  LAN#1
    IPMI IP address : [xxx.xxx.xxx.xxx]
    IPMI SlaveAddress : [00]
    IPMI MAC Address : [00:00:00:00:00:00]
```

```
XSCF>
```

EXAMPLE 4 Display the information of the remote power management devices (Node ID

showremotepwrmgmt(8)

= 1) included in the remote power management group 2 (with sub nodes).

```
XSCF> showremotepwrmgmt -G 2 -N 1
Remote Power Management Group Information
    GroupID                      : [02]
    Remote Power Management Status : [Enable]
    NodeID                       : [001]
    NodeType                     : [Master HOST]
    NodeIdentName                : [XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX]
    PowerLinkage                 : [Enable]
    Operation                    : [IPMI]

Power Status Information
    Node#002                     : [ON]
        SubNode#00                : [ON]
        SubNode#01                : [ON]

IPMI Information
    IPMI UserName                : [pwm]

Controller#0
    LAN#0
        IPMI IP address          : [xxx.xxx.xxx.xxx]
        IPMI SlaveAddress        : [00]
        IPMI MAC Address         : [00:00:00:00:00:00]

    LAN#1
        IPMI IP address          : [xxx.xxx.xxx.xxx]
        IPMI SlaveAddress        : [00]
        IPMI MAC Address         : [00:00:00:00:00:00]

Controller#1
    LAN#0
        IPMI IP address          : [xxx.xxx.xxx.xxx]
        IPMI SlaveAddress        : [00]
        IPMI MAC Address         : [00:00:00:00:00:00]

    LAN#1
        IPMI IP address          : [xxx.xxx.xxx.xxx]
        IPMI SlaveAddress        : [00]
        IPMI MAC Address         : [00:00:00:00:00:00]

XSCF>
```

EXIT STATUS

The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO

clearremotepwrmgmt(8), **getremotepwrmgmt(8)**, **setremotepwrmgmt(8)**

NAME	showresult - Displays the end status of the previously executed command.				
SYNOPSIS	showresult showresult -h				
DESCRIPTION	<p>showresult is a command to display the end status of the previously executed command.</p> <p>showresult is a convenient way for the remote control program to confirm whether the previously executed command succeeded or not.</p>				
Privileges	<p>No privileges are required to execute this command.</p> <p>For details on user privileges, see setprivileges(8).</p>				
OPTIONS	<p>The following options are supported.</p> <p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p>				
EXTENDED DESCRIPTION	If showresult is executed after canceling the processing of the command in execution by [Ctrl]+[C] key, etc., the end status depending on the cancelled command is displayed by 0 or another figure.				
EXAMPLES	<p>EXAMPLE 1 Display the execution result of showdate(8).</p> <pre>XSCF> showdate Sat Oct 20 14:53:00 JST 2012 XSCF> showresult 0</pre>				
EXIT STATUS	<p>The following exit values are returned.</p> <table> <tr> <td>0</td><td>Indicates normal end.</td></tr> <tr> <td>>0</td><td>Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				

showresult(8)

NAME	showroute - Displays the routing information set in the XSCF network interface.																						
SYNOPSIS	showroute [-M] [-n] {-a <i>interface</i> } showroute -h																						
DESCRIPTION	<p>showroute is a command to display the routing information set currently in the XSCF network interface.</p> <p>You can display the routing information of the specified network interface or all network interfaces. The following information is displayed.</p> <table> <tr> <td>Destination</td> <td>Destination IP address</td> </tr> <tr> <td>Gateway</td> <td>Gateway</td> </tr> <tr> <td>Netmask</td> <td>Netmask</td> </tr> <tr> <td>Flags</td> <td>Flag indicating the status of routing</td> </tr> <tr> <td></td> <td>U Route enabled</td> </tr> <tr> <td></td> <td>H Only one host reachable</td> </tr> <tr> <td></td> <td>G Gateway used</td> </tr> <tr> <td></td> <td>R Dynamic route to be restored</td> </tr> <tr> <td></td> <td>C Entry of cache</td> </tr> <tr> <td></td> <td>! Rejected route</td> </tr> <tr> <td>Interface</td> <td>XSCF network interface name</td> </tr> </table>	Destination	Destination IP address	Gateway	Gateway	Netmask	Netmask	Flags	Flag indicating the status of routing		U Route enabled		H Only one host reachable		G Gateway used		R Dynamic route to be restored		C Entry of cache		! Rejected route	Interface	XSCF network interface name
Destination	Destination IP address																						
Gateway	Gateway																						
Netmask	Netmask																						
Flags	Flag indicating the status of routing																						
	U Route enabled																						
	H Only one host reachable																						
	G Gateway used																						
	R Dynamic route to be restored																						
	C Entry of cache																						
	! Rejected route																						
Interface	XSCF network interface name																						
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .																						
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the routing information set in all the XSCF network interfaces. -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. -n Displays the IP address without name-resolution of the host name. 																						

OPERANDS

The following operands are supported.

interface Specifies the network interface to be displayed. You can specify any of the following depending on the system configuration. If it is specified with the -a option, it becomes invalid.

- For SPARC M10-4S (with crossbar box)

xbbox#80-lan#0	XBBOX#80-LAN#0
xbbox#80-lan#1	XBBOX#80-LAN#1
xbbox#81-lan#0	XBBOX#81-LAN#0
xbbox#81-lan#1	XBBOX#81-LAN#1

- For SPARC M10-4S (without crossbar box)

bb#00-lan#0	BB#00-LAN#0
bb#00-lan#1	BB#00-LAN#1
bb#01-lan#0	BB#01-LAN#0
bb#01-lan#1	BB#01-LAN#1

- For SPARC M10-1/M10-4

bb#00-lan#0	BB#00-LAN#0
lan#0	Abbreviated form of bb#00-lan#0
bb#00-lan#1	BB#00-LAN#1
lan#1	Abbreviated form of bb#00-lan#1

EXTENDED DESCRIPTION

You can set routing of the XSCF network by using `setroute(8)`.

EXAMPLES

EXAMPLE 1 Display the routing information set in XBBOX#80-LAN#0.

```
XSCF> showroute xbbox#80-lan#0
Destination      Gateway          Netmask        Flags Interface
192.168.10.0    *                255.255.255.0  U      xbbox#80-lan#0
default         192.168.10.1    0.0.0.0       UG     xbbox#80-lan#0
```

EXAMPLE 2 Display the routing information set in XBBOX#80-LAN#0 without name-resolution.

```
XSCF> showroute -n xbbox#80-lan#0
Destination      Gateway          Netmask        Flags Interface
192.168.10.0    *                255.255.255.0  U      xbbox#80-lan#0
0.0.0.0         192.168.10.1   0.0.0.0       UG     xbbox#80-lan#0
```

EXAMPLE 3 Display the set routing information.

```
XSCF> showroute -a
Destination      Gateway          Netmask        Flags Interface
192.168.10.0    *                255.255.255.0  U      xbbox#80-lan#0
default         192.168.10.1   0.0.0.0       UG     xbbox#80-lan#0
```

Destination	Gateway	Netmask	Interface
192.168.10.0	*	255.255.255.0	xbbox#81-lan#0
default	192.168.10.1	0.0.0.0	xbbox#81-lan#0

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **setroute**(8)

showroute(8)



NAME	showservicetag - Displays whether the servicetag agents are currently enabled or disabled.
SYNOPSIS	showservicetag [-v] showservicetag -h
DESCRIPTION	showservicetag is a command to display whether the servicetag agents are currently enabled or disabled. Servicetags provide information -- platform, type, chassis serial number, etc, on platforms that support it.
Privileges	To execute this command, platadm or platopprivilege is required. Refer to setprivileges(8) for more information.
OPTIONS	The following options are supported: -h Displays usage statement. When used with other options or operands, an error occurs. -v Specifies verbose output.
EXAMPLES	EXAMPLE 1 Displaying the current state of the servicetag agents. (When it is enabled). XSCF> showservicetag Enabled
	EXAMPLE 2 Displaying the current state of the servicetag agents. (When it is disabled) XSCF> showservicetag Disabled
EXIT STATUS	The following exit values are returned: 0 Successful completion. >0 An error occurred.
SEE ALSO	setservicetag (8)

`showservicetag(8)`

NAME	showsmtplib - Displays the settings information of Simple Mail Transfer Protocol (SMTP).				
SYNOPSIS	showsmtplib showsmtplib [-v] showsmtplib -h				
DESCRIPTION	<p>showsmtplib is a command to display the settings information of SMTP.</p> <p>Privileges To execute this command, any of the following privileges is required. <i>platadm, platop, fieldeng</i> For details on user privileges, see setprivileges(8).</p>				
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-v</td><td>Displays detailed information.</td></tr> </table>	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-v	Displays detailed information.
-h	Displays the usage. Specifying this option with another option or operand causes an error.				
-v	Displays detailed information.				
EXTENDED DESCRIPTION	The SMTP information includes the mail server and address for reply.				
EXAMPLES	<p>EXAMPLE 1 Display the settings information of SMTP.</p> <pre>XSCF> showsmtplib Mail Server: 10.4.1.1 Port: 25 Authentication Mechanism: smtp-auth User Name: jsmith Password: ***** Reply Address: adm@customer.com</pre>				
EXIT STATUS	The following exit values are returned.				
	<table> <tr> <td>0</td><td>Indicates normal end.</td></tr> <tr> <td>>0</td><td>Indicates error occurrence.</td></tr> </table>	0	Indicates normal end.	>0	Indicates error occurrence.
0	Indicates normal end.				
>0	Indicates error occurrence.				
SEE ALSO	setsmtplib (8)				

NAME	showsntp - Displays the settings information and the current status of the SNMP agent.
SYNOPSIS	showsntp showsntp -h
DESCRIPTION	showsntp is a command to display the settings information and the current status of the SNMP agent. The displayed information includes the status of the agent, port, location of the system, contact and explanation, trap host, and version and enabled MIB module of SNMP.
Privileges	To execute this command, any of the following privileges is required. <code>platadm, platop, fieldeng</code> For details on user privileges, see <code>setprivileges(8)</code> .
OPTIONS	The following options are supported. <code>-h</code> Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	<p>EXAMPLE 1 Display the SNMP information of the system not set up.</p> <pre>XSCF> showsntp Agent Status: Disabled Agent Port: 161 System Location: Unknown System Contact: Unknown System Description: Unknown Trap Hosts: None SNMP V1/V2c: None Enabled MIB Modules: None</pre> <p>EXAMPLE 2 Display the SNMP information of the disabled system with SNMPv3 trap host set up.</p> <pre>XSCF> showsntp Agent Status: Disabled Agent Port: 161 System Location: SanDiego System Contact: bob@jupiter.west System Description: POST-APL/COL3</pre>

```
Trap Hosts:
Hostname    Port     Type   Community String  Username  Auth Encrypt
-----  -----  -----  -----  -----  -----  -----  -----
host1      162      v3      n/a                jsmith    SHA    DES
```

SNMP V1/V2c: None

Enabled MIB Modules: None

EXAMPLE 3 Display the SNMP information of the enabled system with SNMPv1 or SNMPv2c trap host set up.

XSCF> **showsntp**

```
Agent Status:      Enabled
Agent Port:       161
System Location:  SanDiego
System Contact:   jsmith@jupiter.west
System Description: POST-APL/COL3
```

Trap Hosts:

Hostname	Port	Type	Community String	Username	Auth	Protocol
host1	162	v1	public	n/a	n/a	n/a
host2	162	v2c	public	n/a	n/a	n/a
host3	162	v3	n/a	bob	SHA	DES

SNMP V1/V2c:

```
Status: Enabled
Community String: public
```

```
Enabled MIB Modules:
SP_MIB
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

setsnmp (8)

NAME	showsnpusm - Displays the current User-based Security Model (USM) information regarding the SNMP agent.
SYNOPSIS	showsnpusm showsnpusm -h
DESCRIPTION	showsnpusm is a command to display the current USM information regarding the SNMP agent.
Privileges	To execute this command, any of the following privileges is required. <code>platadm, plaptop, fieldeng</code> For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	EXAMPLE 1 Display the SNMP information of the system not set up. <pre>XSCF> showsnpusm Username Auth Encrypt ----- jsmith SHA DES sue MD5 AES</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setsnpusm (8)

showsntp(8)

NAME	showsnpvaca - Displays the current View-based Control Access (VACM) information regarding the SNMP agent.
SYNOPSIS	showsnpvaca showsnpvaca -h
DESCRIPTION	showsnpvaca is a command to display the current VACM information regarding the SNMP agent.
Privileges	To execute this command, any of the following privileges is required. <code>platadm, plaptop, fieldeng</code> For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <code>-h</code> Displays the usage. Specifying this option with another option or operand causes an error.
EXAMPLES	EXAMPLE 1 Display the SNMP information of the system. <pre>XSCF> showsnpvaca Groups: Groupname Username ----- ----- admin jsmith, bob Views: View Subtree Mask Type ---- ----- --- --- all_view .1 ff include Access: View Group ---- ----- all_view admin</pre>
EXIT STATUS	The following exit values are returned. <code>0</code> Indicates normal end. <code>>0</code> Indicates error occurrence.
SEE ALSO	setsnpvaca(8)



NAME	showsscp - Displays the IP address assigned to the SP to SP communication protocol (SSCP).
SYNOPSIS	<pre>showsscp [-a -b <i>bb_id</i>] [-N <i>network_id</i>] [-M]</pre> <pre>showsscp -h</pre>
DESCRIPTION	<p>showsscp is a command to display the setting values of the SSCP links of the SPARC M10-4S or crossbar boxes.</p> <p>If all IP addresses of the SSCP links in the system are displayed, they are output in a table. This table is sorted by PPAR-ID.</p> <p>If the IP address of the specific PPAR or service processor is displayed, not a table but only the IP address of the specified PPAR or service processor is displayed.</p> <p>showsscp cannot be used on a SPARC M10-1/M10-4.</p>
Privileges	<p>No privileges are required to execute this command.</p> <p>For details on user privileges, see setprivileges(8).</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the setting values of the SSCP links of all crossbar boxes and SPARC M10-4S -b <i>bb_id</i> Specifies the target BB-ID. For SPARC M10-4S, you can specify an integer from 00 to 15. For crossbar box, you can specify an integer from 80 to 83. -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. -N <i>network_id</i> Specifies the ID of the SSCP link network subject to setting. For <i>network_id</i>, specify a figure from 0 to 2 and 0 to 4 in the case of SPARC M10-4S (without crossbar box) and SPARC M10-4S (with crossbar box), respectively. If omitted, all networks are specified.
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ If showsscp is executed without specifying any options, the setting values of the SSCP links of all crossbar boxes and SPARC M10-4S are displayed. This is similar to the case that the -a option is specified. ■ If showsscp is executed specifying BB-ID by -b <i>bb_id</i>, all the setting values of the SSCP links of the specified BB-ID are displayed. ■ If showsscp is executed specifying the network ID by -N <i>network_id</i>, only the setting values of the SSCP links of the specified network ID are displayed.

- You can display the setting values of the SSCP links on the specific network of the specific BB-ID by combining **-b bb_id** and **-N network_id**.
 - You can display the setting values of all SSCP links on the specific network by combining **-a** and **-N network_id**.
- For information before the settings are reflected, see [applynetwork\(8\)](#).
- If **-N network_id** is specified and **-b bb_id** is not within the following range, it causes an error.

For SPARC M10-4S (without crossbar box)

-N network_id	-b bb_id range
0	0 to 3
1	0 to 3
2	0 to 1

For SPARC M10-4S (with crossbar box)

-N network_id	-b bb_id range
0	0 to 15, 80
1	0 to 15, 81
2	80 to 83
3	80 to 83
4	80 to 81

EXAMPLES

Note – The IP addresses shown in the following examples are samples.

EXAMPLE 1 Display the setting values of all SSCP links in SPARC M10-4S (without crossbar box).

```
XSCF> showsscp
SSCP network ID:0 address 169.254.1.0
SSCP network ID:0 netmask 255.255.255.248

Location      Address
-----
bb#00-if#0    169.254.1.1
bb#01-if#0    169.254.1.2
bb#02-if#0    169.254.1.3
bb#03-if#0    169.254.1.4

SSCP network ID:1 address 169.254.1.8
SSCP network ID:1 netmask 255.255.255.248

Location      Address
```

```
----- -----  

bb#00-if#1      169.254.1.10  

bb#01-if#1      169.254.1.9  

bb#02-if#1      169.254.1.11  

bb#03-if#1      169.254.1.12  

  

SSCP network ID:2 address 169.254.1.16  

SSCP network ID:2 netmask 255.255.255.252  

  

Location       Address  

----- -----  

bb#00-if#2      169.254.1.17  

bb#01-if#2      169.254.1.18
```

EXAMPLE 2 Display the setting values of all SSCP links in SPARC M10-4S (with crossbar box).

```
XSCF> showsscp -a
SSCP network ID:0 address 169.254.1.0
SSCP network ID:0 netmask 255.255.255.224

Location       Address
----- -----  

xbbox#80-if#0  169.254.1.1  

bb#00-if#0     169.254.1.2  

bb#01-if#0     169.254.1.3  

bb#02-if#0     169.254.1.4  

bb#03-if#0     169.254.1.5  

bb#04-if#0     169.254.1.6  

bb#05-if#0     169.254.1.7  

bb#06-if#0     169.254.1.8  

bb#07-if#0     169.254.1.9  

bb#08-if#0     169.254.1.10  

bb#09-if#0     169.254.1.11  

bb#10-if#0     169.254.1.12  

bb#11-if#0     169.254.1.13  

bb#12-if#0     169.254.1.14  

bb#13-if#0     169.254.1.15  

bb#14-if#0     169.254.1.16  

bb#15-if#0     169.254.1.17  

  

SSCP network ID:1 address 169.254.1.32
SSCP network ID:1 netmask 255.255.255.224

Location       Address
----- -----  

xbbox#81-if#1  169.254.1.33  

bb#00-if#1     169.254.1.34  

bb#01-if#1     169.254.1.35  

bb#02-if#1     169.254.1.36  

bb#03-if#1     169.254.1.37  

bb#04-if#1     169.254.1.38  

bb#05-if#1     169.254.1.39
```

showsscp(8)

```
bb#06-if#1      169.254.1.40
bb#07-if#1      169.254.1.41
bb#08-if#1      169.254.1.42
bb#09-if#1      169.254.1.43
bb#10-if#1      169.254.1.44
bb#11-if#1      169.254.1.45
bb#12-if#1      169.254.1.46
bb#13-if#1      169.254.1.47
bb#14-if#1      169.254.1.48
bb#15-if#1      169.254.1.49

SSCP network ID:2 address 169.254.1.64
SSCP network ID:2 netmask 255.255.255.248

Location      Address
-----
xbbox#80-if#2  169.254.1.65
xbbox#81-if#2  169.254.1.66
xbbox#82-if#2  169.254.1.67
xbbox#83-if#2  169.254.1.68

SSCP network ID:3 address 169.254.1.72
SSCP network ID:3 netmask 255.255.255.248

Location      Address
-----
xbbox#80-if#3  169.254.1.74
xbbox#81-if#3  169.254.1.73
xbbox#82-if#3  169.254.1.75
xbbox#83-if#3  169.254.1.76

SSCP network ID:4 address 169.254.1.80
SSCP network ID:4 netmask 255.255.255.252

Location      Address
-----
xbbox#80-if#4  169.254.1.81
xbbox#81-if#4  169.254.1.82
```

EXAMPLE 3 Display the current setting in the network of the network ID 1 of BB#14.

```
XSCF> showsscp -b 14 -N 1
SSCP network ID:1 address 192.168.1.0
SSCP network ID:1 netmask 255.255.255.224

Location      Address
-----
bb#14-if#1    192.168.1.48
```

EXAMPLE 4 Display all IPs of the network of the network ID 1 in SPARC M10-4S (with

crossbar box).

```
XSCF> showsscp -a -N 1

SSCP network ID:1 address 169.254.1.32
SSCP network ID:1 netmask 255.255.255.224

Location      Address
-----
xbbox#81-if#1 169.254.1.33
bb#00-if#1    169.254.1.34
bb#01-if#1    169.254.1.35
bb#02-if#1    169.254.1.36
bb#03-if#1    169.254.1.37
bb#04-if#1    169.254.1.38
bb#05-if#1    169.254.1.39
bb#06-if#1    169.254.1.40
bb#07-if#1    169.254.1.41
bb#08-if#1    169.254.1.42
bb#09-if#1    169.254.1.43
bb#10-if#1    169.254.1.44
bb#11-if#1    169.254.1.45
bb#12-if#1    169.254.1.46
bb#13-if#1    169.254.1.47
bb#14-if#1    169.254.1.48
bb#15-if#1    169.254.1.49
```

EXAMPLE 5 Display the message indicating non-implementation on the address part of unimplemented BB#03 in SPARC M10-4S (without crossbar box).

```
XSCF> showsscp
SSCP network ID:0 address 169.254.1.0
SSCP network ID:0 netmask 255.255.255.248

Location      Address
-----
bb#00-if#0    169.254.1.1
bb#01-if#0    169.254.1.2
bb#02-if#0    169.254.1.3
bb#03-if#0    Not installed.

SSCP network ID:1 address 169.254.1.8
SSCP network ID:1 netmask 255.255.255.248

Location      Address
-----
bb#00-if#1    169.254.1.10
bb#01-if#1    169.254.1.9
bb#02-if#1    169.254.1.11
bb#03-if#1    Not installed.
```

```
SSCP network ID:2 address 169.254.1.16
```

showsscp(8)

```
SSCP network ID:2 netmask 255.255.255.252  
Location      Address  
-----  
bb#00-if#2    169.254.1.17  
bb#01-if#2    169.254.1.18
```

EXIT STATUS The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO [setsscp \(8\)](#)

NAME	showssh - Displays the contents of the Secure Shell (SSH) service set in the XSCF network.										
SYNOPSIS	<pre>showssh [-c hostkey] [-M] showssh -c pubkey [-u user_name] [-M] showssh -h</pre>										
DESCRIPTION	<p>showssh is a command to display the contents of SSH service set currently in the XSCF network.</p> <p>The following information is displayed.</p> <table> <tr> <td>SSH status</td> <td>Whether SSH service is enabled</td> </tr> <tr> <td>SSH DSCP</td> <td>Physical partition (PPAR) - Whether access to SSH service from PPAR is allowed via the SP communication protocol (DSCP)</td> </tr> <tr> <td>RSA key</td> <td>Host public key in the RSA format</td> </tr> <tr> <td>DSA key</td> <td>Host public key in the DSA format</td> </tr> <tr> <td>Fingerprint</td> <td>Host public key in the fingerprint format</td> </tr> </table> <p>If display of the user public key is specified, the user public key number and user public key automatically given by the system are displayed.</p> <p>In XSCF, only SSH2 is supported.</p>	SSH status	Whether SSH service is enabled	SSH DSCP	Physical partition (PPAR) - Whether access to SSH service from PPAR is allowed via the SP communication protocol (DSCP)	RSA key	Host public key in the RSA format	DSA key	Host public key in the DSA format	Fingerprint	Host public key in the fingerprint format
SSH status	Whether SSH service is enabled										
SSH DSCP	Physical partition (PPAR) - Whether access to SSH service from PPAR is allowed via the SP communication protocol (DSCP)										
RSA key	Host public key in the RSA format										
DSA key	Host public key in the DSA format										
Fingerprint	Host public key in the fingerprint format										
Privileges	<p>To execute this command, any of the following privileges is required.</p> <ul style="list-style-type: none"> ■ Specification of the user name: useradm ■ Other than above: No privileges are required. <p>For details on user privileges, see setprivileges(8).</p>										
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-c hostkey</td> <td>Displays the host public key. If you omit the -c option, "-c hostkey" is assumed specified.</td> </tr> <tr> <td>-c pubkey</td> <td>Displays the user public key. If you omit the -c option, -c hostkey is assumed specified.</td> </tr> </table>	-c hostkey	Displays the host public key. If you omit the -c option, "-c hostkey" is assumed specified.	-c pubkey	Displays the user public key. If you omit the -c option, -c hostkey is assumed specified.						
-c hostkey	Displays the host public key. If you omit the -c option, "-c hostkey" is assumed specified.										
-c pubkey	Displays the user public key. If you omit the -c option, -c hostkey is assumed specified.										

EXTENDED DESCRIPTION <ul style="list-style-type: none"> ■ The user public key numbers automatically given to user public keys can be specified when deleting user public keys by setssh(8). ■ You can set SSH service of the XSCF network by using setssh(8). EXAMPLES	<p>-h Displays the usage. Specifying this option with another option or operand causes an error.</p> <p>-M Displays text one screen at a time.</p> <p>-u <i>user_name</i> Specifies the user account name to display user public keys. It is specified with -c pubkey. If the -u option is omitted, the user public keys of the user account logged in currently are displayed.</p> <p>EXAMPLE 1 Display the information of the host public key.</p> <pre>XSCF> showssh SSH status: enabled RSA key: ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAIEAt0IG3wfpQnGr51znS9XtzwHcBBb/ UU0LN08SilUXE6j+ av1xdY7AFqBf1wGxLF+Tx5pTa6HuZ8o8yUBbDzVJAAAAFQCfKPxarV+/5qzK4A43Qaigkqu/ 6QAAAIBM LQl22G8pwibESrh5JmOhSxpLz13P26ksI8qPr+7BxmjLR0k= Fingerprint: 1024 e4:35:6a:45:b4:f7:e8:ce:b0:b9:82:80:2e:73:33:c4 /etc/ssh/ ssh_host_rsa_key.pub DSA key: ssh-dss AAAAB3NzaC1kc3MAAACBAJSy4GxD7Tk4fxFvyW1D0NUDqZQPY3PuY2IG7QC4BQ1kewDnblB8 / JEqI+8pnfbWzmOWU37KHL19OEYNAv6v+WZT6RElU5Pyb8F16uq96L8QDMswFlICMZgrn+ilJN Str6r8 KDjfwoQMMk0eeDFj2mL40NOvaLQ83+rRwW6Ny/yF1Rgv6PUpUqRLw4VeRb+uOfmPRpe6/ kb4z++l0htp WI9bay6CK0nrFRok+z54ez7BrDFBQVuNZx9PyEFezJG9ziEYVUag/23LIAiLxxBmW9pq/ WxC21Ja4RQ VN3009kmVwAAIAON1LR/ 9Jdd7yyG18+Ue7eBBJHrCA0pkSzvfzzFFj5XUzQBdabh5p5Rwz+1vriawFI ZI9j2uhM/3HQdrvYSVBEEdMjaasF9hB6T/ uFwP8yqtJf6Y9GdjBAhWuH8F13pX4BtvK9IeldqCscnOuu0 e2rlUoI6GICMr64FL0YYBSwfbwLIZ6PSA/yKQe23dwfkSfcwQZNq/ 5pThGPi3tob5Qev2KCK2OyEDMCA OvVlMhqHuPNpx+hE19nPdBFGzQ== Fingerprint: 1024 9e:39:8e:cb:8a:99:ff:b4:45:12:04:2d:39:d3:28:15 /etc/ssh/ ssh_host_dsa_key.pub</pre>
--	---

EXAMPLE 2 Display the user public keys of the user account logged in currently.

```
XSCF> showssh -c pubkey
Public key:
  1 ssh-rsa
AAAAAB3NzaC1yc2EAAAABIwAAAIEAzFh95SohrDgpnN7zFCJCVNy+jaZPTjNDxcid
QGbihYDCBttI4151Y0Sv85FJwDpSNHNKoVLMYLjtBmUMPbGgGVB61qskSv/
FeV44hefNCZMiXGItIIpK
P0nBK4XJpCFoFbPXNUHDw1rTD9icD5U/wRFGSRRxFI+Ub5oLRxN8+A8=abcd@example.com
  2 ssh-rsa
CSqGS1b3DQEJARYHZWUubWFpbDCBnzANBgkqhkiG9w0BAQEFAAOBjQAwgYkCgYEA
nkPntf+TjYtyKlNYFbO/YavFpUzkYTlHdt0Fbz/
tZmGd3e6Jn34A2W9EC7D9hjLsj+kAP41Al6wFwGO7
KP3H4iImX0Uysj19Hyk4jLBU51sw8JqvT2utTj1tV5mFPKL6bDcAgY9=e fgh@example.com
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

[setssh \(8\)](#)



NAME	showstatus - Displays the degraded Field Replaceable Unit (FRU).										
SYNOPSIS	showstatus [-M] showstatus -h										
DESCRIPTION	showstatus is a command to display the information of the degraded unit in the FRUs composing the system.										
Privileges	To execute this command, any of the following privileges is required. <code>useradm</code> , <code>platadm</code> , <code>platop</code> , <code>pparadm</code> , <code>pparmgr</code> , <code>pparop</code> , <code>fieldeng</code> For details on user privileges, see <code>setprivileges(8)</code> .										
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -M Displays text one screen at a time. 										
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ The information of the unit in which a failure or degradation occurred and unit one layer above in the FRUs composing the system is displayed. Any of the following statuses is displayed after "Status :" on the displayed unit. In addition, on the unit in which a failure or degradation occurred, "*" indicating the abnormal points is displayed. <table border="0"> <tr> <td style="vertical-align: top; padding-right: 20px;">Status</td> <td>Contents</td> </tr> <tr> <td>Faulted</td> <td>In the status in which the unit is not in operation due to a failure.</td> </tr> <tr> <td>Degraded</td> <td>A part of the unit has failed or degraded, but the unit is running.</td> </tr> <tr> <td>Deconfigured</td> <td>Due to the failure or degradation of another unit, the target unit and components of its underlying layer has been degraded, though there is no problem in them.</td> </tr> <tr> <td>Maintenance</td> <td>Maintenance work is in progress. <code>addfru(8)</code>, <code>replacefru(8)</code>, or <code>initbb(8)</code> is operating.</td> </tr> </table> <ul style="list-style-type: none"> ■ In the system composed of multiple XSCFs, if the switches of the operator panels of the master XSCF and standby XSCFs do not match, "*" is displayed on the OPNL units of the master XSCF and standby XSCFs. 	Status	Contents	Faulted	In the status in which the unit is not in operation due to a failure.	Degraded	A part of the unit has failed or degraded, but the unit is running.	Deconfigured	Due to the failure or degradation of another unit, the target unit and components of its underlying layer has been degraded, though there is no problem in them.	Maintenance	Maintenance work is in progress. <code>addfru(8)</code> , <code>replacefru(8)</code> , or <code>initbb(8)</code> is operating.
Status	Contents										
Faulted	In the status in which the unit is not in operation due to a failure.										
Degraded	A part of the unit has failed or degraded, but the unit is running.										
Deconfigured	Due to the failure or degradation of another unit, the target unit and components of its underlying layer has been degraded, though there is no problem in them.										
Maintenance	Maintenance work is in progress. <code>addfru(8)</code> , <code>replacefru(8)</code> , or <code>initbb(8)</code> is operating.										
EXAMPLES	EXAMPLE 1 Display the degraded unit. Here, we take as an example the case that the CPU and memory on CMUL of BB#00 and PSU of XBBOX#80 are degraded due to										

a failure.

```
XSCF> showstatus
BB#00;
      CMUL Status:Normal;
*       CPU#0 Status:Faulted;
*       MEM#00A Status:Faulted;
      XBBOX#80;
*       PSU#0 Status:Faulted;
```

EXAMPLE 2 Display the degraded part. Here, we take as an example the case that memory on MBU is degraded due to a failure.

```
XSCF> showstatus
      MBU Status:Normal;
*       MEM#0A Status:Faulted;
```

EXAMPLE 3 Display the degraded part. Here, we take as an example the case that memory on MBU is degraded due to a failure.

```
XSCF> showstatus
      MBU Status:Normal;
*       MEM#1B Status:Deconfigured;
```

EXAMPLE 4 Display the degraded part. Here, we take as an example the case that the CPU memory unit is degraded because the crossbar unit is degraded.

```
XSCF> showstatus
BB#00
      CMUU Status:Normal;
*       CPU#1 Status:Deconfigured;
*       XBU#0 Status:Degraded;
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

NAME	showtelnet - Displays the status of the Telnet service set in the XSCF network.
SYNOPSIS	showtelnet showtelnet -h
DESCRIPTION	showtelnet is a command to display the status of the Telnet service set currently in the XSCF network. Either of the following statuses is displayed.
	enable Indicates that the Telnet service is in operation. disable Indicates that the Telnet service is not in operation.
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. -h Displays the usage. Specifying this option with another option or operand causes an error.
EXTENDED DESCRIPTION	You can set the Telnet service of the XSCF network by using setteln(8) .
EXAMPLES	EXAMPLE 1 Display the status of the Telnet service set currently in the XSCF network. <pre>XSCF> showtelnet Telnet status:enabled</pre>
EXIT STATUS	The following exit values are returned. 0 Indicates normal end. >0 Indicates error occurrence.
SEE ALSO	setteln(8)

`showtelnet(8)`

NAME	showtimezone - Displays the currently set time zone of the XSCF and the daylight saving time information.												
SYNOPSIS	showtimezone -c tz showtimezone -c dst [-m {standard custom}] showtimezone -h												
DESCRIPTION	showtimezone is a command to display the currently set time zone of the XSCF and the daylight saving time information.												
Privileges	To execute this command, any of the following privileges is required. useradm, platadm, plaptop, auditadm, auditop, fieldeng, pparadm, pparmgr, pparop For details on user privileges, see setprivileges(8) .												
OPTIONS	The following options are supported. <table> <tr> <td>-c tz</td> <td>Displays the time zone.</td> </tr> <tr> <td>-c dst</td> <td>Displays the information of the daylight saving time.</td> </tr> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-m {standard custom}</td> <td>Specifies the information of the daylight saving time to be displayed. You can specify either of the following. If you omit the -m option, -m custom is assumed specified. <table> <tr> <td>standard</td> <td>Displays the information of the daylight saving time set as standard in the current time zone.</td> </tr> <tr> <td>custom</td> <td>Displays the information of the daylight saving time set by settimezone(8). If the daylight saving time is not set, nothing is displayed.</td> </tr> </table> </td> </tr> </table>	-c tz	Displays the time zone.	-c dst	Displays the information of the daylight saving time.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-m {standard custom}	Specifies the information of the daylight saving time to be displayed. You can specify either of the following. If you omit the -m option, -m custom is assumed specified. <table> <tr> <td>standard</td> <td>Displays the information of the daylight saving time set as standard in the current time zone.</td> </tr> <tr> <td>custom</td> <td>Displays the information of the daylight saving time set by settimezone(8). If the daylight saving time is not set, nothing is displayed.</td> </tr> </table>	standard	Displays the information of the daylight saving time set as standard in the current time zone.	custom	Displays the information of the daylight saving time set by settimezone(8) . If the daylight saving time is not set, nothing is displayed.
-c tz	Displays the time zone.												
-c dst	Displays the information of the daylight saving time.												
-h	Displays the usage. Specifying this option with another option or operand causes an error.												
-m {standard custom}	Specifies the information of the daylight saving time to be displayed. You can specify either of the following. If you omit the -m option, -m custom is assumed specified. <table> <tr> <td>standard</td> <td>Displays the information of the daylight saving time set as standard in the current time zone.</td> </tr> <tr> <td>custom</td> <td>Displays the information of the daylight saving time set by settimezone(8). If the daylight saving time is not set, nothing is displayed.</td> </tr> </table>	standard	Displays the information of the daylight saving time set as standard in the current time zone.	custom	Displays the information of the daylight saving time set by settimezone(8) . If the daylight saving time is not set, nothing is displayed.								
standard	Displays the information of the daylight saving time set as standard in the current time zone.												
custom	Displays the information of the daylight saving time set by settimezone(8) . If the daylight saving time is not set, nothing is displayed.												
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ The information of the daylight saving time is displayed in the following format. <ul style="list-style-type: none"> ■ If custom is specified <i>std offset dst[offset2] [from-date[/time] to-date[/time]]</i> <table> <tr> <td><i>std</i></td> <td>Abbreviated form of the time zone</td> </tr> </table>	<i>std</i>	Abbreviated form of the time zone										
<i>std</i>	Abbreviated form of the time zone												

<i>offset</i>	Offset time between the time zone and Greenwich Mean Time (GMT) If the value of the offset is plus or minus, it is displayed as minus (-) or plus (+), respectively.
<i>dst</i>	Daylight saving time name
<i>offset2</i>	Offset time between the daylight saving time and GMT If the value of the offset is plus or minus, it is displayed as minus (-) or plus (+), respectively.
<i>from-date[/time]</i>	Daylight saving time start information <i>from-date</i> is displayed in any of the following formats. <i>Mm.w.d</i> <i>Mm</i> : Month to start the daylight saving time. <i>m</i> is displayed by a figure from 1 to 12. <i>w</i> : Week to start the daylight saving time. It is displayed by a figure from 1 to 5 with the first week and last week indicated by 1 and 5, respectively. <i>d</i> : Day of the week to start the daylight saving time. It is displayed by a figure from 0 to 6 with Sunday and Saturday indicated by 0 and 6, respectively.
<i>Jn</i>	<i>Jn</i> : Date to start the daylight saving time. It is displayed by a figure from 1 to 365 with January 1st indicated by 1. In leap years, February 29 is not counted.
<i>n</i>	<i>n</i> : Date to start the daylight saving time. It is displayed by a figure from 1 to 365 with January 2nd indicated by 1. In leap years, February 29 is counted.
<i>time</i>	displays the time to switch to the daylight saving time by the time before switch.
<i>hh:mm:ss</i>	This is specified in the format of "hh:mm:ss." The default is 02 : 00 : 00.

<i>to-date[/time]</i>	Daylight saving time end information <i>to-date</i> is displayed in any of the following formats. Mm.w.d <i>Mm</i> : Month to end the daylight saving time. <i>m</i> is displayed by a figure from 1 to 12. <i>w</i> : Week to end the daylight saving time. It is displayed by a figure from 1 to 5 with the first week and last week indicated by 1 and 5, respectively. <i>d</i> : Day of the week to end the daylight saving time. It is displayed by a figure from 0 to 6 with Sunday and Saturday indicated by 0 and 6, respectively.
<i>Jn</i>	<i>Jn</i> : Date to end the daylight saving time. It is displayed by a figure from 1 to 365 with January 1st indicated by 1. In leap years, February 29 is not counted.
<i>n</i>	<i>n</i> : Date to end the daylight saving time. It is displayed by a figure from 1 to 365 with January 2nd indicated by 1. In leap years, February 29 is counted.
<i>time</i>	<i>time</i> displays the time to switch from the daylight saving time by the time before switch.
<i>hh:mm:ss</i>	This is specified in the format of "hh:mm:ss." The default is 02:00:00.
<ul style="list-style-type: none"> ■ If standard is specified 	
From:	<i>ddd MM dd hh:mm:ss yyyy dst</i>
To:	<i>ddd MM dd hh:mm:ss yyyy dst</i>
<i>ddd</i>	Day of the week
<i>MM</i>	Month
<i>dd</i>	Day
<i>hh</i>	Hour
<i>mm</i>	Minute
<i>ss</i>	Second
<i>yyyy</i>	Year
<i>dst</i>	Daylight saving time zone name

- You can set the time zone of XSCF by using `settimezone(8)`.

EXAMPLES

- EXAMPLE 1** Display the time zone.

```
XSCF> showtimezone -c tz
Asia/Tokyo
```

- EXAMPLE 2** Display the daylight saving time information if you have set the time zone abbreviated form to JST, offset from GMT to +9, daylight saving time zone name to JDT, daylight saving time to one hour earlier, and period to 2:00 on the last Sunday of March to 2:00 on the last Sunday of October.

```
XSCF> showtimezone -c dst -m custom
JST-9JDT,M3.5.0,M10.5.0
```

- EXAMPLE 3** Display the daylight saving time information if you have set the time zone abbreviated form to JST, offset from GMT to +9, daylight saving time zone name to JDT, daylight saving time to one hour earlier, and period to 0:00 on the first Sunday of April to 0:00 on the first Sunday of September.

```
XSCF> showtimezone -c dst
JST-9JDT-10,M4.1.0/00:00:00,M9.1.0/00:00:00
```

- EXAMPLE 4** If the daylight saving time is not set by `settimezone`.

```
XSCF> showtimezone -c dst
```

- EXAMPLE 5** Display the information of the daylight saving time set as standard in the current time zone.

```
XSCF> showtimezone -c dst -m standard
From: Sun Mar 25 03:00:00 2012 CEST
To: Sun Oct 28 02:59:59 2012 CEST
```

- EXAMPLE 6** If the standard daylight saving time of the system is not set.

```
XSCF> showtimezone -c dst -m standard
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

SEE ALSO

`setdate(8)`, `settimezone(8)`, `showdate(8)`

NAME	showuser - Displays the XSCF user account information.
SYNOPSIS	showuser [-a] [-p] [-u] [-M] showuser [-a] [-p] [-u] [-M] <i>user</i> showuser [-a] [-p] [-u] [-M] -l showuser -h
DESCRIPTION	<p>showuser is a command to display the XSCF user account information.</p> <p>If showuser is executed specifying the user account name, the account information of the specified user is displayed. If showuser is executed without specifying the user account name, the account information of the current user is displayed. If showuser is executed specifying the -l option, the account information of all users is displayed.</p> <p>If showuser is executed specifying one or more options among -a, -p, and -u, the information explained in the following sections on the options is displayed. If showuser is executed without specifying any of these options, all the account information is displayed.</p>
Privileges	<p>To execute this command, any of the following privileges is required.</p> <ul style="list-style-type: none"> ■ Display of your own account: No privileges are required. ■ Display of the account information of other users: <code>useradm</code> <p>For details on user privileges, see <code>setprivileges(8)</code>.</p>
OPTIONS	<p>The following options are supported.</p> <ul style="list-style-type: none"> -a Displays the information regarding the validity of the password and status of the account. It is only valid for the XSCF user account. -h Displays the usage. Specifying this option with another option or operand causes an error. -l Displays the account information of all XSCF users sorted by the login name of the user. It cannot be used with the <i>user</i> operand.

showuser(8)

	<p>-M Displays text one screen at a time.</p> <p>-p Displays all privileges assigned to users. This is valid for local users and remote users.</p> <p>-u Displays the user ID (UID). This is valid for local users and remote users.</p>
OPERANDS	The following operands are supported.
	<p><i>user</i> Name of the existing user account. It cannot be used with the -l option.</p>
EXAMPLES	<p>EXAMPLE 1 Display the information regarding the validity of the password and account.</p> <pre>XSCF> showuser -a User Name: jsmith Status: Enabled Minimum: 0 Maximum: 99999 Warning: 7 Inactive: -1 Last Change: Aug 22, 2005 Password Expires: Never Password Inactive: Never Account Expires: Never</pre> <p>EXAMPLE 2 Display the information of the user privileges.</p> <pre>XSCF> showuser -p User Name: jsmith Privileges: pparadm@1,3-6,8,9 platadm</pre>
EXIT STATUS	The following exit values are returned.
	<p>0 Indicates normal end.</p> <p>>0 Indicates error occurrence.</p>
SEE ALSO	<p>adduser(8), deleteuser(8), disableuser(8), enableuser(8), password(8), setprivileges(8)</p>

NAME	snapshot - Collects and transfers the data regarding environment, logs, errors, and Field Replaceable Unit Identifier (FRUID).
SYNOPSIS	<pre>snapshot -d <i>device</i> [-r] {-a -b <i>bb_id</i>} [-e [-P <i>password</i>]] [-L {F I R}] [-l] [-v] [-q] -{y n}] [-S <i>time</i> [-E <i>time</i>]]</pre> <pre>snapshot -t <i>user@host:directory</i> {-a -b <i>bb_id</i>} [-e [-P <i>password</i>]] [-k <i>host-key</i>] [-l] [-L {F I R}] [-p <i>password</i>] [-v] [-q] -{y n}] [-S <i>time</i> [-E <i>time</i>]]</pre> <pre>snapshot -h</pre>
DESCRIPTION	<p>snapshot is a command to provide the data collection mechanism and acquire the diagnosis information on the service processor quickly, securely, and flexibly.</p> <p>snapshot collects the data of the configuration, environment, logs, error, and FRUID information and transfers it to the specified destination.</p> <p>snapshot outputs the collected data to a file. The file name is automatically generated based on the host name and IP address assigned to the service processor and the date and UTC time (hour-minute-second format) on the service processor when executing snapshot. For example, it can be <i>jupiter:10.1.1.1_2012-10-20T22-33-44</i>. snapshot cannot specify the output file name. If the file and command outputs are collected from the service processor, snapshot compresses the output data and write it on the archive of the .zip format.</p> <p>The output file is a .zip format archive composed of the .zip format archives into which the information collected in each SPARC M10 Systems chassis is compressed.</p> <p>The name of .zip archive of each SPARC M10 Systems chassis is automatically generated based on the SPARC M10 Systems name, host name and IP address assigned to the service processor and the date and UTC time (hour-minute-second format) on the service processor when executing snapshot. For example, it can be <i>BB#01_jupiter_10.1.1.1_2012-10-20T22-33-44</i>.</p> <p>The name of the .zip archive of the SPARC M10 Systems chassis which does not have the host name or IP address assigned to the service processor is automatically generated based on the SPARC M10 Systems name and the date and UTC time (hour-minute-second format) on the service processor when executing snapshot. For example, it can be <i>BB#03_2012-10-20T22-33-44</i>.</p> <p>If snapshot is executed on slave XSCF, only the .zip archive file of the SPARC M10 Systems chassis which executed the command is transferred to the specified destination.</p> <p>snapshot saves the collected data in the remote network host or external media device based on which of the -t and -d options is used. To save the data collected by using the -t option in the remote network host, it is necessary to specify the host name (or IP address), destination directory on the remote network host, and user name on the remote host. When saving data on the remote network host,</p>

snapshot opens SSH network connection to function as a channel of data to the remote file.

You can limit data collection on larger log files by specifying the date range with the -S option, and -E option if necessary.

Encryption network protocols such as SSH and SSL are used for data transfer via network connections. To encrypt the .zip archive itself, use the -e option. To decode the .zip archive encrypted in this process, use the encrypted password specified in snapshot by openssl. The following shows an example of decoding of the file jupiter_10.1.1.1_2012-10-20T22-33-44.zip.e.

```
% openssl aes-128-cbc -d -in jupiter_10.1.1.1_2012-10-20T22-33-  
44.zip.e -out jupiter_10.1.1.1_2012-10-20T22-33-44.zip
```

All .zip archives generated by snapshot contain two files generated by snapshot itself. The first file named README describes the original name of the .zip archive, name of the setting file on the service processor used to create the .zip archive, version of snapshot, and whether the log-dedicated mode (-l option) is used to create the archive. The second file named CONFIG is a copy of the actual setting file used by snapshot to create the archive.

The data generated for each SPARC M10 Systems chassis by snapshot may be used by field engineers to diagnose the problems with the system. snapshot can collect different sets of data according to the purpose of the diagnosis. These data sets are called Initial, Root Cause, and Full, respectively, and set by using the -L option.

Privileges

To execute this command, `platadm` or `fieldeng` privilege is required.

For details on user privileges, see `setprivileges(8)`.

OPTIONS	The following options are supported.
-a	In addition to the common logs in the system, the logs stored in all SPARC M10 Systems chassis are collected and output to one file.
	If the system has an abnormality, some logs cannot be collected.
-b <i>bb_id</i>	Selects the BB-ID to collect data. You cannot specify multiple IDs.
	In addition to the common logs in the system, the logs stored in the specified SPARC M10 Systems chassis are collected.
	For <i>bb_id</i> , you can specify an integer from 0 to 15 and 80 to 83 in the case of a SPARC M10 Systems chassis and crossbar box chassis, respectively.
-d <i>device</i>	Specifies the external media device to be used. For -d, the following options are available.
	-r Deletes all files in the external media device before collecting data. This option is disabled if it is used with the -t option.
-E <i>time</i>	Specifies the time to finish collecting data. Defines the time frame of the log messages collected by snapshot with the -S <i>time</i> option of the start time. Only the log entries created before the time specified by -E <i>time</i> are collected by snapshot. See also the -S option.
	<i>time</i> Use either of the following two formats described by <code>strftime(3)</code> .
	%Y-%m-%d, %H:%M:%S %Y-%m-%d_%H-%M-%S
-e	Encrypts the archive of the zip format. It is required to use -P and <i>password</i> .
-h	Displays the usage. Specifying this option with another option or operand causes an error.

-k <i>host-key</i>	Specifies the -t option. Set the public key to be used by the service processor to log in the network host. This option is disabled if it is used with the -d option. You can specify this using up to 895 characters. The values which can be specified in <i>host-key</i> are below.
none	If the public key is not used for authentication of the network host, specify this literal value.
download	For snapshot to download the public host key of the network host using SSH and the public host key from the host specified by the -t argument, specify this literal value. snapshot displays the SHA-256 fingerprint of the key and requests for confirmation. If the key is accepted, it is used for server authentication. If the key is rejected, snapshot is terminated without executing anything. If the -k option is not specified, this is the default operation in the SSH target mode.
public	The specified public key is used for server authentication. The <i>host-key</i> argument must be the complete public key of the network host (beginning with the key type). (Therefore, it must be the complete contents of /etc/ssh/ssh_host_rsa_key.pub on the network host.)
Note – The public key needs to be enclosed in quotation marks to be handled by the shell as a single word.	
-L {F I R}	Specifies the log set to be collected. F Full log set I Initial log set R Root Cause log set If the log set is not specified, the Full log set is collected by default.
-l	Makes a specification so that only log files are collected. Command outputs are not collected.
-n	Automatically responds to prompt with "n" (no).

EXTENDED DESCRIPTION	-P password	Specifies it with the -e option. Set the encrypted password to be used to encrypt the output file.
		You can specify this using up to 63 characters.
	-p password	Sets the user password to be used for SSH login. This option is specified with the -t option. If it is used with the -d option, it becomes invalid.
		You can specify this using up to 63 characters.
	-q	Prevents display of messages, including prompt, for standard output.
	-S time	Specifies the time to start collecting data. Defines the time frame of the log messages collected by snapshot with the -E time option of the end time. If the end time is not specified, the target period ends when snapshot is executed. See also the -E option.
	time	Use either of the following two formats described by strftime(3) .
		%Y-%m-%d, %H:%M:%S
		%Y-%m-%d %H-%M-%S
	-t <i>user@host:directory</i>	Sets the network host and remote directory of the data transfer destination. Specify the host name or IP address of the network host in the <i>host</i> field. Specify the user name for ssh login to the archive host in the <i>user</i> field. Specify the archive directory on the archive host in which the output file is saved in the <i>directory</i> field. The <i>directory</i> field must not begin with "-" or "~".
Note – No target directory is created by snapshot . Create the target directory in the remote host in advance.		
-v	Displays detailed information. The status of correction of snapshot files for each SPARC M10 Systems chassis. If it is specified with the -q option, the -v option becomes invalid.	
	Note – The user privilege to operate all commands to be executed by the snapshot setting file may not have been given. In this case, an error message indicating that these command operations are not allowed is displayed.	
-y	Automatically responds to prompt with "y" (yes).	
Operation mode		
The overview of the operation mode of snapshot is described below.		

The initial mode is the "SSH target mode." If the data collector is started specifying the **-t** option, this mode is applied for execution. In this mode, the data collector opens the SSH connection of the destination specified by the service processor (after appropriate authentication) and sends the data archive of the zip format to the destination host via the SSH connection. No target directory is created by **snapshot**. Create the target directory in the remote host in advance. Transfer encryption in this mode is performed by SSH.

The second mode is the "USB device mode." If the data collector is started specifying the **-d** option, this mode is applied for execution. In this mode, the outputs of the data collector (archive of the zip format) are saved in files on the USB device. The USB device needs to have been formatted by the FAT32 file system. In this mode, you can use the **-e** option to encrypt zip files like the SSH target mode. However, in this mode, data is local to the service processor, so transfer encryption (like SSH) is not performed.

To execute **snapshot** in the master chassis, connect the USB device to a USB port of the master chassis.

EXAMPLES

EXAMPLE 1 Download data to the external media device.

```
XSCF> snapshot -d usb0 -r -b 3
Testing writability of USB device....SUCCESS
About to remove all files from device 'usb0'. Continue? [y|n] : y
Collecting data into /media/usb_msd/jupiter_10.1.1.1_2012-10-20T22-41-
51.zip
Data collection complete.
```

EXAMPLE 2 Limit log collection to obtain specific logs for the data range.

```
XSCF> snapshot -d usb0 -b 3 -S 2012-01-01,01:00:00 -E 2012-01-
31_14-00-00
Testing writability of USB device....SUCCESS
Collecting data into /media/usb_msd/jupiter_10.1.1.1_2012-10-20T22-41-
51.zip
Data collection complete.
```

EXAMPLE 3 Collect the logs of all SPARC M10 Systems chassis.

```
XSCF> snapshot -d usb0 -r -a
Testing writability of USB device....SUCCESS
About to remove all files from device 'usb0'. Continue? [y|n] : y
Collecting data from BB#00....SUCCESS
Collecting data from BB#01....FAILURE
Collecting data from BB#02....SUCCESS
.
.
.
Collecting data into /media/usb_msd/jupiter_10.1.1.1_2012-10-20T22-41-
51.zip
Data collection complete.
```

EXIT STATUS	The following exit values are returned.
0	Indicates normal end.
>0	Indicates error occurrence.

SEE ALSO	showlogs (8)
-----------------	------------------------------

`snapshot(8)`

NAME	switchscf - Switches the status of XSCF in between master and standby.												
SYNOPSIS	switchscf [[-q] {-y n}] -t {Master Standby} [-f] switchscf -h												
DESCRIPTION	<p>switchscf is a command to switch the status of XSCF in between active and standby.</p> <p>switchscf can be used only for the systems composed of multiple XSCFs.</p> <p>XSCF in the active status means master XSCF. Therefore, the master XSCF and XSCF in the standby status is switched by executing switchscf.</p> <p>switchscf can be executed in the master or standby XSCF. If the command is executed for the XSCF logged in currently, switch processing is executed between paired XSCFs (between XBBOX#80 and XBBOX#81 or between BB#00 and BB#01, if there is some or no crossbar box, respectively).</p> <p>Note – When switching XSCFs, the sessions of the network connected to the master XSCF are disconnected.</p> <hr/> <p>Caution – Normally, XSCFs cannot be switched during maintenance work. If XSCF cannot be switched because the execution result of switchscf becomes "Switching of XSCF state is disabled due to a maintenance operation. Try again later.", confirm whether the maintenance commands of addfru(8), replacefru(8), and flashupdate(8) are in execution. If any of these commands is in execution, wait until the command is terminated. If XSCF cannot be switched though the maintenance command is not in execution, use the -f option to switch.</p>												
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8).												
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-f</td> <td>If XSCF is not switched, it can be switched forcibly.</td> </tr> <tr> <td colspan="2"><hr/></td> </tr> <tr> <td colspan="2">Caution – The -f option forcibly switches XSCF. Therefore, use it only if switching by normal operations is impossible.</td> </tr> <tr> <td colspan="2"><hr/></td> </tr> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-n</td> <td>Automatically responds to prompt with "n" (no).</td> </tr> </table>	-f	If XSCF is not switched, it can be switched forcibly.	<hr/>		Caution – The -f option forcibly switches XSCF. Therefore, use it only if switching by normal operations is impossible.		<hr/>		-h	Displays the usage. Specifying this option with another option or operand causes an error.	-n	Automatically responds to prompt with "n" (no).
-f	If XSCF is not switched, it can be switched forcibly.												
<hr/>													
Caution – The -f option forcibly switches XSCF. Therefore, use it only if switching by normal operations is impossible.													
<hr/>													
-h	Displays the usage. Specifying this option with another option or operand causes an error.												
-n	Automatically responds to prompt with "n" (no).												

-q -t Master -t Standby -y	Prevents display of messages, including prompt, for standard output. Switches the status of XSCF to the master status. Switches the status of XSCF to the standby status. Automatically responds to prompt with "y" (yes).
---	---

Extended description

When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key.

EXAMPLES

EXAMPLE 1 Switch the status of the XSCF logged in currently to the standby status.

```
XSCF> switchscf -t Standby
The XSCF unit switch between the Master and Standby states. Continue?
[y|n] :y
```

EXAMPLE 2 Switch the status of the XSCF logged in currently to the standby status. The prompt is automatically given a "y" response.

```
XSCF> switchscf -t Standby -y
The XSCF unit switch between the Master and Standby states. Continue?
[y|n] :y
```

EXIT STATUS

The following exit values are returned.

0 >0	Indicates normal end. Indicates error occurrence.
--------------------------	--

NAME	testsb - Performs an initial diagnosis on the specified system board (PSB).																						
SYNOPSIS	<pre>testsb [[-q] -{y n}] [-m diag=mode] location testsb [[-q] -{y n}] [-m diag=mode] -a testsb -v [-y -n] [-m diag=mode] [-p] [-s] location testsb -v [-y -n] [-m diag=mode] [-p] [-s] -a testsb -h</pre>																						
DESCRIPTION	<p>testsb is a command to perform the initial diagnosis of the specified PSB. The configuration of PSB and operation of each device mounted in PSB are diagnosed. While diagnosing, the power supply of PSB is turned on and off. The diagnosis result is displayed after diagnosis. In addition, the items of Test and Fault displayed by showboards(8) can be confirmed.</p>																						
Privileges	To execute this command, platadm or fieldeng privilege is required. For details on user privileges, see setprivileges(8).																						
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-a</td> <td>Diagnoses all mounted PSBs.</td> </tr> <tr> <td>-h</td> <td>Displays the usage. Specifying this option with another option or operand causes an error.</td> </tr> <tr> <td>-m diag=mode</td> <td>Specifies the diagnosis level of the initial diagnosis. You can specify either of the following for mode.</td> </tr> <tr> <td></td> <td>min Standard (Default)</td> </tr> <tr> <td></td> <td>max Maximum</td> </tr> <tr> <td>-n</td> <td>Automatically responds to prompt with "n" (no).</td> </tr> <tr> <td>-p</td> <td>Executes probe-scsi-all of OpenBoot PROM and displays the result in the middle of diagnosis processing.</td> </tr> <tr> <td>-q</td> <td>Prevents display of messages, including prompt, for standard output.</td> </tr> <tr> <td>-s</td> <td>Executes show-devs of OpenBoot PROM and displays the result in the middle of diagnosis processing.</td> </tr> <tr> <td>-v</td> <td>Displays detailed information.</td> </tr> <tr> <td>-y</td> <td>Automatically responds to prompt with "y" (yes).</td> </tr> </table>	-a	Diagnoses all mounted PSBs.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-m diag=mode	Specifies the diagnosis level of the initial diagnosis. You can specify either of the following for mode.		min Standard (Default)		max Maximum	-n	Automatically responds to prompt with "n" (no).	-p	Executes probe-scsi-all of OpenBoot PROM and displays the result in the middle of diagnosis processing.	-q	Prevents display of messages, including prompt, for standard output.	-s	Executes show-devs of OpenBoot PROM and displays the result in the middle of diagnosis processing.	-v	Displays detailed information.	-y	Automatically responds to prompt with "y" (yes).
-a	Diagnoses all mounted PSBs.																						
-h	Displays the usage. Specifying this option with another option or operand causes an error.																						
-m diag=mode	Specifies the diagnosis level of the initial diagnosis. You can specify either of the following for mode.																						
	min Standard (Default)																						
	max Maximum																						
-n	Automatically responds to prompt with "n" (no).																						
-p	Executes probe-scsi-all of OpenBoot PROM and displays the result in the middle of diagnosis processing.																						
-q	Prevents display of messages, including prompt, for standard output.																						
-s	Executes show-devs of OpenBoot PROM and displays the result in the middle of diagnosis processing.																						
-v	Displays detailed information.																						
-y	Automatically responds to prompt with "y" (yes).																						

OPERANDS	The following operands are supported.
<i>location</i>	Specifies only one PSB number to be diagnosed.
	This can be specified using the following format.
<i>xx-y</i>	
<i>xx</i>	Integer from 00 to 15
<i>y</i>	Fixed to 0
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ Execute the -a option while the system is shut down. If the system is not shut down, it causes an error. The system shutdown status means the status in which all PPARs are shut down. If it is in operation, all PPARs are shut down by executing poweroff -a and then the power of the system is turned off. ■ If the status of the specified PSB corresponds to any of the following statuses, testsb causes an error. <ul style="list-style-type: none"> ■ PSB is incorporated into PPAR and the PPAR is in operation. ■ PSB is incorporated into PPAR and the status of the PPAR is OpenBoot PROM (ok prompt). ■ PSB is incorporated into PPAR and the status of the PPAR is powering on, powering off, or restarting. ■ addboard(8) and deleteboard(8) are in execution for PSB. ■ An error occurs when testsb is attempted to be executed while testsb or diagxbu(8) is being executed against other PSB or a crossbar box. ■ If the status of the specified PSB is Unmount or Faulted, it may be excluded from the diagnosis targets and the diagnosis result may not be displayed. In such a case, confirm the diagnosis result by showboards(8). ■ If the warm-up time and wait time before start is set, a prompt to confirm whether it is acceptable to execute testsb ignoring it is displayed. To execute, enter "y." To cancel, enter "n."

- The diagnosis result by testsb is displayed as below.

PSB	Number belonging to PSB This is displayed in the format below. $xx-y$ xx Integer from 00 to 15 y It is fixed to 0	
Test	Status of the initial diagnosis of PSB Any of the following is displayed. This status display is the same as that displayed by showboards(8).	
	Unmount	Recognition is impossible because it is not mounted or a failure occurred.
	Unknown	Not diagnosed.
	Testing	The initial diagnosis is in progress.
	Passed	The initial diagnosis is normally completed.
	Failed	An abnormality occurred in the initial diagnosis. PSB cannot be used or is degraded.
Fault	Degradation status of PSB The status is displayed by one or more items. This status displays is the same as that displayed by showboards(8).	
	Normal	Normal status
	Degraded	There is a degraded part. PSB can be operated.
	Faulted	PSB cannot be operated due to an abnormality.

- If it is executed specifying the -p or -s option, the power can be shut down forcibly when [Ctrl]+[C] key is pressed while probe-scsi-all or show-devs is in execution.

EXAMPLES

EXAMPLE 1 Perform the initial diagnosis of PSB 00-0.

```
XSCF> testsb 00-0
Initial diagnosis is about to start, Continue? [y|n] :y
SB#00-0 power on sequence started.
 0end
Initial diagnosis started. [1800sec]
 0..... 30..... 60..... 90..... 120end
Initial diagnosis has completed.
SB power off sequence started. [1200sec]
 0.end
```

```
SB powered off.
PSB Test Fault
-----
00-0 Passed Normal
```

EXAMPLE 2 Perform the initial diagnosis of PSB 01-0 displaying a detailed message.

```
XSCF> testsb -v 01-0
Initial diagnosis is about to start. Continue? [y|n] :y
SB#01-0 powered on sequence started.
:
<<XXXXXXXX>>
:
Initial diagnosis has completed.
{0} ok SB power off sequence started. [1200sec]
0.end
SB powered off.
PSB Test Fault
-----
01-0 Passed Normal
```

EXAMPLE 3 Perform the initial diagnosis of all mounted PSBs.

```
XSCF> testsb -a
Initial diagnosis is about to start. Continue? [y|n] :y
SB power on sequence started.
0end
Initial diagnosis started. [1800sec]
0..... 30..... 60..... 90.....120end
Initial diagnosis has completed.
SB power off sequence started. [1200sec]
0.end
SB powered off.
PSB Test Fault
-----
00-0 Passed Normal
01-0 Passed Normal
02-0 Passed Normal
03-0 Passed Normal
```

EXAMPLE 4 Perform the initial diagnosis of PSB while warm-up and air conditioning wait are set. (Diagnosis is cancelled during the warm-up time and wait time for air-conditioning.)

```
XSCF> testsb -a
Initial diagnosis is about to start, Continue? [y|n] :y
Ignore warmup-time and air-conditioner-wait-time, Continue?[y|n] :n
Initial diagnosis canceled by operator.
```

EXAMPLE 5 Perform the initial diagnosis of PSB ignoring the set warm-up time and wait

time for air conditioning.

```
XSCF> testsb -a
Initial diagnosis is about to start. Continue? [y|n] :y
Ignore warmup-time and air-conditioner-wait-time, Continue? [y|n] :y
SB power on sequence started.
  0end
Initial diagnosis started. [1800sec]
  0..... 30..... 60..... 90..... 120end
Initial diagnosis has completed.
SB power off sequence started. [1200sec]
  0.end
SB powered off.
PSB  Test      Fault
----- -----
00-0 Passed  Normal
01-0 Passed  Normal
02-0 Passed  Normal
03-0 Passed  Normal
```

EXAMPLE 6 Perform the initial diagnosis of PSB 01-0 with the probe-scsi-all command.

```
XSCF> testsb -v -p 01-0
Initial diagnosis is about to start, Continue? [y|n] :y
PSB#01-0 powered on sequence started.
:
<<XXXXXXXX>>
:
{0} ok
:
<<XXXXXXXX>>
:
<<XXXXXXXX>>
:
SB powered off.
PSB  Test      Fault
----- -----
01-0 Passed  Normal
```

EXIT STATUS The following exit values are returned.

- 0 Indicates normal end.
- >0 Indicates error occurrence.

SEE ALSO **addfru(8)**, **diagxbu (8)**, **replacefru (8)**, **setupfru (8)**, **showboards (8)**, **showfru (8)**

testsb(8)

NAME	traceroute - Displays the network route to the specified host.
SYNOPSIS	traceroute [-n] [-r] [-v] [-m <i>maxttl</i>] [-p <i>port</i>] [-q <i>nqueries</i>] [-s <i>src_addr</i>] [-w <i>wait</i>] <i>host</i> traceroute -h
DESCRIPTION	traceroute is a command to display the network route to the specified host. The network route means the router (gateway) to connect the specified hosts and network devices and displays what kinds of routers are located on the route. traceroute attempts to extract the ICMP TIME_EXCEEDED response using the TTL field of IP protocols from all gateways on the network route to the specified hosts or network devices.
Privileges	No privileges are required to execute this command. For details on user privileges, see setprivileges(8) .
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -h Displays the usage. Specifying this option with another option or operand causes an error. -m <i>maxttl</i> Specifies the maximum number of hops. Displays the same number of gateways as the specified number of hops. If omitted, it is set to 30. -n Outputs just with the IP address without reverse DNS lookup. -p <i>port</i> Specifies the port number of the UDP packet to be used. This is valid only if the UDP packet is used. If omitted, it is set to 33434. -q <i>nqueries</i> Specifies the number of attempts for one gateway. If omitted, it is set to 3 times. -r Directly transfers packets to the specified hosts or network devices ignoring the routing table. If there is no target host or network device on the same physical network, it causes an error. -s <i>src_addr</i> Specifies the source address following the route. -v Displays detailed information. Displays the transmission size of the packet and source address. -w <i>wait</i> Specifies the timeout time by seconds. If omitted, it is set to 3 seconds.

OPERANDS	The following operands are supported.
<i>host</i>	Specifies the hosts or network devices to send packets to. You can specify a host name or IP address. Specifying a DSCP address causes an error.
EXTENDED DESCRIPTION	<ul style="list-style-type: none"> ■ If no option is specified, the usage is displayed. ■ If "localhost" and the loopback address (127.0.0.0/8) are specified in <i>host</i>, only the users with <i>fieldeng</i> privilege can execute this command. ■ If the interface of the SSCP link is specified in <i>host</i>, only the users with <i>fieldeng</i> privilege can execute this command.
EXAMPLES	<p>EXAMPLE 1 Display the network route to the host server.example.com.</p>
<pre>XSCF> traceroute server.example.com traceroute to server.example.com (192.168.100.10), 30 hops max, 38 byte packets 1 10.16.10.1 (10.16.10.1) 1.792 ms 1.673 ms 1.549 ms 2 10.16.11.1 (10.16.11.1) 2.235 ms 2.249 ms 2.367 ms 3 10.24.1.1 (10.24.1.1) 2.199 ms 2.228 ms 2.361 ms 4 10.13.0.1 (10.13.0.1) 2.516 ms 2.229 ms 2.357 ms 5 10.15.0.1 (10.15.0.1) 2.546 ms 2.347 ms 2.272 ms 6 server.example.com (192.168.100.10) 2.172 ms 2.313 ms 2.36 ms</pre>	<p>EXAMPLE 2 Display the detailed network route to the host server.example.com.(XSCF-LAN=192.168.100.10)</p>
<pre>XSCF> traceroute -v server.example.com traceroute to server.example.com (192.168.100.10), 30 hops max, 38 byte packets 1 10.16.10.1 (10.16.10.1) 36 bytes to 192.168.100.10 1.792 ms 1.673 ms 1.549 ms 2 10.16.11.1 (10.16.11.1) 36 bytes to 192.168.100.10 2.235 ms 2.249 ms 2.367 ms 3 10.24.1.1 (10.24.1.1) 36 bytes to 192.168.100.10 2.199 ms 2.228 ms 2.361 ms 4 10.13.0.1 (10.13.0.1) 36 bytes to 192.168.100.10 2.516 ms 2.229 ms 2.357 ms 5 10.15.0.1 (10.15.0.1) 36 bytes to 192.168.100.10 2.546 ms 2.347 ms 2.272 ms 6 server.example.com (192.168.100.10) 46 bytes to 192.168.100.10 2.172 ms 2.313 ms 2.36 ms</pre>	<p>EXAMPLE 3 Case that the loopback address is set.</p>
<pre>XSCF> traceroute 127.0.0.1 This private IP address cannot be accessed.</pre>	

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.



NAME	unlockmaintenance - Release multi-activated lock created by addfru(8) and replacefru(8).
SYNOPSIS	unlockmaintenance [[-q] {-y n}] unlockmaintenance -h
DESCRIPTION	unlockmaintenance is a command to release the multi-activated lock from maintenance commands when maintenance procedure is unexpectedly halted due to the termination of LAN etc., in the middle of system maintenance using addfru(8) and replacefru(8).
Privileges	To execute this command, fieldeng privilege is required. For details on user privileges, see setprivileges(8).
OPTIONS	The following options are supported. <ul style="list-style-type: none"> -n Automatically responds to prompt with "n" (no). -q Prevents display of messages, including prompt, for standard output. -y Automatically responds to prompt with "y" (yes).
EXTENDED DESCRIPTION	<p>Note – Please never use it in any case other than when maintenance procedure is unexpectedly halted in the middle of system maintenance due to termination of LAN etc., as it forcibly halts the multiple activation prevention lock of the maintenance menu.</p> <ul style="list-style-type: none"> ■ When you execute the command, a prompt to confirm whether to execute it with the specified contents is displayed. To execute, press the [y] key. To cancel, press the [n] key. ■ You can execute unlockmaintenance only from the master XSCF.
EXAMPLES	<p>EXAMPLE 1 Unlock XSCF that was locked by maintenance work.</p> <pre>XSCF> unlockmaintenance This command unlocks the maintenance lock which prevents the multiple execution of maintenance commands. *Never* use this command, except when the lock state remains by some reason. Careless execution of this command causes serious situation because it interrupts the running command and XSCF might not be able to recognize the parts. Continue? [y n] :y</pre> <p>EXAMPLE 2 Unlock XSCF that was locked by maintenance work. The prompt is automati-</p>

ically given a "y" response.

```
XSCF> unlockmaintenance -y
```

This command unlocks the maintenance lock which prevents the multiple execution of maintenance commands.

Never use this command, except when the lock state remains by some reason.

Careless execution of this command causes serious situation because it interrupts the running command and XSCF might not be able to recognize the parts.

```
Continue? [y|n] :y
```

EXAMPLE 3 Unlock XSCF that was locked by maintenance work. The message is hidden and the prompt is automatically given a "y" response.

```
XSCF> unlockmaintenance -q -y
```

```
XSCF>
```

EXIT STATUS

The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO

addfru (8), **replacefru (8)**

NAME	version - Displays the version number of the firmware.														
SYNOPSIS	version -c xcp [-v] [-t] version -c {cmu xscf} [-v] [-M] version -h														
DESCRIPTION	<p>version is a command to display the version of the firmware.</p> <p>The following versions can be displayed.</p> <table> <tr> <td>xcp</td><td>Versions of XSCF Control Package (XCP) applied to the system</td></tr> <tr> <td>cmu</td><td>Representative version of CMU firmware. CMU firmware is the archives of the Power-on self test (POST)/OpenBoot PROM/Hypervisor</td></tr> <tr> <td>xscf</td><td>Version of XSCF firmware</td></tr> </table>	xcp	Versions of XSCF Control Package (XCP) applied to the system	cmu	Representative version of CMU firmware. CMU firmware is the archives of the Power-on self test (POST)/OpenBoot PROM/Hypervisor	xscf	Version of XSCF firmware								
xcp	Versions of XSCF Control Package (XCP) applied to the system														
cmu	Representative version of CMU firmware. CMU firmware is the archives of the Power-on self test (POST)/OpenBoot PROM/Hypervisor														
xscf	Version of XSCF firmware														
Privileges	To execute this command, <code>platadm</code> or <code>fieldeng</code> privilege is required. For details on user privileges, see <code>setprivileges(8)</code> .														
OPTIONS	<p>The following options are supported.</p> <table> <tr> <td>-c xcp</td><td>Displays the versions of XCP.</td></tr> <tr> <td>-c cmu</td><td>Displays the representative version of the archives of the POST/OpenBoot PROM/Hypervisor (cmu firmware version).</td></tr> <tr> <td>-c xscf</td><td>Displays the version of the XSCF firmware.</td></tr> <tr> <td>-h</td><td>Displays the usage. Specifying this option with another option or operand causes an error.</td></tr> <tr> <td>-M</td><td>Displays text one screen at a time.</td></tr> <tr> <td>-t</td><td>Displays the information of the total number of versions of XCP registered to XSCF. It is specified with -c xcp.</td></tr> <tr> <td>-v</td><td>Displays detailed information. If it is specified with -c xscf, the same information as in the normal status is displayed.</td></tr> </table>	-c xcp	Displays the versions of XCP.	-c cmu	Displays the representative version of the archives of the POST/OpenBoot PROM/Hypervisor (cmu firmware version).	-c xscf	Displays the version of the XSCF firmware.	-h	Displays the usage. Specifying this option with another option or operand causes an error.	-M	Displays text one screen at a time.	-t	Displays the information of the total number of versions of XCP registered to XSCF. It is specified with -c xcp.	-v	Displays detailed information. If it is specified with -c xscf, the same information as in the normal status is displayed.
-c xcp	Displays the versions of XCP.														
-c cmu	Displays the representative version of the archives of the POST/OpenBoot PROM/Hypervisor (cmu firmware version).														
-c xscf	Displays the version of the XSCF firmware.														
-h	Displays the usage. Specifying this option with another option or operand causes an error.														
-M	Displays text one screen at a time.														
-t	Displays the information of the total number of versions of XCP registered to XSCF. It is specified with -c xcp.														
-v	Displays detailed information. If it is specified with -c xscf, the same information as in the normal status is displayed.														
EXAMPLES	<p>EXAMPLE 1 Display the versions of XCP.</p> <pre>XSCF> version -c xcp BB#00-XSCF#0 (Master) XCP0 (Current): 1090 XCP1 (Reserve): 1090 BB#01-XSCF#0 (Standby) XCP0 (Current): 1090</pre>														

```
XCP1 (Reserve) : 1090  
BB#02-XSCF#0  
XCP0 (Current) : 1090  
XCP1 (Reserve) : 1090
```

EXAMPLE 2 Display the details on the versions of XCP.

```
XSCF> version -c xcp -v  
BB#00-XSCF#0 (Master)  
XCP0 (Current) : 1082  
CMU : 02.09.0000  
POST : 01.09.00  
OpenBoot PROM : 4.8.2.1 02.09.00  
Hypervisor : 4.8.2.1XSCF : 01.08.0005  
XCP1 (Reserve) : 1082  
CMU : 02.09.0000  
POST : 01.09.00  
OpenBoot PROM : 4.8.2.1 02.09.00  
Hypervisor : 4.8.2.1  
XSCF : 01.08.0005  
BB#01-XSCF#0 (Standby)  
XCP0 (Current) : 1082  
CMU : 02.09.0000  
POST : 01.09.00  
OpenBoot PROM : 4.8.2.1 02.09.00  
Hypervisor : 4.8.2.1  
XSCF : 01.08.0005  
XCP1 (Reserve) : 1082  
CMU : 02.09.0000  
POST : 01.09.00  
OpenBoot PROM : 4.8.2.1 02.09.00  
Hypervisor : 4.8.2.1  
CMU BACKUP  
#0: 02.08.0000  
#1: 02.09.0000
```

EXAMPLE 3 Display the version of XCP registered in XSCF.

```
XSCF> version -c xcp -t  
XCP: 1090
```

EXAMPLE 4 Display the details on the version of XCP registered in XSCF.

```
XSCF> version -c xcp -v -t  
XCP : 2004  
CMU : 02.00.0004  
POST : 1.9.0  
OpenBoot PROM : 4.34.0+pa1.0.1  
Hypervisor : 0.19.4  
XSCF : 02.00.0004
```

EXAMPLE 5 Display the version of the CMU firmware.

```
XSCF> version -c cmu
PPAR-ID 0: 02.09.0000
PPAR-ID 1: 02.09.0000
PPAR-ID 2: 02.09.0000
PPAR-ID 3: 02.09.0000
:
PPAR-ID 15: 02.09.0000
```

EXAMPLE 6 Display the detailed version of the CMU firmware.

```
XSCF> version -c cmu -v
PPAR-ID 0: 02.09.0000
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PPAR-ID 1: 02.09.0000
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PPAR-ID 2: 02.09.0000
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PPAR-ID 3: 02.09.0000
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PPAR-ID 15: 02.09.0000
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PSB#00-0: 02.09.0000(Current)
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PSB#00-0: 02.07.0000(Reserve)
    POST          : 01.09.00
    OpenBoot PROM : 4.8.1.1 02.07.00
    Hypervisor    : 4.8.1.1
PSB#01-0: 02.09.0000(Current)
    POST          : 01.09.00
    OpenBoot PROM : 4.8.2.1 02.09.00
    Hypervisor    : 4.8.2.1
PSB#01-0: 02.07.0000(Reserve)
    POST          : 01.09.00
    OpenBoot PROM : 4.8.1.1 02.07.00
    Hypervisor    : 4.8.1.1
:
PSB#15-0: 02.09.0000(Current)
```

version(8)

```
POST : 01.09.00
OpenBoot PROM : 4.8.2.1 02.09.00
Hypervisor : 4.8.2.1
PSB#15-0: 02.07.0000 (Reserve)
POST : 01.09.00
OpenBoot PROM : 4.8.1.1 02.07.00
Hypervisor : 4.8.1.1
```

EXAMPLE 7 Display the detailed version of the XSCF firmware.

```
XSCF> version -c xscf -v
BB#00-XSCF#0 (Master)
01.08.0005 (Reserve) 01.08.0005 (Current)
BB#01-XSCF#0 (Standby)
01.08.0005 (Current) 01.08.0005 (Reserve)
```

EXIT STATUS

The following exit values are returned.

- | | |
|----|-----------------------------|
| 0 | Indicates normal end. |
| >0 | Indicates error occurrence. |

NAME	viewaudit - Displays the audit records.		
SYNOPSIS	viewaudit [-A <i>date-time</i>] [-B <i>date-time</i>] [-C] [-c <i>classes</i>] [-D <i>date-time</i>] [-E <i>end-record</i>] [-e <i>events</i>] [-i <i>audit-ids</i>] [-l] [-m <i>del</i>] [-n] [-p <i>privilege-results</i>] [-r <i>return-values</i>] [-S <i>start-record</i>] [-u <i>users</i>] [-x] viewaudit -h		
DESCRIPTION	viewaudit is a command to display the audit records. If viewaudit is executed without specifying any options, all of the current local audit records are displayed. If viewaudit is executed specifying the option, only the selected records are displayed. By default, the records are displayed in the text format. One token per line is shown and comma is used as the field separator character. The output format can be changed by separately using the options of -C, -E, -l, -m <i>del</i> , -n, -S, and -x.		
Privileges	To execute this command, auditadm or auditop privilege is required. For details on user privileges, see setprivileges(8).		
OPTIONS	The following options are supported. <table> <tr> <td>-A <i>date-time</i></td> <td>Selects the records which occurred after <i>date-time</i>. <i>date-time</i> is based on the local time. You can specify a range by using the -A and -B options together. The valid values of <i>date-time</i> are below. <ul style="list-style-type: none"> ■ Absolute time <i>date-time</i>: <i>yyyymmdd[hh[mm[ss]]]</i> The variables have the following meanings. <ul style="list-style-type: none"> ■ <i>yyyy</i> = Year (1970 is the earliest valid value.) ■ <i>mm</i> = Month (01 to 12) ■ <i>dd</i> = Day (01 to 31) ■ <i>hh</i> = Hour (00 to 23) ■ <i>mm</i> = Minute (00 to 59) ■ <i>ss</i> = Second (00 to 59) <p>The default values of <i>hh</i>, <i>mm</i>, and <i>ss</i> are 00.</p> </td></tr> </table>	-A <i>date-time</i>	Selects the records which occurred after <i>date-time</i> . <i>date-time</i> is based on the local time. You can specify a range by using the -A and -B options together. The valid values of <i>date-time</i> are below. <ul style="list-style-type: none"> ■ Absolute time <i>date-time</i>: <i>yyyymmdd[hh[mm[ss]]]</i> The variables have the following meanings. <ul style="list-style-type: none"> ■ <i>yyyy</i> = Year (1970 is the earliest valid value.) ■ <i>mm</i> = Month (01 to 12) ■ <i>dd</i> = Day (01 to 31) ■ <i>hh</i> = Hour (00 to 23) ■ <i>mm</i> = Minute (00 to 59) ■ <i>ss</i> = Second (00 to 59) <p>The default values of <i>hh</i>, <i>mm</i>, and <i>ss</i> are 00.</p>
-A <i>date-time</i>	Selects the records which occurred after <i>date-time</i> . <i>date-time</i> is based on the local time. You can specify a range by using the -A and -B options together. The valid values of <i>date-time</i> are below. <ul style="list-style-type: none"> ■ Absolute time <i>date-time</i>: <i>yyyymmdd[hh[mm[ss]]]</i> The variables have the following meanings. <ul style="list-style-type: none"> ■ <i>yyyy</i> = Year (1970 is the earliest valid value.) ■ <i>mm</i> = Month (01 to 12) ■ <i>dd</i> = Day (01 to 31) ■ <i>hh</i> = Hour (00 to 23) ■ <i>mm</i> = Minute (00 to 59) ■ <i>ss</i> = Second (00 to 59) <p>The default values of <i>hh</i>, <i>mm</i>, and <i>ss</i> are 00.</p>		

-B <i>date-time</i>	Selects the records which occurred before <i>date-time</i> . <i>date-time</i> is based on the local time. You can specify a range by using the -A and -B options together. The valid values of <i>date-time</i> are the absolute time and offset time.
	<ul style="list-style-type: none">■ Absolute time <i>date-time</i>: <i>yyyymmdd[hh[mm[ss]]]</i> The variables have the following meanings.<ul style="list-style-type: none">■ <i>yyyy</i> = Year (1970 is the earliest valid value.)■ <i>mm</i> = Month (01 to 12)■ <i>dd</i> = Day (01 to 31)■ <i>hh</i> = Hour (00 to 23)■ <i>mm</i> = Minute (00 to 59)■ <i>ss</i> = Second (00 to 59)■ Offset <i>date-time</i>: <i>+n d h m s</i> The variables have the following meanings.<ul style="list-style-type: none">■ <i>n</i> = Number of units■ <i>d</i> = Number of days■ <i>h</i> = Number of hours■ <i>m</i> = Number of minutes■ <i>s</i> = Number of secondsThe offset time can be specified only by the -B option and needs to be specified with the -A option. The default values of <i>hh</i>, <i>mm</i>, and <i>ss</i> are 00.
-C	Adds the number of records matching the selection standard at the end of output.

-c <i>classes</i>	Selects the record of the specified class. <i>classes</i> is a comma-separated list of audit classes. Classes can be specified with a number or name. The prefix "ACS_" can be omitted. For example, the classes of audit-related events can be expressed as ACS_AUDIT, AUDIT or 2.
	The valid classes are below.
all	All classes
ACS_SYSTEM(1)	System-related event
ACS_write(2)	Command that can change the status
ACS_READ(4)	Command to display the current status
ACS_LOGIN(8)	Login-related event
ACS_AUDIT(16)	Audit-related event
ACS_PPAR(32)	PPAR administration-related event
ACS_USER(64)	User administration-related event
ACS_PLATFORM(128)	Platform administration-related event
ACS_MODES(256)	Mode-related event
-D <i>date-time</i>	Selects the records which occurred on a specific day (in 24 hours between 00:00:00 and 23:59:59 of the specified day). Specify the specified date in the format of <i>yyyymmddhhmmss</i> (year, month, day, hour, minute, second) based on the local time. All records with the time stamp of the specified day are selected. It becomes invalid even if the hour, minute, or second is specified. The -D option cannot be specified with the -A or -B option.
-E <i>end-record</i>	Specifies the last record matching the selection standard for display.
-e <i>events</i>	Selects the record of the specified event. <i>events</i> is a comma-separated list of audit events. Events can be specified with a number or name. The prefix "AEV_" can be omitted. For example, the events of SSH login can be expressed as AEV_LOGIN_SSH, LOGIN_SSH, or 4.
	For the list of valid events, see showaudit -e all.
-h	Displays the usage. Specifying this option with another option or operand causes an error.

	-i audit-ids	Selects the record of the specified audit session identifier. If you are interested in the activities reflected in a specific audit record, you can display all audit records of the session. <i>audit-id</i> is not fixed and assigned again when the service processor is reset. <i>audit-ids</i> is a comma-separated list of audit session identifiers. <i>audit-id</i> is the number after the label "subject" of the audit file.
		For example, <i>audit-id</i> is "1" in the following list.
		<code>subject,1,bob,normal,telnet 45880 jupiter</code>
	-l	Outputs one record per line.
	-m del	Not the default delimiter (comma) but <i>del</i> is used as the field separator character. If <i>del</i> has a special meaning in the shell, it is necessary to enclose it in quotation marks. The maximum number of the delimiters is three. Delimiters have no meaning. In addition, they cannot be specified with the -x option.
	-n	Specifies the UID and IP address not to convert them to the user name or host name.
	-p privilege-results	Selects the record according to the specified <i>privilege-results</i> . <i>privilege-results</i> is a comma-separated list. <i>privilege-results</i> is granted, denied, or error.
	-r return-values	Selects the record according to the specified return value. <i>returnvals</i> is a comma-separated list of the value success or failure. success corresponds to the return value 0. failure corresponds to nonzero return values.
	-s start-record	Specifies the first record matching the selection standard for displayed.
	-u users	Selects the records belonging to the specified user. <i>users</i> is a comma-separated list of users. The user can specify a user name or figure UID.
	-x	Outputs in the XML format.

EXAMPLES**EXAMPLE 1** Display the audit records of December 12, 2005.`XSCF> viewaudit -D 20121212``file,1,2012-01-11 10:52:30.391 -05:00,20120111155230.0000000000.jupiter`

EXAMPLE 2 Display the audit records of all users.

```
XSCF> viewaudit -u jsmith
```

```
file,1,2012-01-11 10:52:30.391 -05:00,20120111155230.0000000000.jupiter
header,37,1,login - telnet,jupiter,2012-01-11 11:31:09.659 -05:00
subject,1,jsmith,normal,ssh 45880 jupiter
command,showuser
platform access,granted
return,0
```

EXAMPLE 3 Display the audit records of user privileges.

```
XSCF> viewaudit -p granted
```

```
file,1,2012-01-11 10:52:30.391 -05:00,20120111155230.0000000000.jupiter
header,37,1,login - telnet,jupiter,2012-01-11 11:31:09.659 -05:00
subject,1,jsmith,normal,ssh 45880 jupiter
command,showuser
platform access,granted
return,0
```

EXAMPLE 4 Display the audit records of success of access.

```
XSCF> viewaudit -r success
```

```
file,1,2012-01-11 10:52:30.391 -05:00,20120111155230.0000000000.jupiter
header,37,1,login - telnet,jupiter,2012-01-11 11:31:09.659 -05:00
subject,1,jsmith,normal,ssh 45880 jupiter
command,showuser
platform access,granted
return,0header,57,1,command - viewaudit,jupiter.company.com,2006-01-26
16:13:09.128 -05:00
subject,5,sue,normal,ssh 1282 saturn
command,viewaudit
platform access,granted
return,0
...
```

EXAMPLE 5 Display the audit records of two days.

```
XSCF> viewaudit -A 20120108 -B +2d
```

```
file,1,2012-01-09 20:12:12.968 -08:00,20120110041212.0000000004.sca-m5k-0-0
file,1,2012-01-10 21:14:49.481 -08:00,terminated
file,1,2012-01-10 21:14:49.485 -08:00,20120111051449.0000000005.sca-m5k-0-0
```

EXAMPLE 6 Display the first five records among the records matching the range of date

viewaudit(8)

(4238 records).

```
XSCF> viewaudit -C -A 20120109 -B 20120110 -E 5
```

```
file,1,2012-01-09 20:12:12.968 -08:00,20120110041212.0000000004.sca-m5k-0-0
header,63,1,command - setaudit,sca-m5k-0-0.sfbay.sun.com,2012-01-09
20:12:12.974 -08:00,subject,250,opl,normal,ssh 42759 san-e4900-
0.West.Sun.COM,command,setaudit,delete,platform access,granted,return,0
header,37,1,login - ssh,sca-m5k-0-0.sfbay.sun.com,2012-01-09 20:12:14.455 -
08:00,subject, 252,scfroot,normal,ssh 42761 san-e4900-0.West.Sun.COM
header,37,1,logout,sca-m5k-0-0.sfbay.sun.com,2012-01-09 20:12:14.800 -
08:00,subject,250,o pl,normal,ssh 42759 san-e4900-0.West.Sun.COM
header,37,1,login - ssh,sca-m5k-0-0.sfbay.sun.com,2012-01-09 20:12:15.595 -
08:00,subject, 253,scfroot,normal,ssh 42762 san-e4900-0.West.Sun.COM
4238
```

EXIT STATUS The following exit values are returned.

0 Indicates normal end.

>0 Indicates error occurrence.

SEE ALSO **setaudit (8)**, **showaudit (8)**

Functional Index

Altitude

setaltitude 183
showaltitude 361

Automatic Power Control System (APCS)

addpowerschedule 33
deletepowerschedule 77
setpowerschedule 275
showpowerschedule 487

CPU Activation

addcodactivation 27
deletecodactivation 75
dumpcodactivation 89
restoreconfig 161
setcod 193
showcod 377
showcodactivation 379
showcodactivationhistory 383
showcodusage 385

Date/Time

resetdateoffset 159
setdate 195

setntp 247
showdate 391
showdateoffset 393
showntp 469

Directory Service

setad 175
setldap 219
setldapssl 223
setlookup 235
showad 357
showldap 435
showldapssl 437
showlookup 459

HTTPS

sethttps 213
showhttps 431

Hardware Configuration

prtfru 139
setpowercapping 269
showbbstatus 369
showenvironment 405

showhardconf 419
showpowercapping 485
showstatus 545

List of XSCF Commands

Intro 3

Logging

setaudit 185
showaudit 363
showlogs 445
showmonitorlog 461
snapshot 555
viewaudit 581

Maintenance

addfru 31
diagxbu 81
prtfru 139
replacefru 151
setlocator 231
showlocator 441
testsbt 565
unlockmaintenance 575

Manual Pages

man 15

Others

exit 13
showresult 519

PCI Expansion Unit

ioxadm 113
setpciboxdio 261
showpciboxdio 477

PPAR Configuration/Dynamic Reconfiguration

addboard 21
deleteboard 69
setdomainconfig 197
setpcl 265
setpparmode 281
setpparparam 291
setupfru 355
showboards 371
showdomainconfig 395
showdomainstatus 397
showfru 415
showpcl 481
showpparinfo 493
showpparmode 499
showpparparam 503
showpparprogress 505
showpparstatus 511

PPAR Console

console 65
sendbreak 173
showconsolepath 389

Power Interlocking (RCIL)

clearremotepwrmgmt 57
getremotepwrmgmt 105
setremotepwrmgmt 299
showremotepwrmgmt 513

RAS

rastest 143

Resetting XSCF

rebootxscf 149

switchscf	563	XSCF Configuration
SNMP		dumpconfig 91 initbb 109 restoreconfig 163 restoreddefaults 167 setdualpowerfeed 201 showdualpowerfeed 401
setsnmp	317	
setsnmpusm	323	
setsnmpvacm	327	
showsntp	529	
showsntpusm	531	
showsntpvacm	533	
Servicetag		XSCF Mail
setservicetag	311	setemailreport 205 setsmtplib 313 showemailreport 403 showsmtplib 527
showservicetag	525	
Starting/Stopping a PPAR		XSCF Network
poweroff	131	applynetwork 41 nslookup 123 ping 129 sethostname 209 setnameserver 237 setnetwork 241 setpacketfilters 253 setroute 305 setsscp 331 showhostname 429 shownameserver 463 shownetwork 465 showpacketfilters 473 showroute 521 showsscp 535 traceroute 571
poweron	135	
reset	155	
setpowerupdelay	279	
showpowerupdelay	491	
Telnet/SSH		
setssh	341	
settelnet	347	
showssh	541	
showtelnet	547	
Timezone		
settimezone	349	
showtimezone	549	
Updating a Firmware		XSCF User Accounts
flashupdate	97	adduser 39 deleteuser 79
getflashimage	101	
version	577	

disableuser 87
enableuser 95
password 125
setautologout 191
setloginlockout 233
setpasswordpolicy 257
setprivileges 295
showautologout 367
showloginlockout 443
showpasswordpolicy 475
showuser 553
who 17