


PRIMERGY ECONEL 100 S2

Precaution on using the hard disk rails

Thank you for purchasing our product. Before you start using your server, please read carefully the additional notes described below.

May 2008
FUJITSU LIMITED

When you install the internal hard disk to the server, a pair of hard disk rail is required to fix.
(For the details, please refer to “6.5 Installing Internal Hard Disk Units”, PRIMERGY ECONEL 100 S2 User’s Guide.)

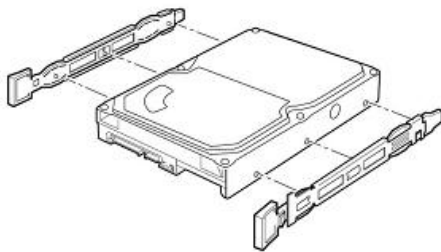

Hard disk rail

[Important]

- For one(1) hard disk, two(2) hard disk rails is required.
- Unused hard disk rails (0 – 8 pcs) are enclosed as attachments.
Keep them in a safe place. If you lose them, it is impossible to install the additional internal hard disks.