

3. Windows Drivers & Downloads

Download files include installation/update procedure.

2010/Apr./15

- [Onboard LAN/LAN card](#)
[VGA Chipset](#)
- [FC Card](#)
[ServerView](#)
- [Array Controller Document & Tool CD](#)
[DSNAP](#)

3-1. Option Related

(1) Onboard LAN/LAN Card

Tower Server

Model	Driver	Remarks
ECONEL 100 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003/2008
TX150 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
TX150 S4	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
TX150 S4	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
TX150 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003
TX150 S5	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
TX150 S5	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
TX150 S5	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
TX150 S6	Onboard/PG-18xx/28xx LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
TX150 S6	Onboard/PG-18xx/28xx LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V14.3	For Windows 2008 R2
TX150 S6	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
TX150 S6	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
TX200 S2	Onboard LAN Driver V9.81 & Broadcom Advanced Control Suite V9.7.4 for Windows 2000 & Windows 2003	For Windows 2003
TX200 S3	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003/2008
TX300 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
TX300 S4(SAS, SATA)	Onboard LAN Driver V4.8.5 & Broadcom Advanced Control Suite V11.7.5 for Windows 2003/2008	For Windows 2003/2008

Compact Server

Model	Driver	Remarks
TX120	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
TX120	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
TX120	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008

Rack Server

Model	Driver	Remarks
RX100 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
RX100 S3	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
RX100 S4	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
RX100 S4	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
RX100 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
RX100 S5	Onboard/PG-18xx/28xx LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V14.3	For Windows 2008 R2
RX100 S5	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
RX100 S5	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
RX100 S5	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
RX200 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
RX200 S3	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
RX200 S3	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
RX200 S3	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
RX200 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
RX200 S4(SAS, SATA)	Onboard LAN Driver V4.8.5 & Broadcom Advanced Control Suite V11.7.5 for Windows 2003/2008	For Windows 2003/2008
RX300 S2	Onboard LAN Driver V9.81 & Broadcom Advanced Control Suite V9.7.4 for Windows 2000 & Windows 2003	For Windows 2003
RX300 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
RX300 S3	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
RX300 S3	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
RX300 S3	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
RX300 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
RX300 S4	Onboard LAN Driver V4.8.5 & Broadcom Advanced Control Suite V11.7.5 for Windows 2003/2008	For Windows 2003/2008
RX600 S2	Onboard LAN Driver V9.81 & Broadcom Advanced Control Suite V9.7.4 for Windows 2000 & Windows 2003	For Windows 2003
RX600 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
RX600 S3	Onboard LAN Driver V11.7.2 & Broadcom Advanced Control Suite V11.7.5 for Windows2003	For Windows 2003
RX600 S3	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008
RX600 S3	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003/2008
RX600 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003/2008
RX600 S4	Onboard/PG-18xx/28xx LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V14.3	For Windows 2008 R2

Blade Server

Model	Driver	Remarks
BX620 S2	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.1	For Windows 2003
BX620 S3	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
BX620 S4	Onboard/PG-18xx/28xx/PG-LND10X LAN Driver & Intel® PROSet for Windows2003 & Windows2008 V13.4	For Windows 2003/2008
BX620 S4	Onboard LAN Driver V10.82.0.0 & Broadcom Advanced Control Suite V11.2.4.0 for Windows 2008	For Windows 2008
BX620 S4	Onboard LAN Driver V4.1.3 & Broadcom Advanced Control Suite V11.2.4.0 for Windows 2008	For Windows 2008
BX620 S4	Onboard LAN Driver V11.7.3 & Broadcom Advanced Control Suite V11.7.5 for Windows2008	For Windows 2008

[Top of page](#)

(2) VGA/Chipset Tower Server

Model	Driver	Remarks
ECONEL 100 S2	PRIMERGY Econel100 S2 Onboard VGA Driver for Windows Server 2008	For Windows 2008
ECONEL 100 S2	PRIMERGY ECONEL100 S2 Chipset Driver for Windows Server 2008	For Windows 2008
TX150 S6	Onboard VGA Driver for Windows Server 2008	For Windows 2008
TX150 S6	Onboard VGA Driver V5.97.6.6 L10	For Windows 2003/2008
TX150 S6	PRIMERGY TX150 S6 Chipset Driver for Windows Server 2008	For Windows 2008
TX150 S5	PRIMERGY TX150 S5 Onboard VGA Driver for Windows Server 2008	For Windows 2008
TX200 S3	PRIMERGY RX200 S3Onboard VGA Driver for Windows Server 2008 V5.96.6.5	For Windows 2000/2003
TX200 S3	PRIMERGY TX200 S3 Onboard VGA Driver for Windows server 2008 V5.96.6.6	For Windows 2008
TX200 S3	PRIMERGY TX200 S3 Onboard VGA Driver for Windows V5.97.6.6 L10	For Windows
TX300 S4	PRIMERGY TX300 S4 Onboard VGA Driver for Windows Server 2008	For Windows 2008
TX300 S4	PRIMERGY TX300 S4 Onboard VGA Driver for Windows Server 2008V5.96.6.6	For Windows 2008
TX300 S4	PRIMERGY TX300 S4 Onboard VGA Driver for Windows V5.97.6.6 L10	For Windows

Compact Server

Model	Driver	Remarks
TX120	PRIMERGY TX120 Onboard VGA Driver for Windows Server 2008	For Windows 2008
TX120 S2	Onboard VGA Driver V5.97.6.6 L10	For Windows

Rack Server

Model	Driver	Remarks
RX100 S5	PRIMERGY RX100 S5 Chipset Driver for Windows Server 2008	For Windows 2008
RX100 S5	PRIMERGY RX100 S5 Onboard VGA Driver for Windows Server 2008	For Windows 2008
TX100 S5	Onboard VGA Driver V5.97.6.6 L10	For Windows 2003/2008
RX100 S4	PRIMERGY RX100 S4 Onboard VGA Driver for Windows Server 2008	For Windows 2008
RX200 S3	PRIMERGY RX200 S3Onboard VGA Driver for Windows Server 2008 V5.96.6.5	For Windows 2000/2003
RX200 S3	PRIMERGY RX200 S3Onboard VGA Driver for Windows Server 2008 V5.96.6.6	For Windows 2008
RX200 S4	PRIMERGY RX200 S4 Onboard VGA Driver for Windows Server 2008	For Windows 2008
RX200 S4	PRIMERGY RX200 S4 Onboard VGA Driver for Windows Server 2008 V5.96.6.6	For Windows 2008
RX200 S4	PRIMERGY RX200 S3 Onboard VGA Driver for Windows V5.97.6.6 L10	For Windows 2008
RX300 S3	PRIMERGY RX300 S3 Onboard VGA Driver for Windows V5.97.6.6 L10	For Windows 2008
RX300 S3	PRIMERGY RX200 S3Onboard VGA Driver for Windows Server 2008 V5.96.6.5	For Windows 2000/2003
RX300 S3	PRIMERGY RX300 S3 Onboard VGA Driver for Windows Server 2008 V5.96.6.6	For Windows 2008
RX300 S4	PRIMERGY RX300 S4 Onboard VGA Driver for Windows V5.97.6.6 L10	For Windows 2008
RX300 S4	PRIMERGY RX300 S4 Onboard VGA Driver for Windows Server 2008 V5.96.6.6	For Windows 2008
RX300 S4	PRIMERGY RX300 S4 Onboard VGA Driver for Windows Server 2008 V5.96.6.6	For Windows 2008
RX600 S4	PRIMERGY RX600 S4 Onboard VGA Driver for Windows Server 2008 V5.96.6.6	For Windows 2008
RX600 S4	PRIMERGY RX600 S4 Onboard VGA Driver for Windows V5.97.6.6 L10	For Windows

Blade Server

Model	Driver	Remarks
BX620 S4	PRIMERGY BX620 S4 Display Driver for Windows Server 2008	For Windows 2008

[Top of page](#)

(3) FC Card

Part No.	Driver	Remarks
PG-FC106	PG-FC10x/PG-FC20x Storport Miniport Driver V1.10a4 for Windows 2003	For Windows 2003
PG-FC107	PG-FC10x/PG-FC20x Storport Miniport Driver V1.10a4 for Windows 2003	For Windows 2003
PG-FC201	PG-FC10x/PG-FC20x Storport Miniport Driver V1.10a4 for Windows 2003	For Windows 2003
PG-FC202/202L	PG-FC202 Storport Miniport Driver V1.20a3 for Windows 2003	For Windows 2003
	PG-FC202 Storport Miniport Driver V2.01a4 for Windows 2008	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport Driver Core Kit V2.20.006	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport DriverV2.20.006	
PG-FC203/203L	PG-FC203 Storport Miniport Driver V2.01a4 for Windows	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport Driver Core Kit V2.20.006	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport DriverV2.20.006	
	Fibre Channel card (PG-FXXXX)Storport Miniport Driver Core Kit V2.20.006	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport DriverV2.20.006	
PG-FCD101/102	PG-FCD101/201 Storport Miniport Driver V9.1.4.15 for Windows 2008	For Windows 2008
PG-FCD201	PG-FCD201 Storport Miniport Driver V1.30a6 for Windows 2003	For Windows 2003
	PG-FCD201 Storport Miniport Driver V1.30a9 for Windows 2003	For Windows 2003
	PG-FCD201 Storport Miniport Driver V2.01a4 for Windows 2008	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport Driver Core Kit V2.20.006	For Windows 2008
	Fibre Channel card (PG-FXXXX)Storport Miniport DriverV2.20.006	

3-2. ServerView

Model	Agent		Console		Rcs		Remarks
	Old	Latest	Old	Latest	Old	Latest	
ECONE1 100 S2	V4.61.05.02	V4.61.06					For Windows 2003
		V4.61.06.02**					For Windows 2008
							For Windows 2008 x64
TX120	V4.30.14	V4.61.05.02	V4.20.25	V4.52.09.02	V4.05.03		For Windows 2003
		V4.61.06.02**					For Windows 2008
							For Windows 2008 x64
TX150 S2		V4.20 L40A *					For Windows 2003
TX150 S4		V4.20 L40A *	V4.20.25	V4.52.09.02	V4.05.03		For Windows 2003
TX150 S5		V4.30.09					For Windows 2003
		V4.61.05.02					For Windows 2008
TX150 S6		V4.61.06					For Windows 2003 / 2008
		V4.61.06.02**					For Windows 2008 x64
TX200 S2		V4.20 L40A *	V4.20.25	V4.52.09.02			For Windows 2003
TX200 S3		V4.20 L45A *			V4.05.03		For Windows 2003
TX300 S4	V4.53.01	V4.61.06					For Windows 2003
	V4.61.05.02						For Windows 2008
		V4.61.06.02					For Windows 2008 x64
RX100 S2		V4.11 L55A *					For Windows 2003
RX100 S3		V4.20 L40A *	V4.20.25	V4.52.09.02	V4.05.03		For Windows 2003
RX100 S4		V4.30.13					For Windows 2003
		V4.61.05.02					For Windows 2008
RX100 S5		V4.61.06					For Windows 2003 / 2008
		V4.61.06.02**			V4.06.01		For Windows 2008 x64
RX200 S2		V4.20 L40A *	V4.20.25	V4.52.09.02	V4.05.03		For Windows 2003
RX200 S3		V4.20 L45A *					For Windows 2003
		V4.61.05.02					For Windows 2008
RX200 S4	V4.53.01	V4.61.06		V4.52.09.02	V4.05.03		For Windows 2003
	V4.61.05.02						For Windows 2008
		V4.61.06.02**					For Windows 2008 x64
RX300 S2		V4.30.09	V4.20.25	V4.52.09.02	V4.05.03		For Windows 2003
RX300 S3		V4.20 L45A *					For Windows 2003
		V4.61.05.02					For Windows 2008
RX300 S4	V4.53.01	V4.61.06		V4.52.09.02	V4.05.03		For Windows 2003
	V4.61.05.02						For Windows 2008
		V4.61.06.02**					For Windows 2008 x64
RX600 S2		V4.20 L40A *	V4.20.25		V4.05.03		For Windows 2003
RX600 S3		V4.20 L11A *	V4.20.25	V4.52.09.02			For Windows 2003
RX600 S4		V4.61.06					For Windows 2003
		V4.61.06.02**					For Windows 2008
							For Windows 2008 x64
BX620 S2		V4.20 L40A *	V4.20.25	V4.52.09.02	V4.05.03		For Windows 2003
BX620 S3		V4.20 L50A *					For Windows 2003
		V4.61.05.02					For Windows 2008
BX620 S4		V4.61.06					For Windows 2003 / 2008
		V4.61.06.02**					For Windows 2008 x64

*, This file also includes old "Console" and old "RCS".

Please do NOT use them.

**, This agent is for Windows 2008 x64. For Windows 2008 x32, use V4.61.06 agent.

3-3. DSNAP

Model	Driver	Remarks
All Model	DSNAP V3.0L20	For Windows 2008

[Top of page](#)