

**FUJITSU Software**

**ServerView Infrastructure Manager V2.1**

**Details of Node Settings**

FUJITSU LIMITED

July 2017

To manage nodes with the use of ServerView Infrastructure Manager V2.1 (hereinafter referred to as "ISM2.1"), it is required to set up the connection information on the node side. This document provides the required connection information for set up.

For the details and abbreviations used within this document, refer to the manuals below.

- FUJITSU Software ServerView Infrastructure Manager V2.1 User's Manual
- FUJITSU Software ServerView Infrastructure Manager V2.1 Glossary

### 1. Connection Information

To establish a connection with the nodes, and before performing node registration, the following settings are required on the node side. For more information, refer to the manuals of the respective devices.

✓: Mandatory    -: Not required

| Node                                      | Connection Information      |                         |                                   |
|---|-----------------------------|-------------------------|-----------------------------------|
|   | IPMI<br>account(*)/password | SSH<br>account/password | SNMP (V1 or V2)<br>community name |
| PRIMERGY(RX/CX)                           | ✓                           | -                       | -                                 |
| PRIMEQUEST 2000Type3                      | ✓                           | ✓                       | ✓                                 |
| ETERNUS DX/AF                             | -                           | ✓                       | ✓                                 |
| ETERNUS NR                                | -                           | ✓                       | ✓                                 |
| SR-X                                      | -                           | ✓                       | ✓                                 |
| Brocade VDX                               | -                           | ✓                       | ✓                                 |
| Brocade FC Switch                         | -                           | ✓                       | ✓                                 |
| Cisco Catalyst                            | -                           | ✓                       | ✓                                 |
| Cisco Nexus                               | -                           | -                       | -                                 |
| AsetekRackCDU                             | -                           | -                       | ✓                                 |
| SchneiderElectric<br>Metered RackMountPDU | -                           | -                       | ✓                                 |
| SchneiderElectric<br>Smart-UPS            | -                           | -                       | ✓                                 |

For the models which are confirmed for operation, please contact your local Fujitsu customer service partner.

(\*) Please use the account with administrator access rights or OEM.

## 2. Required Settings for Management

Confirm the following settings in addition to the connection information settings.

[SR-X]

- Enable LLDP settings

[Brocade VDX]

- Enable LLDP settings

[ETERNUS DX/AF]

- As the port connecting to ISM, use the maintenance port of Control Module.  
(If connecting to a remote port, the firmware update function and the log collection function may not work.)

[PRIMEQUEST 2000 Type3]

- For the MMB account settings (account settings for IPMI connection) for ISM, use the account that registered in the Web UI [Network Configuration] → [Remote Server Management] of PRIMEQUEST.
- For the SSH account settings for ISM, use the count that registered in the WEB UI [User Administration] → [User List]of PRIMEQUEST. The access privileges must be administrator or CE.

## 3. Required Settings for Notification

Make the settings for SNMP traps in addition to the settings for connection information and for required information for management.

For details, refer to the manuals of the respective devices.