

How do I change the print density?



Answer: You can change the print density by the following 2 ways.

Utility

Printer Setup

*: Default Value

Grayscale	Hardware	Buzzer	Interface
Memory Switch 1	Memory Switch 2	Print	
DPI	203DPI *		
Paper Width	80mm/48columns *		
Max Speed	400mm/s *		
Print Density	100% *		
Retry at Error	Disable *		
VT Compression	100% *		
Language Selection	English(L)		

1. 70%
2. 80%
3. 90%
4. 100%
5. 110%
6. 120%
7. 130%

Special Mode

1. Press and hold feed button

2. Power ON

- 1) Start the "Special Mode"
- 2) Setup Menu
- 3) Setting
- 4) Print
- 5) Print Density
- 6) Choose percentage for print density
- 7) Save the setting

Setting

1. Memory Switch 1
2. Memory Switch 2
3. Print
4. Grayscale
5. Hardware
6. Buzzer
7. Interface

<Set>
Press FEED button for the number of times as the same as your selecting item, and wait more than 1 second.

Print

1. DPI 203DPI
2. Paper Width 80mm/48columns
3. Max Speed 400mm/s
4. Print Density 100%
5. Retry at Error Disable
6. VT Compression 100%
7. Language Selection English(Latin)

<Set>
Press FEED button for the number of times as the same as your selecting item, and wait more than 1 second.

Print Density 100%

1. 70%
2. 80%
3. 90%
4. 100%
5. 110%
6. 120%
7. 130%

<Set>
Press FEED button for the number of times as the same as your selecting item, and wait more than 1 second.