

How do I set the paper layout easily?

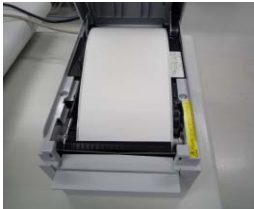


Answer: Please try the following method, Automatic layout detection.

FP-32L has the function to obtain paper layout information automatically.

This function can detect and register;

- **kinds of paper (Die-cut label, Black mark, receipt, label)**
- **Paper layout (length)**
- **Adjustment sensors (Die-cut label)**

Steps

1.  Setting paper
2.  Press and hold the feed button and lamp is blinking. (Cover is opened.)
3.  FP-32L starts detecting the paper layout after cover is closed

Note1: It cannot be detected paper width.

Note2: The range of available printing in default is 70mm (width).

If you use the paper which is more than 70mm (width), please setup by the property of Windows driver.