

SPARC Enterprise

T5140 and T5240 Servers

Service Manual



C120-E497-04EN



SPARC Enterprise™ T5140 and T5240 Servers Service Manual

Copyright © 2009 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

FUJITSU LIMITED provided technical input and review on portions of this material.

Sun Microsystems, Inc. and Fujitsu Limited each own or control intellectual property rights relating to products and technology described in this document, and such products, technology and this document are protected by copyright laws, patents and other intellectual property laws and international treaties. The intellectual property rights of Sun Microsystems, Inc. and Fujitsu Limited in such products, technology and this document include, without limitation, one or more of the United States patents listed at <http://www.sun.com/patents> and one or more additional patents or patent applications in the United States or other countries.

This document and the product and technology to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of such product or technology, or of this document, may be reproduced in any form by any means without prior written authorization of Fujitsu Limited and Sun Microsystems, Inc., and their applicable licensors, if any. The furnishing of this document to you does not give you any rights or licenses, express or implied, with respect to the product or technology to which it pertains, and this document does not contain or represent any commitment of any kind on the part of Fujitsu Limited or Sun Microsystems, Inc., or any affiliate of either of them.

This document and the product and technology described in this document may incorporate third-party intellectual property copyrighted by and/or licensed from suppliers to Fujitsu Limited and/or Sun Microsystems, Inc., including software and font technology.

Per the terms of the GPL or LGPL, a copy of the source code governed by the GPL or LGPL, as applicable, is available upon request by the End User. Please contact Fujitsu Limited or Sun Microsystems, Inc.

This distribution may include materials developed by third parties.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun™, Sun Microsystems™, the Sun logo®, Java™, Netra™, Solaris™, Sun StorageTek™, docs.sun.comSM, OpenBoot™, SunVTS™, Sun Fire™, SunSolveSM, CoolThreads™, and J2EE™, are trademarks or registered trademarks of Sun Microsystems, Inc. or its subsidiaries in the U.S. and other countries.

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu Limited.

All SPARC trademarks are used under license and are registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon architecture developed by Sun Microsystems, Inc.

SPARC64 is a trademark of SPARC International, Inc., used under license by Fujitsu Microelectronics, Inc. and Fujitsu Limited.

SSH is a registered trademark of SSH Communications Security in the United States and in certain other jurisdictions.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

United States Government Rights - Commercial use. U.S. Government users are subject to the standard government user license agreements of Sun Microsystems, Inc. and Fujitsu Limited and the applicable provisions of the FAR and its supplements.

Disclaimer: The only warranties granted by Fujitsu Limited, Sun Microsystems, Inc. or any affiliate of either of them in connection with this document or any product or technology described herein are those expressly set forth in the license agreement pursuant to which the product or technology is provided.

EXCEPT AS EXPRESSLY SET FORTH IN SUCH AGREEMENT, FUJITSU LIMITED, SUN MICROSYSTEMS, INC. AND THEIR AFFILIATES MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND (EXPRESS OR IMPLIED) REGARDING SUCH PRODUCT OR TECHNOLOGY OR THIS DOCUMENT, WHICH ARE ALL PROVIDED AS IS, AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Unless otherwise expressly set forth in such agreement, to the extent allowed by applicable law, in no event shall Fujitsu Limited, Sun Microsystems, Inc. or any of their affiliates have any liability to any third party under any legal theory for any loss of revenues or profits, loss of use or data, or business interruptions, or for any indirect, special, incidental or consequential damages, even if advised of the possibility of such damages.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.



Adobe PostScript

Copyright © 2009 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Entrée et revue technique fournies par FUJITSU LIMITED sur des parties de ce matériel.

Sun Microsystems, Inc. et Fujitsu Limited détiennent et contrôlent toutes deux des droits de propriété intellectuelle relatifs aux produits et technologies décrits dans ce document. De même, ces produits, technologies et ce document sont protégés par des lois sur le copyright, des brevets, d'autres lois sur la propriété intellectuelle et des traités internationaux. Les droits de propriété intellectuelle de Sun Microsystems, Inc. et Fujitsu Limited concernant ces produits, ces technologies et ce document comprennent, sans que cette liste soit exhaustive, un ou plusieurs des brevets déposés aux États-Unis et indiqués à l'adresse <http://www.sun.com/patents> de même qu'un ou plusieurs brevets ou applications brevetées supplémentaires aux États-Unis et dans d'autres pays.

Ce document, le produit et les technologies afférents sont exclusivement distribués avec des licences qui en restreignent l'utilisation, la copie, la distribution et la décompilation. Aucune partie de ce produit, de ces technologies ou de ce document ne peut être reproduite sous quelque forme que ce soit, par quelque moyen que ce soit, sans l'autorisation écrite préalable de Fujitsu Limited et de Sun Microsystems, Inc., et de leurs éventuels bailleurs de licence. Ce document, bien qu'il vous ait été fourni, ne vous confère aucun droit et aucune licence, expresses ou tacites, concernant le produit ou la technologie auxquels il se rapporte. Par ailleurs, il ne contient ni ne représente aucun engagement, de quelque type que ce soit, de la part de Fujitsu Limited ou de Sun Microsystems, Inc., ou des sociétés affiliées.

Ce document, et le produit et les technologies qu'il décrit, peuvent inclure des droits de propriété intellectuelle de parties tierces protégés par copyright et/ou cédés sous licence par des fournisseurs à Fujitsu Limited et/ou Sun Microsystems, Inc., y compris des logiciels et des technologies relatives aux polices de caractères.

Par limites du GPL ou du LGPL, une copie du code source régi par le GPL ou LGPL, comme applicable, est sur demande vers la fin utilisateur disponible; veuillez contacter Fujitsu Limited ou Sun Microsystems, Inc.

Cette distribution peut comprendre des composants développés par des tierces parties.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux États-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun™, Sun Microsystems™, le logo Sun®, Java™, Netra™, Solaris™, Sun StorageTek™, docs.sun.comSM, OpenBoot™, Sun VTS™, Sun Fire™, SunSolve™, CoolThreads™, et J2EE™ sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc., ou ses filiales aux États-Unis et dans d'autres pays.

Fujitsu et le logo Fujitsu sont des marques déposées de Fujitsu Limited.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux États-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

SPARC64 est une marque déposée de SPARC International, Inc., utilisée sous le permis par Fujitsu Microelectronics, Inc. et Fujitsu Limited.

SSH est une marque déposée registre de SSH Communications Security aux États-Unis et dans certaines autres juridictions.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui, en outre, se conforment aux licences écrites de Sun.

Droits du gouvernement américain - logiciel commercial. Les utilisateurs du gouvernement américain sont soumis aux contrats de licence standard de Sun Microsystems, Inc. et de Fujitsu Limited ainsi qu'aux clauses applicables stipulées dans le FAR et ses suppléments.

Avis de non-responsabilité: les seules garanties octroyées par Fujitsu Limited, Sun Microsystems, Inc. ou toute société affiliée de l'une ou l'autre entité en rapport avec ce document ou tout produit ou toute technologie décrit(e) dans les présentes correspondent aux garanties expressément stipulées dans le contrat de licence régissant le produit ou la technologie fourni(e).

SAUF MENTION CONTRAIRE EXPRESSÉMENT STIPULÉE DANS CE CONTRAT, FUJITSU LIMITED, SUN MICROSYSTEMS, INC. ET LES SOCIÉTÉS AFFILIÉES REJETENT TOUTE REPRÉSENTATION OU TOUTE GARANTIE, QUELLE QU'EN SOIT LA NATURE (EXPRESSE OU IMPLICITE) CONCERNANT CE PRODUIT, CETTE TECHNOLOGIE OU CE DOCUMENT, LESQUELS SONT FOURNIS EN L'ÉTAT. EN OUTRE, TOUTES LES CONDITIONS, REPRÉSENTATIONS ET GARANTIES EXPRESSES OU TACITES, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON, SONT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE.

Sauf mention contraire expressément stipulée dans ce contrat, dans la mesure autorisée par la loi applicable, en aucun cas Fujitsu Limited, Sun Microsystems, Inc. ou l'une de leurs filiales ne sauraient être tenues responsables envers une quelconque partie tierce, sous quelque théorie juridique que ce soit, de tout manque à gagner ou de perte de profit, de problèmes d'utilisation ou de perte de données, ou d'interruptions d'activités, ou de tout dommage indirect, spécial, secondaire ou consécutif, même si ces entités ont été préalablement informées d'une telle éventualité.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON.

Contents

Preface xiii

Identifying Server Components 1

- Infrastructure Boards in SPARC Enterprise T5140 Servers 2
- Infrastructure Boards in SPARC Enterprise T5240 Servers 3
- Internal System Cables for SPARC Enterprise T5140 Servers 4
- Internal System Cables for SPARC Enterprise T5240 Servers 5
- Front Panel Controls and Indicators on SPARC Enterprise T5140 Servers 5
- Rear Panel Components and Indicators on SPARC Enterprise T5140 Servers 8
- Front Panel Controls and Indicators on SPARC Enterprise T5240 Servers 9
- Rear Panel Components and Indicators on SPARC Enterprise T5240 Servers 12
- Status LEDs for Ethernet Ports and the Network Management Port 14

Detecting and Managing Faults 15

- Diagnostic Tools Overview 15
 - Service Processor Interfaces 16
- Diagnostics Tools Quick Reference 17
- LED Overview 21
- Detecting Faults With ILOM 22
 - ILOM Troubleshooting Overview 23
 - Methods for Connecting to the Service Processor 24

How to Switch From the System Console to the Service Processor	25
How to Switch From the Service Processor to the System Console	25
Service-Related ILOM Command Summary	26
Faults Displayed by <code>show faulty</code>	29
Example of <code>show faulty</code> Output When No Fault is Present	30
Example of <code>show faulty</code> Output for Environmental Faults	30
Example of <code>show faulty</code> Output for Faults Detected by POST	30
Example of <code>show faulty</code> Output for Faults Detected by PSH Technology	30
▼ Clear FRU Faults Manually	31
▼ Display FRU Information With the <code>show</code> Command	32
▼ Create an ALOM CMT Shell	32
Detecting Faults With POST	34
POST Overview	35
Managing POST Operations	35
ILOM Properties that Affect POST Behavior	35
Examples of POST Management	37
<code>keyswitch_state</code> Set to <code>normal</code>	38
<code>keyswitch_state</code> Set to <code>diag</code>	38
<code>diag_mode</code> Set to <code>off</code>	38
<code>diag_mode</code> Set to <code>service</code>	38
▼ Run POST in Maximum Mode	39
▼ Clear POST-Detected Faults	41
POST Output Quick Reference	42
Managing Faults Using the PSH Feature	43
Solaris PSH Feature Overview	44
PSH-Detected Fault Console Message	45
▼ Identify PSH-Detected Faults With <code>fmdump</code>	45
▼ Clear PSH-Detected Faults	47

Viewing Solaris OS Messages	48
▼ Check the Message Buffer	49
▼ View the System Message Log Files	49
Managing Components With Automatic System Recovery Commands	50
ASR Overview	50
▼ Display System Components	51
▼ Disable System Components	52
▼ Enable System Components	53
Detecting Faults Using SunVTS Software	53
▼ Run the SunVTS Software	54
Preparing to Service the System	57
General Safety Information	57
Safety Symbols	57
Electrostatic Discharge Safety Measures	58
Antistatic Wrist Strap Use	58
Antistatic Mat	59
Essential Tools	59
▼ Find the Chassis Serial Number	59
Removing Power From the System	60
▼ Power Off the Server (Service Processor Command)	60
▼ Power Off the Server (Power Button - Graceful)	62
▼ Power Off the Server (Emergency Shutdown)	62
▼ Disconnect Power Cords From the Server	62
Positioning the System for Servicing	62
▼ Extend the Server to the Maintenance Position	63
▼ Remove the Server From the Rack	64
Accessing Internal Components	67
▼ Perform Electrostatic Discharge Prevention Measures	67

- ▼ Remove the Top Cover 67

Servicing Hard Drives 69

Hard Drive Servicing Overview 69

Hard Drive LEDs 70

- ▼ Remove a Hard Drive 71

- ▼ Install a Hard Drive 73

Four-Drive Capable Backplane Configuration Reference 77

Eight-Drive Capable Backplane Configuration Reference 78

Sixteen-Drive Capable Backplane Configuration Reference 79

Servicing Motherboard Components 81

Servicing FB-DIMMs 81

Memory Fault Handling Overview 82

- ▼ Identify Faulty FB-DIMMs Using the `show faulty` Command 83

- ▼ Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button 83

- ▼ Remove FB-DIMMs 84

- ▼ Install Replacement FB-DIMMs 86

- ▼ Verify Successful Replacement of Faulty FB-DIMMs 88

- ▼ Upgrade Memory Configuration With Additional FB-DIMMs 91

FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers 94

FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers 98

Servicing the Air Duct 103

- ▼ Remove the Air Duct 103

- ▼ Install the Air Duct 104

Servicing PCIe/XAUI Risers 104

PCIe/XAUI Riser Overview 105

▼ Remove a PCIe/XAUI Riser	105
▼ Install a PCIe/XAUI Riser	107
▼ Remove a PCIe or XAUI Card	109
▼ Install a PCIe or XAUI Card	109
PCIe and XAUI Card Reference for SPARC Enterprise T5140 Servers	112
PCIe and XAUI Card Reference for SPARC Enterprise T5240 Servers	113
Servicing the Battery	114
System Battery Overview	114
▼ Remove a Battery	115
▼ Install a Battery	116
Servicing the SCC Module	116
SCC Module Overview	116
▼ Remove the SCC Module	117
▼ Install the SCC Module	117
Servicing the Memory Mezzanine Assembly (SPARC Enterprise T5240)	118
Memory Mezzanine Assembly Overview	118
▼ Remove a Memory Mezzanine Assembly	118
▼ Install a Memory Mezzanine Assembly	120
Servicing the Motherboard Assembly	122
Motherboard Servicing Overview	122
▼ Remove the Motherboard Assembly	123
▼ Install the Motherboard Assembly	125
Servicing Fan Modules	129
Fan Module Overview	129
Fan Module Configurations for SPARC Enterprise T5140 Servers (4- and 8-Disk Capable)	130
Fan Module Configurations for SPARC Enterprise T5240 Servers (8- and 16-Disk Capable)	130
Fan Module Status LEDs	131

- ▼ Remove a Fan Module 131
- ▼ Install a Fan Module 133

Servicing Power Supplies 135

- Power Supplies Overview 135
 - Power Supply Status LEDs 135
- ▼ Remove a Power Supply 137
- ▼ Install a Power Supply 140
- Power Supply Configuration Reference 142

Servicing Boards and Components 143

- Important Safety Instructions 143
- Servicing DVD/USB Modules 144
 - DVD/USB Module Overview 145
 - ▼ Remove the DVD/USB Module 145
 - ▼ Install the DVD/USB Module 147
- Servicing Fan Power Boards 148
 - Fan Power Board Overview 148
 - ▼ Remove the Fan Power Board 149
 - ▼ Install the Fan Power Board 150
- Servicing the Hard Drive Cage 151
 - Hard Drive Cage Overview 151
 - ▼ Remove the Hard Drive Cage 152
 - ▼ Install the Hard Drive Cage 154
- Servicing the Hard Drive Backplane 156
 - Hard Drive Backplane Overview 157
 - ▼ Remove the Hard Drive Backplane 157
 - ▼ Install the Hard Drive Backplane 159
- Servicing Front Control Panel Light Pipe Assemblies 160

Front Control Panel Light Pipe Assemblies Overview	161
▼ Remove the Front Control Panel Light Pipe Assemblies	161
▼ Install the Front Control Panel Light Pipe Assemblies	162
Servicing Power Distribution Boards	163
Power Distribution Board Overview	164
▼ Remove the Power Distribution Board	164
▼ Install the Power Distribution Board	167
Servicing Power Supply Backplanes (SPARC Enterprise T5240 Servers)	170
Power Supply Backplane Overview	171
▼ Remove the Power Supply Backplane	171
▼ Install the Power Supply Backplane	173
Servicing Paddle Cards	174
Paddle Card Overview	175
▼ Remove the Paddle Card	175
▼ Install the Paddle Card	176
Returning the Server to Operation	177
▼ Install the Top Cover	177
▼ Reinstall the Server in the Rack	178
▼ Return the Server to the Normal Rack Position	180
▼ Connect Power Cords to the Server	181
▼ Power On the Server Using the <code>poweron</code> Command	181
▼ Power On the Server Using the Front Panel Power Button	182
Identifying FRUs in SPARC Enterprise T5140 Servers	183
Motherboard Components in SPARC Enterprise T5140 Servers	184
I/O Components in SPARC Enterprise T5140 Servers	186
Power Distribution/Fan Module Components in SPARC Enterprise T5140 Servers	188

Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5140 Servers 190

HDD Data Cable Routing for SAS RAID Controller Cards in Four-Disk Capable SPARC Enterprise T5140 Servers 193

HDD Data Cable Routing for SAS RAID Controller Cards in Eight-Disk Capable SPARC Enterprise T5140 Servers 194

Identifying FRUs in SPARC Enterprise T5240 Servers 195

Motherboard Components in SPARC Enterprise T5240 Servers 196

Memory Mezzanine Components in SPARC Enterprise T5240 Servers 198

I/O Components in SPARC Enterprise T5240 Servers 200

Power Distribution/Fan Module Components in SPARC Enterprise T5240 Servers 202

Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5240 Servers 204

HDD Data Cable Routing for SAS RAID Controller Cards in SPARC Enterprise T5240 Servers 207

Index 209

Preface

This manual provides detailed procedures that describe the removal and replacement of replaceable parts in the SPARC Enterprise™ T5140 and T5240 Servers. This manual also includes information about the use and maintenance of the servers. This document is written for technicians, system administrators, authorized service providers (ASPs), and users who have advanced experience troubleshooting and replacing hardware.

For Safe Operation

This manual contains important information regarding the use and handling of this product. Read this manual thoroughly. Pay special attention to the section “[Notes on Safety](#)” on page xix. Use the product according to the instructions and information available in this manual. Keep this manual handy for further reference.

Keep this manual handy for further reference. Fujitsu makes every effort to prevent users and bystanders from being injured or from suffering damage to their property. Use the product according to this manual.

Before You Read This Document

To fully use the information in this document, you must have thorough knowledge of the topics discussed in the *SPARC Enterprise T5140 and T5240 Servers Product Notes*.

Structure and Contents of This Manual

This manual is organized as described below:

- **Identifying Server Components**

Identifies key components of the SPARC Enterprise T5140 and T5240 servers, including major boards and internal system cables, as well as front and rear panel features.

- **Detecting and Managing Faults**

Describes the diagnostics that are available for monitoring and troubleshooting the server.

- **Preparing to Service the System**

Describes the steps necessary to prepare the servers for service.

- **Servicing Hard Drives**

Explains how to remove and install hard drives.

- **Servicing Motherboard Components**

Explains how to replace the motherboard and its components.

- **Servicing Fan Modules**

Explains how to service faulty fan modules.

- **Servicing Power Supplies**

Explains how to remove and replace power supply modules.

- **Servicing Boards and Components**

Explains how to service infrastructure boards and components.

- **Returning the Server to Operation**

Describes how to bring the server back to operation after performing service procedures.

- **Identifying FRUs in SPARC Enterprise T5140 Servers**

Identifies and illustrates Field Replaceable Units (FRUs) contained in SPARC Enterprise T5140 servers.

- **Identifying FRUs in SPARC Enterprise T5240 Servers**

Identifies and illustrates Field Replaceable Units (FRUs) contained in SPARC Enterprise T5240 servers.

Related Documentation

The latest versions of all the SPARC Enterprise Series manuals are available at the following Web sites:

Global Site

(<http://www.fujitsu.com/sparcenterprise/manual/>)

Japanese Site

(<http://primeserver.fujitsu.com/sparcenterprise/manual/>)

Title	Description	Manual Code
<i>SPARC Enterprise T5140 Server Getting Started Guide</i>	Minimum steps to power on and boot the server for the first time	C120-E488
<i>SPARC Enterprise T5140 Server Getting Started Guide For Models That Run on DC Input Power</i>	Minimum steps to power on and boot the server that run on DC input power for the first time	C120-E554
<i>SPARC Enterprise T5240 Server Getting Started Guide</i>	Minimum steps to power on and boot the server for the first time	C120-E489
<i>SPARC Enterprise T5240 Server Getting Started Guide For Models That Run on DC Input Power</i>	Minimum steps to power on and boot the server that run on DC input power for the first time	C120-E555
<i>SPARC Enterprise T5140 and T5240 Servers Product Notes</i>	Information about the latest product updates and issues	C120-E493
<i>Important Safety Information for Hardware Systems</i>	Safety information that is common to all SPARC Enterprise series servers	C120-E391
<i>SPARC Enterprise T5140 and T5240 Servers Safety and Compliance Guide</i>	Safety and compliance information that is specific to the servers	C120-E495
<i>SPARC Enterprise/PRIMEQUEST Common Installation Planning Manual</i>	Requirements and concepts of installation and facility planning for the setup of SPARC Enterprise and PRIMEQUEST	C120-H007
<i>SPARC Enterprise T5140 and T5240 Servers Site Planning Guide</i>	Server specifications for site planning	C120-H028
<i>SPARC Enterprise T5140 and T5240 Servers Overview Guide</i>	Product features	C120-E494

Title	Description	Manual Code
<i>SPARC Enterprise T5140 and T5240 Servers Installation Guide</i>	Detailed rackmounting, cabling, power on, and configuring information	C120-E496
<i>SPARC Enterprise T5140 and T5240 Servers Service Manual</i>	How to run diagnostics to troubleshoot the server, and how to remove and replace parts in the server	C120-E497
<i>SPARC Enterprise T5140 and T5240 Servers Administration Guide</i>	How to perform administrative tasks that are specific to the servers	C120-E498
<i>Integrated Lights Out Manager 2.0 User's Guide</i>	Information that is common to all platforms managed by Integrated Lights Out Manager (ILOM) 2.0	C120-E474
<i>Integrated Lights Out Manager 2.0 Supplement for SPARC Enterprise T5140 and T5240 Servers</i>	How to use the ILOM 2.0 software on the servers	C120-E499
<i>Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide</i>	Information that describes ILOM 3.0 features and functionality	C120-E573
<i>Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide</i>	Information and procedures for network connection, logging in to ILOM 3.0 for the first time, and configuring a user account or a directory service	C120-E576
<i>Integrated Lights Out Manager (ILOM) 3.0 Web Interface Procedures Guide</i>	Information and procedures for accessing ILOM 3.0 functions using the ILOM web interface	C120-E574
<i>Integrated Lights Out Manager (ILOM) 3.0 CLI Procedures Guide</i>	Information and procedures for accessing ILOM 3.0 functions using the ILOM CLI	C120-E575
<i>Integrated Lights Out Manager (ILOM) 3.0 SNMP and IPMI Procedures Guide</i>	Information and procedures for accessing ILOM 3.0 functions using SNMP or IPMI management hosts	C120-E579
<i>Integrated Lights Out Manager (ILOM) 3.x Feature Updates and Release Notes</i>	Enhancements that have been made to ILOM firmware since the ILOM 3.0 release	C120-E600
<i>Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5140 and T5240 Servers</i>	How to use the ILOM 3.0 software on the servers	C120-E578
<i>External I/O Expansion Unit Installation and Service Manual</i>	Procedures for installing the External I/O Expansion Unit on the SPARC Enterprise T5120/T5140/T5220/T5240/T5440 servers	C120-E543
<i>External I/O Expansion Unit Product Notes</i>	Important and late-breaking information about the External I/O Expansion Unit	C120-E544

Note – Product Notes are available on the website only. Please check for the recent update on your product.

UNIX Commands

This document might not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices. Refer to the following for this information:

- Software documentation that you received with your system
- Solaris™ Operating System documentation, which is at
(<http://docs.sun.com>)

Text Conventions

Typeface*	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. To delete a file, type rm <i>filename</i> .

* The settings on your browser might differ from these settings.

Prompt Notations

The following prompt notations are used in this manual.

Shell	Prompt Notations
C shell	<i>machine-name%</i>
C shell superuser	<i>machine-name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#
ILOM service processor	->
ALOM compatibility shell	sc>
OpenBoot PROM firmware	ok

Conventions for Alert Messages

This manual uses the following conventions to show alert messages, which are intended to prevent injury to the user or bystanders as well as property damage, and important messages that are useful to the user.



Warning – This indicates a hazardous situation that could result in death or serious personal injury (potential hazard) if the user does not perform the procedure correctly.



Caution – This indicates a hazardous situation that could result in minor or moderate personal injury if the user does not perform the procedure correctly. This signal also indicates that damage to the product or other property may occur if the user does not perform the procedure correctly.



Caution – This indicates that surfaces are hot and might cause personal injury if touched. Avoid contact.



Caution – This indicates that hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

Tip – This indicates information that could help the user to use the product more effectively.

Alert Messages in the Text

An alert message in the text consists of a signal indicating an alert level followed by an alert statement. A space of one line precedes and follows an alert statement.



Caution – The following tasks regarding this product and the optional products provided from Fujitsu should only be performed by a certified service engineer. Users must not perform these tasks. Incorrect operation of these tasks may cause malfunction.

Also, important alert messages are shown in “[Notes on Safety](#)” on page xix.

Notes on Safety

Important Alert Messages

This manual provides the following important alert signals:



Caution – This indicates a hazardous situation could result in minor or moderate personal injury if the user does not perform the procedure correctly. This signal also indicates that damage to the product or other property may occur if the user does not perform the procedure correctly.



Task	Warning
Maintenance	<p>Damage</p> <p>The server is heavy. Two persons are required to remove it from the rack.</p> <p>The servers are heavy. Two people might be required to carry the chassis and install it in the rack.</p>

Caution – This indicates that hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

Task	Warning
Maintenance	<p>Electric shock</p> <p>Never attempt to run the server with the covers removed. Hazardous voltage present.</p> <p>Because 3.3v standby power is always present in the system, you must unplug the power cords before accessing any cold-serviceable components.</p> <p>The system supplies power to the power distribution board even when the server is powered off. To avoid personal injury or damage to the server, you must disconnect power cords before servicing the power distribution board.</p> <p>The system supplies power to the power supply backplane even when the server is powered off. To avoid personal injury or damage to the server, you must disconnect power cords before servicing the power supply backplane.</p> <p>For server models with DC input power, do not disconnect the power cable at the Wago connector on the server DC power supply unit. Instead, turn off the power at the circuit breaker on the power source.</p>



Caution – This indicates that surfaces are hot and might cause personal injury if touched. Avoid contact.

Task	Warning
Maintenance	<p>Extremely hot</p> <p>Some components on the motherboard might be hot. Use caution when handling the motherboard, especially near the CPU heat sink.</p> <p>FB-DIMMs and heat sinks on the motherboard may be hot.</p> <p>If you touch the heat sink when removing the bus bar screw, you might get burned.</p>

Product Handling

Maintenance



Warning – Certain tasks in this manual should only be performed by a certified service engineer. User must not perform these tasks. Incorrect operation of these tasks may cause electric shock, injury, or fire.

- Installation and reinstallation of all components, and initial settings
- Removal of front, rear, or side covers
- Mounting/de-mounting of optional internal devices
- Plugging or unplugging of external interface cards
- Maintenance and inspections (repairing, and regular diagnosis and maintenance)



Caution – The following tasks regarding this product and the optional products provided from Fujitsu should only be performed by a certified service engineer. Users must not perform these tasks. Incorrect operation of these tasks may cause malfunction.

- Unpacking optional adapters and such packages delivered to the users
- Plugging or unplugging of external interface cards

Remodeling/Rebuilding

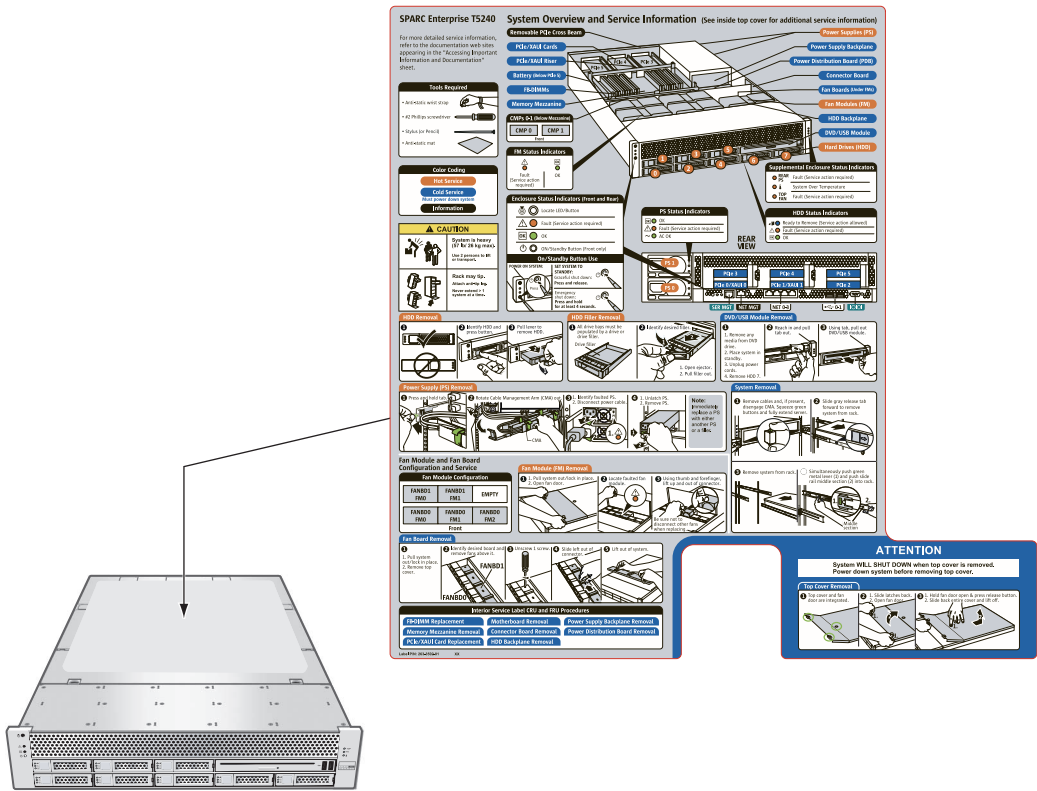


Caution – Do not make mechanical or electrical modifications to the equipment. Using this product after modifying or reproducing by overhaul may cause unexpected injury or damage to the property of the user or bystanders.

Alert Label

The following is a label attached to this product:

- Never peel off the label.
- The following label provides information to the users of this product.



Fujitsu Welcomes Your Comments

If you have any comments or requests regarding this document, or if you find any unclear statements in the document, please state your points specifically on the form at the following URL.

For Users in U.S.A., Canada, and Mexico:

(<https://download.computers.us.fujitsu.com/>)

For Users in Other Countries:

(http://www.fujitsu.com/global/contact/computing/sparce_index.html)

Identifying Server Components

These topics identify key components of the SPARC Enterprise T5140 and T5240 servers, including major boards and internal system cables, as well as front and rear panel features.

- [“Infrastructure Boards in SPARC Enterprise T5140 Servers”](#) on page 2
- [“Infrastructure Boards in SPARC Enterprise T5240 Servers”](#) on page 3
- [“Internal System Cables for SPARC Enterprise T5140 Servers”](#) on page 4
- [“Internal System Cables for SPARC Enterprise T5240 Servers”](#) on page 5
- [“Front Panel Controls and Indicators on SPARC Enterprise T5140 Servers”](#) on page 5
- [“Rear Panel Components and Indicators on SPARC Enterprise T5140 Servers”](#) on page 8
- [“Front Panel Controls and Indicators on SPARC Enterprise T5240 Servers”](#) on page 9
- [“Rear Panel Components and Indicators on SPARC Enterprise T5240 Servers”](#) on page 12
- [“Status LEDs for Ethernet Ports and the Network Management Port”](#) on page 14

Related Information

- [“Identifying FRUs in SPARC Enterprise T5140 Servers”](#) on page 183
- [“Identifying FRUs in SPARC Enterprise T5240 Servers”](#) on page 195

Infrastructure Boards in SPARC Enterprise T5140 Servers

SPARC Enterprise T5140 servers are based on a 1U chassis family. The following table provides a summary of the circuit boards used in these servers.

Board	Description
Motherboard	This board includes two CMP modules, slots for 16 FB-DIMM, memory control subsystems, and all service processor (ILOM) logic. It also hosts a removable SCC module, which contains all MAC addresses, host ID, and ILOM configuration data.
Power distribution board	This board distributes main 12V power from the power supplies to the rest of the system. This board is directly connected to the paddle card, and to the motherboard via a bus bar and ribbon cable. This board also supports a top cover safety interlock (“kill”) switch.
Paddle card	This board serves as the interconnect between the power distribution board and the fan power boards, disk drive backplane, and front I/O board.
Fan power boards (2)	These boards carry power to the system fan modules. In addition, these boards contain fan module status LEDs and transmit status and control data for the fan modules.
Hard drive backplane	<p>This board includes the connectors for the hard drives. This board also contains the interconnect for the front I/O board, Power and Locator buttons, and system/component status LEDs.</p> <p>Each drive has its own Power/Activity, Fault, and Ready-to-Remove LEDs.</p>
Front I/O board	This board connects directly to the hard drive backplane. This board is packaged with the DVD drive as a single unit.

Related Information

- [“Infrastructure Boards in SPARC Enterprise T5240 Servers” on page 3](#)

- [“Identifying FRUs in SPARC Enterprise T5140 Servers” on page 183](#)
- [“Identifying FRUs in SPARC Enterprise T5240 Servers” on page 195](#)

Infrastructure Boards in SPARC Enterprise T5240 Servers

SPARC Enterprise T5240 servers are based on a 2U chassis family. The following table provides a summary of the circuit boards used in these servers.

Board	Description
Motherboard	This board includes two CMP modules, slots for 16 FB-DIMM, memory control subsystems, and all service processor (ILOM) logic. It also hosts a removable SCC module, which contains all MAC addresses, host ID, and ILOM configuration data.
Memory mezzanine assembly (SPARC Enterprise T5240 Servers only)	This optional assembly provides an additional 16 memory slots in addition to the 16 slots provided on the motherboard.
Power distribution board	This board distributes main 12V power from the power supplies to the rest of the system. This board is directly connected to the paddle card, and to the motherboard via a bus bar and ribbon cable. This board also supports a top cover safety interlock (“kill”) switch.
Power supply backplane (SPARC Enterprise T5240 Servers only)	This board carries 12V power from the power supplies to the power distribution board over a pair of bus bars. In SPARC Enterprise T5140 servers, the power supplies connect directly to the power distribution board.
Paddle card	This board serves as the interconnect between the power distribution board and the fan power boards, disk drive backplane, and front I/O board.
Fan power boards (2)	These boards carry power to the system fan modules. In addition, these boards contain fan module status LEDs and transmit status and control data for the fan modules.

Board	Description
Hard drive backplane	This board includes the connectors for the hard drives. This board also contains the interconnect for the front I/O board, Power and Locator buttons, and system/component status LEDs. Each drive has its own Power/Activity, Fault, and Ready-to-Remove LEDs.
Front I/O board	This board connects directly to the hard drive backplane. This board is packaged with the DVD drive as a single unit.

Related Information

- [“Infrastructure Boards in SPARC Enterprise T5140 Servers” on page 2](#)
- [“Identifying FRUs in SPARC Enterprise T5140 Servers” on page 183](#)
- [“Identifying FRUs in SPARC Enterprise T5240 Servers” on page 195](#)

Internal System Cables for SPARC Enterprise T5140 Servers

The following table identifies the internal system cables used in SPARC Enterprise T5140 servers.

Cable	Description
Top cover interlock cable	This cable connects the safety interlock switch on the top cover to the power distribution board.
Ribbon cable	This cable carries signals between the power distribution board and the motherboard.
Hard drive data cable	This cable carries data and control signals between the motherboard and the hard drive backplane.

Related Information

- [“Identifying FRUs in SPARC Enterprise T5140 Servers” on page 183](#)

Internal System Cables for SPARC Enterprise T5240 Servers

The following table identifies the internal system cables used in SPARC Enterprise T5240 servers.

Cable	Description
Top cover interlock cable	This cable connects the safety interlock switch on the top cover to the power distribution board.
Ribbon cable	This cable carries signals between the power supply backplane and the power distribution board.
Ribbon cable	This cable carries signals between the power distribution board and the motherboard.
Hard drive data cables (1 or 2, depending on the type of hard drive backplane)	This cable carries data and control signals between the motherboard and the hard drive backplane.

Related Information

- [“Identifying FRUs in SPARC Enterprise T5240 Servers” on page 195](#)

Front Panel Controls and Indicators on SPARC Enterprise T5140 Servers

The following figure shows the layout of the T5140 server front panel, including the power and system locator buttons and the various status and fault LEDs.

Note – The front panel also provides access to internal hard drives, the removable media drive, and the two front USB ports.

FIGURE: Front Panel Controls and Indicators on SPARC Enterprise T5140 Servers

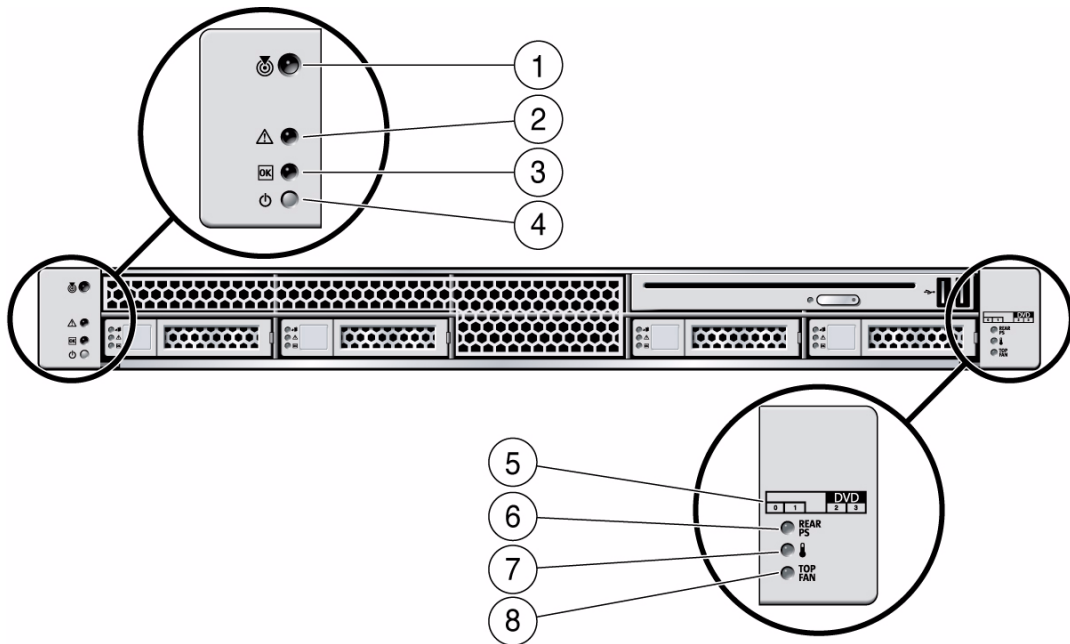







Figure Legend

1	Locator LED and button	5	Hard Drive map
2	Service Required LED	6	Power Supply Service Required LED
3	Power OK LED	7	Overtemp LED
4	Power button	8	Fan Module Service Required LED

The following table provides descriptions of these controls and indicators.

TABLE: Front Panel Controls and Indicators (SPARC Enterprise T5140 and T5240 Servers)

LED or Button	Icon or Label	Description
Locator LED and button (white)		<p>The Locator LED can be turned on to identify a particular system. When on, it blinks rapidly. There are three methods for turning a Locator LED on:</p> <ul style="list-style-type: none"> • Issuing the ILOM command <code>set /SYS/LOCATE value=Fast_Blink</code> • Issuing the ALOM CMT command <code>setlocator on</code>. • Pressing the Locator button.
Service Required LED (amber)		<p>If on, indicates that service is required. POST and ILOM are two diagnostics tools that can detect a fault or failure resulting in this indication.</p> <p>The ILOM <code>show faulty</code> command provides details about any faults that cause this indicator to light.</p> <p>Under some fault conditions, individual component fault LEDs are lit in addition to the system Service Required LED.</p>
Power OK LED (green)		<p>Provides the following indications:</p> <ul style="list-style-type: none"> • Off – System is not running in its normal state. System power might be off. The service processor might be running. • Steady on – System is powered on and is running in its normal operating state. No service actions are required. • Fast blink – System is running in standby mode and can be quickly returned to full function. • Slow blink – A normal, but transitory activity is taking place. Slow blinking might indicate that system diagnostics are running, or the system is booting.
Power button		<p>The recessed Power button toggles the system on or off.</p> <ul style="list-style-type: none"> • Press once to turn the system on. • Press once to shut the system down in a normal manner. • Press and hold for 4 seconds to perform an emergency shutdown.
Power Supply Fault LED (amber)	REAR PS	<p>Provides the following operational PSU indications:</p> <ul style="list-style-type: none"> • Off – Indicates a steady state, no service action is required. • Steady on – Indicates that a power supply failure event has been acknowledged and a service action is required on at least one PSU.
Overtemp LED (amber)		<p>Provides the following operational temperature indications:</p> <ul style="list-style-type: none"> • Off – Indicates a steady state, no service action is required. • Steady on – Indicates that a temperature failure event has been acknowledged and a service action is required.
Fan Fault LED (amber)	TOP FAN	<p>Provides the following operational fan indications:</p> <ul style="list-style-type: none"> • Off – Indicates a steady state, no service action is required. • Steady on – Indicates that a fan failure event has been acknowledged and a service action is required on at least one of the fan modules.

Related Information

- [“LED Overview” on page 21](#)

Rear Panel Components and Indicators on SPARC Enterprise T5140 Servers

The following figure shows the layout of the connectors associated with the system I/O ports, PCIe ports, 10 Gbit Ethernet (XAUI) ports (if equipped) and power supplies on the rear panel of SPARC Enterprise T5140 servers. It also shows the locations of the rear panel LEDs.

FIGURE: Rear Panel Components and Indicators on SPARC Enterprise T5140 Servers

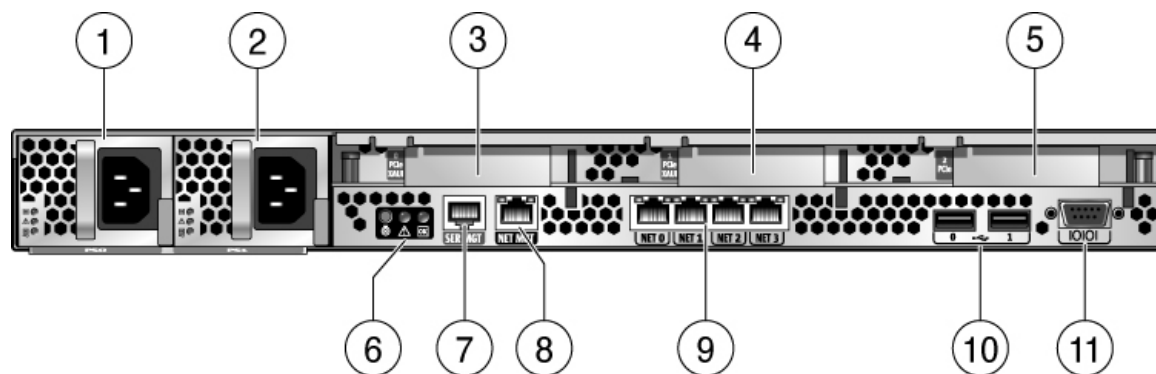





Figure Legend

1 PSU 0	7 Serial management port
2 PSU 1	8 Network management port
3 PCIe/XAUI 0	9 Gigabit Ethernet ports (0, 1, 2, 3)
4 PCIe/XAUI 1	10 USB ports (0, 1)
5 PCIe 2	11 DB-9 serial port
6 Rear panel system status LEDs	

The following table provides descriptions of the LEDs located on the rear panel.

TABLE: Rear Panel LED Indicators (SPARC Enterprise T5140 and T5240 Servers)

LED or Button	Icon or Label	Description
Locator LED and button (white)		<p>The Locator LED can be turned on to identify a particular system. When on, it blinks rapidly. There are three methods for turning a Locator LED on:</p> <ul style="list-style-type: none">• Issuing the ILOM command <code>set /SYS/LOCATE value=Fast_Blink</code>• Issuing the ALOM CMT command <code>setlocator on</code>.• Pressing the Locator button.
Service Required LED (amber)		<p>If on, indicates that service is required. POST and ILOM are two diagnostics tools that can detect a fault or failure resulting in this indication.</p> <p>The ILOM <code>show faulty</code> command provides details about any faults that cause this indicator to light.</p> <p>Under some fault conditions, individual component fault LEDs are lit in addition to the system Service Required LED.</p>
Power OK LED (green)		<p>Provides the following indications:</p> <ul style="list-style-type: none">• Off – System is not running in its normal state. System power might be off. The service processor might be running.• Steady on – System is powered on and is running in its normal operating state. No service actions are required.• Fast blink – System is running in standby mode and can be quickly returned to full function.• Slow blink – A normal, but transitory activity is taking place. Slow blinking might indicate that system diagnostics are running, or the system is booting.

Related Information

- [“LED Overview” on page 21](#)

Front Panel Controls and Indicators on SPARC Enterprise T5240 Servers

The following figure shows the layout of the T5140 server front panel, including the power and system locator buttons and the various status and fault LEDs.

Note – The front panel also provides access to internal hard drives, the removable media drive (if equipped), and the two front USB ports.

FIGURE: Front Panel Controls and Indicators on SPARC Enterprise T5240 Servers

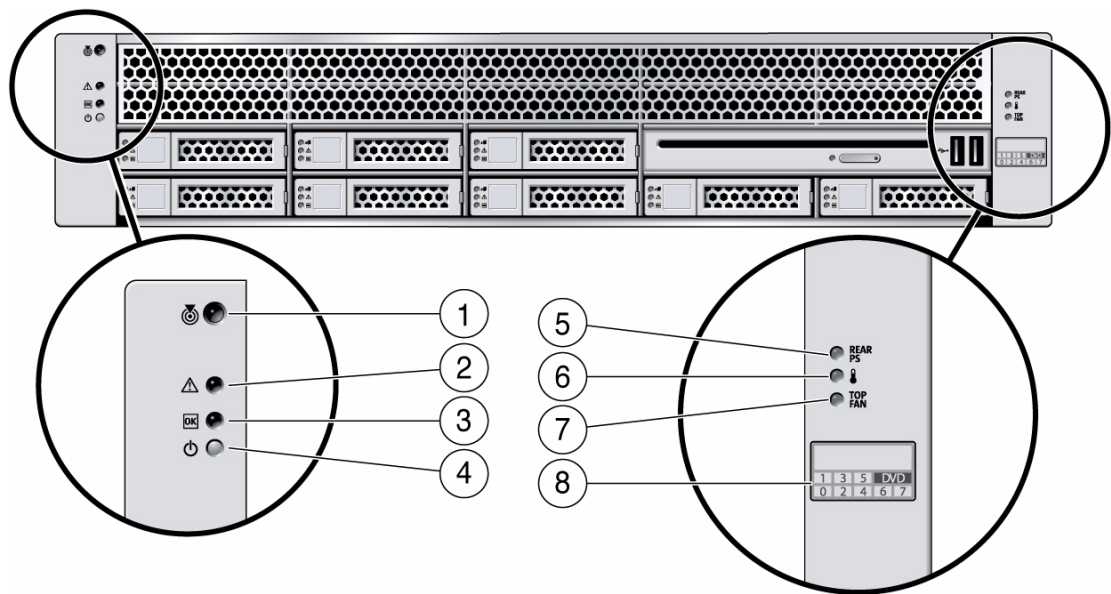







Figure Legend

1	Locator LED and button	5	Power Supply Service Required LED
2	Service Required LED	6	Overtemp LED
3	Power OK LED	7	Fan Module Service Required LED
4	Power button	8	Hard Drive map

The following table provides descriptions of these controls and indicators.

TABLE: Front Panel Controls and Indicators (SPARC Enterprise T5140 and T5240 Servers)

LED or Button	Icon or Label	Description
Locator LED and button (white)		<p>The Locator LED can be turned on to identify a particular system. When on, it blinks rapidly. There are three methods for turning a Locator LED on:</p> <ul style="list-style-type: none"> • Issuing the ILOM command <code>set /SYS/LOCATE value=Fast_Blink</code> • Issuing the ALOM CMT command <code>setlocator on</code>. • Pressing the Locator button.
Service Required LED (amber)		<p>If on, indicates that service is required. POST and ILOM are two diagnostics tools that can detect a fault or failure resulting in this indication.</p> <p>The ILOM <code>show faulty</code> command provides details about any faults that cause this indicator to light.</p> <p>Under some fault conditions, individual component fault LEDs are lit in addition to the system Service Required LED.</p>
Power OK LED (green)		<p>Provides the following indications:</p> <ul style="list-style-type: none"> • Off – System is not running in its normal state. System power might be off. The service processor might be running. • Steady on – System is powered on and is running in its normal operating state. No service actions are required. • Fast blink – System is running in standby mode and can be quickly returned to full function. • Slow blink – A normal, but transitory activity is taking place. Slow blinking might indicate that system diagnostics are running, or the system is booting.
Power button		<p>The recessed Power button toggles the system on or off.</p> <ul style="list-style-type: none"> • Press once to turn the system on. • Press once to shut the system down in a normal manner. • Press and hold for 4 seconds to perform an emergency shutdown.
Power Supply Fault LED (amber)	REAR PS	<p>Provides the following operational PSU indications:</p> <ul style="list-style-type: none"> • Off – Indicates a steady state, no service action is required. • Steady on – Indicates that a power supply failure event has been acknowledged and a service action is required on at least one PSU.
Overtemp LED (amber)		<p>Provides the following operational temperature indications:</p> <ul style="list-style-type: none"> • Off – Indicates a steady state, no service action is required. • Steady on – Indicates that a temperature failure event has been acknowledged and a service action is required.
Fan Fault LED (amber)	TOP FAN	<p>Provides the following operational fan indications:</p> <ul style="list-style-type: none"> • Off – Indicates a steady state, no service action is required. • Steady on – Indicates that a fan failure event has been acknowledged and a service action is required on at least one of the fan modules.

Related Information

- “LED Overview” on page 21

Rear Panel Components and Indicators on SPARC Enterprise T5240 Servers

The following figure shows the layout of the I/O ports, PCIe ports, 10 Gbit Ethernet (XAUI) ports (if equipped) and power supplies on the rear panel.

FIGURE: Rear Panel Components and Indicators on SPARC Enterprise T5240 Servers

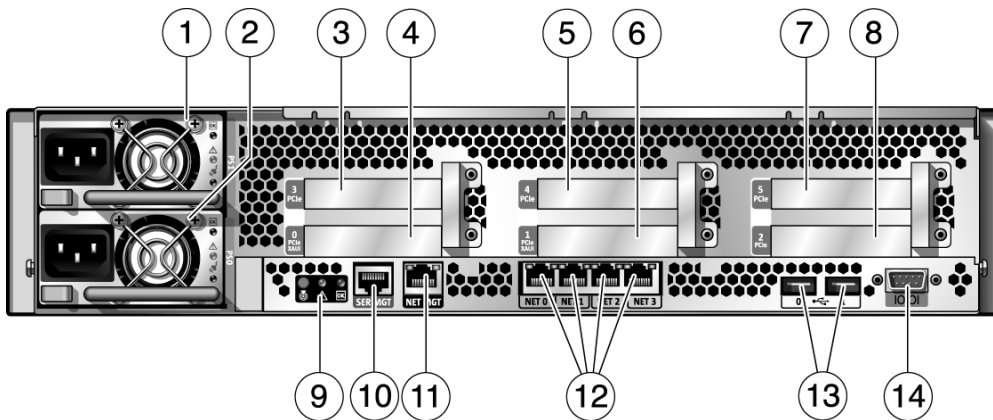





Figure Legend

1	PSU 1	8	PCIe 2
2	PSU 0	9	Rear panel status LEDs
3	PCIe 3	10	Serial management port
4	PCIe/XAUI 0	11	Network management port
5	PCIe 4	12	Gigabit Ethernet ports (0, 1, 2, 3)
6	PCIe/XAUI 1	13	USB ports (0, 1)
7	PCIe 5	14	DB-9 serial port

The following table provides descriptions of the LEDs located on the rear panel.

TABLE: LED Indicators on the SPARC Enterprise T5240 Server Rear Panel

LED or Button	Icon or Label	Description
Locator LED and button (white)		<p>The Locator LED can be turned on to identify a particular system. When on, it blinks rapidly. There are three methods for turning a Locator LED on:</p> <ul style="list-style-type: none">• Issuing the ILOM command <code>set /SYS/LOCATE value=Fast_Blink</code>• Issuing the ALOM CMT command <code>setlocator on</code>.• Pressing the Locator button.
Service Required LED (amber)		<p>If on, indicates that service is required. POST and ILOM are two diagnostics tools that can detect a fault or failure resulting in this indication.</p> <p>The ILOM <code>show faulty</code> command provides details about any faults that cause this indicator to light.</p> <p>Under some fault conditions, individual component fault LEDs are lit in addition to the system Service Required LED.</p>
Power OK LED (green)		<p>Provides the following indications:</p> <ul style="list-style-type: none">• Off – System is not running in its normal state. System power might be off. The service processor might be running.• Steady on – System is powered on and is running in its normal operating state. No service actions are required.• Fast blink – System is running in standby mode and can be quickly returned to full function.• Slow blink – A normal, but transitory activity is taking place. Slow blinking might indicate that system diagnostics are running, or the system is booting.

Related Information

- [“LED Overview” on page 21](#)

Status LEDs for Ethernet Ports and the Network Management Port

Each Ethernet port has two status LEDs that provide connection information. Two additional LEDs provide the same information for the service processor network management port.

TABLE: Network Management Port and Ethernet Port LEDs

LED	Color	Description
Left LED	Amber	Speed indicator: <ul style="list-style-type: none">• Amber on – Operating as a Gigabit connection (1000 Mbps).*• Green on – Operating as a 100-Mbps connection.• Off – Operating as a 10-Mbps connection.
	Green	
Right LED	Green	Link/Activity indicator: <ul style="list-style-type: none">• Blinking – There is activity on this port.• Off – No link is established.

* The NET MGT port only operates in 100-Mbps or 10-Mbps so the speed indicator LED will be green or off (never amber).

Related Information

- [“LED Overview” on page 21](#)

Detecting and Managing Faults

These topics explain how to use various diagnostic tools to monitor server status and troubleshoot faults in the server.

- [“Diagnostic Tools Overview” on page 15](#)
- [“Detecting Faults With ILOM” on page 22](#)
- [“Detecting Faults With POST” on page 34](#)
- [“Managing POST Operations” on page 35](#)
- [“Managing Faults Using the PSH Feature” on page 43](#)
- [“Viewing Solaris OS Messages” on page 48](#)
- [“Managing Components With Automatic System Recovery Commands” on page 50](#)
- [“Detecting Faults Using SunVTS Software” on page 53](#)

Related Information

- [“Identifying FRUs in SPARC Enterprise T5140 Servers” on page 183](#)
- [“Identifying FRUs in SPARC Enterprise T5240 Servers” on page 195](#)

Diagnostic Tools Overview

The service processor provides a range of system management and diagnostic tools that enable you to monitor server operations and troubleshoot server problems. The following is a high-level summary of the various diagnostic tools that are available on the server:

- **LEDs** – Status indicators are provided on the server’s front and rear panels as well as on some FRUs.
- **ILOM** – The Integrated Lights Out Manager (ILOM) firmware runs on the service processor and is the central software resource for identifying and managing problems in the server.

- **Power-on self-test (POST)** – POST performs diagnostics on system components whenever the system is turned on or a system reset is issued.
- **Solaris OS Predictive Self-Healing (PSH)** – PSH continuously monitors the health of the processor and memory, collecting data that can be used to predict component failures before they occur. PSH works with ILOM to take a component offline if data indicate there is a high risk it will fail.
- **Solaris OS log files and command interface** – The Solaris OS reports operational and error information to its standard log files. It also provides various commands for investigating system status.
- **SunVTS** – This is an application that exercises the system, provides hardware validation, and discloses possible faulty components with recommendations for repair.

The LEDs, ILOM, PSH, and many of the log files and console messages are integrated. For example, when the Solaris software detects a fault, it displays the fault, logs it, and passes information to ILOM where it is logged. Depending on the fault, one or more LEDs might also be illuminated.

Service Processor Interfaces

There are three methods of interacting with the service processor:

- ILOM shell (default)
- ILOM browser interface (BI)
- ALOM CMT compatibility shell

The ILOM shell provides access to ILOM's features and functions through a command-line interface (CLI). The shell prompt looks like this:

```
->
```

The ILOM browser interface supports the same set of features and functions as the shell, but through windows on a browser interface.

The ALOM CMT compatibility shell emulates the ALOM CMT interface used on earlier generations of CMT servers. The ALOM CMT compatibility shell prompt looks like this:

```
SC>
```

Note – Unless indicated otherwise, all examples of interaction with the service processor are depicted with ILOM shell commands.

Multiple service processor accounts can be active concurrently. A user can issue ILOM shell commands while logged in under one account and, at the same time, issue ALOM CMT shell commands while operating in another account.


Related Information

- [“Diagnostics Tools Quick Reference” on page 17](#)

Diagnostics Tools Quick Reference

The following flowchart illustrates the complementary relationship of the different diagnostic tools and indicates a default sequence of use.

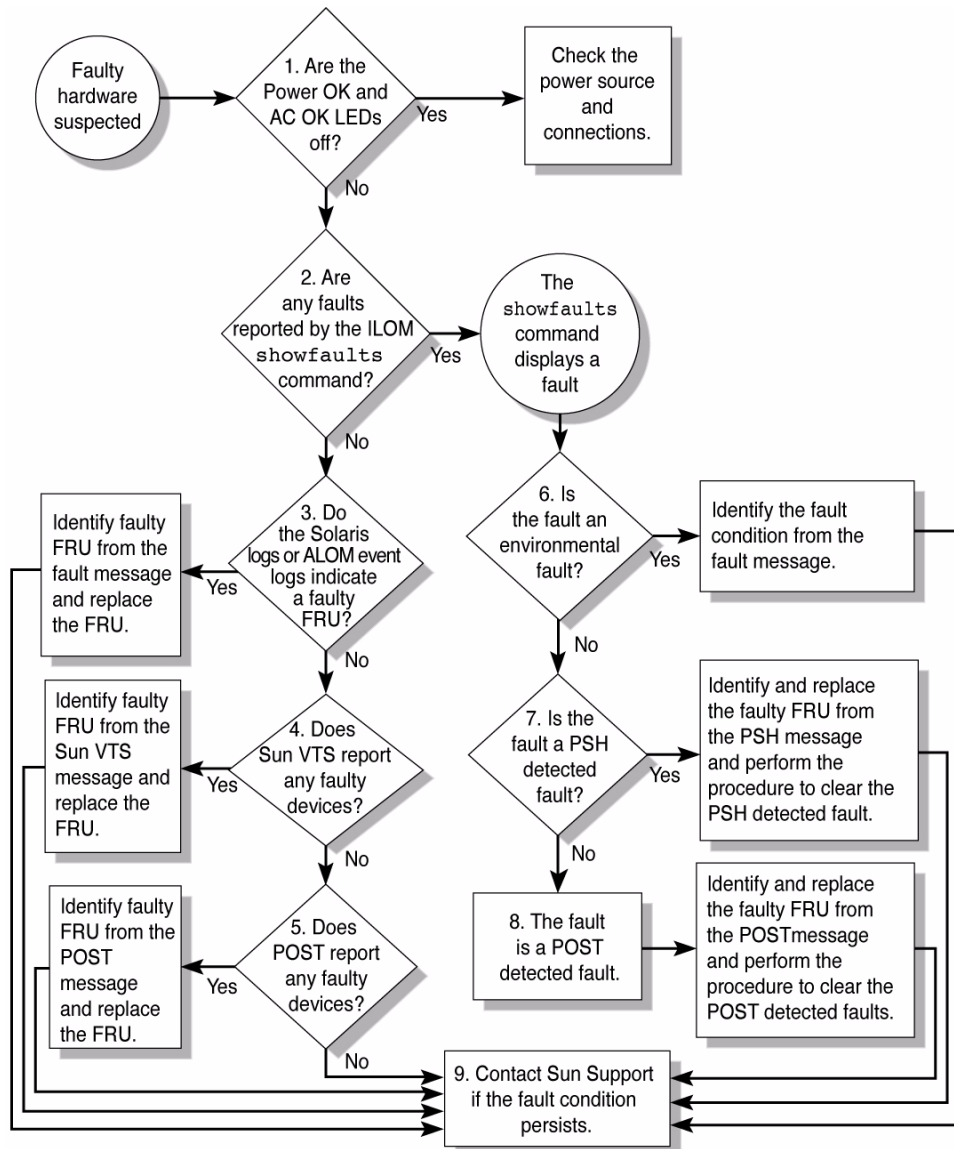FIGURE: Diagnostics Flowchart



The following table provides brief descriptions of the troubleshooting actions shown in the flowchart. It also provides links to topics with additional information on each diagnostic action.

TABLE: Diagnostic Flowchart Reference Table

Diagnostic Action	Possible Outcome	Additional Information
Check Power OK and AC Present LEDs on the server. (Flowchart item 1)	<p>The Power OK LED is located on the front and rear of the chassis.</p> <p>The AC Present LED is located on the rear of the server on each power supply.</p> <p>If these LEDs are not on, check the power source and power connections to the server.</p>	<ul style="list-style-type: none"> • “Front Panel Controls and Indicators on SPARC Enterprise T5140 Servers” on page 5 • “Front Panel Controls and Indicators on SPARC Enterprise T5240 Servers” on page 9
Run the ILOM <code>show faulty</code> command to check for faults. (Flowchart item 2)	<p>The <code>show faulty</code> command displays the following kinds of faults:</p> <ul style="list-style-type: none"> • Environmental faults • Solaris Predictive Self-Healing (PSH) detected faults • POST detected faults <p>Faulty FRUs are identified in fault messages using the FRU name.</p>	<ul style="list-style-type: none"> • TABLE: Service-Related Commands on page 26 • “Faults Displayed by <code>show faulty</code>” on page 29
Check the Solaris log files for fault information. (Flowchart item 3)	<p>The Solaris message buffer and log files record system events, and provide information about faults.</p> <ul style="list-style-type: none"> • If system messages indicate a faulty device, replace the FRU. • For more diagnostic information, review the SunVTS report. (Flowchart item 4) 	<ul style="list-style-type: none"> • “Viewing Solaris OS Messages” on page 48
Run SunVTS software. (Flowchart item 4)	<p>SunVTS is an application you can run to exercise and diagnose FRUs. To run SunVTS, the server must be running the Solaris OS.</p> <ul style="list-style-type: none"> • If SunVTS reports a faulty device, replace the FRU. • If SunVTS does not report a faulty device, run POST. (Flowchart item 5) 	<ul style="list-style-type: none"> • “Detecting Faults Using SunVTS Software” on page 53
Run POST. (Flowchart item 5)	<p>POST performs basic tests of the server components and reports faulty FRUs.</p>	<ul style="list-style-type: none"> • “Detecting Faults With POST” on page 34 • TABLE: ILOM Properties Used to Manage POST Operations on page 36

TABLE: Diagnostic Flowchart Reference Table (*Continued*)

Diagnostic Action	Possible Outcome	Additional Information
Check if the fault is environmental. (Flowchart item 6)	<p>Determine if the fault is an environmental fault or a configuration fault.</p> <p>If the fault listed by the <code>show faulty</code> command displays a temperature or voltage fault, then the fault is an environmental fault. Environmental faults can be caused by faulty FRUs (power supply or fan), or by environmental conditions such as when computer room ambient temperature is too high, or the server airflow is blocked. When the environmental condition is corrected, the fault will automatically clear.</p> <p>If the fault indicates that a fan or power supply is bad, you can perform a hot-swap of the FRU. You can also use the fault LEDs on the server to identify the faulty FRU (fans and power supplies).</p>	<ul style="list-style-type: none"> • “Faults Displayed by <code>show faulty</code>” on page 29
Determine if the fault was detected by PSH. (Flowchart item 7)	<p>If the fault displayed included a <i>uuid</i> and <i>sunw-msg-id</i> property, the fault was detected by the Solaris Predictive Self-Healing software.</p> <p>If the fault is a PSH detected fault, refer to the PSH Knowledge Article web site for additional information. The Knowledge Article for the fault is located at the following link: http://www.sun.com/msg/message-ID where <i>message-ID</i> is the value of the <i>sunw-msg-id</i> property displayed by the <code>show faulty</code> command. After the FRU is replaced, perform the procedure to clear PSH detected faults.</p>	<ul style="list-style-type: none"> • “Managing Faults Using the PSH Feature” on page 43 • “Clear PSH-Detected Faults” on page 47
Determine if the fault was detected by POST. (Flowchart item 8)	<p>POST performs basic tests of the server components and reports faulty FRUs. When POST detects a faulty FRU, it logs the fault and if possible, takes the FRU offline.</p> <p>POST detected FRUs display the following text in the fault message: Forced fail <i>reason</i> In a POST fault message, <i>reason</i> is the name of the power-on routine that detected the failure.</p>	<ul style="list-style-type: none"> • “Detecting Faults With POST” on page 34 • “Clear POST-Detected Faults” on page 41
Contact technical support. (Flowchart item 9)	<p>The majority of hardware faults are detected by the server’s diagnostics. In rare cases a problem might require additional troubleshooting. If you are unable to determine the cause of the problem, contact your service representative for support.</p>	

LED Overview

The server provides the following groups of LEDs:

- Front panel system LEDs
- Rear panel system LEDs
- Hard drive LEDs
- Power supply LEDs
- Fan module LEDs
- Rear panel Ethernet port LEDs
- FB-DIMM Locate LEDs

The following table provides quick-reference information about the various LEDs. It also points to more detailed descriptions for each.

TABLE: System Faults and the Corresponding LED States

Component Fault	Fault LEDs Lit	Additional Information
Power supply	<ul style="list-style-type: none">• Service Required LED (front and rear panel)• Front panel Power Supply Fault LED• Individual power supply Fault LED	<ul style="list-style-type: none">• “Power Supplies Overview” on page 135• “Remove a Power Supply” on page 137• “Install a Power Supply” on page 140
Fan module	<ul style="list-style-type: none">• Service Required LED (front and rear panel)• Front panel Fan Fault LED• Individual fan module Fault LED• Overtemp LED (if overtemp condition exists)	<ul style="list-style-type: none">• “Fan Module Overview” on page 129• “Remove a Fan Module” on page 131• “Install a Fan Module” on page 133

TABLE: System Faults and the Corresponding LED States *(Continued) (Continued)*

Component Fault	Fault LEDs Lit	Additional Information
Hard drive	<ul style="list-style-type: none">• Service Required LED (front and rear panel)• Individual hard drive Fault LED	See these sections: <ul style="list-style-type: none">• “Hard Drive Servicing Overview” on page 69• “Hard Drive LEDs” on page 70• “Remove a Hard Drive” on page 71• “Install a Hard Drive” on page 73
FB-DIMM	<ul style="list-style-type: none">• Service Required LED (front and rear panel)• FB-DIMM Fault LED on motherboard (when FB-DIMM Locate button is pressed)	See these sections: <ul style="list-style-type: none">• “Servicing the Motherboard Assembly” on page 122• “Identify Faulty FB-DIMMs Using the show faulty Command” on page 83• “Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83
Other components	<ul style="list-style-type: none">• Service Required LED (front and rear panel)	Note - Not all components have an individual component Fault LED. If the Service Required LED is lit, use the show faulty command to obtain additional information about the component affected. <ul style="list-style-type: none">• “Identify Faulty FB-DIMMs Using the show faulty Command” on page 83



Detecting Faults With ILOM

These topics explain how to use ILOM, the service processor firmware, to diagnose faults and verify successful repairs.

- [“ILOM Troubleshooting Overview”](#) on page 23
- [“Service-Related ILOM Command Summary”](#) on page 26

Related Information

- [“.POST Overview”](#) on page 35
- [“ILOM Properties that Affect POST Behavior”](#) on page 35


ILOM Troubleshooting Overview

ILOM enables you to remotely run diagnostics such as power-on self-test (POST), that would otherwise require physical proximity to the server's serial port. You can also configure ILOM to send email alerts of hardware failures, hardware warnings, and other events related to the server or to ILOM.

The service processor runs independently of the server, using the server's standby power. Therefore, ILOM firmware and software continue to function when the server OS goes offline or when the server is powered off.

Faults detected by ILOM, POST, and the Solaris Predictive Self-Healing (PSH) technology are forwarded to ILOM for fault handling.

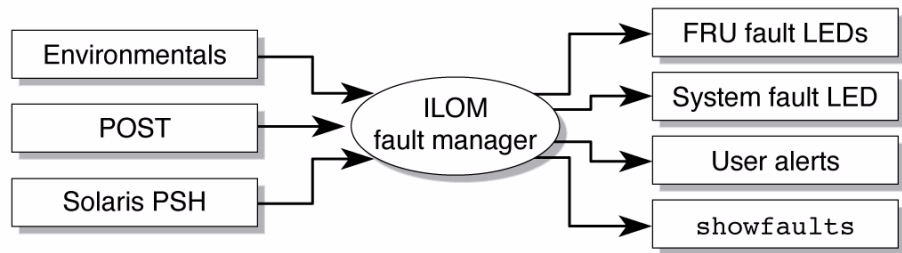FIGURE: Fault Reporting Through the ILOM Fault Manager



In the event of a system fault, ILOM ensures that the Service Required LED is turned on, FRUID PROMs are updated, the fault is logged, and alerts are displayed. Faulty FRUs are identified in fault messages using the FRU name.

The service processor can detect when a fault is no longer present. When this happens, it clears the fault state in the FRU PROM and extinguishes the Service Required LED.

A fault condition can be removed in two ways:

- **Unaided recovery** – Faults caused by environmental conditions can clear automatically if the condition responsible for the fault improves over time.
- **Repaired fault** – When a fault is repaired by human intervention, such as a FRU replacement, the service processor will usually detect the repair automatically and extinguish the Service Required LED.

Many environmental faults can automatically recover. For example, a temporary condition may cause the computer room temperature to rise above the maximum threshold, producing an overtemperature fault in the server. If the computer room temperature then returns to the normal range and the server's internal temperature also drops back to an acceptable level, the service processor will detect the new fault-free condition. It will extinguish the Service Required LED and clear the fault state from the FRU PROM.

Note – No ILOM command is needed to manually repair an environmental fault.

The service processor can automatically detect when a FRU is removed. In many cases, it does this even if the FRU is removed while the service processor is not running.

Note – If the service processor does not automatically clear a fault state after the fault is corrected, you must perform these tasks manually. The procedure for clearing faults manually is described in [“Clear FRU Faults Manually”](#) on page 31.

Note – ILOM does not automatically detect hard drive replacement.

The Solaris Predictive Self-Healing technology does not monitor hard drives for faults. As a result, the service processor does not recognize hard drive faults and will not light the fault LEDs on either the chassis or the hard drive itself. Use the Solaris message files to view hard drive faults.

For general information about ILOM, see the *Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide*.

For detailed information about ILOM features that are specific to this server, see the *Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5140 and T5240 Servers*.

Methods for Connecting to the Service Processor

Before you can run ILOM commands, you must connect to the service processor. You can do this using either of the following methods:

- Connect an ASCII terminal directly to the serial management port.
- Use the `ssh` command to connect to service processor through an Ethernet connection on the network management port.

Note – Refer to the *Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5140 and T5240 Servers* for instructions on configuring and connecting to ILOM.

How to Switch From the System Console to the Service Processor

The following example shows the character sequence (hash-period) used to change from the system console to the service processor:

```
ok #.
```

How to Switch From the Service Processor to the System Console

The following example shows the ILOM command for changing from the service processor to the system console:

```
-> start /SP/console
```

If you are connected to the service processor using the ALOM CMT shell, use the following command to change to the system console:

```
sc> console
```

Service-Related ILOM Command Summary

The following table describes the ILOM shell commands most frequently used when performing service related tasks. The middle column identifies the ALOM CMT command that produces the same result.

TABLE: Service-Related Commands

ILOM Command	ALOM CMT Command	Description
help [<i>command</i>]	help [<i>command</i>]	Displays a list of all available commands with syntax and descriptions. Specifying a command name as an option displays help for that command.
set /HOST send_break_action=break	break [-y][-c][-D] <ul style="list-style-type: none"> • -y skips the confirmation question. • -c executes a console command after the break command completes. • -D forces a core dump of the Solaris OS. 	Takes the host server from the OS to either kmdb or OpenBoot PROM (equivalent to a Stop-A), depending on the mode Solaris software was booted.
set /SYS/component clear_fault_action=true	clearfault <i>UUID</i>	Manually clears host-detected faults. The <i>UUID</i> is the unique fault ID of the fault to be cleared.
start /SP/console	console [-f] <ul style="list-style-type: none"> • -f forces the console to have read and write capabilities. 	Connects you to the host system.
show /SP/console/history	consolehistory [-b <i>lines</i> -e <i>lines</i> -v] [-g <i>lines</i>] [boot run] <p>The following options enable you to specify how the output is displayed:</p> <ul style="list-style-type: none"> • -g <i>lines</i> specifies the number of lines to display before pausing. • -e <i>lines</i> displays <i>n</i> lines from the end of the buffer. • -b <i>lines</i> displays <i>n</i> lines from the beginning of the buffer. • -v displays the entire buffer. • boot run specifies the log to display (run is the default log). 	Displays the contents of the system's console buffer.

TABLE: Service-Related Commands (*Continued*)

ILOM Command	ALOM CMT Command	Description
set /HOST/bootmode <i>property=</i> <i>value</i> [where <i>property</i> is state, config, or script]	bootmode [normal] [reset_nvram] [config= <i>configname</i>] [bootscript= <i>string</i>]	Controls the host server OpenBoot PROM firmware method of booting.
stop /SYS; start /SYS	powercycle [-f] The -f option forces an immediate poweroff. Otherwise the command attempts a graceful shutdown.	Performs a poweroff followed by poweron.
stop /SYS	poweroff [-y] [-f] <ul style="list-style-type: none"> • -y enables you to skip the confirmation question. • -f forces an immediate shutdown. 	Powers off the host server.
start /SYS	poweron [-c] <ul style="list-style-type: none"> • -c executes a console command after completion of the poweron command. 	Powers on the host server.
set /SYS/PSx prepare_to_remove_action= true	removefru /SYS/PS0 /SYS/PS1	Indicates if it is okay to perform a hot-swap of a power supply. This command does not perform any action. But this command provides a warning if the power supply should not be removed because the other power supply is not enabled.
reset /SYS	reset [-y] [-c] <ul style="list-style-type: none"> • -y enables you to skip the confirmation question. • -c executes a console command after completion of the reset command. 	Generates a hardware reset on the host server.
reset /SP	resetsc [-y] <ul style="list-style-type: none"> • -y enables you to skip the confirmation question. 	Reboots the service processor.
set /SYS keyswitch_state= <i>value</i> normal standby diag locked	setkeyswitch [-y] <i>value</i> normal standby diag locked <ul style="list-style-type: none"> • -y enables you to skip the confirmation question when setting the keyswitch to stby. 	Sets the virtual keyswitch.

TABLE: Service-Related Commands (*Continued*)

ILOM Command	ALOM CMT Command	Description
set /SYS/LOCATE value= <i>value</i> [Fast_blink Off]	setlocator <i>value</i> [on off]	Turns the Locator LED on the server on or off.
(No ILOM equivalent.)	showenvironment	Displays the environmental status of the host server. This information includes system temperatures, power supply, front panel LED, hard drive, fan, voltage, and current sensor status. See “Display FRU Information With the show Command” on page 32.
show faulty	showfaults [-v]	Displays current system faults. See “Faults Displayed by show faulty” on page 29.
(No ILOM equivalent.)	showfru [-g <i>lines</i>] [-s -d] [<i>FRU</i>] <ul style="list-style-type: none"> • -g <i>lines</i> specifies the number of lines to display before pausing the output to the screen. • -s displays static information about system FRUs (defaults to all FRUs, unless one is specified). • -d displays dynamic information about system FRUs (defaults to all FRUs, unless one is specified). See “Display FRU Information With the show Command” on page 32. 	Displays information about the FRUs in the server.
show /SYS keyswitch_state	showkeyswitch	Displays the status of the virtual keyswitch.
show /SYS/LOCATE	showlocator	Displays the current state of the Locator LED as either on or off.
show /SP/logs/event/list	showlogs [-b <i>lines</i> -e <i>lines</i> -v] [-g <i>lines</i>] [-p logtype[<i>r</i> <i>p</i>]]	Displays the history of all events logged in the service processor event buffers (in RAM or the persistent buffers).
show /HOST	showplatform [-v]	Displays information about the operating state of the host system, the system serial number, and whether the hardware is providing service.

Related Information

- [“Managing Components With Automatic System Recovery Commands” on page 50](#)

Faults Displayed by `show faulty`

The ILOM `show faulty` command will display the following kinds of fault information.

- Environmental faults
- Invalid configurations
- Faults detected during POST session
- Faults detected by predictive self-healing (PSH) feature

Example of show faulty Output When No Fault is Present

```
-> show faulty
```

Target	Property	Value
-----	-----	-----

Example of show faulty Output for Environmental Faults

```
-> show faulty
```

Target	Property	Value
-----	-----	-----
/SP/faultmgmt/0	fru	/SYS/FANBD0/FM0
/SP/faultmgmt/0	timestamp	Dec 14 23:01:32
/SP/faultmgmt/0/	timestamp	Dec 14 23:01:32 faults/0
/SP/faultmgmt/0/	sp_detected_fault	TACH at /SYS/FANBD0/FM0/F0 has
faults/0		exceeded low non-recoverable
		threshold.

Example of show faulty Output for Faults Detected by POST

```
-> show faulty
```

Target	Property	Value
-----	-----	-----
/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR1/CH0/D0
/SP/faultmgmt/0	timestamp	Dec 14 23:01:32
/SP/faultmgmt/0/	timestamp	Dec 14 23:01:32 faults/0
faults/0		
/SP/faultmgmt/0/	sp_detected_fault	/SYS/MB/CMP0/BR1/CH0/D0
faults/0		Forced fail(POST)

Example of show faulty Output for Faults Detected by

PSH Technology

-> show faulty		
Target	Property	Value
-----+-----+-----		
/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR0/CH1/D0
/SP/faultmgmt/0	timestamp	Dec 14 22:43:59
/SP/faultmgmt/0/ faults/0	sunw-msg-id	SUN4V-8000-DX
/SP/faultmgmt/0/ faults/0	uuid	3aa7c854-9667-e176-efe5-e487e520 7a8a
/SP/faultmgmt/0/ faults/0	timestamp	Dec 14 22:43:59

Related Information

- [“Clear FRU Faults Manually” on page 31](#) [“Display FRU Information With the show Command” on page 32](#)

▼ Clear FRU Faults Manually

Use the `clear_fault_action` property of a FRU to manually clear faults recorded in a FRU PROM. There are two conditions where this step may be needed:

- To clear a fault diagnosed by the predictive self-healing feature without replacing the faulty FRU.
- To clear a fault that the service processor was unable to clear following a FRU replacement.

Note – This procedure clears the fault from the service processor but not from the host. If the fault persists in the host, it must be manually cleared.

- At the `->` prompt, enter the `clear_fault_action` property.

```
-> set /SYS/MB/CMP0/BR0/CH0/D0 clear_fault_action=True
Are you sure you want to clear /SYS/MB/CMP0/BR0/CH0/D0 (y/n)? y
Set 'clear_fault_action' to 'true'
```

Related Info

- [“Clear PSH-Detected Faults” on page 47](#)

▼ Display FRU Information With the show Command

- At the `->` prompt, enter the `show` command.

The following example illustrates `show` command output for a memory module (FB-DIMM).

```
-> show /SYS/MB/CMP0/BR0/CH0/D0

/SYS/MB/CMP0/BR0/CH0/D0
Targets:
  R0
  R1
  SEEPROM
  SERVICE
  PRSNT
  T_AMB

Properties:
  type = DIMM
  component_state = Enabled
  fru_name = 1024MB DDR2 SDRAM FB-DIMM 333 (PC2 5300)
  fru_description = FBDIMM 1024 Mbyte
  fru_manufacturer = Micron Technology
  fru_version = FFFFFFFF
  fru_part_number = 18HF12872FD667D6D4
  fru_serial_number = d81813ce
  fault_state = OK
  clear_fault_action = (none)

Commands:
  cd
  show
```

Related Information

- [“Diagnostics Tools Quick Reference” on page 17](#)

▼ Create an ALOM CMT Shell

The default shell for the service processor is the ILOM shell. You can use the ALOM CMT compatibility shell to emulate the ALOM CMT interface that was supported on an earlier generation of CMT servers.

The service processor sends email alerts to all ALOM CMT users that are logged in. It also enters the event in the ILOM event log.

1. Log onto the service processor with username root.

When powered on, the service processor boots to the ILOM login prompt. The factory default password is changeme.

```
login: root
Password:
Waiting for daemons to initialize...

Daemons ready

Integrated Lights Out Manager

Version 2.0.0.0

Copyright 2007 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms

Warning: password is set to factory default.
```

2. Create a new user (in this example, the new user name is admin), setting the account role to Administrator and the CLI mode to alom.

```
-> create /SP/users/admin
Creating user...
Enter new password: *****
Enter new password again: *****
Created /SP/users/admin
-> set /SP/users/admin role=Administrator
Set 'role' to 'Administrator'
-> set /SP/users/admin cli_mode=alom
Set 'cli_mode' to 'alom'
```

Note – The asterisks in the example will not appear when you enter your password.

You can combine the create and set commands on a single line:

```
-> create /SP/users/admin role=Administrator cli_mode=alom
Creating user...
Enter new password: *****
Enter new password again: *****
Created /SP/users/admin
```

3. Log out of the root account after you have finished creating the new account.

```
-> exit
```

4. Log into the ALOM CLI shell (indicated by the `sc>` prompt) from the ILOM login prompt using the username and password you created in [Step 2](#).

```
login: admin
Password: *****
Waiting for daemons to initialize...

Daemons ready

Integrated Lights Out Manager

Version 2.0.0.0

Copyright 2007 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms.

sc>
```

Note – Multiple service processor accounts can be active concurrently. A user can be logged in under one account using the ILOM shell, and another account using the ALOM CMT shell.

Related Information

- [“Diagnostics Tools Quick Reference” on page 17](#)
- [“ILOM Troubleshooting Overview” on page 23](#)
- [“Service-Related ILOM Command Summary” on page 26](#)

Detecting Faults With POST

These topics explain how to use POST as a diagnostic tool.

- [“POST Overview” on page 35](#)
- [“ILOM Properties that Affect POST Behavior” on page 35](#)
- [“Examples of POST Management” on page 37](#)
- [“POST Output Quick Reference” on page 42](#)

POST Overview

Power-on self-test (POST) is a group of PROM-based tests that run when the server is powered on or when it is reset. POST checks the basic integrity of the critical hardware components in the server (CMP, memory, and I/O subsystem).

If POST detects a faulty component, the component is disabled automatically. If the system is able to run without the disabled component, it will boot when POST completes its tests. For example, if POST detects a faulty processor core, the core will be disabled and, once POST completes its test sequence, the system will boot and run using the remaining cores.

You can control various aspects of how POST performs its operations. For example, you can specify the events that cause POST to run, the level of testing POST performs, and the amount of diagnostic information POST displays. You use the ILOM `set` command to control the state of the applicable ILOM properties. These properties are listed and described in [“ILOM Properties that Affect POST Behavior” on page 35](#).

Related Information

- [“Managing POST Operations” on page 35](#)

Managing POST Operations

These topics explain how to control the way POST performs its operations.

- [“ILOM Properties that Affect POST Behavior” on page 35](#)
- [“Examples of POST Management” on page 37](#)

Related Information

- [“ILOM Properties that Affect POST Behavior” on page 35](#)
- [“Examples of POST Management” on page 37](#)
- [“POST Output Quick Reference” on page 42](#)

ILOM Properties that Affect POST Behavior

The following table describes the ILOM properties that determine how POST performs its operations.


Note – The value of `keyswitch_state` must be `normal` when individual POST parameters are changed.

TABLE: ILOM Properties Used to Manage POST Operations

Parameter	Values	Description
<code>keyswitch_state</code>	<code>normal</code>	The system can power on and run POST (based on the other parameter settings). This parameter overrides all other commands.
	<code>diag</code>	The system runs POST based on predetermined settings.
	<code>stby</code>	The system cannot power on.
	<code>locked</code>	The system can power on and run POST, but no flash updates can be made.
<code>diag_mode</code>	<code>off</code>	POST does not run.
	<code>normal</code>	Runs POST according to <code>diag_level</code> value.
	<code>service</code>	Runs POST with preset values for <code>diag_level</code> and <code>diag_verbosity</code> .
<code>diag_level</code>	<code>max</code>	If <code>diag_mode = normal</code> , runs all the minimum tests plus extensive processor and memory tests.
	<code>min</code>	If <code>diag_mode = normal</code> , runs minimum set of tests.
<code>diag_trigger</code>	<code>none</code>	Does not run POST on reset.
	<code>user_reset</code>	Runs POST upon user initiated resets.
	<code>power_on_reset</code>	Only runs POST for the first power on. This option is the default.
	<code>error_reset</code>	Runs POST if fatal errors are detected.
	<code>all_resets</code>	Runs POST after any reset.
<code>diag_verbosity</code>	<code>none</code>	No POST output is displayed.
	<code>min</code>	POST output displays functional tests with a banner and pinwheel.
	<code>normal</code>	POST output displays all test and informational messages.
	<code>max</code>	POST displays all test, informational, and some debugging messages.

The following flowchart is a graphic illustration of the same set of ILOM `set` command variables.

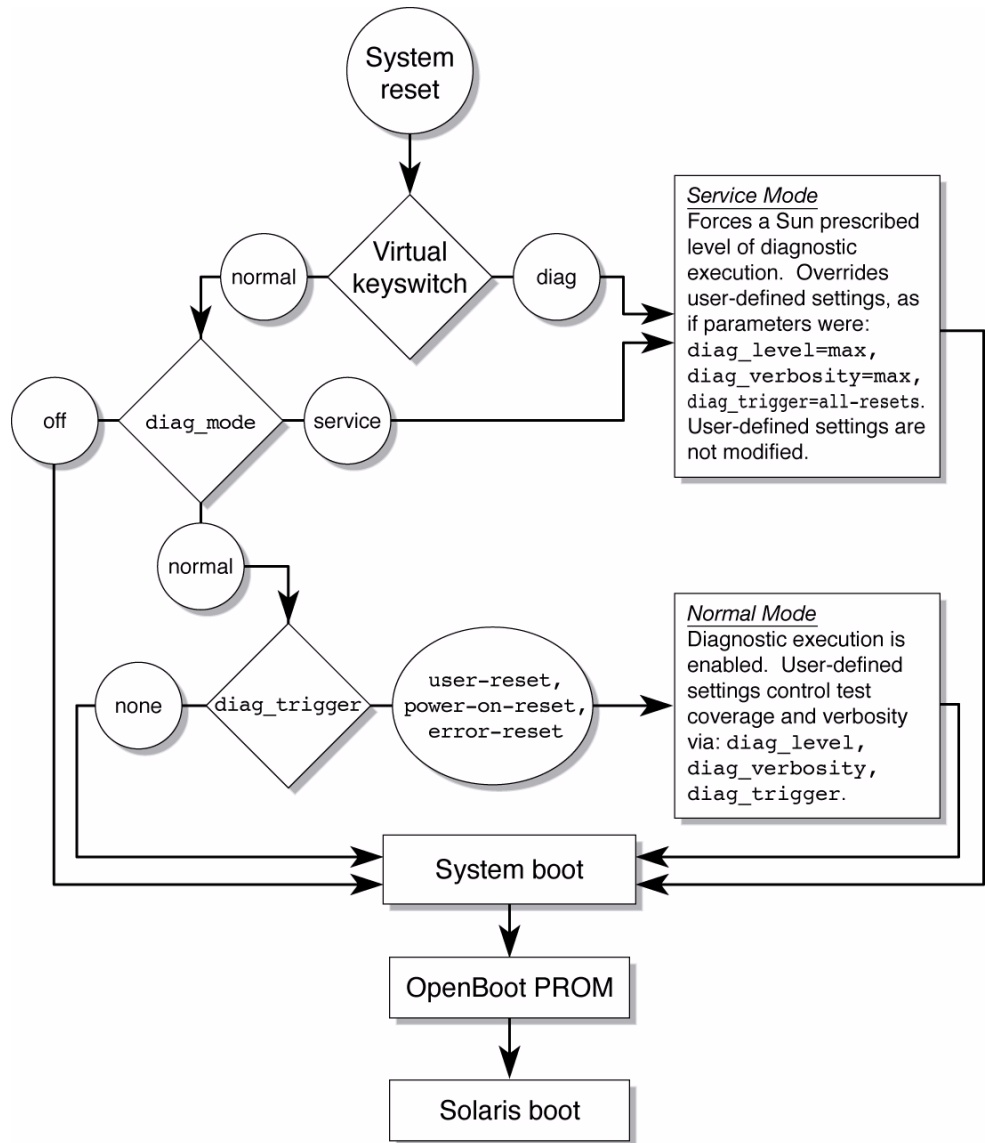FIGURE: Flowchart of ILOM Properties Used to Manage POST Operations



Examples of POST Management

This topic shows examples of the ILOM `set` command being used to configure POST behavior. The examples illustrate only a subset of the ILOM properties that can be used to control POST operations.

Note – When you change individual POST parameter values, the `keyswitch_state` value must be set to `normal`.

`keyswitch_state` *Set to normal*

You put POST in its default mode by setting the virtual `keyswitch` property to `normal`. This enables the system to turn on and for POST to run.

```
-> set /SYS keyswitch_state=normal
Set 'keyswitch_state' to 'normal'
```

`keyswitch_state` *Set to diag*

You can apply preconfigured diagnostic settings to POST operations by setting the virtual `keyswitch` property to `diag`.

```
-> set /SYS keyswitch_state=diag
Set 'keyswitch_state' to 'diag'
```

`diag_mode` *Set to off*

You can prevent POST from running by setting the `diag_mode` property to `off`.

```
-> set /SYS diag_mode=off
Set 'diag_mode' to 'off'
```

`diag_mode` *Set to service*

You force POST to run with a set of preconfigured values for `diag_level` and `diag_verbosity` by setting the `diag_mode` property to `service`.

```
-> set /SYS diag_mode=service
Set 'diag_mode' to 'service'
```

Related Information

- [“ILOM Properties that Affect POST Behavior” on page 35](#)
- [“Run POST in Maximum Mode” on page 39](#)
- [“Clear POST-Detected Faults” on page 41](#)

▼ Run POST in Maximum Mode

POST can be helpful when used as a first-stage diagnostic tool. When a fault's symptoms are unclear, you can run POST in maximum mode to generate extensive status information on all the key system components.

1. **From the ILOM prompt, set the virtual keyswitch to `diag` so that POST will run in service mode:**

```
-> set /SYS/keyswitch_state=Diag  
Set 'keyswitch_state' to 'Diag'
```

2. **Reset the system so that POST runs.**

There are several ways to initiate a reset. The following example shows a reset using a power cycle command sequence. For other methods, refer to the *SPARC Enterprise T5140 and T5240 Servers Administration Guide*.

```
-> stop /SYS  
Are you sure you want to stop /SYS (y/n)? y  
Stopping /SYS  
-> start /SYS  
Are you sure you want to start /SYS (y/n)? y  
Starting /SYS
```

Note – The server takes about one minute to power off.

3. **Switch to the system console to view the POST output.**

The following is an partial example of POST output.

```
-> start /SP/console  
-----  
...  
-----  
2007-12-19 22:01:17.810 0:0:0>INFO: STATUS: Running RGMII 1G  
BCM5466R PHY level Loopback Test  
2007-12-19 22:01:22.534 0:0:0>End : Neptune 1G Loopback Test -  
Port 2  
2007-12-19 22:01:22.542 0:0:0>Begin: Neptune 1G Loopback Test -  
Port 3  
2007-12-19 22:01:22.553 0:0:0>  
2007-12-19 22:01:22.556 0:0:0>INFO: STATUS: Running BMAC level  
Loopback Test  
2007-12-19 22:01:27.271 0:0:0>  
2007-12-19 22:01:27.274 0:0:0>INFO: STATUS: Running RGMII 1G  
BCM5466R PHY level Loopback Test
```

```

-----
2007-12-19 22:01:32.004 0:0:0>End   : Neptune 1G Loopback Test -
Port 3
2007-12-19 22:01:32.012 0:0:0>INFO:
2007-12-19 22:01:32.019 0:0:0>POST Passed all devices.
2007-12-19 22:01:32.028 0:0:0>POST:Return to VBSC.
2007-12-19 22:01:32.036 0:0:0>Master set ACK for vbosc runpost
command and spin...
-----

```

```

T5240, No Keyboard
OpenBoot ..., 7968 MB memory available, Serial #75916434.
[stacie obp #0]
Ethernet address 0:14:4f:86:64:92, Host ID: xxxxxx

```

```
{0} ok
```

4. If POST detects a faulty device, information about the device will be passed to the service processor for handling. Fault information will also be displayed.

Note – If POST does not detect a fault, the system will boot. In this case, the problem being investigated probably falls outside the scope of POST’s test coverage. POST’s failure to detect any faults should be considered diagnostic data as well.

5. Evaluate the test information returned by POST.

See “[POST Output Quick Reference](#)” on page 42 for a summary of the syntax used in POST fault reporting.

6. Run the ILOM `show faulty` command to obtain additional fault information.

If `show faulty` detects a fault, the service processor logs the fault, disables the faulty component and causes the Service Required LED to light. In the following example, FB-DIMM module `/SYS/MB/CMP0/BR1/CH0/D0` is disabled.

-> show faulty		
Target	Property	Value

/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR1/CH0/D0
/SP/faultmgmt/0	timestamp	Dec 21 16:40:56
/SP/faultmgmt/0/ faults/0	timestamp	Dec 21 16:40:56
/SP/faultmgmt/0/ faults/0	sp_detected_fault	/SYS/MB/CMP0/BR1/CH0/D0
		Forced fail (POST)

Note – The system can boot and run using memory that was not disabled.

Related Information

- [“Clear POST-Detected Faults” on page 41](#)
- [“Examples of POST Management” on page 37](#)
- [“POST Output Quick Reference” on page 42](#)

▼ **Clear POST-Detected Faults**

In most cases, when POST detects a faulty component, POST logs the fault and automatically takes the failed component out of operation by placing the component in the ASR blacklist. See [“Managing Components With Automatic System Recovery Commands” on page 50](#).

In most cases, the replacement of the faulty FRU is detected when the service processor is reset or power cycled. In this case, the fault is automatically cleared from the system. This procedure describes how to identify a POST detected fault and, if necessary, manually clear the fault.

1. **After replacing a faulty FRU, enter the `show faulty` command to identify any faults detected by POST.**

POST-detected faults are distinguished by the text `Forced fail`. No UUID number is reported for POST-detected. The following example shows `show faulty` output for a failed memory module in FB-DIMM slot `/SYS/MB/CMP0/BR1/CMP0/D0`.

-> show faulty		
Target	Property	Value
/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR1/CH0/D0
/SP/faultmgmt/0	timestamp	Dec 21 16:40:56
/SP/faultmgmt/0/ faults/0	timestamp	Dec 21 16:40:56
/SP/faultmgmt/0/ faults/0	sp_detected_fault	/SYS/MB/CMP0/BR1/CH0/D0
		Forced fail (POST)

If no fault is reported, this procedure is complete. Do not perform the subsequent steps.

2. Clear the fault by setting the FRU's `component_state` property to `Enabled`. This will remove the component from the ASR blacklist.

Use the FRU name that was reported in the fault in [Step 1](#):

```
-> set /SYS/MB/CMP0/BR1/CH0/D0 component_state=Enabled
```

The fault is cleared and should not show up when you run the `show faulty` command. Additionally, the Service Required LED is no longer on.

3. Reset the server.

You must reboot the server for the change to the `component_state` property to take effect.

4. At the ILOM prompt, use the `show faulty` command to verify that no faults are reported.

```
-> show faulty
Target          | Property          | Value
-----+-----+-----
->
```

POST Output Quick Reference

POST error messages use the following syntax:

```
c:s > ERROR: TEST = failing-test
c:s > H/W under test = FRU
c:s > Repair Instructions: Replace items in order listed by H/W
under test above
c:s > MSG = test-error-message
c:s > END_ERROR
```

In this syntax, *c* = the core number, *s* = the strand number.

Warning messages use the following syntax:

```
WARNING: message
```

Informational messages use the following syntax:

```
INFO: message
```


The following example. POST reports a memory error at FB-DIMM location /SYS/MB/CMP0/BR1/CH0/D0. The error was detected by POST running on core 7, strand 2.

```
7:2>
7:2>ERROR: TEST = Data Bitwalk
7:2>H/W under test = /SYS/MB/CMP0/BR1/CH0/D0
7:2>Repair Instructions: Replace items in order listed by 'H/W
under test' above.
7:2>MSG = Pin 149 failed on /SYS/MB/CMP0/BR1/CH0/D0 (J2001)
7:2>END_ERROR

7:2>Decode of Dram Error Log Reg Channel 2 bits
60000000.0000108c
7:2> 1 MEC 62 R/W1C Multiple corrected
errors, one or more CE not logged
7:2> 1 DAC 61 R/W1C Set to 1 if the error
was a DRAM access CE
7:2> 108c SYND 15:0 RW ECC syndrome.
7:2>
7:2> Dram Error AFAR channel 2 = 00000000.00000000
7:2> L2 AFAR channel 2 = 00000000.00000000
```

Related Information

- [“ILOM Properties that Affect POST Behavior” on page 35](#)
- [“Examples of POST Management” on page 37](#)
- [“Run POST in Maximum Mode” on page 39](#)
- [“Clear POST-Detected Faults” on page 41](#)

Managing Faults Using the PSH Feature

These topics explain how to use the Solaris Predictive Self-Healing (PSH) feature to diagnose conditions that may develop into hardware failures over time, allowing for corrective intervention before the failure occurs.

- [“Solaris PSH Feature Overview” on page 44](#)
- [“PSH-Detected Fault Console Message” on page 45](#)
- [“Identify PSH-Detected Faults With fmdump” on page 45](#)
- [“Clear PSH-Detected Faults” on page 47](#)

Solaris PSH Feature Overview

The Solaris OS uses the Fault Manager daemon, `fmd(1M)`, which starts at boot time and runs in the background to monitor the system. If a component generates an error, the daemon handles the error by correlating the error with data from previous errors and other related information to diagnose the problem. Once diagnosed, the Fault Manager daemon assigns the problem a Universal Unique Identifier (UUID) that distinguishes the problem across any set of systems. When possible, the Fault Manager daemon initiates steps to self-heal the failed component and take the component offline. The daemon also logs the fault to the `syslogd` daemon and provides a fault notification with a message ID (MSGID). You can use the message ID to get additional information about the problem from the knowledge article database.

The Predictive Self-Healing technology covers the following server components:

- Multicore processor
- Memory
- I/O subsystem

The PSH console message provides the following information about each detected fault:

- Type
- Severity
- Description
- Automated response
- Impact
- Suggested action

If the Solaris PSH facility detects a faulty component, use the `fmdump` command to identify the fault. Faulty FRUs are identified in fault messages using the FRU name.

PSH-Detected Fault Console Message

When a PSH fault is detected, a Solaris console message displayed. The following example illustrates the type of information contained in a console message generated when a PSH fault is detected.

```
SUNW-MSG-ID: SUN4V-8000-DX, TYPE: Fault, VER: 1, SEVERITY: Minor
EVENT-TIME: Wed Sep 14 10:09:46 EDT 2005
PLATFORM: SUNW,system_name, CSN: -, HOSTNAME: wgs48-37
SOURCE: cpumem-diagnosis, REV: 1.5
EVENT-ID: f92e9fbe-735e-c218-cf87-9e1720a28004
DESC: The number of errors associated with this memory module has exceeded
```

```
acceptable levels. Refer to http://sun.com/msg/SUN4V-8000-DX for more
information.
AUTO-RESPONSE: Pages of memory associated with this memory module are being
removed from service as errors are reported.
IMPACT: Total system memory capacity will be reduced as pages are retired.
REC-ACTION: Schedule a repair procedure to replace the affected memory module.
Use fmdump -v -u <EVENT_ID> to identify the module.
```

PSH-detected faults also cause the Service Required LED to be turned on.

Use the `ILOM show faulty` command to view summary information about the fault. See “[Faults Displayed by `show faulty` on page 29](#)” for more information about the `show faulty` command.

Faults detected by the Solaris PSH facility are also reported through service processor alerts.

```
SC Alert: Most detected fault, MSGID: SUN4v-8000-DX
```

Note – You must be logged in to the ALOM CMT shell to see Solaris PSH fault alerts.

▼ Identify PSH-Detected Faults With `fmdump`

The `fmdump` command displays the list of faults detected by the Solaris PSH facility and identifies the faulty FRU for a particular `EVENT_ID` (UUID).

Note – The information `fmdump` displays is taken from the PSH event log, which retains the fault data after the fault has been repaired. For that reason, `fmdump` cannot be used to verify that a FRU replacement has cleared a fault. Instead, use the `fmadm faulty` command to verify that the fault has cleared.

1. Check the event log using the `fmdump` command with `-v` for verbose output.

```
# fmdump -v -u fd940ac2-d21e-c94a-f258-f8a9bb69d05b
TIME                               UUID                               SUNW-MSG-ID
Jul 31 12:47:42.2008 fd940ac2-d21e-c94a-f258-f8a9bb69d05b SUN4V-8000-JA
100% fault.cpu.ultraSPARC-T2.misc_regs

Problem in: cpu:///cpuid=16/serial=5D67334847
Affects: cpu:///cpuid=16/serial=5D67334847
FRU: hc:///serial=101083:part=541215101/motherboard=0
Location: MB
```

In this example, the following information is provided about the detected fault:

- Date and time of the fault (Jul 31 12:47:42.2008)
- Universal Unique Identifier (UUID). The UUID is unique for every fault (fd940ac2-d21e-c94a-f258-f8a9bb69d05b)
- Message identifier, which can be used to obtain additional fault information (SUN4V-8000-JA)
- Details about the faulted FRU. This includes the FRU's part number (part=541215101) and serial number (serial=101083). The Location field provides the name of the FRU. In this example, the FRU name is MB, meaning the motherboard.

2. Use the message ID to obtain more information about this type of fault.

a. In a browser, go to the Predictive Self-Healing Knowledge Article web site:

(<http://www.sun.com/msg>)

b. Obtain the message ID from the console output or the ILOM `show faulty` command.

c. Enter the message ID in the SUNW-MSG-ID field, and click Lookup.

In the following example, the message ID SUN4V-8000-JA provides information for corrective action:

```
CPU errors exceeded acceptable levels
Type
  Fault
Severity
  Major
Description
  The number of errors associated with this CPU has exceeded
  acceptable levels.
Automated Response
  The fault manager will attempt to remove the affected CPU from
  service.
```

Impact

System performance may be affected.

Suggested Action for System Administrator

Schedule a repair procedure to replace the affected CPU, the identity of which can be determined using `fmdump -v -u <EVENT_ID>`.

Details

The Message ID: SUN4V-8000-JA indicates diagnosis has determined that a CPU is faulty. The Solaris fault manager arranged an automated attempt to disable this CPU....

3. Follow the suggested actions to repair the fault.

▼ Clear PSH-Detected Faults

When the Solaris PSH facility detects faults, the faults are logged and displayed on the console. In most cases, after the fault is repaired, the corrected state is detected by the system, and the fault condition is repaired automatically. However, this repair should be verified. In cases where the fault condition is not automatically cleared, the fault must be cleared manually.

1. After replacing a faulty FRU, power on the server.
2. At the ILOM prompt, use the `show faulty` command to identify PSH detected faults.

PSH-detected faults are distinguished from other kinds of faults by the presence of a `sunw-msg-id` and `uuid` property.

```
-> show faulty
```

Target	Property	Value
/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR0/CH1/D0
/SP/faultmgmt/0	timestamp	Dec 14 22:43:59
/SP/faultmgmt/0/ faults/0	sunw-msg-id	SUN4V-8000-DX
/SP/faultmgmt/0/ faults/0	uuid	3aa7c854-9667-e176-efe5-e487e520 7a8a
/SP/faultmgmt/0/ faults/0	timestamp	Dec 14 22:43:59

The next step depends on whether or not a fault was reported.

- If `show faulty` does not report a fault, stop. Do not go on to the next step.
- If a fault is reported, perform [Step 3](#) and [Step 4](#).

3. Use the `clear_fault_action` property of the FRU to clear the fault from the service processor.

```
-> set /SYS/MB/CMP0/BR0/CH0/D0 clear_fault_action=True
Are you sure you want to clear /SYS/MB/CMP0/BR0/CH0/D0 (y/n)? y
Set 'clear_fault_action' to 'true'
```

4. Clear the fault from all persistent fault records.

In some cases, even though the fault is cleared, some persistent fault information remains and results in erroneous fault messages at boot time. To ensure that these messages are not displayed, run the Solaris command `fmadm repair`, specifying the UUID of the erroneous message.

```
# fmadm repair 7ee0e46b-ea64-6565-e684-e996963f7b86
```

Viewing Solaris OS Messages

These topics explain how to display OS messages from the message buffer and log files maintained by Solaris OS.

- [“Check the Message Buffer” on page 49](#)
- [“View the System Message Log Files” on page 49](#)

▼ Check the Message Buffer

1. Log in as superuser.
2. Type the `dmesg` command:

```
# dmesg
```

The `dmesg` command displays the most recent messages generated by the system.

▼ View the System Message Log Files

The error logging daemon, `syslogd`, automatically records various system warnings, errors, and faults in message files. These messages can alert you to system problems such as a device that is about to fail.

The `/var/adm` directory contains several message files. The most recent messages are in the `/var/adm/messages` file. After a period of time (usually every week), a new messages file is automatically created. The original contents of the messages file are rotated to a file named `messages.1`. Over a period of time, the messages are further rotated to `messages.2` and `messages.3`, and then deleted.

1. Log in as superuser.
2. Type the following command:

```
# more /var/adm/messages
```

3. If you want to view all logged messages, type the following command:

```
# more /var/adm/messages*
```

Managing Components With Automatic System Recovery Commands

These topics explain the role played by the Automatic System Recovery (ASR) feature and how to manage the components it controls.

- [“ASR Overview” on page 50](#)
- [“View the System Message Log Files” on page 49](#)
- [“Display System Components” on page 51](#)
- [“Disable System Components” on page 52](#)
- [“Enable System Components” on page 53](#)

ASR Overview

The ASR feature enables the server to automatically configure failed components out of operation until they can be replaced. In the server, the following components are managed by the ASR feature:

- UltraSPARC T2 Plus processor strands
- Memory FB-DIMMs
- I/O subsystem

The database that contains the list of disabled components is referred to as the ASR blacklist (*asr-db*).

In most cases, POST automatically disables a faulty component. After the cause of the fault is repaired (FRU replacement, loose connector reseated, and so on), you might need to remove the component from the ASR blacklist.

The following ASR commands enable you to view and add or remove components (*asrkeys*) from the ASR blacklist. You run these commands from the ILOM -> prompt.

Command	Description
<code>show components</code>	Displays system components and their current state.
<code>set <i>asrkey</i> component_state=Enabled</code>	Removes a component from the <i>asr-db</i> blacklist, where <i>asrkey</i> is the component to enable.
<code>set <i>asrkey</i> component_state=Disabled</code>	Adds a component to the <i>asr-db</i> blacklist, where <i>asrkey</i> is the component to disable.

Note – The *asrkeys* vary from system to system, depending on how many cores and memory are present. Use the `show components` command to see the *asrkeys* on a given system.

After you enable or disable a component, you must reset (or power cycle) the system for the component's change of state to take effect.

Related Information

- [“Display System Components” on page 51](#)
- [“Disable System Components” on page 52](#)
- [“Enable System Components” on page 53](#)

▼ Display System Components

The `show components` command displays the system components (*asrkeys*) and reports their status.

- At the `->` prompt, enter the `show components` command.

In the following example, PCIE3 is shown as disabled.

```
-> show components
```

Target	Property	Value
/SYS/MB/RISER0/ PCIE0	component_state	Enabled
/SYS/MB/RISER0/ PCIE3	component_state	Disabled
/SYS/MB/RISER1/ PCIE1	component_state	Enabled
/SYS/MB/RISER1/ PCIE4	component_state	Enabled
/SYS/MB/RISER2/ PCIE2	component_state	Enabled
/SYS/MB/RISER2/ PCIE5	component_state	Enabled
/SYS/MB/NET0	component_state	Enabled
/SYS/MB/NET1	component_state	Enabled
/SYS/MB/NET2	component_state	Enabled
/SYS/MB/NET3	component_state	Enabled
/SYS/MB/PCIE	component_state	Enabled

Related Information

- [“Display System Components” on page 51](#)
- [“Disable System Components” on page 52](#)
- [“Enable System Components” on page 53](#)

▼ Disable System Components

You disable a component by setting its `component_state` property to `Disabled`. This adds the component to the ASR blacklist.

1. At the `->` prompt, set the `component_state` property to `Disabled`.

```
-> set /SYS/MB/CMP0/BR1/CH0/D0 component_state=Disabled
```

2. Reset the server so that the ASR command takes effect.

```
-> stop /SYS
Are you sure you want to stop /SYS (y/n)? y
Stopping /SYS
```

```
-> start /SYS  
Are you sure you want to start /SYS (y/n)? y  
Starting /SYS
```

Note – In the ILOM shell there is no notification when the system is actually powered off. Powering off takes about a minute. Use the `show /HOST` command to determine if the host has powered off.

Related Information

- [“View the System Message Log Files” on page 49](#)
- [“Display System Components” on page 51](#)
- [“Enable System Components” on page 53](#)

▼ Enable System Components

You enable a component by setting its `component_state` property to `Enabled`. This removes the component from the ASR blacklist.

1. At the `->` prompt, set the `component_state` property to `Enabled`.

```
-> set /SYS/MB/CMP0/BR1/CH0/D0 component_state=Enabled
```

2. Reset the server so that the ASR command takes effect.

```
-> stop /SYS  
Are you sure you want to stop /SYS (y/n)? y  
Stopping /SYS  
-> start /SYS  
Are you sure you want to start /SYS (y/n)? y  
Starting /SYS
```

Note – In the ILOM shell there is no notification when the system is actually powered off. Powering off takes about a minute. Use the `show /HOST` command to determine if the host has powered off.

Related Information

- [“View the System Message Log Files” on page 49](#)
- [“Display System Components” on page 51](#)
- [“Disable System Components” on page 52](#)

Detecting Faults Using SunVTS Software

This topic explains in general terms how to use SunVTS software to exercise system components. For detailed instructions on using SunVTS software, see the latest version of the SunVTS Software User's Guide and any associated Release Notes.

- [“Run the SunVTS Software” on page 54](#)

▼ Run the SunVTS Software

The following procedure description is based on use of the SunVTS software's browser interface, which is the default interface. SunVTS software also supports a TTY user interface and a command-line interface (CLI). All three interfaces are described in the SunVTS Software User's Guide.


1. **Start the agent and Javabridge on the server.**

```
# cd /usr/sunvts/bin
# ./startsunvts
```

2. **At the interface prompt, choose C to start the SunVTS client.**
3. **Start SunVTS browser environment from a web browser on the client system.**
In the browser's address field type: `http://servername:6789`.

This causes the SunVTS browser interface to be displayed.

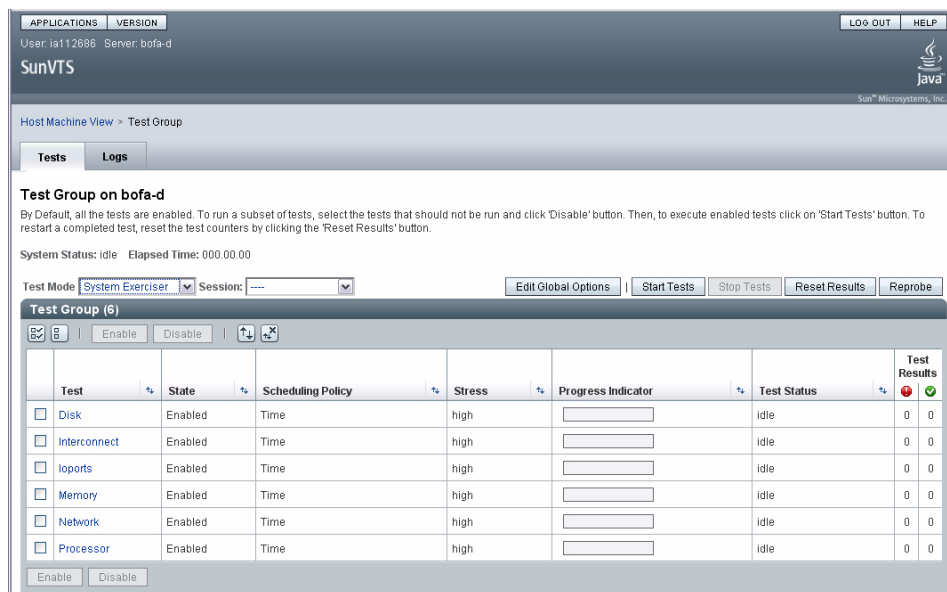FIGURE: SunVTS Browser Interface



4. (Optional) Select the test category you want to run.

The following are test categories that are recommended for running on this server.

SunVTS Tests	Field Replaceable Units Exercised by Tests
Memory Test	FB-DIMMs
Processor Test	CMP, motherboard
Disk Test	Disks, cables, disk backplane, DVD drive
Network Test	Network interface, network cable, CMP, motherboard
Interconnect Test	Board ASICs and interconnects
IO Ports Test	I/O (serial port interface), USB subsystem
Environment Test	Motherboard and service processor

5. (Optional) Customize individual tests.

Click on the name of the test to select and customize individual tests.

Note – Use the System Exerciser – High Stress Mode to test system operations. Use the Component Stress – High setting for the highest stress possible.

6. Click the **Start** button to start the test process. Status and error messages appear in the test messages area located across the bottom of the window. You can stop testing at any time by clicking the **Stop** button

Status and error messages appear in the test messages area spread across the bottom of the window.

Note – You can stop the test process at any time by clicking on the **Stop** button.

7. To check for SunVTS messages, click on the **Logs** tab.

You can view any of the following logs:

- **Information** – Detailed versions of all the status and error messages that appear in the test messages area.
- **Test Error** – Detailed error messages from individual tests.
- **VTS Kernel (vtsk) Error** – Error messages pertaining to SunVTS software itself. Look here if SunVTS software appears to be acting strangely, especially when it starts up.
- **Solaris OS Messages** (/var/adm/messages) – A file containing messages generated by the operating system and various applications.
- **Test Messages** (/var/sunvts/logs) – A directory containing the log files.

Preparing to Service the System

These topics describe how to prepare the SPARC Enterprise T5140 and T5240 servers for servicing.

- [“General Safety Information” on page 57](#)
- [“Essential Tools” on page 59](#)
- [“Removing Power From the System” on page 60](#)
- [“Positioning the System for Servicing” on page 62](#)
- [“Accessing Internal Components” on page 67](#)

General Safety Information

For your protection, observe the following safety precautions when setting up your equipment:

- Follow all cautions and instructions marked on the equipment and described in the documentation shipped with your system.
- Follow all cautions and instructions marked on the equipment and described in the *SPARC Enterprise T5140 and T5240 Servers Safety and Compliance Guide*.
- Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the equipment’s electrical rating label.
- Follow the electrostatic discharge safety practices as described in this section.

Safety Symbols

You will see the following symbols in various places in the server documentation. Note the explanations provided next to each symbol.



Caution – There is a risk of personal injury or equipment damage. To avoid personal injury and equipment damage, follow the instructions.



Caution – Hot surface. Avoid contact. Surfaces are hot and might cause personal injury if touched.



Caution – Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

Electrostatic Discharge Safety Measures

Electrostatic discharge (ESD) sensitive devices, such as the motherboards, PCI cards, hard drives, and memory cards require special handling.



Caution – Circuit boards and hard drives contain electronic components that are extremely sensitive to static electricity. Ordinary amounts of static electricity from clothing or the work environment can destroy the components located on these boards. Do not touch the components along their connector edges.



Caution – You must disconnect both power supplies before servicing any of the components documented in this chapter.

Antistatic Wrist Strap Use

Wear an antistatic wrist strap and use an antistatic mat when handling components such as hard drive assemblies, circuit boards, or PCI cards. When servicing or removing server components, attach an antistatic strap to your wrist and then to a metal area on the chassis. Following this practice equalizes the electrical potentials between you and the server.

Note – An antistatic wrist strap is no longer included in the accessory kit for the SPARC Enterprise T5140 and T5240 servers. However, antistatic wrist straps are still included with options.

Antistatic Mat

Place ESD-sensitive components such as motherboards, memory, and other PCBs on an antistatic mat.

Essential Tools

The following tools should be available for most service operations:

- Antistatic wrist strap
 - Antistatic mat
 - No. 1 Phillips screwdriver
 - No. 2 Phillips screwdriver
 - No. 1 flat-blade screwdriver (battery removal)
 - Pen or pencil (to power on server)
-

▼ Find the Chassis Serial Number

If you require technical support for your system, you will be asked to provide the server's chassis serial number. You can find the chassis serial number on a sticker located on the front of the server and on another sticker on the side of the server.

If it is not convenient to read either sticker, you can run the ILOM `show /SYS` command to obtain the chassis serial number.

- Type `show /SYS` at the ILOM prompt.

```
-> show /SYS

/SYS
  Targets:
    SERVICE
    LOCATE
    ACT
    PS_FAULT
    TEMP_FAULT
    FAN_FAULT
    ...
```

```
Properties:
    type = Host System
    keyswitch_state = Normal
    product_name = T5240
    product_serial_number = 0723BBC006
    fault_state = OK
    clear_fault_action = (none)
    power_state = On

Commands:
    cd
    reset
    set
    show
    start
    stop
```

Removing Power From the System

These topics describe different methods for removing power from the chassis.

- [“Power Off the Server \(Service Processor Command\)” on page 60](#)
- [“Power Off the Server \(Power Button - Graceful\)” on page 62](#)
- [“Power Off the Server \(Emergency Shutdown\)” on page 62](#)
- [“Disconnect Power Cords From the Server” on page 62](#)

Related Information

- [“Servicing Motherboard Components” on page 81](#)
- [“Servicing Boards and Components” on page 143](#)

▼ Power Off the Server (Service Processor Command)

You can use the service processor to perform a graceful shutdown of the server, and to ensure that all of your data is saved and the server is ready for restart.

Note – Additional information about powering off the server is located in the *SPARC Enterprise T5140 and T5240 Servers Administration Guide*.

1. Log in as superuser or equivalent.

Depending on the type of problem, you might want to view server status or log files. You also might want to run diagnostics before you shut down the server. Refer to the *SPARC Enterprise T5140 and T5240 Servers Administration Guide* for log file information.

2. Notify affected users that the server will be shut down.

Refer to your Solaris system administration documentation for additional information.

3. Save any open files and quit all running programs.

Refer to your application documentation for specific information on these processes.

4. Shut down all logical domains.

Refer to the Solaris system administration documentation for additional information.

5. Shut down the Solaris OS.

Refer to the Solaris system administration documentation for additional information.

6. Switch from the system console to the -> prompt by typing the #. (Hash Period) key sequence.

7. At the -> prompt, type the `stop /SYS` command.

Note – You can also use the Power button on the front of the server to initiate a graceful server shutdown. (See [“Power Off the Server \(Power Button - Graceful\)” on page 62](#).) This button is recessed to prevent accidental server power-off. Use the tip of a pen to operate this button.

Refer to the *Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5140 and T5240 Servers* for more information about the `poweroff` command.

Related Information

- [“Power Off the Server \(Power Button - Graceful\)” on page 62](#)
- [“Power Off the Server \(Emergency Shutdown\)” on page 62](#)

▼ Power Off the Server (Power Button - Graceful)

- **Press and release the Power button.**

If necessary, use a pen or pencil to press the Power button.

Related Information

- [“Power Off the Server \(Service Processor Command\)” on page 60](#)
- [“Power Off the Server \(Emergency Shutdown\)” on page 62](#)

▼ Power Off the Server (Emergency Shutdown)



Caution – All applications and files will be closed abruptly without saving changes. File system corruption might occur.

- **Press and hold the Power button for four seconds.**

Related Information

- [“Power Off the Server \(Service Processor Command\)” on page 60](#)
- [“Power Off the Server \(Power Button - Graceful\)” on page 62](#)

▼ Disconnect Power Cords From the Server

- **Unplug all power cords from the server.**



Caution – Because 3.3v standby power is always present in the system, you must unplug the power cords before accessing any cold-serviceable components.

Positioning the System for Servicing

These topics explain how to position the system so you can access the components that need servicing.

- [“Extend the Server to the Maintenance Position” on page 63](#)
- [“Remove the Server From the Rack” on page 64](#)

▼ Extend the Server to the Maintenance Position

The following components can be serviced with the server in the maintenance position:

- Hard drives
- Fan modules
- Power supplies
- DVD/USB module
- Fan power boards
- FB-DIMMs
- PCIe/XAUI cards
- Motherboard battery
- SCC module

If the server is installed in a rack with extendable slide rails, use this procedure to extend the server to the maintenance position.

1. **(Optional) Use the `set /SYS/LOCATE` command from the `->` prompt to locate the system that requires maintenance.**

```
-> set /SYS/LOCATE value=Fast_Blink
```

Once you have located the server, press the Locator LED and button to turn it off.


2. **Verify that no cables will be damaged or will interfere when the server is extended.**

Although the cable management arm (CMA) that is supplied with the server is hinged to accommodate extending the server, you should ensure that all cables and cords are capable of extending.

3. **From the front of the server, release the two slide release latches, as shown in the following figure.**

Squeeze the green slide release latches to release the slide rails.

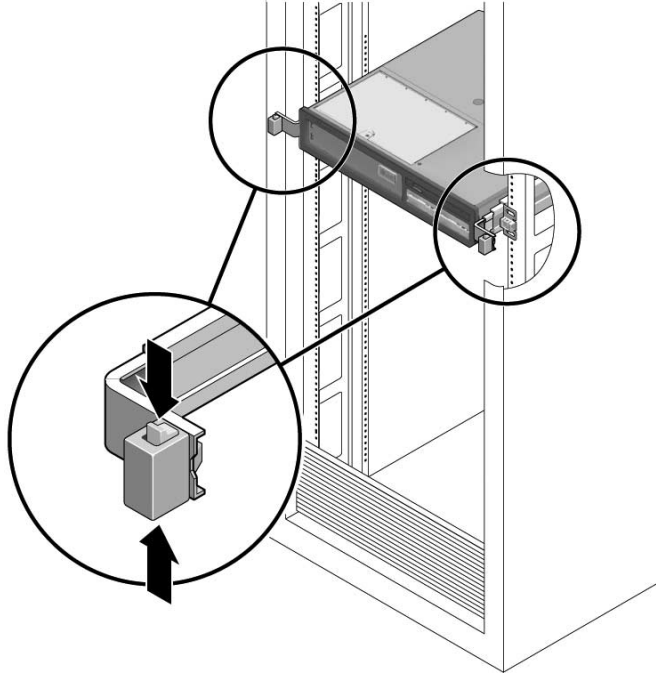FIGURE: Slide Release Latches



4. While squeezing the slide release latches, slowly pull the server forward until the slide rails latch.

▼ Remove the Server From the Rack

The server must be removed from the rack to remove or install the following components:

- Motherboard
- Power distribution board
- Power supply backplane (SPARC Enterprise T5240 server)
- Paddle card
- Disk cage
- Hard drive backplane
- Front panel light-pipe assemblies




Caution – If necessary, use two people to dismount and carry the chassis.

1. Disconnect all the cables and power cords from the server.
2. Extend the server to the maintenance position.
See [“Power Off the Server \(Service Processor Command\)”](#) on page 60.
3. Press the metal lever that is located on the inner side of the rail to disconnect the cable management arm (CMA) from the rail assembly, as shown in the following figure.

The CMA is still attached to the cabinet, but the server chassis is now disconnected from the CMA.

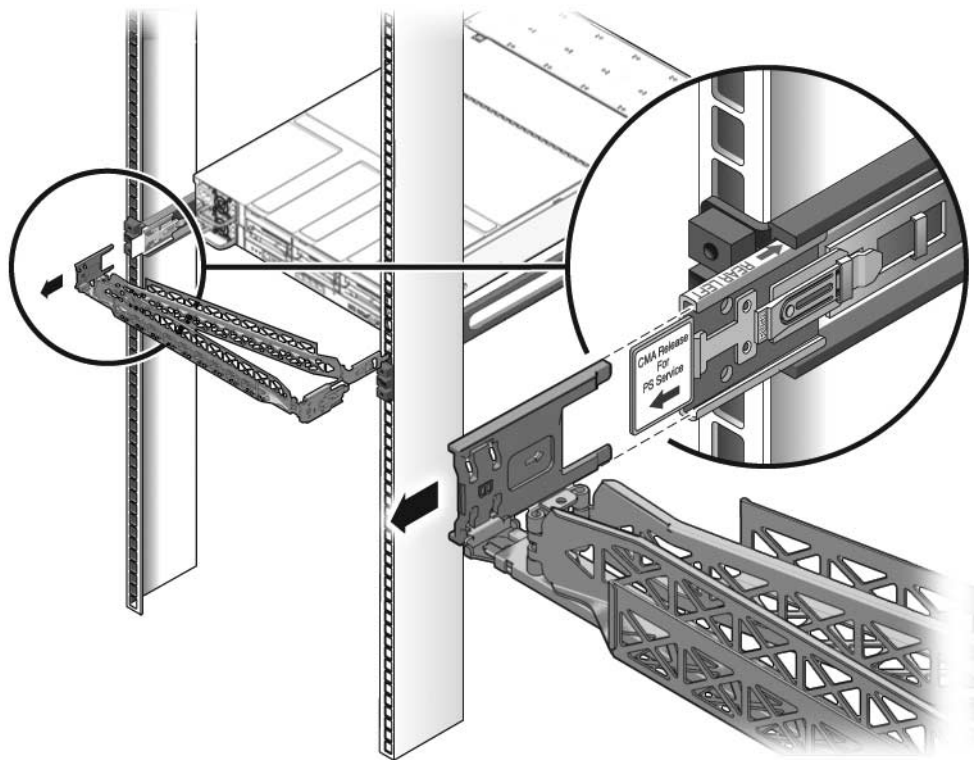FIGURE: Metal Lever and Cable Management Arm






Caution – If necessary, use two people to dismount and carry the chassis.

4. From the front of the server, pull the release tabs forward and pull the server forward until it is free of the rack rails as shown in the following figure.

A release tab is located on each rail.

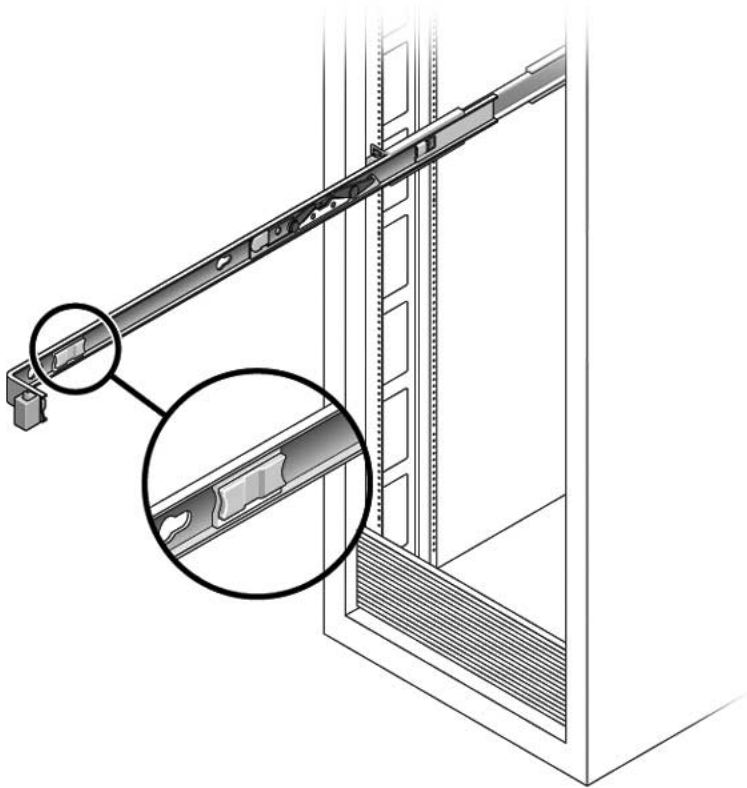FIGURE: Release Tabs and Slide Assembly



5. Set the server on a sturdy work surface.

Accessing Internal Components

These topics explain how to access components contained within the chassis and the steps needed to protect against damage or injury from electrostatic discharge.

- [“Perform Electrostatic Discharge Prevention Measures” on page 67](#)
- [“Remove the Top Cover” on page 67](#)
- [“Remove the Air Duct” on page 103](#)
- [“Install the Air Duct” on page 104](#)

▼ Perform Electrostatic Discharge Prevention Measures

Many components housed within the chassis can be damaged by electrostatic discharge. To protect these components from damage, perform the following steps before opening the chassis for service.

1. **Prepare an antistatic surface to set parts on during the removal, installation, or replacement process.**

Place ESD-sensitive components such as the printed circuit boards on an antistatic mat. The following items can be used as an antistatic mat:

- Antistatic bag used to wrap a replacement part
- ESD mat
- A disposable ESD mat (shipped with some replacement parts or optional system components)

2. **Attach an antistatic wrist strap.**

When servicing or removing server components, attach an antistatic strap to your wrist and then to a metal area on the chassis.

Related Information

- [“General Safety Information” on page 57](#)

▼ Remove the Top Cover

1. **Unlatch the fan module door.**


Pull the release tabs back to release the door.

2. Press the top cover release button and slide the top cover to the rear about a 0.5 inch (12.7 mm).

The following figure shows the release button in a SPARC Enterprise T5140 server. The top cover release button in a SPARC Enterprise T5240 server is similar.

Note – In newer versions of the top cover, the release button is located closer to the edge of the cover. Except for this difference in location, the release mechanism operates in the same manner in both versions.

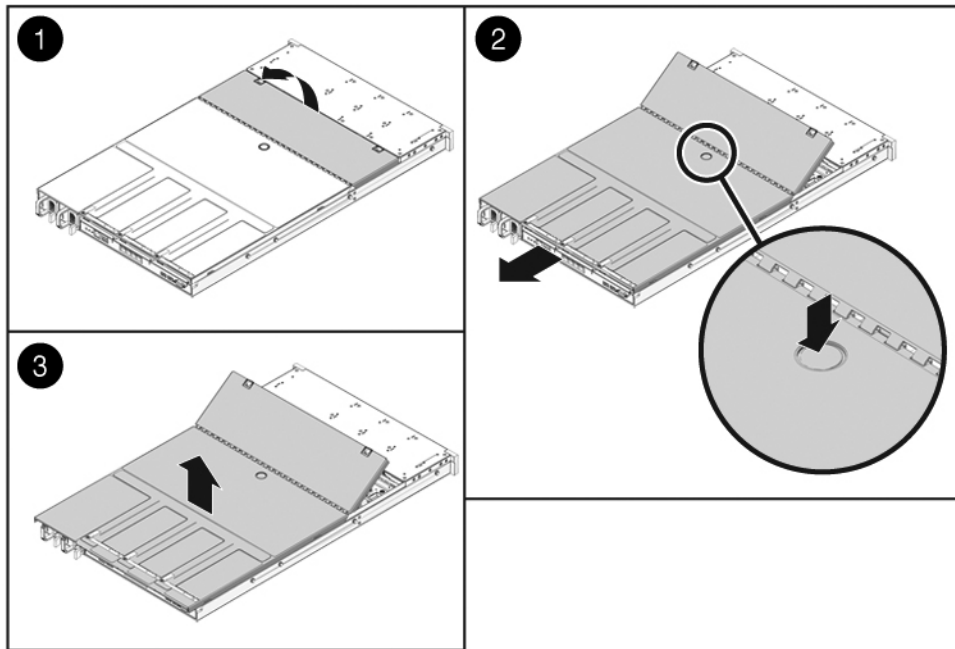FIGURE: Removing the Top Cover



3. Remove the top cover.

Lift up and remove the cover. The figure above shows the SPARC Enterprise T5140 server. The SPARC Enterprise T5240 server is similar.

Related Information

- [“Install the Top Cover” on page 177](#)

Servicing Hard Drives

These topics explain how to remove and install hard drives in SPARC Enterprise T5140 and T5240 servers.

- [“Hard Drive Servicing Overview” on page 69](#)
- [“Hard Drive LEDs” on page 70](#)
- [“Remove a Hard Drive” on page 71](#)
- [“Install a Hard Drive” on page 73](#)
- [“Four-Drive Capable Backplane Configuration Reference” on page 77](#)
- [“Eight-Drive Capable Backplane Configuration Reference” on page 78](#)
- [“Sixteen-Drive Capable Backplane Configuration Reference” on page 79](#)

Hard Drive Servicing Overview

Hard drives in SPARC Enterprise T5140 and T5240 servers are capable of being removed and installed while the server is running. This feature, referred to as being *hot-pluggable*, depends on how the hard drives are configured.

Note – SPARC Enterprise T5140 and T5240 servers support both traditional, disk-based storage devices and flash SSDs, diskless storage devices based on solid-state memory. The terms “hard drive” and “HDD” (hard disk drive) are used in a generic sense to refer to both types of internal storage devices.

To hot-plug a drive, you must first take it offline. This prevents applications from accessing it and removes software links to it.

There are two conditions that will prevent a drive from being hot-plugged:

- The hard drive contains the sole image of the operating system -- that is, the operating system is not mirrored on another drive.
- The hard drive cannot be logically isolated from the server’s online operations.

If either of these conditions exist, you must power off the server before replacing a hard drive.

Related Information

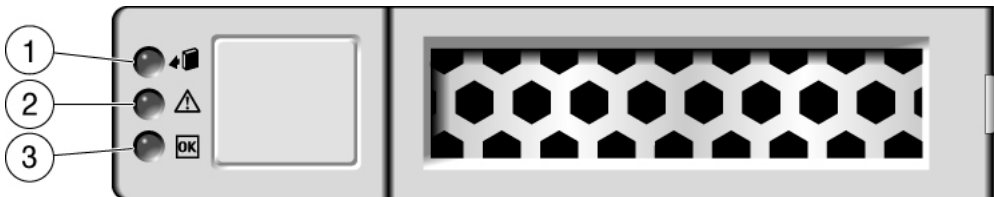
- [“Removing Power From the System” on page 60](#)
- [“Power On the Server Using the poweron Command” on page 181](#)
- [“Power On the Server Using the Front Panel Power Button” on page 182](#)
- [“Four-Drive Capable Backplane Configuration Reference” on page 77](#)
- [“Eight-Drive Capable Backplane Configuration Reference” on page 78](#)
- [“Sixteen-Drive Capable Backplane Configuration Reference” on page 79](#)

Hard Drive LEDs

Each hard drive has a group of three status LEDs, as shown in the following figure. Both disk-based hard drives and flash SSDs use the same set of LEDs.





Note – The OK/Activity LED has slightly different behavior for SSDs than for disk-based drives. This difference is described in the table that follows the figure.

FIGURE: Hard Drive LEDs



The following table explains how to interpret the hard drive status LEDs.

TABLE: Status LEDs for Hard Drives

LED		Color	Description
1	Ready to Remove	 Blue	Indicates that a hard drive can be removed during a hot-plug operation.
2	Service Required	 Amber	Indicates that the hard drive is has experienced a fault condition.
3	OK/Activity (HDDs)	 Green	Indicates the HDD's availability for use. <ul style="list-style-type: none">• On -- Drive is idle and available for use.• Off -- Read or write activity is in progress.
3	OK/Activity (SSDs)	 Green	Indicates the drive's availability for use. <ul style="list-style-type: none">• On -- Drive is idle and available for use.• Off -- Read or write activity is in progress.• Flashes on and off -- This occurs during hot-plug operations. It can be ignored.

Note – The front and rear panel Service Required LEDs also light when the system detects a hard drive fault.

Related Information

- [“Remove a Hard Drive” on page 71](#)
- [“Install a Hard Drive” on page 73](#)

▼ Remove a Hard Drive

Removing a hard drive from the server is a three-step process. You must first identify the drive you wish to remove, unconfigure that drive from the server, and then manually remove the drive from the chassis.

1. At the Solaris prompt, type the `cfgadm -al` command. This will list all drives in the device tree, including drives that are not configured.

```
# cfgadm -al
```

This command should identify the `Ap_id` for the hard drive you plan to remove, as shown below.

Ap_id	Type	Receptacle	Occupant	Condition
c0	scsi-bus	connected	configured	unknown
c0::dsk/c1t0d0	disk	connected	configured	unknown
c0::dsk/c1t1d0	disk	connected	configured	unknown
usb0/1	unknown	empty	unconfigured	ok
usb0/2	unknown	empty	unconfigured	ok
usb0/3	unknown	empty	unconfigured	ok
usb1/1	unknown	empty	unconfigured	ok
usb1/2	unknown	empty	unconfigured	ok
usb1/3	unknown	empty	unconfigured	ok
usb2/1	unknown	empty	unconfigured	ok
usb2/2	unknown	empty	unconfigured	ok
usb2/3	unknown	empty	unconfigured	ok
usb2/4	unknown	empty	unconfigured	ok
usb2/5	unknown	empty	unconfigured	ok
usb2/6	unknown	empty	unconfigured	ok
usb2/7	unknown	empty	unconfigured	ok
usb2/8	unknown	empty	unconfigured	ok

2. Type `cfgadm -c unconfigure` to unconfigure the disk.

For example, the following shows drive `c0::dsk/c1t1d1` being unconfigured.


```
# cfgadm -c unconfigure c0::dsk/c1t1d1
```

3. Wait until the blue Ready-to-Remove LED lights.

This LED will help you identify which drive is unconfigured and can be removed.

4. On the drive you plan to remove, push the hard drive release button to open the latch.

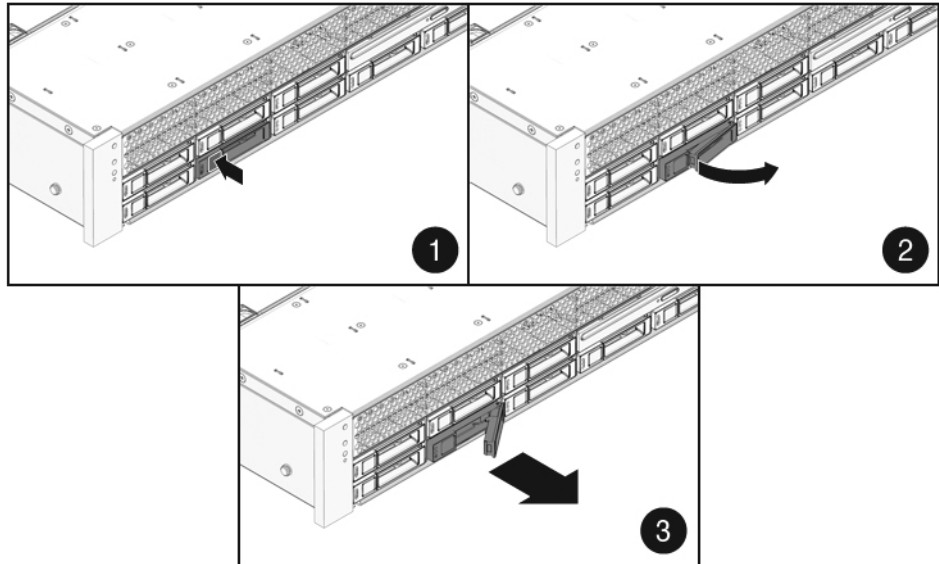FIGURE: Locating the Hard Drive Release Button and Latch



Caution – The latch is not an ejector. Do not bend the latch too far to the right. Doing so can damage the latch

5. Grasp the latch and pull the drive out of the drive slot.

Related Information

- [“Install a Hard Drive” on page 73](#)
- [“Four-Drive Capable Backplane Configuration Reference” on page 77](#)
- [“Eight-Drive Capable Backplane Configuration Reference” on page 78](#)
- [“Sixteen-Drive Capable Backplane Configuration Reference” on page 79](#)

▼ Install a Hard Drive

Installing a hard drive into the SPARC Enterprise T5140 and T5240 servers is a two-step process. You must first install a hard drive into the desired drive slot. Then you must configure that drive to the server.


1. If necessary, remove the blank panel from the chassis.

Note – SPARC Enterprise T5140 servers might have up to seven blank panels covering unoccupied drive slots. SPARC Enterprise T5240 servers might have as many as fifteen blank panels covering unoccupied hard drive slots.

2. Align the replacement drive to the drive slot.

Hard drives are physically addressed according to the slot in which they are installed. If you install a hard drive as a replacement for a drive that was removed, the new drive must go into the same slot as the drive it is replacing.

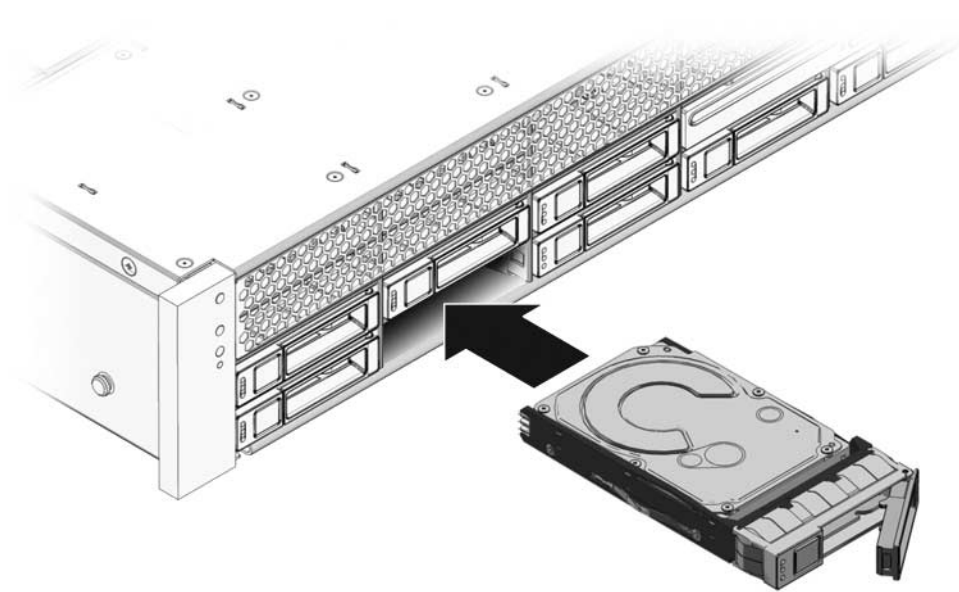FIGURE: Installing a Hard Drive (Illustrating Installation in a SPARC Enterprise T5240 Server)



- 3. With the latch open, slide the hard drive into its bay until it is fully seated. Then close the latch to secure the drive.**

4. At the Solaris prompt, type the `cfgadm -al` command. This will list all drives in the device tree, including drives that are not configured.

```
# cfgadm -al
```

This command should identify the `Ap_id` for the hard drive you plan to remove, as shown below.

Ap_id	Type	Receptacle	Occupant	Condition
c0	scsi-bus	connected	configured	unknown
c0::dsk/c1t0d0	disk	connected	configured	unknown
c0::sd1	disk	connected	unconfigured	unknown
usb0/1	unknown	empty	unconfigured	ok
usb0/2	unknown	empty	unconfigured	ok
usb0/3	unknown	empty	unconfigured	ok
usb1/1	unknown	empty	unconfigured	ok
usb1/2	unknown	empty	unconfigured	ok
usb1/3	unknown	empty	unconfigured	ok
usb2/1	unknown	empty	unconfigured	ok
usb2/2	unknown	empty	unconfigured	ok
usb2/3	unknown	empty	unconfigured	ok
usb2/4	unknown	empty	unconfigured	ok
usb2/5	unknown	empty	unconfigured	ok
usb2/6	unknown	empty	unconfigured	ok
usb2/7	unknown	empty	unconfigured	ok
usb2/8	unknown	empty	unconfigured	ok

5. Type the `cfgadm -c configure` command to configure the disk.

For example, the following shows drive `c0::dsk/c1t1d1` being configured.

```
# cfgadm -c configure c0::sd1
```

where `c0::sd1` is the disk that you want to configure.

6. Wait until the blue Ready-to-Remove LED is no longer lit on the drive that you installed.

7. At the Solaris prompt, type the `cfgadm -al` command to list all drives in the device tree, including any drives that are not configured.

```
# cfgadm -al
```

This command should identify the `Ap_id` for the hard drive that you installed. The output should indicate that the drive you installed is configured. For example, the output should look like this:

Ap_id	Type	Receptacle	Occupant	Condition
c0	scsi-bus	connected	configured	unknown
c0::dsk/c1t0d0	disk	connected	configured	unknown
c0::dsk/c1t1d0	disk	connected	configured	unknown
usb0/1	unknown	empty	unconfigured	ok
usb0/2	unknown	empty	unconfigured	ok
usb0/3	unknown	empty	unconfigured	ok
usb1/1	unknown	empty	unconfigured	ok
usb1/2	unknown	empty	unconfigured	ok
usb1/3	unknown	empty	unconfigured	ok
usb2/1	unknown	empty	unconfigured	ok
usb2/2	unknown	empty	unconfigured	ok
usb2/3	unknown	empty	unconfigured	ok
usb2/4	unknown	empty	unconfigured	ok
usb2/5	unknown	empty	unconfigured	ok
usb2/6	unknown	empty	unconfigured	ok
usb2/7	unknown	empty	unconfigured	ok
usb2/8	unknown	empty	unconfigured	ok

Related Information

- [“Install a Hard Drive” on page 73](#)
- [“Four-Drive Capable Backplane Configuration Reference” on page 77](#)
- [“Eight-Drive Capable Backplane Configuration Reference” on page 78](#)
- [“Sixteen-Drive Capable Backplane Configuration Reference” on page 79](#)

Four-Drive Capable Backplane Configuration Reference

The following table shows the physical hard drive locations in a four-drive capable backplane.

TABLE: Physical Drive Locations in a Four-Drive Capable Backplane

			DVD	
HDD0	HDD1		HDD2	HDD3

The following table matches the FRU names and the default OpenBoot PROM/Solaris drive pathnames with the physical drive locations in a four-drive capable backplane.

TABLE: Physical Drive Locations, FRU Names, and Default Drive Pathnames for a Four-Drive Capable Backplane

Physical Location	FRU Name	OpenBoot PROM/Solaris Default Drive Pathname
HDD0	/SYS/HDD0	c0::dsk/c1t0d0
HDD1	/SYS/HDD1	c0::dsk/c1t1d0
HDD2	/SYS/HDD2	c0::dsk/c1t2d0
HDD3	/SYS/HDD3	c0::dsk/c1t3d0
DVD	/SYS/DVD	

Related Information

- [“Install a Hard Drive” on page 73](#)
- [“Remove a Hard Drive” on page 71](#)
- [“Eight-Drive Capable Backplane Configuration Reference” on page 78](#)
- [“Sixteen-Drive Capable Backplane Configuration Reference” on page 79](#)

Eight-Drive Capable Backplane Configuration Reference

The following table identifies the hard drive slot numbering in an eight-drive capable backplane.

TABLE: Physical Drive Locations in an Eight-Drive Capable Backplane

HDD1	HDD3	HDD5	DVD	
HDD0	HDD2	HDD4	HDD6	HDD7

The following table matches the FRU names and the default OpenBoot PROM/Solaris drive pathnames with the physical drive locations in an eight-drive capable backplane.

TABLE: Physical Drive Locations, FRU Names, and Default Drive Pathnames for an Eight-Drive Capable Backplane

Physical Location	FRU Name	OpenBoot PROM/Solaris Default Drive Pathname
HDD0	/SYS/HDD0	c0::dsk/c1t0d0
HDD1	/SYS/HDD1	c0::dsk/c1t1d0
HDD2	/SYS/HDD2	c0::dsk/c1t2d0
HDD3	/SYS/HDD3	c0::dsk/c1t3d0
HDD4	/SYS/HDD4	c0::dsk/c1t4d0
HDD5	/SYS/HDD5	c0::dsk/c1t5d0
HDD6	/SYS/HDD6	c0::dsk/c1t6d0
HDD7	/SYS/HDD7	c0::dsk/c1t7d0
DVD	/SYS/DVD	

Related Information

- [“Install a Hard Drive” on page 73](#)
- [“Remove a Hard Drive” on page 71](#)
- [“Four-Drive Capable Backplane Configuration Reference” on page 77](#)
- [“Sixteen-Drive Capable Backplane Configuration Reference” on page 79](#)

Sixteen-Drive Capable Backplane Configuration Reference

The following table identifies the hard drive slot numbering in a sixteen-drive capable backplane.

TABLE: Physical Drive Locations in a Sixteen-Drive Capable Backplane

HDD3	HDD7		HDD12	HDD15
HDD2	HDD6		HDD11	HDD14
HDD1	HDD5	HDD9	DVD	
HDD0	HDD4	HDD8	HDD10	HDD13

The following table matches the FRU names and the default OpenBoot PROM/Solaris drive pathnames with the physical drive locations in a sixteen-drive capable backplane.

TABLE: Physical Drive Locations, FRU Addresses, and Default Drive Pathnames for a Sixteen-Drive Capable Backplane

Physical Location	FRU Address	OpenBoot PROM/Solaris Default Drive Pathname
HDD0	/SYS/HDD0	c0::disk/c1t0d0
HDD1	/SYS/HDD1	c0::disk/c1t1d0
HDD2	/SYS/HDD2	c0::disk/c1t2d0
HDD3	/SYS/HDD3	c0::disk/c1t3d0
HDD4	/SYS/HDD4	c0::disk/c1t4d0
HDD5	/SYS/HDD5	c0::disk/c1t5d0
HDD6	/SYS/HDD6	c0::disk/c1t6d0
HDD7	/SYS/HDD7	c0::disk/c1t7d0
HDD8	/SYS/HDD8	c0::disk/c1t8d0
HDD9	/SYS/HDD9	c0::disk/c1t9d0
HDD10	/SYS/HDD10	c0::disk/c1t10d0
HDD11	/SYS/HDD11	c0::disk/c1t11d0
HDD12	/SYS/HDD12	c0::disk/c1t12d0
HDD13	/SYS/HDD13	c0::disk/c1t13d0

TABLE: Physical Drive Locations, FRU Addresses, and Default Drive Pathnames for a Sixteen-Drive Capable Backplane (*Continued*)

Physical Location	FRU Address	OpenBoot PROM/Solaris Default Drive Pathname
HDD14	/SYS/HDD14	c0::dsk/c1t14d0
HDD15	/SYS/HDD15	c0::dsk/c1t15d0
DVD	/SYS/DVD	

Related Information

- [“Install a Hard Drive” on page 73](#)
- [“Remove a Hard Drive” on page 71](#)
- [“Four-Drive Capable Backplane Configuration Reference” on page 77](#)
- [“Eight-Drive Capable Backplane Configuration Reference” on page 78](#)

Servicing Motherboard Components

These topics explain how to replace the motherboard and its components in the SPARC Enterprise T5140 and SPARC Enterprise T5240 servers.

- [“Servicing FB-DIMMs” on page 81](#)
- [“Servicing the Air Duct” on page 103](#)
- [“Servicing PCIe/XAUI Risers” on page 104](#)
- [“Servicing the Battery” on page 114](#)
- [“Servicing the SCC Module” on page 116](#)
- [“Servicing the Memory Mezzanine Assembly \(SPARC Enterprise T5240\)” on page 118](#)
- [“Servicing the Motherboard Assembly” on page 122](#)

Related Information

- [“Infrastructure Boards in SPARC Enterprise T5140 Servers” on page 2](#)

Servicing FB-DIMMs

These topics explain how to identify, locate, and replace faulty FB-DIMMs. They also describe procedures for upgrading memory capacity and provide guidelines for achieving and maintaining valid memory configurations.

- [“Memory Fault Handling Overview” on page 82](#)
- [“Identify Faulty FB-DIMMs Using the `show faulty` Command” on page 83](#)
- [“Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83](#)
- [“Remove FB-DIMMs” on page 84](#)
- [“Install Replacement FB-DIMMs” on page 86](#)
- [“Verify Successful Replacement of Faulty FB-DIMMs” on page 88](#)
- [“Upgrade Memory Configuration With Additional FB-DIMMs” on page 91](#)

- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#)
- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98](#)

Memory Fault Handling Overview

A variety of features play a role in how the memory subsystem is configured and how memory faults are handled. Understanding the underlying features helps you identify and repair memory problems. This section describes how the server deals with memory faults.

The following server features manage memory faults:

- **POST** – By default, POST runs when the server is powered on.
For correctable memory errors (CEs), POST forwards the error to the Solaris Predictive Self-Healing (PSH) daemon for error handling. If an uncorrectable memory fault is detected, POST displays the fault with the device name of the faulty FB-DIMMs, and logs the fault. POST then disables the faulty FB-DIMMs. Depending on the memory configuration and the location of the faulty FB-DIMM, POST disables half of physical memory in the system, or half the physical memory and half the processor threads. When this offlining process occurs in normal operation, you must replace the faulty FB-DIMMs based on the fault message and enable the disabled FB-DIMMs with the ILOM command `set device component_state=enabled` where *device* is the name of the FB-DIMM being enabled (for example, `set /SYS/MB/CMP0/BR0/CH0/D0 component_state=enabled`).
- **Solaris Predictive Self-Healing (PSH) technology** – PSH uses the Fault Manager daemon (`fmd`) to watch for various kinds of faults. When a fault occurs, the fault is assigned a unique fault ID (UUID), and logged. PSH reports the fault and suggests a replacement for the FB-DIMMs associated with the fault.

If you suspect the server has a memory problem, run the ILOM `show faulty` command. This command lists memory faults and identifies the FB-DIMM modules associated with the fault.

Related Information

- [“POST Overview” on page 35](#)
- [“Solaris PSH Feature Overview” on page 44](#)
- [“PSH-Detected Fault Console Message” on page 45](#)
- [“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83](#)
- [“Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83](#)

▼ Identify Faulty FB-DIMMs Using the show faulty Command

The ILOM `show faulty` command displays current system faults, including faults detected in FB-DIMMs.

- Enter `show faulty` at the `->` prompt.

-> show faulty		
Target	Property	Value
-----+-----+-----		
/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR1/CH0/D0
/SP/faultmgmt/0	timestamp	Dec 21 16:40:56
/SP/faultmgmt/0/	timestamp	Dec 21 16:40:56 faults/0
/SP/faultmgmt/0/	sp_detected_fault	/SYS/MB/CMP0/BR1/CH0/D0
faults/0		Forced fail (POST)

Related Information


- [“Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83](#)

▼ Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button

Use the FB-DIMM Fault Locator button to identify faulty FB-DIMMs. This button is located on the motherboard.

1. **Extend the server to the maintenance position.**
See [“Extend the Server to the Maintenance Position” on page 63](#).
2. **Disconnect power from the server.**
See [“Removing Power From the System” on page 60](#).
3. **Remove the top cover.**
See [“Remove the Top Cover” on page 67](#).
4. **Open the air duct to gain to access the FB-DIMM Fault Locator button.**
5. **Press the FB-DIMM Fault Locator button on the motherboard.**
This will cause an amber LED associated with the faulty FB-DIMM to light for a few minutes.

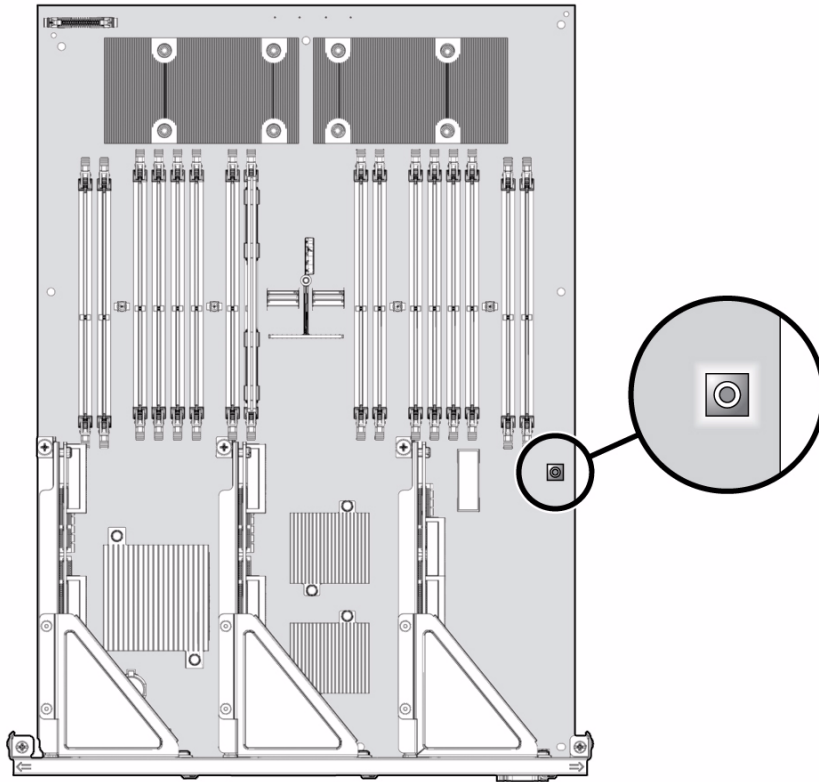FIGURE: FB-DIMM Fault Locator Button on the Motherboard



6. Note the FB-DIMM associated with the illuminated LED.
7. Ensure that all other FB-DIMMs are seated correctly in their slots.

Related Information

- [“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83](#)

▼ Remove FB-DIMMs

Before beginning this procedure, ensure that you are familiar with the cautions and safety instructions described in [“General Safety Information” on page 57](#).



Caution – Do not leave FB-DIMM slots empty. You must install filler panels in all empty FB-DIMM slots. If the server includes a memory mezzanine, this caution applies to those FB-DIMM slots as well.

1. **Extend the server to the maintenance position.**
See [“Extend the Server to the Maintenance Position”](#) on page 63.
2. **Remove power from the server.**
See [“Disconnect Power Cords From the Server”](#) on page 62.
3. **Remove the top cover.**
See [“Remove the Top Cover”](#) on page 67.
4. **For SPARC Enterprise T5140 servers, disconnect and stow the hard drive data cable:**
 - a. Unplug the hard drive data cable from J6401 on the motherboard.
 - b. Remove the hard drive data cable from its seat on the CMP air duct.
 - c. Place the hard drive cable end out of the way of the air duct.
5. **Rotate the air duct up and toward the front of the system.**
6. **Press the Fault Locator button on the motherboard to identify the FB-DIMMs that need to be replaced.**

Tip – Make a note of the faulty FB-DIMM location.


Note – For memory configuration information, see [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers”](#) on page 94 or [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers”](#) on page 98.

7. **Push down on the ejector tabs on each side of the FB-DIMM until the FB-DIMM is released.**

Caution – FB-DIMMs and heat sinks on the motherboard may be hot.



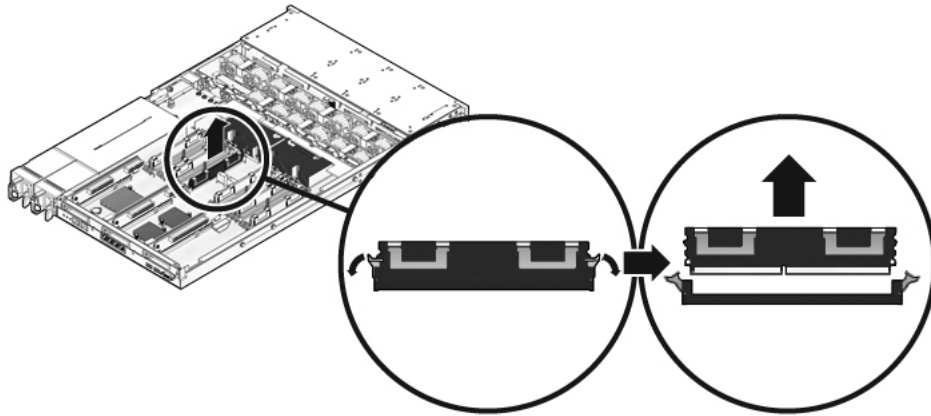FIGURE: Removing FB-DIMMs



8. Grasp the top corners of the faulty FB-DIMM and lift it out of its slot.
9. Place the FB-DIMM on an antistatic mat.
10. Repeat [Step 7](#) through [Step 9](#) for any other FB-DIMMs you intend to remove.
11. If you do not plan to install replacement FB-DIMMs at this time, install filler panels in the empty slots.

Related Information

- [“Install Replacement FB-DIMMs” on page 86](#)
- [“Verify Successful Replacement of Faulty FB-DIMMs” on page 88](#)

▼ Install Replacement FB-DIMMs

Before beginning this procedure, ensure that you are familiar with the information provided in these topics:

- [“Preparing to Service the System” on page 57](#)
- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#)

Note – If the server is already extended and open, begin the procedure at [Step 4](#).


1. **Extend the server to the maintenance position.**

See [“Extend the Server to the Maintenance Position” on page 63](#).

2. Remove power from the server.
See [“Disconnect Power Cords From the Server”](#) on page 62.
3. Remove the top cover.
See [“Remove the Top Cover”](#) on page 67.
4. (SPARC Enterprise T5140 servers) Disconnect and stow the hard drive data cable:
 - a. Unplug the hard drive data cable from J6401 on the motherboard.
 - b. Remove the hard drive data cable from its seat on the CMP air duct.
 - c. Place the hard drive cable end out of the way of the air duct.
5. Unpackage the replacement FB-DIMMs and place them on an antistatic mat.
6. Ensure that the ejector tabs on the connector that will receive the FB-DIMM are in the open position.
7. Align the FB-DIMM notch with the key in the connector.

Caution – Ensure that the orientation is correct. The FB-DIMM might be damaged if the orientation is reversed.

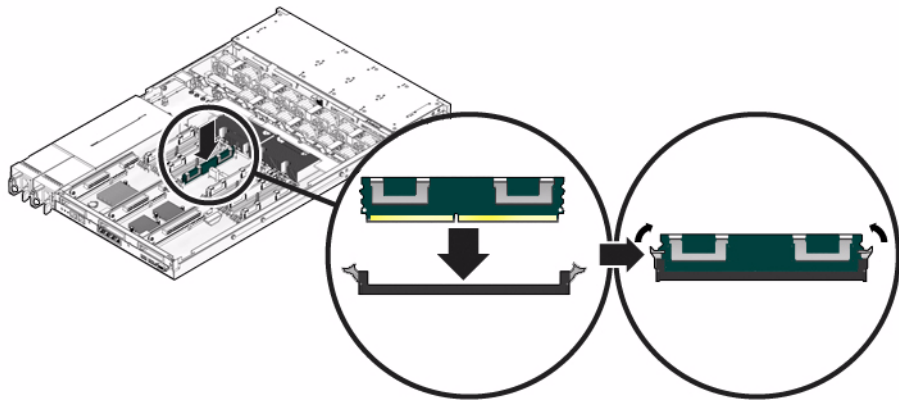FIGURE: Installing FB-DIMMs



8. Push the FB-DIMM into the connector until the ejector tabs lock the FB-DIMM in place.

If the FB-DIMM does not easily seat into the connector, verify that the orientation of the FB-DIMM is as shown in [FIGURE: Installing FB-DIMMs](#) on page 87.

9. Repeat [Step 6](#) through [Step 8](#) until all new FB-DIMMs are installed.
10. (SPARC Enterprise T5140 servers) Reconnect the hard drive cable.
 - a. Route the hard drive data cable over the fan module and along the air duct.
 - b. Plug the data cable into J6401 on the motherboard.
11. Install the top cover.

See [“Install the Top Cover”](#) on page 177.
12. Slide the server into the rack.

See [“Return the Server to the Normal Rack Position”](#) on page 180.
13. Connect the power cords.

See [“Connect Power Cords to the Server”](#) on page 181.

Note – As soon as the power cords are connected, standby power is applied. Depending on how the firmware is configured, the system might boot at this time.

Related Information

- [“Remove FB-DIMMs”](#) on page 84
- [“Verify Successful Replacement of Faulty FB-DIMMs”](#) on page 88

▼ Verify Successful Replacement of Faulty FB-DIMMs

1. Access the ILOM -> prompt.

Refer to the *Integrated Lights Out Manager 3.0 (ILOM 3.0) Supplement for SPARC Enterprise T5140 and T5240 Servers* for instructions.

2. Use the `show faulty` command to determine how to clear the fault.

- If `show faulty` indicates a POST-detected the fault go to [Step 3](#).
- If `show faulty` indicates a host-detected fault (output displays a UUID), go directly to [Step 4](#).

3. Use the **set** command to enable the FB-DIMM that was disabled by POST.

In most cases, replacement of a faulty FB-DIMM is detected when the service processor is power cycled. In those cases, the fault is automatically cleared from the system. If **show faulty** still displays the fault, clear it with the **set** command.

```
-> set /SYS/MB/CMP0/BR0/CH0/D0 component_state=Enabled
```

4. Perform the following steps to verify the repair:

a. Set the virtual keyswitch to **diag** so that POST will run in Service mode.

```
-> set /SYS/keyswitch_state=Diag  
Set 'keyswitch_state' to 'Diag'
```

b. Power cycle the system.

```
-> stop /SYS  
Are you sure you want to stop /SYS (y/n)? y  
Stopping /SYS  
-> start /SYS  
Are you sure you want to start /SYS (y/n)? y  
Starting /SYS
```

Note – The server takes about one minute to power off. Use the **show /HOST** command to determine when the host has been powered off. The console will display **status=Powered Off**.

c. Switch to the system console to view POST output.

Watch the POST output for possible fault messages. The following output indicates that POST did not detect any faults:

```
-> start /SYS/console  
.  
.  
.  
0:0:0>INFO:  
0:0:0> POST Passed all devices.  
0:0:0>POST: Return to VBSC.  
0:0:0>Master set ACK for vbosc runpost command and spin...
```

Note – Depending on the configuration of ILOM POST variables and whether POST detected faults or not, the system might boot, or the system might remain at the ok prompt. If the system is at the ok prompt, type boot.

d. Return the virtual keyswitch to Normal mode.

```
-> set /SYS keyswitch_state=Normal
Set 'keyswitch_state' to 'Normal'
```

e. Switch to the system console and type the Solaris OS fmadm faulty command.

```
# fmadm faulty
```

No memory faults should be displayed.

If faults are reported, refer to the diagnostics instructions described in [“ILOM Troubleshooting Overview” on page 23](#) for guidance in troubleshooting the fault.

5. Switch to the ILOM command shell.

6. Run the show faulty command.

-> show faulty		
Target	Property	Value
-----+-----+-----		
/SP/faultmgmt/0	fru	/SYS/MB/CMP0/BR0/CH1/D0
/SP/faultmgmt/0	timestamp	Dec 14 22:43:59
/SP/faultmgmt/0/ faults/0	sunw-msg-id	SUN4V-8000-DX
/SP/faultmgmt/0/ faults/0	uuid	3aa7c854-9667-e176-efe5-e487e520 7a8a
/SP/faultmgmt/0/ faults/0	timestamp	Dec 14 22:43:59

If the show faulty command reports a fault with a UUID go on to [Step 7](#). If show faulty does *not* report a fault with a UUID, you are done with the verification process.

7. Switch to the system console and type the `fmadm repair` command with the UUID.

Use the same UUID that was displayed in the output of the ILOM `show faulty` command.

```
# fmadm repair 3aa7c854-9667-e176-efe5-e487e520
```

Related Information

- [“Remove FB-DIMMs” on page 84](#)
- [“Install Replacement FB-DIMMs” on page 86](#)
- [“Upgrade Memory Configuration With Additional FB-DIMMs” on page 91](#)
- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#)
- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98](#)

▼ Upgrade Memory Configuration With Additional FB-DIMMs

Before you begin this memory upgrade procedure, become familiar with the memory configuration guidelines described in [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#).



Caution – Ensure that all power is removed from the server before installing FB-DIMMs or damage to the FB-DIMMs might occur.



Caution – You must disconnect the power cords from the system before performing this procedure.

1. Unpack the replacement FB-DIMMs and place them on an antistatic mat.
2. (SPARC Enterprise T5140 server) Disconnect and stow the hard drive data cable.
 - a. Unplug the hard drive data cable from J6401 on the motherboard.
 - b. Remove the hard drive data cable from its seat on the CMP air duct.
 - c. Place the hard drive cable end out of the way of the air duct.
3. Rotate the air duct up and toward the front of the system.

4. Remove any filler panels from the FB-DIMM slots, if necessary.

Store the filler panels in a safe place. You will reuse the filler panels if you remove FB-DIMMs in the future.


5. Ensure that the ejector tabs are in the open position.

6. Line up the FB-DIMM with the connector.

Align the FB-DIMM notch with the key in the connector. This alignment ensures that the FB-DIMM is oriented correctly.

7. Push the FB-DIMM into the connector until the ejector tabs lock the FB-DIMM in place.

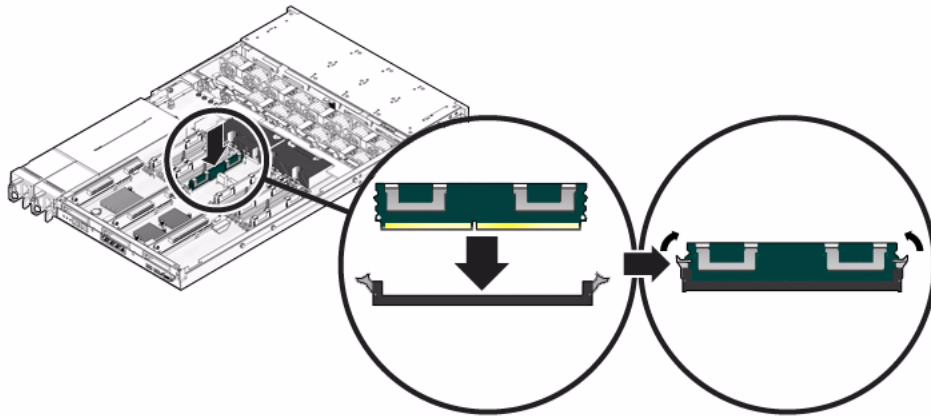FIGURE: Installing FB-DIMMs



Note – If the FB-DIMM does not easily seat into the connector, it may not have the correct orientation. If the orientation is reversed, damage to the FB-DIMM might occur.

8. Repeat [Step 5](#) through [Step 7](#) until all FB-DIMMs are installed.

9. Rotate the air duct back into its operating position.

The air duct snaps into position above the CMP and memory modules.

10. (SPARC Enterprise T5140 server) Reconnect the hard drive data cable.

a. Route the hard drive data cable over the fan module and along the air duct.

b. Plug the data cable into J6401 on the motherboard.

11. Install the top cover.

See [“Install the Top Cover”](#) on page 177.

12. Slide the server into the rack.

See [“Return the Server to the Normal Rack Position”](#) on page 180.

13. Connect the power supplies.

See [“Connect Power Cords to the Server”](#) on page 181.

Note – As soon as the power cords are connected, standby power is applied. Depending on how the firmware is configured, the system might boot at this time.

14. Power on the server.

See [“Power On the Server Using the poweron Command”](#) on page 181 or [“Power On the Server Using the Front Panel Power Button”](#) on page 182.

15. Perform the following steps to verify that there are no faults:

a. Set the virtual keyswitch to diag so that POST will run in Service mode.

```
-> set /SYS/keyswitch_state=Diag
Set 'keyswitch_state' to 'Diag'
```

b. Power cycle the system.

```
-> stop /SYS
Are you sure you want to stop /SYS (y/n)? y
Stopping /SYS
-> start /SYS
Are you sure you want to start /SYS (y/n)? y
Starting /SYS
```

Note – The server takes about one minute to power off. The ILOM console does not indicate when the system is actually powered off.

c. Switch to the system console to view POST output.

```
-> start /SYS/console
```

Watch the POST output for possible fault messages. The following output is a sign that POST did not detect any faults:

```
.  
.   
.   
0:0:0>INFO:  
0:0:0>      POST Passed all devices.  
0:0:0>POST:      Return to VBSC.  
0:0:0>Master set ACK for vbosc runpost command and spin...
```

Note – Depending on the configuration of ILOM POST variables and whether POST detected faults or not, the system might boot, or the system might remain at the ok prompt. If the system is at the ok prompt, type boot.

d. Return the virtual keyswitch to Normal mode.

```
-> set /SYS keyswitch_state=Normal  
Set 'keyswitch_state' to 'Normal'
```

Related Information

- [“Remove FB-DIMMs” on page 84](#)
- [“Install Replacement FB-DIMMs” on page 86](#)
- [“Verify Successful Replacement of Faulty FB-DIMMs” on page 88](#)
- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#)
- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98](#)

FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers


When planning FB-DIMM upgrades to SPARC Enterprise T5140 servers, observe the following memory configuration guidelines:

- The motherboard has 16 slots that support industry-standard FB-DIMMs.
- Use only 1.5-volt FB-DIMMs in SPARC Enterprise T5140 and T5240 servers.

- SPARC Enterprise T5140 servers support these FB-DIMM configurations:
 - 8 FB-DIMMs (Group 1 in [FIGURE: FB-DIMM Configuration for SPARC Enterprise T5140 Servers on page 95](#))
 - 12 FB-DIMMs (Groups 1 and 2 in [FIGURE: FB-DIMM Configuration for SPARC Enterprise T5140 Servers on page 95](#))
 - 16 FB-DIMMs (Groups 1, 2, and 3 in [FIGURE: FB-DIMM Configuration for SPARC Enterprise T5140 Servers on page 95](#))
- All FB-DIMMs within a single CMP branch must have the same capacity.
- If the System Firmware is at least version 7.1.7.f, the FB-DIMM capacities on different CPUs can be different.
- When replacing a faulty FB-DIMM, the replacement FB-DIMM *must* have the same FRU part number as the FB-DIMM being replaced.


If you are not able to obtain a replacement FB-DIMM with the same FRU part number, may need to replace all the FB-DIMMs in the branch to ensure that all FB-DIMMs in that branch have the same FRU part number.

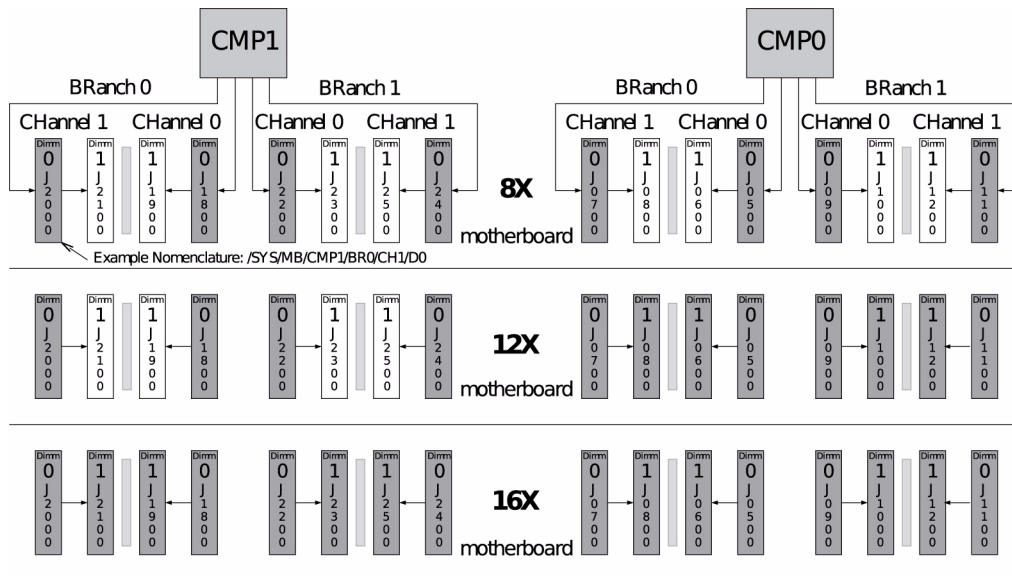FIGURE: FB-DIMM Configuration for SPARC Enterprise T5140 Servers



The following figure shows the physical location for the FB-DIMMs on the motherboard in a SPARC Enterprise T5140 server.

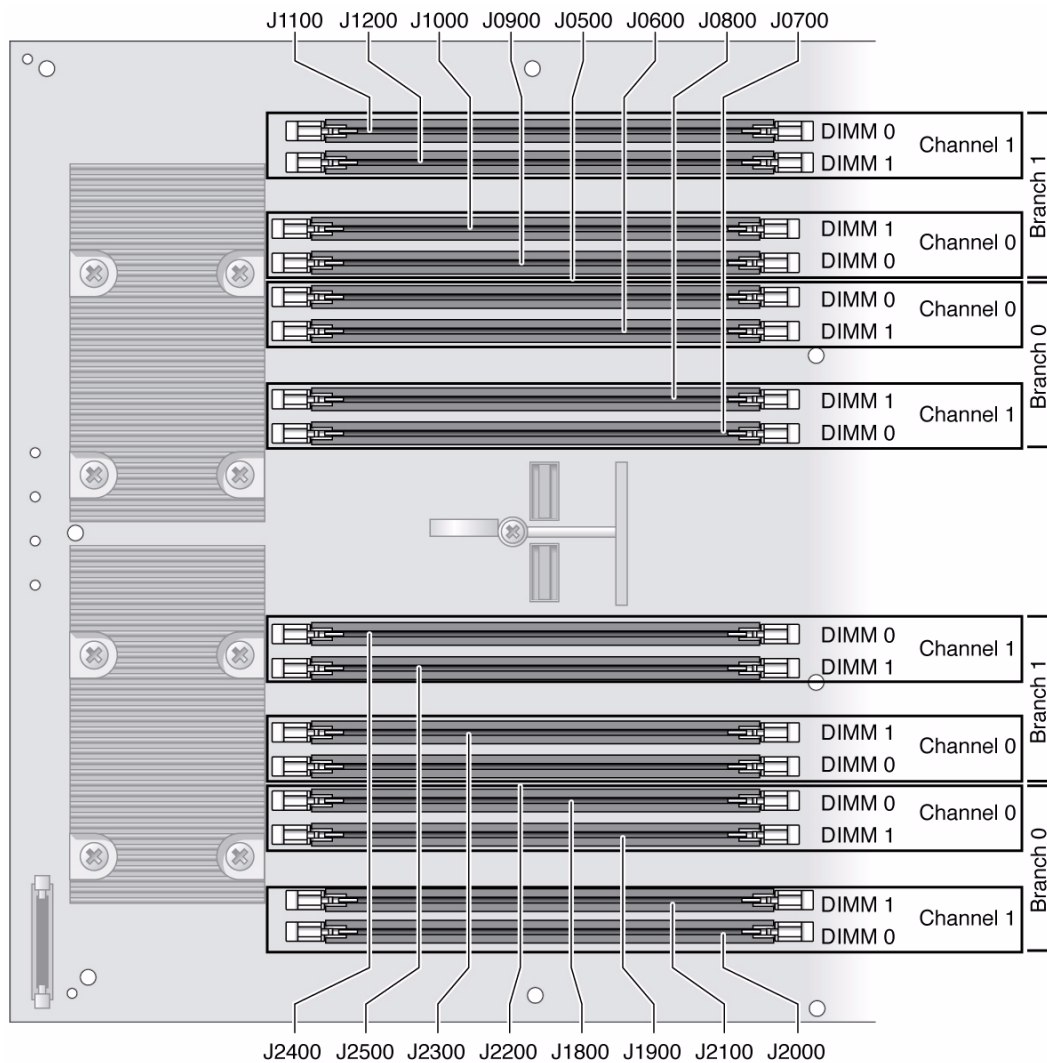FIGURE: Physical FB-DIMM Locations in SPARC Enterprise T5140 Servers



The following table identifies the order in which FB-DIMMS must be added when upgrading the memory capacity of a SPARC Enterprise T5140 server.

TABLE: FB-DIMM Configuration Installation Map (SPARC Enterprise T5140 Servers)

Branch Name	Channel Name	FRU Name	Motherboard FB-DIMM Connector	FB-DIMM Installation Order*
CMP 0, Branch 0	Channel 0	/SYS/MB/CMP0/BR0/CH0/D0	J0500	1
		/SYS/MB/CMP0/BR0/CH0/D1	J0600	2
	Channel 1	/SYS/MB/CMP0/BR0/CH1/D0	J0700	1
		/SYS/MB/CMP0/BR0/CH1/D1	J0800	2
CMP 0, Branch 1	Channel 0	/SYS/MB/CMP0/BR1/CH0/D0	J0900	1
		/SYS/MB/CMP0/BR1/CH0/D1	J1000	2
	Channel 1	/SYS/MB/CMP0/BR1/CH1/D0	J1100	1
		/SYS/MB/CMP0/BR1/CH1/D1	J1200	2
CMP 1, Branch 0	Channel 0	/SYS/MB/CMP1/BR0/CH0/D0	J1800	1
		/SYS/MB/CMP1/BR0/CH0/D1	J1900	3
	Channel 1	/SYS/MB/CMP1/BR0/CH1/D0	J2000	1
		/SYS/MB/CMP1/BR0/CH1/D1	J2100	3
CMP 1, Branch 1	Channel 0	/SYS/MB/CMP1/BR1/CH0/D0	J2200	1
		/SYS/MB/CMP1/BR1/CH0/D1	J2300	3
	Channel 1	/SYS/MB/CMP1/BR1/CH1/D0	J2400	1
		/SYS/MB/CMP1/BR1/CH1/D1	J2500	3

* Upgrade path: DIMMs should be added with each group populated in the order shown.

Related Information

- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98](#)
- [“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83](#)
- [“Remove FB-DIMMs” on page 84](#)
- [“Install Replacement FB-DIMMs” on page 86](#)
- [“Verify Successful Replacement of Faulty FB-DIMMs” on page 88](#)
- [“Upgrade Memory Configuration With Additional FB-DIMMs” on page 91](#)


FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers

When planning FB-DIMM upgrades to SPARC Enterprise T5240 servers, observe the following memory configuration guidelines:

- The motherboard has 16 slots that support industry-standard FB-DIMMs.
- Use only 1.5-volt FB-DIMMs in SPARC Enterprise T5140 and T5240 servers.
- SPARC Enterprise T5240 servers support three FB-DIMM configurations:
 - 8 FB-DIMMs (Group 1 in [FIGURE: FB-DIMM Configuration on Motherboard \(SPARC Enterprise T5240 Servers\)](#) on page 99)
 - 12 FB-DIMMs (Groups 1 and 2 in [FIGURE: FB-DIMM Configuration on Motherboard \(SPARC Enterprise T5240 Servers\)](#) on page 99)
 - 16 FB-DIMMs (Groups 1, 2, and 3 in [FIGURE: FB-DIMM Configuration on Motherboard \(SPARC Enterprise T5240 Servers\)](#) on page 99)
- SPARC Enterprise T5240 servers can be equipped with a memory mezzanine assembly, which provides an additional 16 FB-DIMM slots.
- All FB-DIMMs within a single CMP branch must have the same capacity.
- If the System Firmware is at least version 7.1.7.f, the FB-DIMM capacities on different CPUs can be different.
- When replacing a faulty FB-DIMM, the replacement FB-DIMM *must* have the same FRU part number as the FB-DIMM being replaced.


If you are not able to obtain a replacement FB-DIMM with the same FRU part number, may need to replace all the FB-DIMMs in the branch to ensure that all FB-DIMMs in that branch have the same FRU part number.

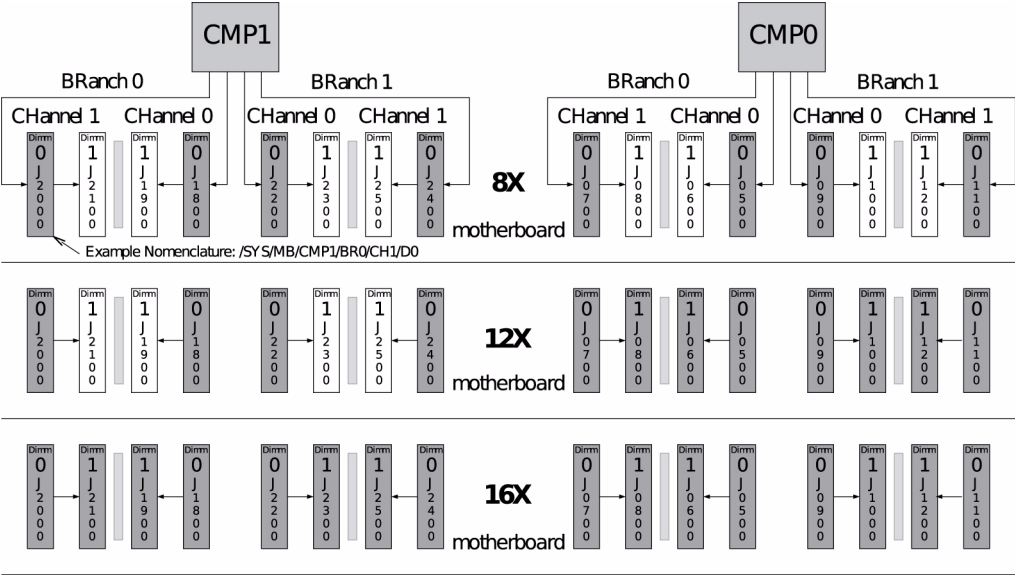FIGURE: FB-DIMM Configuration on Motherboard (SPARC Enterprise T5240 Servers)



The following figure shows the physical location for the FB-DIMMs on the motherboard in a SPARC Enterprise T5240 server.

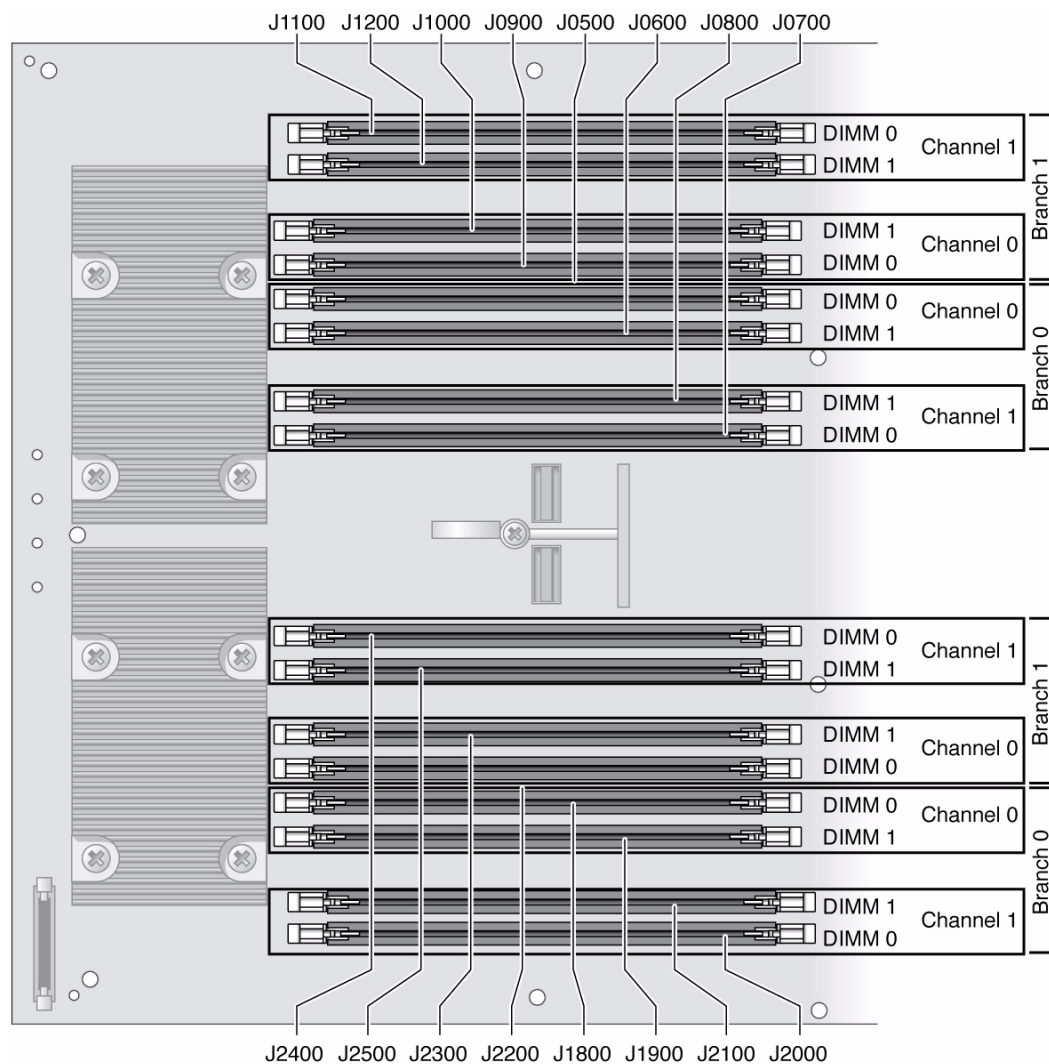FIGURE: Physical FB-DIMM Locations in SPARC Enterprise T5140 Servers




SPARC Enterprise T5240 servers can be equipped with an optional memory mezzanine assembly, which provides an additional 16 FB-DIMM slots. Servers that have the memory mezzanine assembly can support for the following additional memory configuration groups:

- 24 FB-DIMMs (Groups 1,2, 3, and 4) (fully populated motherboard + 8 FB-DIMM slots in the memory mezzanine assembly)
- 32 FB-DIMMs (Groups 1,2, 3, 4, and 5) (fully populated motherboard + fully populated memory mezzanine assembly)

The following table identifies the order in which FB-DIMMS must be added when upgrading the memory capacity of a SPARC Enterprise T5240 server. These groups are shown in

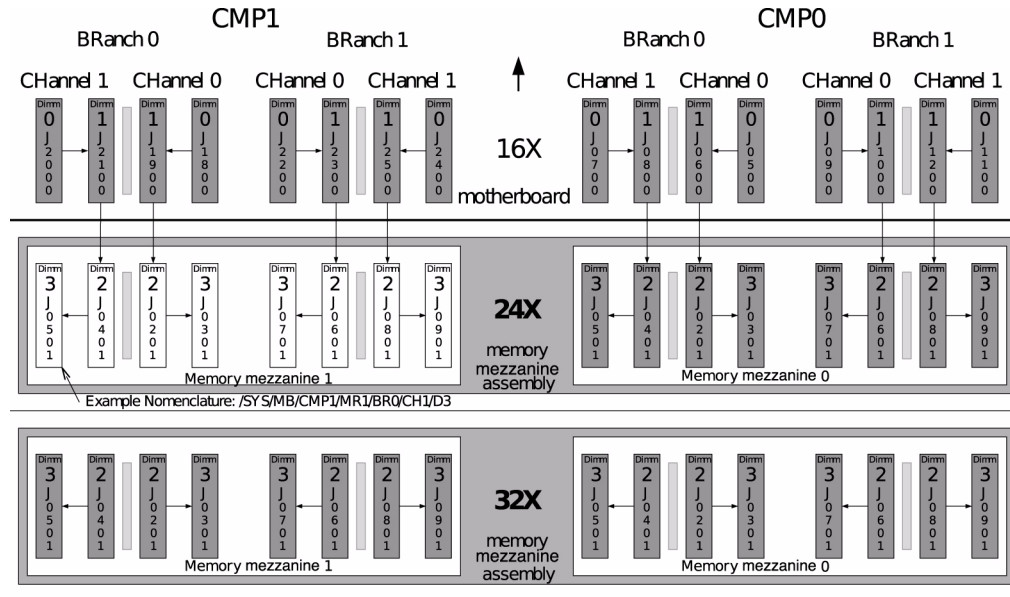FIGURE: FB-DIMM Configuration With Memory Mezzanine Assembly (SPARC Enterprise T5240 Servers)



The following table identifies the order in which FB-DIMMS must be added when upgrading the memory capacity of a SPARC Enterprise T5240 server. The rows representing FB-DIMMs in the memory mezzanine assembly are shaded

TABLE: FB-DIMM Configuration Installation Map (SPARC Enterprise T5240 Servers)

Branch Name	Channel Name	FRU Name	FB-DIMM Connector	FB-DIMM Installation Order*
CMP 0, Branch 0	Channel 0	/SYS/MB/CMP0/BR0/CH0/D0	J0500	1
		/SYS/MB/CMP0/BR0/CH0/D1	J0600	2
	Channel 1	/SYS/MB/CMP0/BR0/CH1/D0	J0700	1
		/SYS/MB/CMP0/BR0/CH1/D1	J0800	2
CMP 0, Branch 1	Channel 0	/SYS/MB/CMP0/BR1/CH0/D0	J0900	1
		/SYS/MB/CMP0/BR1/CH0/D1	J1000	2
	Channel 1	/SYS/MB/CMP0/BR1/CH1/D0	J1100	1
		/SYS/MB/CMP0/BR1/CH1/D1	J1200	2

TABLE: FB-DIMM Configuration Installation Map (SPARC Enterprise T5240 Servers) (*Continued*)

Branch Name	Channel Name	FRU Name	FB-DIMM Connector	FB-DIMM Installation Order*
CMP 1, Branch 0	Channel 0	/SYS/MB/CMP1/BR0/CH0/D0	J1800	1
		/SYS/MB/CMP1/BR0/CH0/D1	J1900	3
	Channel 1	/SYS/MB/CMP1/BR0/CH1/D0	J2000	1
		/SYS/MB/CMP1/BR0/CH1/D1	J2100	3
CMP 1, Branch 1	Channel 0	/SYS/MB/CMP1/BR1/CH0/D0	J2200	1
		/SYS/MB/CMP1/BR1/CH0/D1	J2300	3
	Channel 1	/SYS/MB/CMP1/BR1/CH1/D0	J2400	1
		/SYS/MB/CMP1/BR1/CH1/D1	J2500	3
CMP 0, Branch 0	Channel 0	/SYS/MB/CMP0/MR0/BR0/CH0/D2	J0201	4
		/SYS/MB/CMP0/MR0/BR0/CH0/D3	J0301	4
	Channel 1	/SYS/MB/CMP0/MR0/BR0/CH1/D2	J0401	4
		/SYS/MB/CMP0/MR0/BR0/CH1/D3	J0501	4
CMP 0, Branch 1	Channel 0	/SYS/MB/CMP0/MR0/BR1/CH0/D2	J0601	4
		/SYS/MB/CMP0/MR0/BR1/CH0/D3	J0701	4
	Channel 1	/SYS/MB/CMP0/MR0/BR1/CH1/D2	J0801	4
		/SYS/MB/CMP0/MR0/BR1/CH1/D3	J0901	4
CMP 1, Branch 0	Channel 0	/SYS/MB/CMP1/MR1/BR0/CH0/D2	J0201	5
		/SYS/MB/CMP1/MR1/BR0/CH0/D3	J0301	5
	Channel 1	/SYS/MB/CMP1/MR1/BR0/CH1/D2	J0401	5
		/SYS/MB/CMP1/MR1/BR0/CH1/D3	J0501	5
CMP 1, Branch 1	Channel 0	/SYS/MB/CMP1/MR1/BR1/CH0/D2	J0601	5
		/SYS/MB/CMP1/MR1/BR1/CH0/D3	J0701	5
	Channel 1	/SYS/MB/CMP1/MR1/BR1/CH1/D2	J0801	5
		/SYS/MB/CMP1/MR1/BR1/CH1/D3	J0901	5

* Upgrade path: DIMMs should be added with each group populated in the order shown.

Related Information

- [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#)
- [“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83](#)

- [“Remove FB-DIMMs” on page 84](#)
- [“Install Replacement FB-DIMMs” on page 86](#)
- [“Verify Successful Replacement of Faulty FB-DIMMs” on page 88](#)
- [“Upgrade Memory Configuration With Additional FB-DIMMs” on page 91](#)

Servicing the Air Duct

These topics explain how to remove and replace the air duct.

- [“Remove the Air Duct” on page 103](#)
- [“Install the Air Duct” on page 104](#)

▼ Remove the Air Duct

You must remove the air duct before removing or installing the following components:

- **Power distribution board**
- **Power supply backplane (SPARC Enterprise T5240)**
- Fan module boards
- Paddle card
- Hard drive cage
- Hard drive backplane
- Motherboard



Caution – To prevent the system from overheating, ensure that the air duct is correctly installed before powering on the server.

1. Slide the system out of the rack.

See [“Extend the Server to the Maintenance Position” on page 63](#).

2. Remove the top cover.

See [“Remove the Top Cover” on page 67](#)

3. Open the air duct.

Disengage the rear of the air duct from the motherboard and rotate the air duct forward.

Related Information

- [“Install the Air Duct” on page 104](#)
- [“Remove the Top Cover” on page 67](#)

▼ Install the Air Duct



Caution – When the server is in operation, ensure that the air duct is correctly installed to prevent the system from overheating.

1. Use the guide pins to align and install the air duct into the chassis.
2. Rotate the air duct down until it is seated on the motherboard.
3. Install the top cover.

See [“Install the Top Cover” on page 177](#).

Related Information

- [“Remove the Air Duct” on page 103](#)
- [“Install the Top Cover” on page 177](#)

Servicing PCIe/XAUI Risers

These topics explain how to service the riser units that support PCIe and XAUI cards and how to remove and install the I/O cards themselves.

- [“PCIe/XAUI Riser Overview” on page 105](#)
- [“Remove a PCIe/XAUI Riser” on page 105](#)
- [“Install a PCIe/XAUI Riser” on page 107](#)
- [“Remove a PCIe or XAUI Card” on page 109](#)
- [“Install a PCIe or XAUI Card” on page 109](#)
- [“PCIe and XAUI Card Reference for SPARC Enterprise T5140 Servers” on page 112](#)
- [“PCIe and XAUI Card Reference for SPARC Enterprise T5240 Servers” on page 113](#)

PCIe/XAUI Riser Overview

PCIe/XAUI cards are installed on vertical risers. You must remove the PCI cross beam and relevant riser to access a PCIe/XAUI card.



Caution – This procedure requires that you handle components that are sensitive to static discharge. This sensitivity can cause the component to fail.



Caution – Ensure that all power is removed from the server before removing or installing expansion cards. You must disconnect the power cords before performing this procedure.

You must remove PCIe riser 2 when servicing the SCC module.

You must remove all three PCIe/XAUI risers when servicing the motherboard.

▼ Remove a PCIe/XAUI Riser

1. Power off the server.

See [“Removing Power From the System”](#) on page 60.

2. Disconnect all power cables.

See [“Disconnect Power Cords From the Server”](#) on page 62.

3. Attach an antistatic wrist strap.

4. Disconnect any data cables connected to the cards on the PCIe/XAUI riser being removed.

Label the cables to ensure proper connection later.

5. Slide the server out of the rack.

See [“Extend the Server to the Maintenance Position”](#) on page 63

6. If you are servicing a PCIe/XAUI card, locate its position in the system.

7. Remove the PCI cross beam.

a. Loosen the two captive Phillips screws on each end of the removable PCI cross beam.

b. Slide the PCI cross beam back to remove it from the chassis.

Two mushroom standoffs secure the removable cross beam to the back of the system.

FIGURE: Removing the PCIe/XAUI Riser (SPARC Enterprise T5140)


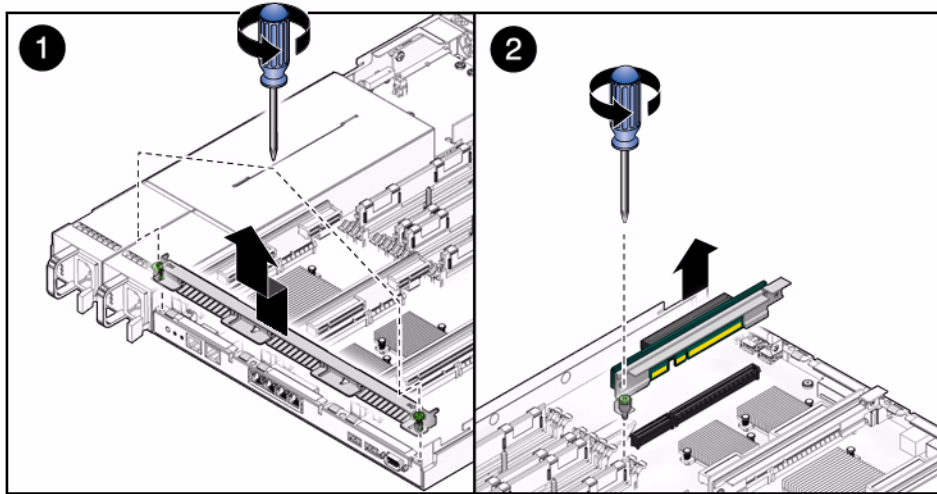


FIGURE: Removing the PCIe/XAUI Riser (SPARC Enterprise T5240)

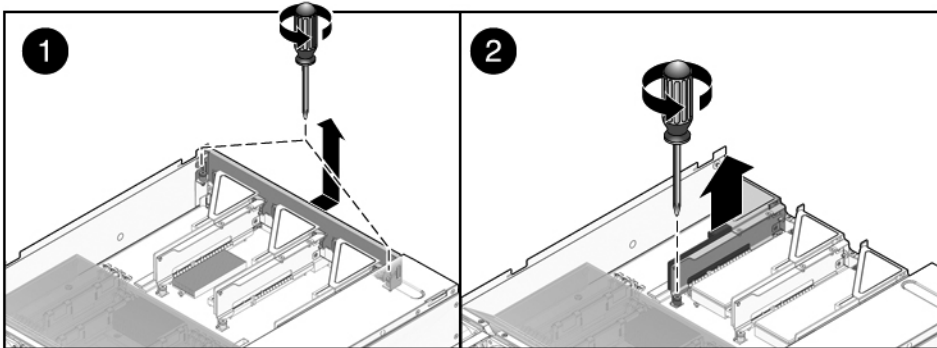

8. Loosen the captive screw securing the riser to the motherboard.

9. Lift the riser up to remove it from the system.

Remove the riser and any PCIe/XAUI cards attached to it as a unit.

Related Information

- [“Install a PCIe/XAUI Riser” on page 107](#)
- [“Remove a PCIe or XAUI Card” on page 109](#)
- [“Install a PCIe or XAUI Card” on page 109](#)


▼ Install a PCIe/XAUI Riser

1. Lower the PCIe/XAUI riser and any cards attached to it into the system.

Note – PCIe/XAUI and PCIe risers have keyed connectors to prevent incorrect installation on the motherboard.


The following figure illustrates this step for SPARC Enterprise T5140 servers.

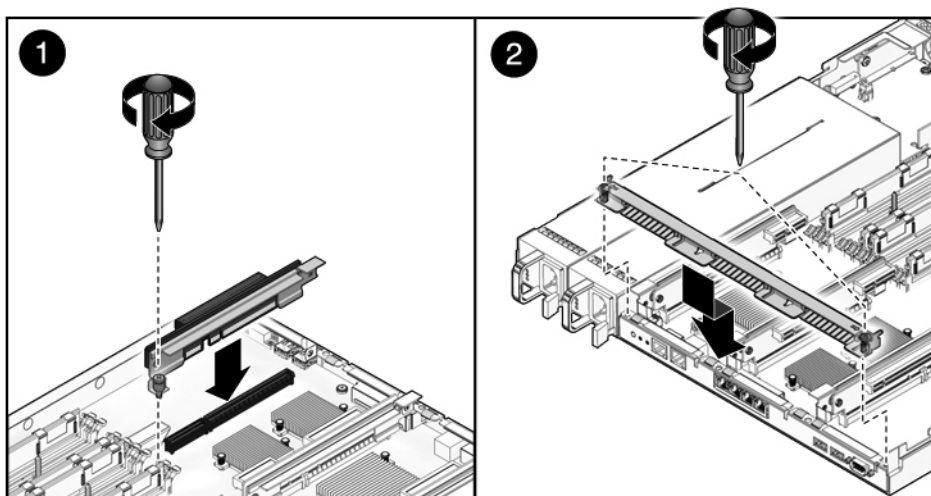FIGURE: Installing the PCIe/XAUI Riser (SPARC Enterprise T5140)



The following figure illustrates the same process for SPARC Enterprise T5240 servers.

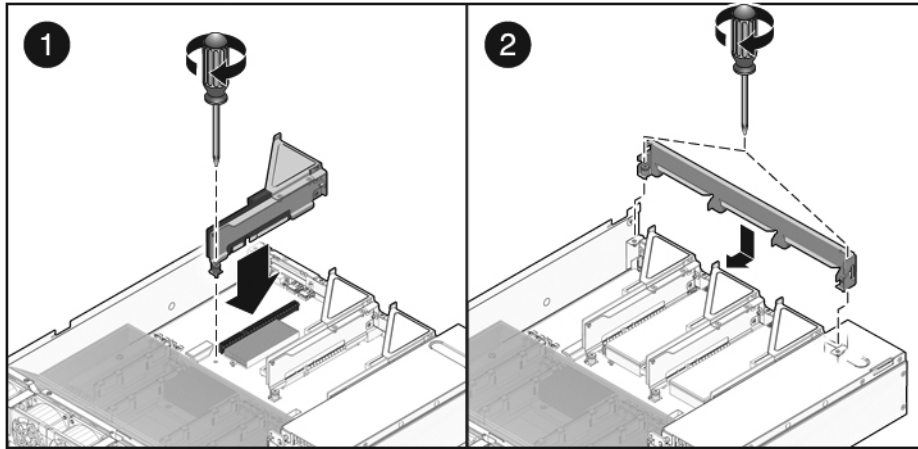FIGURE: Installing the PCIe/XAUI Riser (SPARC Enterprise T5240)



2. Ensure that the PCIe back panels are properly engaged with the corresponding slots in the motherboard tray/back panel connector assembly.
3. Tighten the captive screw to secure the riser to the motherboard.
4. Install the PCI cross beam.
Slide the cross beam forward over the PCIe/XAUI risers. Ensure that the cross beam is engaged with the standoffs on either side of the chassis rear panel PCI cross beam.
5. Tighten the two captive Phillips screws securing the removable PCI cross beam to the chassis.
6. Install the top cover.
7. Slide the server into the rack.
See [“Return the Server to the Normal Rack Position”](#) on page 180
8. Connect any data cables you removed to service the PCIe/XAUI cards.
9. Connect all power cables.

Related Information

- [“Remove a PCIe/XAUI Riser”](#) on page 105
- [“Remove a PCIe or XAUI Card”](#) on page 109
- [“Install a PCIe or XAUI Card”](#) on page 109

▼ Remove a PCIe or XAUI Card

1. **Locate the PCIe/XAUI card that you want to remove. Note its corresponding riser board.**
See [“Rear Panel Components and Indicators on SPARC Enterprise T5140 Servers” on page 8](#) or [“Rear Panel Components and Indicators on SPARC Enterprise T5240 Servers” on page 12](#).
2. **If necessary, note where the PCIe/XAUI cards are installed.**
3. **Unplug all data cables from the card.**
Note the location of all cables for reinstallation later.
4. **Remove the riser board.**
See [“Remove a PCIe/XAUI Riser” on page 105](#)
5. **Carefully remove the PCIe/XAUI card from the riser board connector.**
6. **Place the PCIe/XAUI card on an antistatic mat.**
7. **If you are not replacing the PCIe/XAUI card, install a PCIe/XAUI filler panel.**
 - SPARC Enterprise T5140: PCIe filler panels are located in the removable PCI cross beam. Press the filler panel into the cross beam from the rear.
 - SPARC Enterprise T5240: PCIe filler panels are located on the riser board assembly. Press the filler panel into the riser board back panel from the rear.



Caution – To ensure proper system cooling and EMI shielding, you must use the appropriate PCIe filler panel for the server.

Related Information

- [“Install a PCIe or XAUI Card” on page 109](#)
- [“Remove a PCIe/XAUI Riser” on page 105](#)
- [“Install a PCIe/XAUI Riser” on page 107](#)

▼ Install a PCIe or XAUI Card

1. **Unpackage the replacement PCIe or XAUI card and place it on an antistatic mat.**
2. **Locate the proper PCIe/XAUI slot for the card you are replacing.**

3. If necessary, review the PCIe and XAUI card guidelines to plan your installation.

See [“PCIe and XAUI Card Reference for SPARC Enterprise T5140 Servers”](#) on page 112 for additional information.


4. Remove the PCIe/XAUI riser board.

See [“Remove a PCIe/XAUI Riser”](#) on page 105

5. Remove the PCI filler panel.


- SPARC Enterprise T5140 servers: PCIe filler panels are located in the removable PCI cross beam. Press the filler panel in from the rear until it snaps into place, as shown in the following figure.

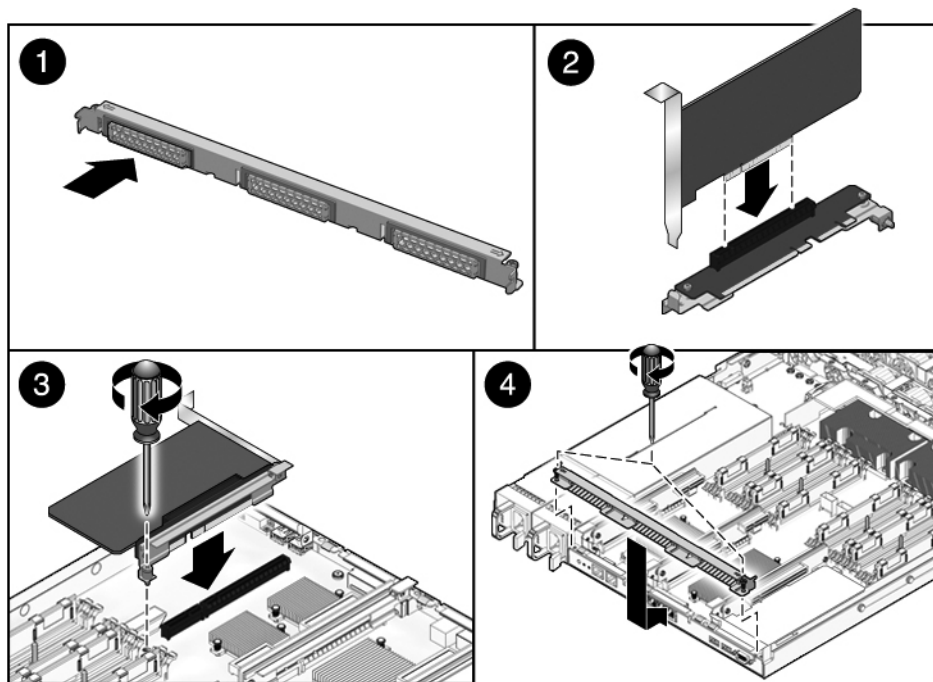FIGURE: Installing a PCIe Card (SPARC Enterprise T5140)



- SPARC Enterprise T5240 servers: PCIe filler panels are located on the riser board assembly. Press the filler panel in from the rear until it snaps into place as shown in the following figure.

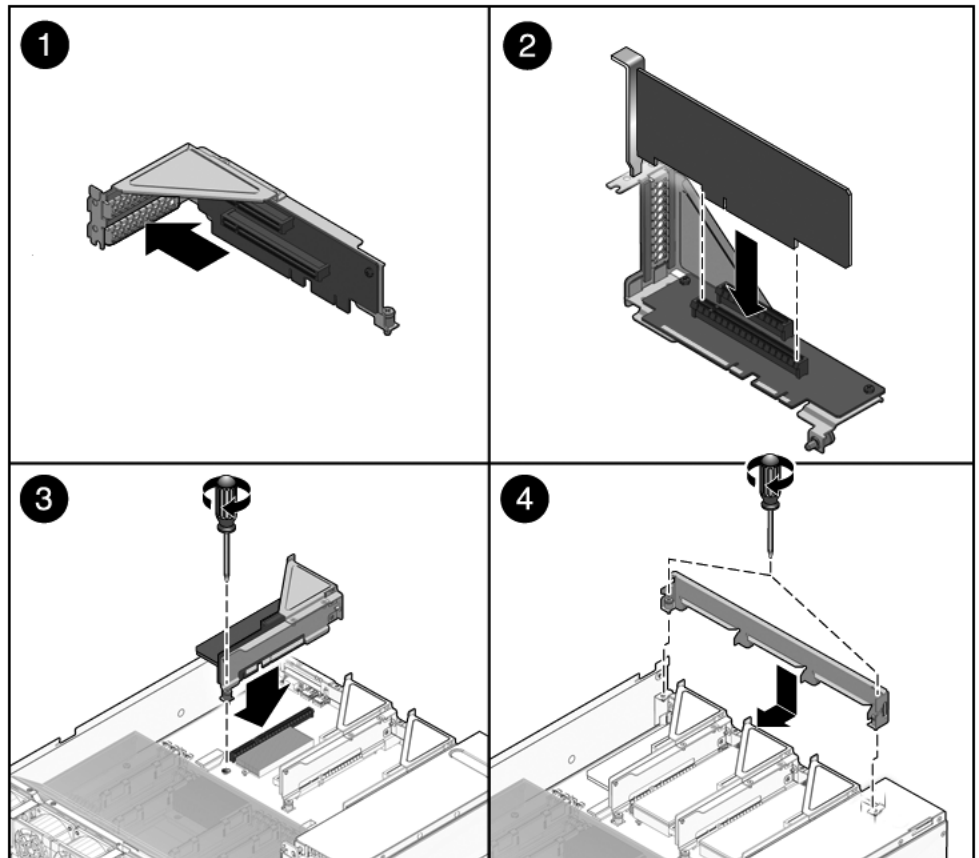FIGURE: Installing a PCIe Card (SPARC Enterprise T5240)



6. Insert the PCIe/XAUI card into the correct slot on the riser board.
7. Replace the PCIe/XAUI riser.
See [“Install a PCIe/XAUI Riser”](#) on page 107
8. Install the top cover.
See [“Install the Top Cover”](#) on page 177
9. Slide the server into the rack.
See [“Return the Server to the Normal Rack Position”](#) on page 180.
10. Connect any data cables required to the PCIe/XAUI card.
Route data cables through the cable management arm.

11. Connect the power supplies.

See [“Connect Power Cords to the Server” on page 181](#)

Note – As soon as the power cords are connected, standby power is applied. Depending on how the firmware is configured, the system might boot at this time.

12. Power on the server.

See [“Power On the Server Using the poweron Command” on page 181](#) or [“Power On the Server Using the Front Panel Power Button” on page 182](#).

Related Information

- [“Remove a PCIe or XAUI Card” on page 109](#)
- [“Remove a PCIe/XAUI Riser” on page 105](#)
- [“Install a PCIe/XAUI Riser” on page 107](#)

PCIe and XAUI Card Reference for SPARC Enterprise T5140 Servers

The following table shows the physical PCIe/XAUI slot locations on the SPARC Enterprise T5140 server, as viewed from the rear of the system.

TABLE: FB-DIMM Configuration Installation Map (SPARC Enterprise T5240 Servers)

PCIe 0/XAUI 0	PCIe 1/XAUI 1	PCIe 2
---------------	---------------	--------

TABLE: PCIe and XAUI Support (SPARC Enterprise T5140 Servers)

Slot	PCIe Controller	Supported Device Types	FRU Name
PCIe 0 or XAUI 0*	1†	x8 PCIe operating at x8 XAUI expansion card	/SYS/MB/RISER0/PCIE0 /SYS/MB/RISER0/XAUI0
PCIe 1 or XAUI 1†	0**	x8 PCIe operating at x8 XAUI expansion card	/SYS/MB/RISER1/PCIE1 /SYS/MB/RISER1/XAUI1
PCIe 2	0	x16 PCIe operating at x8	/SYS/MB/RISER2/PCIE2

* Slots 0 and 1 are shared PCIe/XAUI slots. You can only install one or the other type of card.

† Slots 0 and 1 are shared PCIe/XAUI slots. You can only install one or the other type of card.

‡ PCIe controller 1 also supports the on-board Ethernet controller for the NET0, NET1, NET2, and NET3 ports.

** PCIe controller 0 also supports the on-board storage controllers for the hard drives, DVD, and USB ports.

PCIe and XAUI Card Reference for SPARC Enterprise T5240 Servers

The following table shows the physical PCIe/XAUI slot locations on the SPARC Enterprise T5240 server, as viewed from the rear of the system.

TABLE: FB-DIMM Configuration Installation Map (SPARC Enterprise T5240 Servers)

PCIe 3	PCIe 4	PCIe 5
PCIe 0/XAUI 0	PCIe 1/XAUI 1	PCIe 2

TABLE: PCIe and XAUI Support (SPARC Enterprise T5240 Servers)

Slot	PCIe Controller	Supported Device Types	FRU Name
PCIe 0 or XAUI 0*	1‡	x8 PCIe operating at x8 XAUI expansion card	/SYS/MB/RISER0/PCIE0 /SYS/MB/RISER0/XAUI0
PCIe 1 or XAUI 1†	0**	x8 PCIe operating at x8 XAUI expansion card	/SYS/MB/RISER1/PCIE1 /SYS/MB/RISER1/XAUI1
PCIe 2	0	x16 PCIe operating at x8	/SYS/MB/RISER2/PCIE2
PCIe 3	0	x8 PCIe operating at x8	/SYS/MB/RISER0/PCIE3
PCIe 4	1	x8 PCIe operating at x8	/SYS/MB/RISER1/PCIE4
PCIe 5	1	x8 PCIe operating at x8	/SYS/MB/RISER2/PCIE5

* Slots 0 and 1 are shared PCIe/XAUI slots. You can only install one or the other type of card.

† Slots 0 and 1 are shared PCIe/XAUI slots. You can only install one or the other type of card.

‡ PCIe controller 1 also supports the on-board Ethernet controller for the NET0, NET1, NET2, and NET3 ports.

** PCIe controller 0 also supports the on-board storage controllers for the hard drives, DVD, and USB ports.

PCIe or XAUI names in ILOM messages are displayed with the full FRU name, such as /SYS/MB/RISER0/PCIE0.

Note – Fill the lower PCIe/XAUI slots (Slots 0 - 2) first.

Related Information

- [“Remove a PCIe or XAUI Card” on page 109](#)
- [“Install a PCIe or XAUI Card” on page 109](#)
- [“Remove a PCIe/XAUI Riser” on page 105](#)
- [“Install a PCIe/XAUI Riser” on page 107](#)

Servicing the Battery

These topics explain how to replace a faulty battery


- [“System Battery Overview” on page 114](#)
- [“Remove a Battery” on page 115](#)
- [“Install a Battery” on page 116](#)

System Battery Overview

The battery maintains system time when the server is powered off and a time server is unavailable. If the server fails to maintain the proper time when it is powered off and not connected to a network, replace the battery.

The following figure shows the battery location on the SPARC Enterprise T5140. The SPARC Enterprise T5240 is in a similar location.

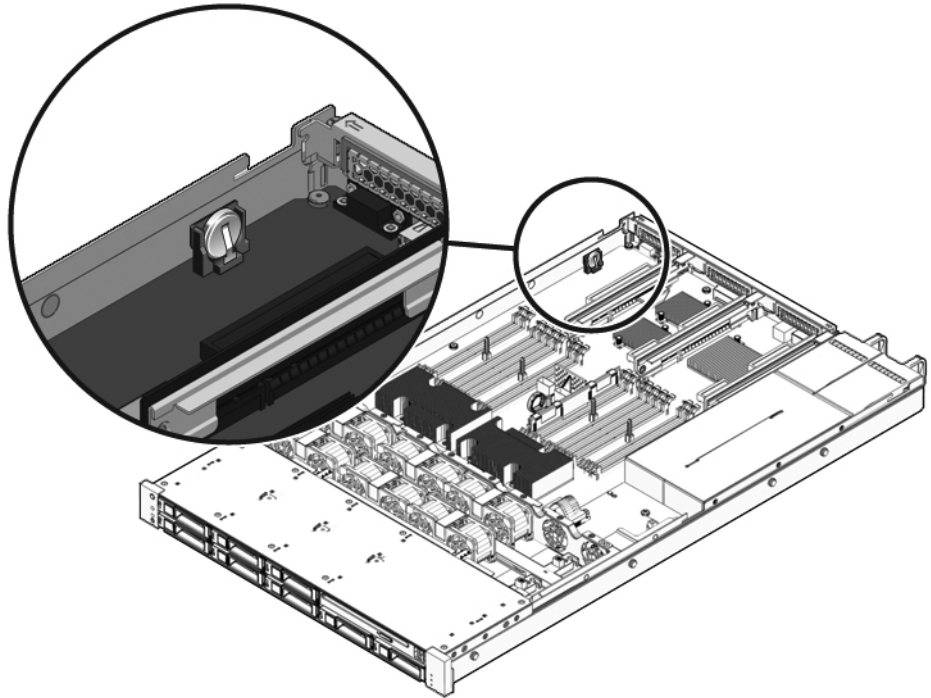FIGURE: Battery Location (SPARC Enterprise T5140 Server Shown)



Related Information

- [“Remove a Battery” on page 115](#)
- [“Install a Battery” on page 116](#)

▼ Remove a Battery

1. Remove PCIe/XAUI riser 2.
See [“Remove a PCIe/XAUI Riser” on page 105](#).
2. Using a No. 1 flat-blade screwdriver, press the clip away from the battery and pull the battery up and out of its holder.

Related Information

- [“Install a Battery” on page 116](#)

▼ Install a Battery

1. **Unpack the replacement battery.**
2. **Pry the clip open slightly and insert the battery into the battery holder.**
Looking at the system from the rear, install the positive side (+) facing to the right, towards the chassis wall and away from the center of the motherboard.
3. **Install PCIe/XAUI riser 2.**
See [“Install a PCIe/XAUI Riser” on page 107](#)
4. **Use the ILOM `setdate` command to set the day and time.**
See the *Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5140 and T5240 Servers*.
5. **After returning the server to operation, check and reset the Solaris OS date.**

Related Information

- [“Remove a Battery” on page 115](#)

Servicing the SCC Module

These topics explain how to replace a faulty SCC module.

- [“SCC Module Overview” on page 116](#)
- [“Remove the SCC Module” on page 117](#)
- [“Install the SCC Module” on page 117](#)

SCC Module Overview

The SCC module contains system host ID, MAC addresses, and configuration variable settings for ILOM. If you are replacing a motherboard, you must move the SCC module from the old motherboard to the new one.

Related Information

- [“Remove the SCC Module” on page 117](#)
- [“Install the SCC Module” on page 117](#)

▼ Remove the SCC Module

1. **Remove the PCIe/XAUI riser 2.**
See [“Remove a PCIe/XAUI Riser” on page 105.](#)
2. **Locate the SCC module.**
3. **Pull the SCC module straight up from its connector.**

Related Information

- [“SCC Module Overview” on page 116](#)
- [“Install the SCC Module” on page 117](#)

▼ Install the SCC Module

1. **Unpack the replacement SCC module and set it on an antistatic mat.**
2. **Align the SCC module with its connector on the motherboard.**

Note – The SCC module and its connector are keyed.

3. **Press the SCC module down until it seats.**
4. **Install PCIe/XAUI riser 2.**
See [“Install a PCIe/XAUI Riser” on page 107.](#)
5. **Install the top cover.**
See [“Install the Top Cover” on page 177.](#)
6. **Slide the server into the rack.**
See [“Reinstall the Server in the Rack” on page 178.](#)
7. **Connect the power supplies.**
[“Connect Power Cords to the Server” on page 181.](#)

Note – As soon as the power cords are connected, standby power is applied. Depending on how the firmware is configured, the system might boot at this time.

8. **Power on the server.**
See [“Power On the Server Using the poweron Command” on page 181](#) or [“Power On the Server Using the Front Panel Power Button” on page 182.](#)

Related Information

- [“SCC Module Overview” on page 116](#)
- [“Remove a Memory Mezzanine Assembly” on page 118](#)

Servicing the Memory Mezzanine Assembly (SPARC Enterprise T5240)

These topics explain how to remove and install a memory mezzanine assembly.

- [“Memory Mezzanine Assembly Overview” on page 118](#)
- [“Remove a Memory Mezzanine Assembly” on page 118](#)
- [“Install a Memory Mezzanine Assembly” on page 120](#)

Memory Mezzanine Assembly Overview

The memory mezzanine assembly must be removed in order to access the following components:

- Motherboard FB-DIMMs
- Motherboard
- Power distribution board
- Power supply backplane (SPARC Enterprise T5240 server)
- Paddle card

Related Information

- [“Remove a Memory Mezzanine Assembly” on page 118](#)
- [“Install a Memory Mezzanine Assembly” on page 120](#)

▼ Remove a Memory Mezzanine Assembly




Caution – This procedure requires that you handle components that are sensitive to static discharge. Static discharges can cause the components to fail.

1. **Power off the server.**
“Removing Power From the System” on page 60
2. **Attach an antistatic wrist strap.**
3. **Remove the top cover.**
See “Remove the Top Cover” on page 67
4. **Remove the shipping bracket.**

Note – The shipping bracket is not required for normal system operation. Some systems might not have a shipping bracket installed.

5. **Open the release levers on either side of the memory mezzanine assembly.**

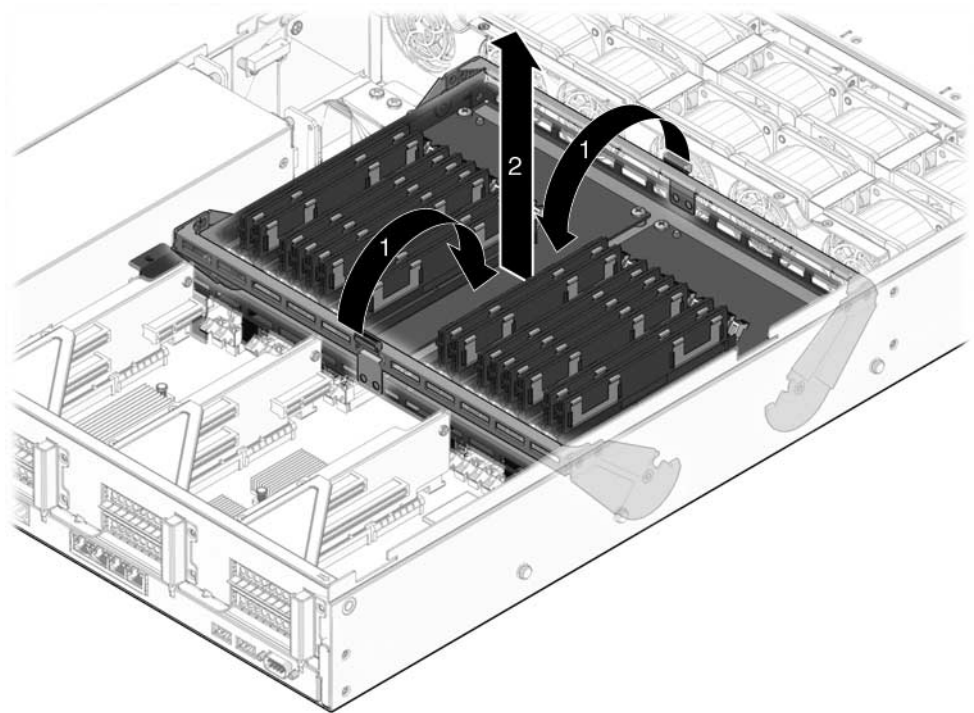FIGURE: Removing the Memory Mezzanine Assembly



6. **Lift the memory mezzanine assembly up and out of the system.**
Place the memory mezzanine assembly on an antistatic mat.

7. If you are replacing a faulty memory mezzanine assembly, remove the mezzanine air duct and transfer the FB-DIMMs to the new memory mezzanine assembly.

Install filler panels in the empty memory mezzanine connector slots, if you are not replacing the memory mezzanine immediately.

Related Information

- [“Install a Memory Mezzanine Assembly” on page 120](#)
- [“Removing Power From the System” on page 60](#)
- [“Remove the Top Cover” on page 67](#)

▼ Install a Memory Mezzanine Assembly



Caution – This procedure requires that you handle components that are sensitive to static discharge. Static discharges can cause the components to fail.

1. **Remove any filler panels from the memory mezzanine connector slots, if necessary.**


Store the filler panels in a safe place. You will reuse the filler panels if you remove the memory mezzanine assembly in the future.

2. **Ensure that the release levers are extended.**

3. **Lower the memory mezzanine assembly into the chassis.**

Ensure that the connectors between the memory mezzanine assembly and the motherboard are aligned.

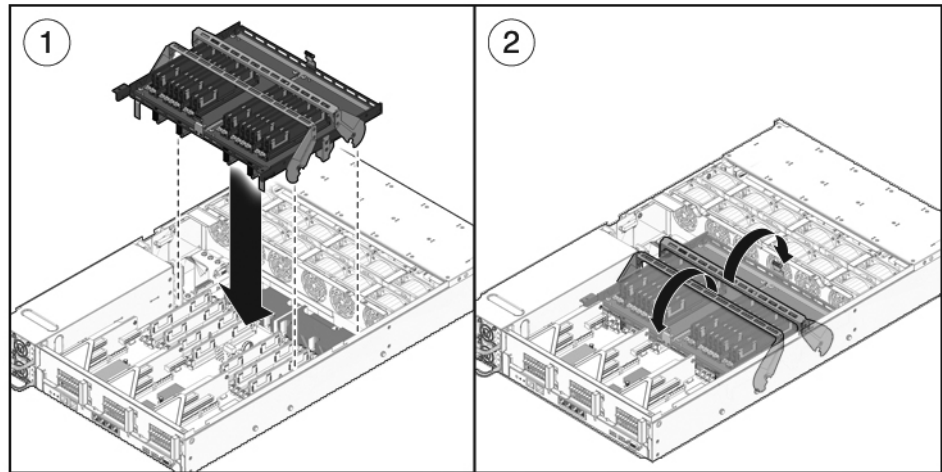
FIGURE: Installing the Memory Mezzanine Assembly



4. Close the levers to lock the memory mezzanine assembly into place.

5. Install the memory riser air duct.

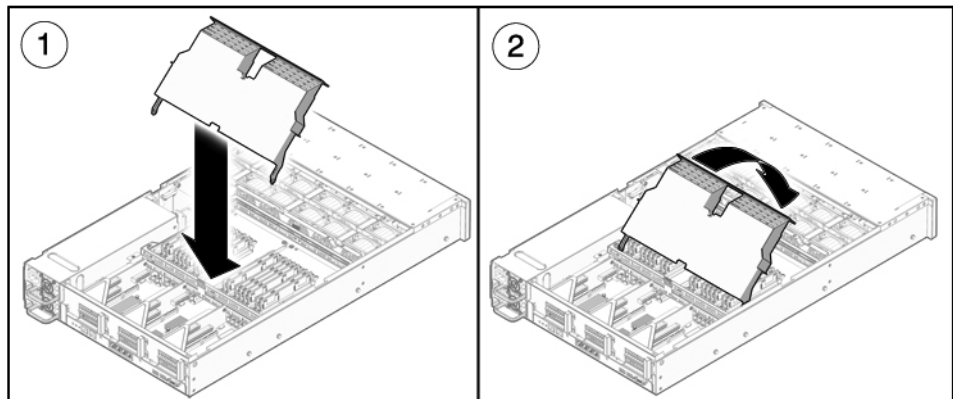FIGURE: Installing the Memory Mezzanine Air Duct



6. (Optional) Install the shipping bracket.

Two captive screws secure the shipping bracket.

7. Install the top cover.

See [“Install the Top Cover”](#) on page 177.

8. Attach the power cables.

See [“Connect Power Cords to the Server”](#) on page 181

9. Power on the server.

See [“Power On the Server Using the poweron Command”](#) on page 181 or [“Power On the Server Using the Front Panel Power Button”](#) on page 182.

Related Information

- [“Remove a Memory Mezzanine Assembly”](#) on page 118
- [“Install the Top Cover”](#) on page 177
- [“Connect Power Cords to the Server”](#) on page 181
- [“Power On the Server Using the poweron Command”](#) on page 181
- [“Power On the Server Using the Front Panel Power Button”](#) on page 182

Servicing the Motherboard Assembly

These topics explain how to remove and install the motherboard assembly.

- [“Motherboard Servicing Overview”](#) on page 122
- [“Remove the Motherboard Assembly”](#) on page 123
- [“Install the Motherboard Assembly”](#) on page 125

Motherboard Servicing Overview

The motherboard assembly must be removed in order to access the following components:

- Power distribution board
- Power supply backplane (SPARC Enterprise T5240 server)
- Paddle card

Note – This procedure requires removing the server from the rack.

Caution – The server is heavy. Two people are required to remove it from the rack.



Related Information

- [“Remove the Motherboard Assembly” on page 123](#)
- [“Install the Motherboard Assembly” on page 125](#)

▼ Remove the Motherboard Assembly



Caution – This procedure requires that you handle components that are sensitive to electrostatic discharge. This discharge can cause server components to fail.

1. Run the `showrc` command and make a note of any SP variables that have been modified from the factory default.
2. Stop Solaris OS to get the OpenBoot PROM prompt.
3. Run the `printenv` command to make a note of any OpenBoot PROM variables that have been modified
4. Power off the server.
See [“Removing Power From the System” on page 60](#).
5. Remove the server from the rack.
See [“Remove the Server From the Rack” on page 64](#).
6. Attach an antistatic wrist strap.
7. Remove the top cover.
See [“Remove the Top Cover” on page 67..](#)
8. Remove the air duct.
See [“Remove the Air Duct” on page 103](#).
9. Remove all PCIe/XAUI riser assemblies.
See [“Remove a PCIe/XAUI Riser” on page 105](#).

Note – Make note of the location of expansion cards in PCIe/XAUI risers 0 and 1.

10. Disconnect the motherboard-to-power distribution board ribbon cable.
11. Disconnect the hard drive data cables:

- a. **Press the latching mechanism on the connector to release the cable plug.**

If you have difficulty releasing the cable plug, first push the plug slightly into the connector, then press the latching mechanism.

- b. **Keeping the latching mechanism pressed, pull the plug from the connector on the hard drive backplane.**



Caution – The hard drive data cables are delicate. Ensure they are safely out of the way when servicing the motherboard.

12. **If you are replacing the motherboard, remove the following components:**

- All FB-DIMMs. Note memory configuration so that you can install the FB-DIMMs in the replacement motherboard.
- SCC PROM.

13. **Using a No. 2 Phillips screwdriver, remove the four screws that secure the motherboard assembly to the bus bar.**



Caution – If you touch the heat sink when removing the bus bar screw, you might get burned.

Note – Set the four screws aside. You must use these screws to attach the motherboard to the bus bar during installation.

14. **Loosen the captive screw securing the motherboard to the chassis.**


The captive screw is green, and is located to the left of the bus bar screws.

15. **Using the green handle, slide the motherboard toward the back of the system and lift it out of the chassis.**



Caution – Some components on the motherboard might be hot. Use caution when handling the motherboard, especially near the CMP heat sinks.

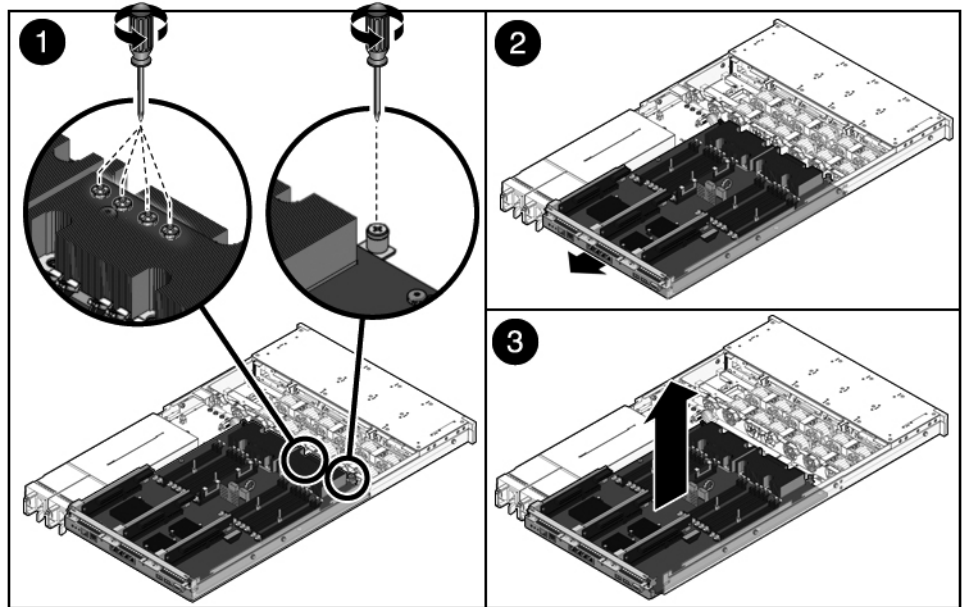FIGURE: Removing the Motherboard Assembly (SPARC Enterprise T5140 Server Shown)



16. Place the motherboard assembly on an antistatic mat.

Related Information

- [“Install the Motherboard Assembly” on page 125](#)


▼ Install the Motherboard Assembly



Caution – This procedure requires that you handle components that are sensitive to static discharge. Static discharges can cause the components to fail.

1. Position the motherboard so that its screw holes align with the chassis standoffs.

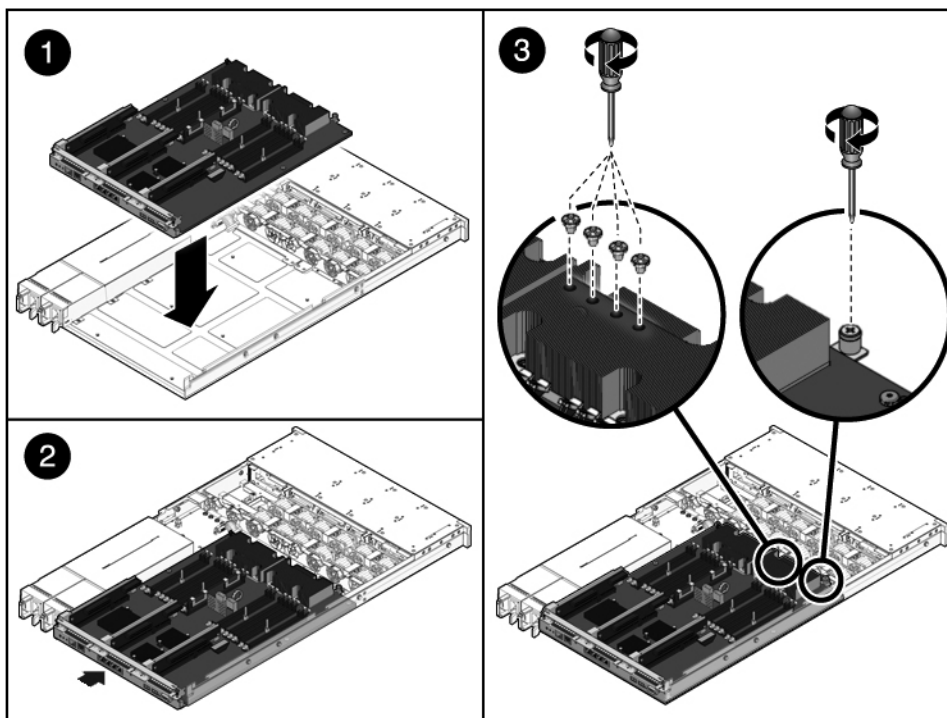FIGURE: Installing the Motherboard Assembly (SPARC Enterprise T5140 Server)



2. Using the green handle and the back edge of the motherboard tray, push down firmly and equally while sliding the motherboard to the front of the chassis.

Tip – After installing the motherboard into the chassis, ensure that the motherboard is correctly seated by gently lifting up on the handles. If the board moves upward, then it is not correctly seated. Ensure that the motherboard tray sits flush with the chassis floor. Also, check for binds and ensure that the bus bar screw holes are correctly aligned with the bus bar at the front of the motherboard.

3. Tighten the captive screw that secures the motherboard to the front of its tray in the chassis.
4. Install the four No. 2 Phillips screws that secure the motherboard to the bus bar.

Note – When you reinstall the motherboard, you must use the correct screws to attach the motherboard to the bus bar.

5. If you are installing a new motherboard, install the following components:

- a. All FB-DIMMs removed from the previous motherboard. Ensure that the FB-DIMM modules are installed in the same memory configuration as they were in before.
See [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94](#) or [“FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98](#) for guidance.
- b. SCC module. See [“Install the SCC Module” on page 117](#).
6. **Connect the hard drive data cables.** For cable routing instructions, see whichever of the following topics apply:
 - [“Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5140 Servers” on page 190](#)
 - [“Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5240 Servers” on page 204](#)
7. **Install the air duct.**
See [“Install the Air Duct” on page 104](#).
8. **Reinstall the motherboard-to-power distribution board ribbon cable.**
9. **Reinstall the PCIe and XUI risers.**
See [“Install a PCIe/XUI Riser” on page 107](#).
10. **Install the top cover.**
See [“Install the Top Cover” on page 177](#).
11. **Install the server into the rack.**
See [“Reinstall the Server in the Rack” on page 178](#).
12. **Attach the power cables.**
See [“Connect Power Cords to the Server” on page 181](#).
13. **Power on the server.**
See [“Power On the Server Using the poweron Command” on page 181](#) or [“Power On the Server Using the Front Panel Power Button” on page 182](#).

Related Information

- [“Remove the Motherboard Assembly” on page 123](#)

Servicing Fan Modules

These topics explain how to service faulty fan modules.

- [“Fan Module Overview” on page 129](#)
- [“Remove a Fan Module” on page 131](#)
- [“Install a Fan Module” on page 133](#)

Related Information

- [“Preparing to Service the System” on page 57](#)

Fan Module Overview

The fan modules are mounted across the width of the chassis between the hard drive cage and the CPU modules. They are accessed by lifting the top cover door.

The default number of fan modules installed in the server is different for the two server models:

- SPARC Enterprise T5140 Servers contain at least six fan modules.
- SPARC Enterprise T5240 Servers contain at least five fan modules.

Each fan module contains two fans mounted in an integrated, hot-swappable CRU. If a fan module fails, replace it as soon as possible to maintain server availability.



Caution – Hazardous moving parts. Unless the power to the server is completely shut down, the only service permitted in the fan compartment is the replacement of the fan modules by trained personnel.

Fan Module Configurations for SPARC Enterprise T5140 Servers (4- and 8-Disk Capable)

The following table shows the FRU device names for the fan modules in the four hard drive capable SPARC Enterprise T5140 server.

TABLE: Fan Module Locations and FRU Names for SPARC Enterprise T5140 Servers With a 4-Disk Capable Backplane

/SYS/FANBD1/FM0	/SYS/FANBD1/FM1	/SYS/FANBD1/FM2	(Empty)
/SYS/FANBD0/FM0	/SYS/FANBD0/FM1	/SYS/FANBD0/FM2	(Empty)
(Front of System)			

The following table shows the FRU device names for the fan modules in the eight hard drive capable SPARC Enterprise T5140 server.

TABLE: Fan Module Locations and FRU Names for SPARC Enterprise T5140 Servers With an 8-Disk Capable Backplane

/SYS/FANBD1/FM0	/SYS/FANBD1/FM1	/SYS/FANBD1/FM2	(Empty)
/SYS/FANBD0/FM0	/SYS/FANBD0/FM1	/SYS/FANBD0/FM2	/SYS/FANBD0/FM3
(Front of System)			

Fan Module Configurations for SPARC Enterprise T5240 Servers (8- and 16-Disk Capable)

The following table shows the FRU device names for the fan modules in SPARC Enterprise T5240 servers. This information applies to both the eight hard drive capable and sixteen hard drive capable version of the system.



TABLE: Fan Module Locations and FRU Names for SPARC Enterprise T5240 Servers With an 8- or 16-Disk Capable Backplane

/SYS/FANBD1/FM0	/SYS/FANBD1/FM1	(Empty)
/SYS/FANBD0/FM0	/SYS/FANBD0/FM1	/SYS/FANBD0/FM2
(Front of System)		

Fan Module Status LEDs

Each fan module contains a pair of LEDs, which are visible when you open the fan compartment access door. The following table describes the status LEDs located on the fan modules.

TABLE: Fan Module Status LEDs

LED		Color	Notes
Power OK		Green	This LED is lit when the system is powered on and the fan module is functioning correctly.
Service Required		Amber	This LED is lit when the fan module is faulty. In addition, the system Fan Fault LED is lit.

In addition, The front and rear panel Service Required LEDs are also lit if the system detects a fan module fault.

If the fan fault causes an over temperature condition to occur, the system Overtemp LED will turn on and an error message will be logged as well as displayed on the system console.

Related Information

- [“Front Panel Controls and Indicators on SPARC Enterprise T5140 Servers” on page 5](#)
- [“Rear Panel Components and Indicators on SPARC Enterprise T5140 Servers” on page 8](#)
- [“Front Panel Controls and Indicators on SPARC Enterprise T5240 Servers” on page 9](#)
- [“Rear Panel Components and Indicators on SPARC Enterprise T5240 Servers” on page 12](#)

▼ Remove a Fan Module

1. **Extend the server into the maintenance position.**
See [“Extend the Server to the Maintenance Position” on page 63](#).

2. Lift the latch and open the top cover door.



Caution – The system might start to overheat if the top cover door is left open for more than 60 seconds.

3. The faulty fan module is identified with a corresponding fault LED.

On SPARC Enterprise T5140 servers, the Fan Fault LEDs are located on the fan board.


On SPARC Enterprise T5240 servers, the Fan Fault LEDs are located on the fan modules.

4. Pull up on the green fan module label until you remove the fan module from the chassis.



Caution – When changing the fan modules, only the fan modules may be removed or replaced. Do not service any other components in the fan compartment unless the system is shut down and the power cords removed. Pull up the fan module by holding the green label only.

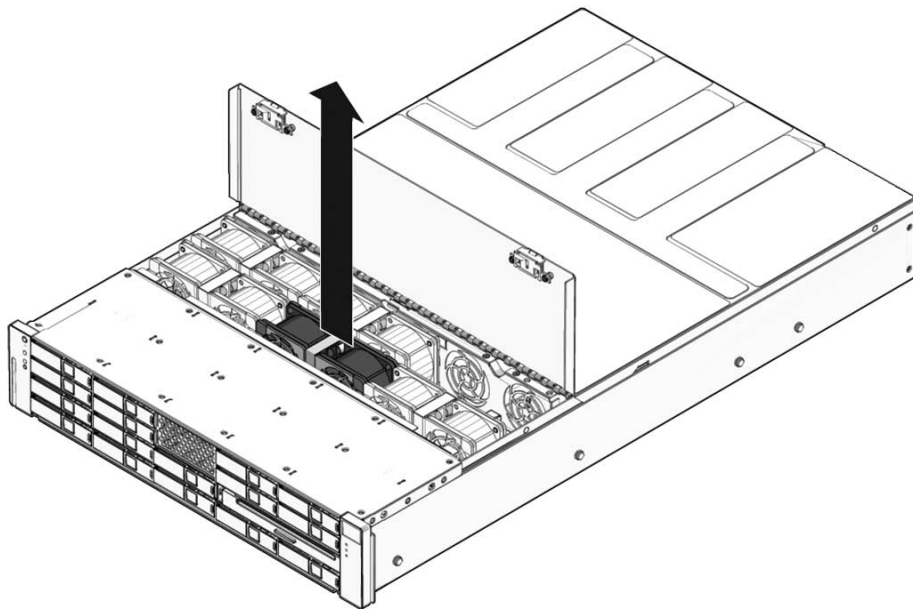FIGURE: Removing a Fan Module



Related Information

- [“Extend the Server to the Maintenance Position” on page 63](#)

▼ Install a Fan Module




Caution – To ensure proper system cooling, be certain to install the replacement fan module in the same slot from which the faulty fan was removed.

1. With the top cover door open, install the replacement fan module into the server.

The fan modules are keyed to ensure that they are installed facing in the correct direction.

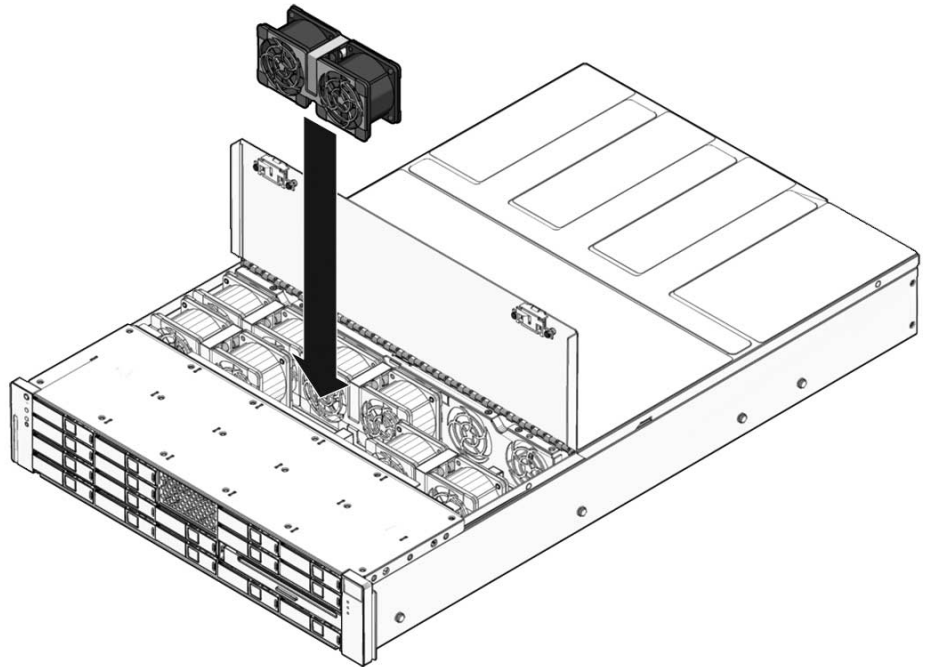FIGURE: Installing a Fan Module



2. Apply firm pressure to fully seat the fan module.
3. Verify that the Fan Fault LED on the replaced fan module is off.
4. Close the top cover door.
5. Verify that the system Fan Fault LED, Service Required LEDs, and the individual fan module Fault LED are off
6. Run the ILOM `show faulty` command to verify that the fan fault has been cleared.

See [“Detecting Faults With ILOM” on page 22](#) for more information on using the `show faulty` command.

Related Information

- [“Extend the Server to the Maintenance Position” on page 63](#)
- [“Faults Displayed by show faulty” on page 29](#)

Servicing Power Supplies

The topics explain how to remove and replace power supply modules.

- [“Power Supplies Overview” on page 135](#)
- [“Remove a Power Supply” on page 137](#)
- [“Install a Power Supply” on page 140](#)
- [“Power Supply Configuration Reference” on page 142](#)

Power Supplies Overview

These servers are equipped with redundant hot-swappable power supplies. With redundant power supplies, you can remove and replace a power supply without shutting the server down.

Some models of the server use AC input power and other models use DC input power. For input power specifications for both AC and DC models, refer to the *SPARC Enterprise T5140 and T5240 Server Site Planning Guide*.


The server models that run on DC input power require you to build the input power cable to specific safety guidelines. For instructions on building the DC power cables and the safety guidelines, refer to the *SPARC Enterprise T5140 and T5240 Server Installation Guide*.

Note – The instructions in this manual use the AC server models as examples. However, unless noted otherwise, the instructions also apply to the DC server models.

Power Supply Status LEDs



Each power supply contains a series of LEDs, visible when looking at the back panel of the system.

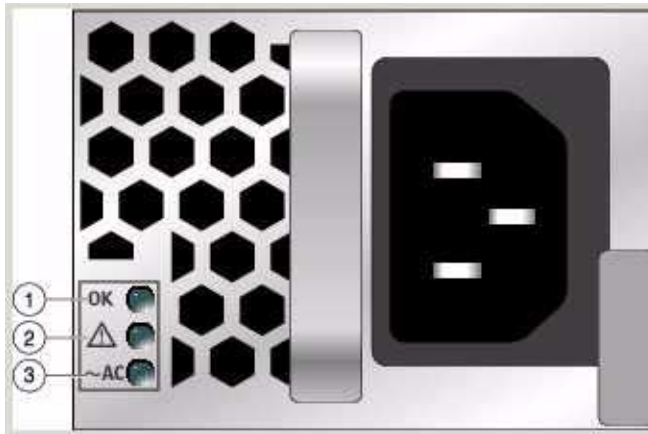FIGURE: Power Supply LEDs (SPARC Enterprise T5140 Server Shown)



The following table describes the three power supply LEDs

TABLE: Power Supply Status LEDs

Legend	LED	Icon	Color	
1	OK		Green	This LED lights when the power supply DC voltage from the PSU to the server is within tolerance.
2	Fault		Amber	This LED is lit when the power supply is faulty.
3	AC Present	~AC*	Green	This LED turns on when AC voltage is applied to the power supply. Note - For DC models, this is the DC input OK LED. It turns on when the input DC power is present.

* For DC PSUs, this symbol is either DC or a power connector.

The front and rear panel Service Required LEDs turn on if the system detects a power supply fault.

Note – If a power supply fails and you do not have a replacement available, leave the failed power supply installed to ensure proper airflow in the server.

Related Information

- “Servicing Power Distribution Boards” on page 163
- “Servicing Power Supply Backplanes (SPARC Enterprise T5240 Servers)” on page 170
- “Remove a Power Supply” on page 137
- “Install a Power Supply” on page 140

▼ Remove a Power Supply



Caution – Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

1. **Move to the rear of the server chassis so you can view the power supply status LEDs.**

The amber Fault LED on the failed power supply will be on.

2. **(Optional) You can verify the status indicated by the Fault LED by running the ILOM `show faulty` command.**


The Fault LED indication is verified if the `show faulty` command lists that power supply as faulty.

3. **Locate and release the cable management arm (CMA).**

- a. **Press and hold the tab as show in the following figure.**

- b. **Rotate the cable management arm out of the way so that you can access the power supply.**

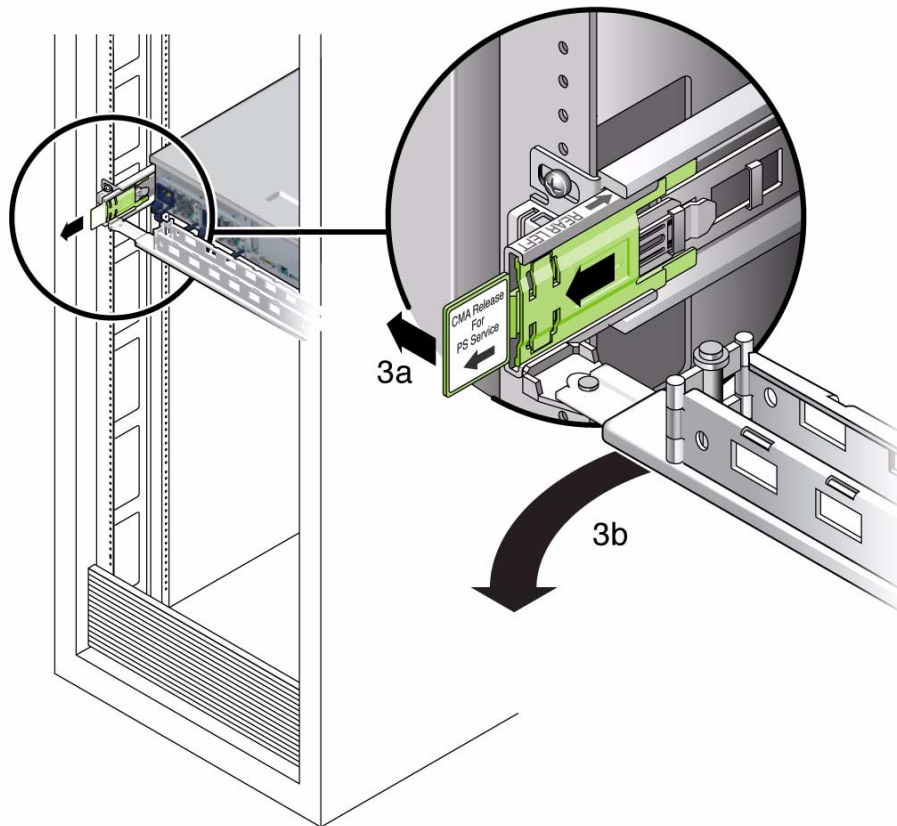FIGURE: Cable management Arm Release Mechanism



4. Based on the model of your server (AC or DC), remove power from the server in one of the following ways:

- AC server models – Disconnect the power cord from the faulty power supply.
- DC server models – Turn off the power using the circuit breaker on the power source.



Caution – For server models with DC input power, do not disconnect the power cable at the Wago connector on the server DC power supply unit. Instead, turn off the power at the circuit breaker on the power source.

5. Grasp the power supply handle and press the release latch.

FIGURE: Power Supply Release Handle (SPARC Enterprise T5140 Servers)


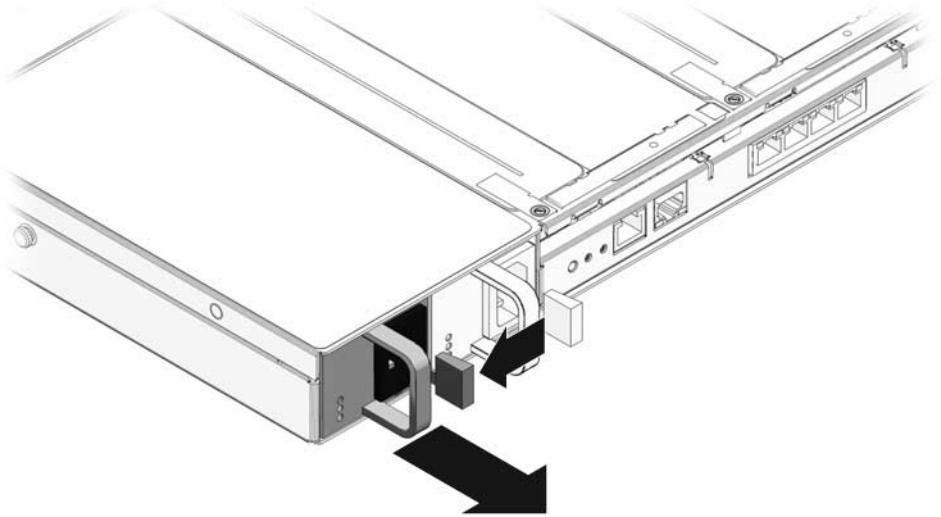


FIGURE: Power Supply Release Handle (SPARC Enterprise T5240 Servers)

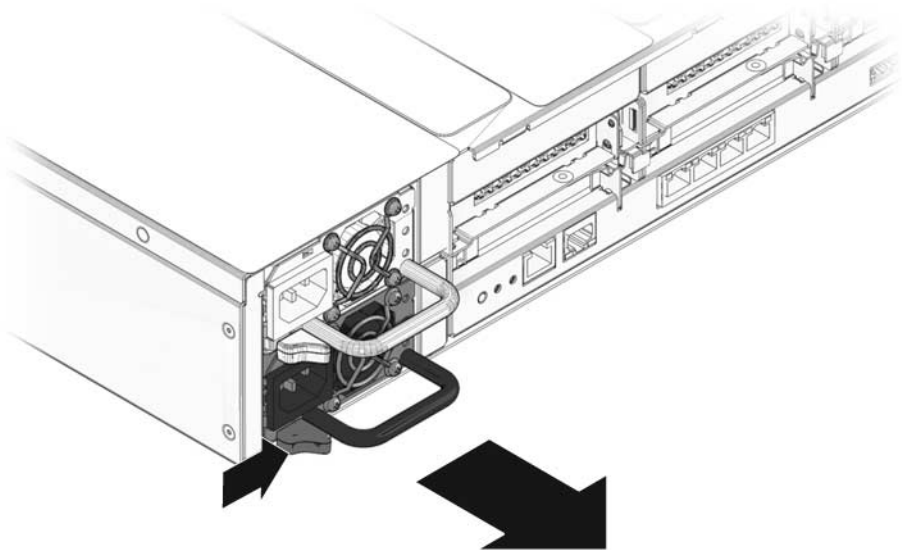

6. Pull the power supply out of the chassis.

▼ Install a Power Supply

1. Align the replacement power supply with the empty power supply chassis bay.
2. Slide the power supply into the bay until it is fully seated.

FIGURE: Installing a Power Supply (SPARC Enterprise T5140 Server)


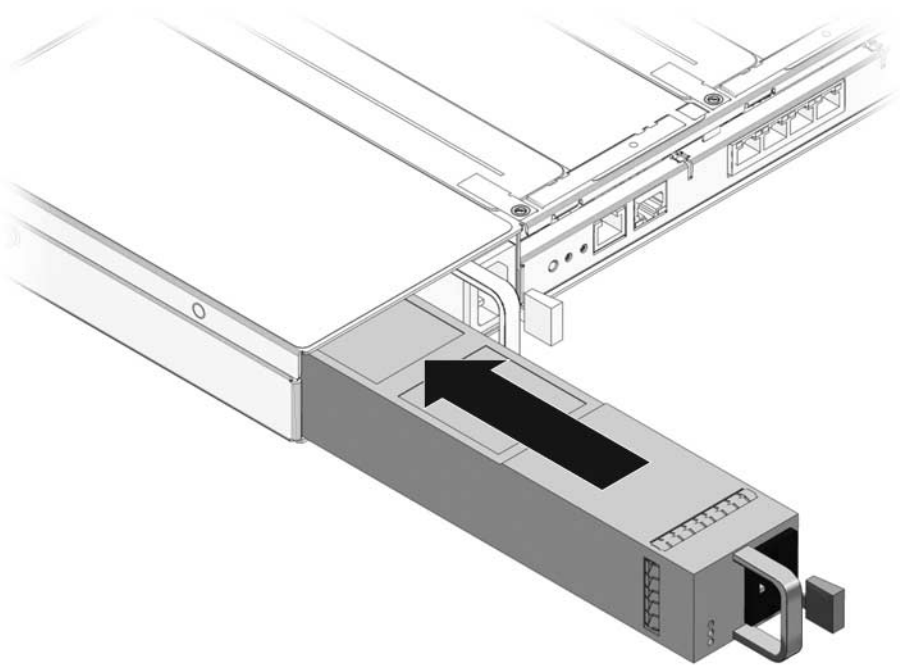


FIGURE: Installing a Power Supply (SPARC Enterprise T5240 Server)

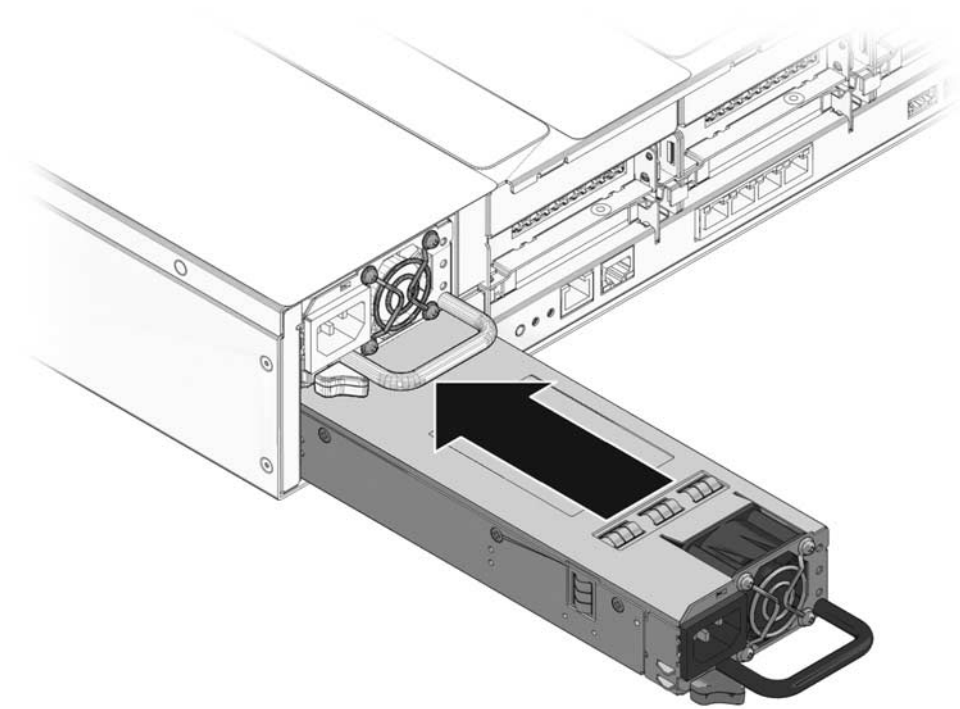

3. Based on the model of your server (AC or DC), apply power to the power supply in one of the following ways:
 - AC server models – Connect the power cord to the power supply.
 - DC server models – Turn on the power using the circuit breaker at the power source.



Caution – For server models with DC input power, do not disconnect and reconnect the power cable at the Wago connector on the server DC power supply unit. Instead, control the input power using the circuit breaker at the power source.

Verify that the PSU OK LED is lighted.

4. Close the CMA, inserting the end of the CMA into the rear left rail bracket.
5. Verify that the Fault LED on the replaced power supply, the system Power Supply Fault LED, and the front and rear Service Required LEDs are off.

Power Supply Configuration Reference

The following table describes the FRU device names for power supplies in the servers.

TABLE: Power Supply FRU Names

Physical Device	FRU Name
PS0	/SYS/PS0
PS1	/SYS/PS1

Note – Power supply names in ILOM messages are displayed with the full FRU name, such as /SYS/PS0.

Servicing Boards and Components

These topics explain how to service field-replaceable units (FRUs) in SPARC Enterprise T5140 and T5240 servers.

- [“Important Safety Instructions” on page 143](#)
 - [“Servicing DVD/USB Modules” on page 144](#)
 - [“Servicing Fan Power Boards” on page 148](#)
 - [“Servicing the Hard Drive Cage” on page 151](#)
 - [“Servicing the Hard Drive Backplane” on page 156](#)
 - [“Servicing Front Control Panel Light Pipe Assemblies” on page 160](#)
 - [“Servicing Power Distribution Boards” on page 163](#)
 - [“Servicing Power Supply Backplanes \(SPARC Enterprise T5240 Servers\)” on page 170](#)
 - [“Servicing Paddle Cards” on page 174](#)
-

Important Safety Instructions

This topic provides a summary of the safety precautions you need to follow when servicing circuit boards and other components contained the server chassis.

Most components housed within the chassis must *never* be serviced while power is present in the chassis. The following table identifies those components.

TABLE: Components That Require Removal of System Power Before Servicing is Performed

Component	Servicing procedures
DVD/USB module	“Servicing DVD/USB Modules” on page 144
Fan power boards	“Servicing Fan Power Boards” on page 148
Hard drive cage	“Servicing the Hard Drive Cage” on page 151

TABLE: Components That Require Removal of System Power Before Servicing is Performed

Component	Servicing procedures
Hard drive backplane	“Servicing the Hard Drive Backplane” on page 156
Front control panel light pipe	“Servicing Front Control Panel Light Pipe Assemblies” on page 160
Power distribution board	“Servicing Power Distribution Boards” on page 163
Power supply backplane (SPARC Enterprise T5240 server)	“Servicing Power Supply Backplanes (SPARC Enterprise T5240 Servers)” on page 170
Paddle card	“Servicing Paddle Cards” on page 174

Note – Fan modules are the only chassis components that may be removed or installed with power present.



Caution – Never run the server with the covers removed. Hazardous voltage is present.



Caution – Chassis covers must be in place while the server is running to ensure proper air flow within the chassis. Running the server with the covers removed may result in damage to the equipment.

Related Information

- [“General Safety Information” on page 57](#)

Servicing DVD/USB Modules

These topics explain how to remove and install DVD/USB modules.

- [“DVD/USB Module Overview” on page 145](#)
- [“Remove the DVD/USB Module” on page 145](#)
- [“Install the DVD/USB Module” on page 147](#)

Related Information

- [“Remove the Hard Drive Backplane” on page 157](#)

DVD/USB Module Overview

The DVD ROM drive and front USB board are mounted in a removable module that is accessed from the system’s front panel. The DVD/USB module must be removed from the hard drive cage in order to service the hard drive backplane.

FIGURE: DVD/USB Module in a SPARC Enterprise T5140 Server



The Hard Drive backplane supports either a SATA DVD or a PATA DVD, depending on when it was manufactured. Servers that contain a SATA-compatible backplane have a "SATA" label on the front bezel. Servers with the older PATA-compatible backplanes do not have any DVD label on the bezel.

Note – SATA-compatible backplanes have special keying that prevents full insertion of a PATA DVD. When installing a PATA-type DVD, do not force the module if it resists full insertion. It may be that the backplane is not PATA-compatible.

Related Information

- [“Remove the DVD/USB Module” on page 145](#)
- [“Install the DVD/USB Module” on page 147](#)
- [“Remove the Hard Drive Backplane” on page 157](#)

▼ Remove the DVD/USB Module

1. Power off the server.

See [“Removing Power From the System” on page 60](#).

2. Unplug the power cords.

3. Attach an antistatic wrist strap.

4. Remove the hard drives that are adjacent to the DVD/USB module.

The HDD number will vary, depending on the backplane type.

- 4-disk capable backplane: remove HDD3

See [“Four-Drive Capable Backplane Configuration Reference”](#) on page 77.

- 8-disk capable backplane: remove HDD7

See [“Eight-Drive Capable Backplane Configuration Reference”](#) on page 78.


- 16-disk capable backplane: remove HDD13

See [“Sixteen-Drive Capable Backplane Configuration Reference”](#) on page 79.

5. Release the DVD/USB module from the hard drive backplane.

Use the finger indentation in the hard drive bay below the DVD/USB module to extend the release tab.

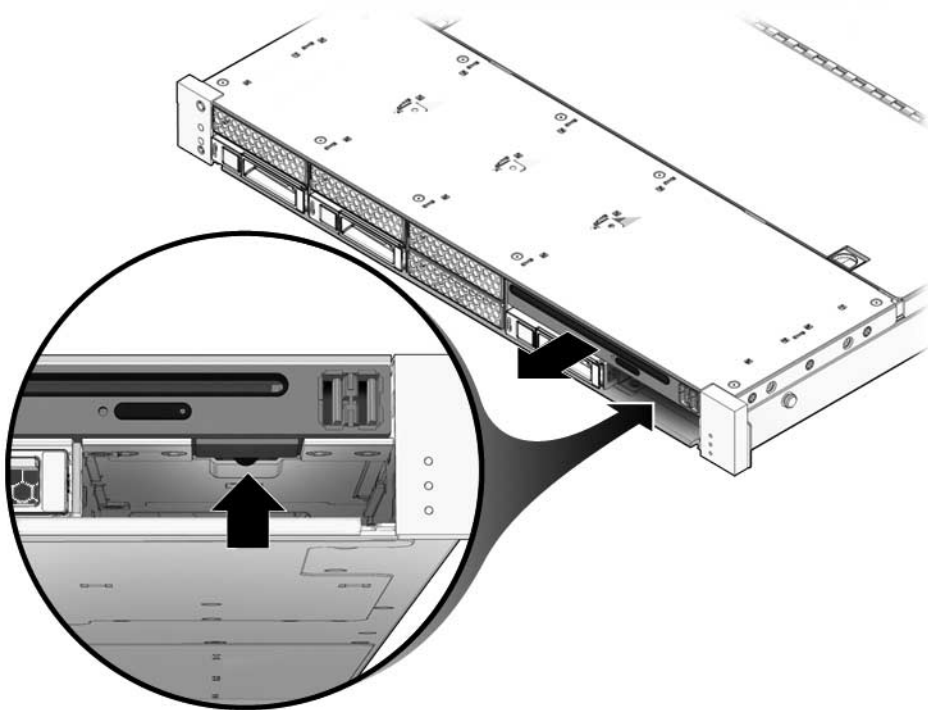FIGURE: Removing the DVD/USB Module (illustrates removal from a SPARC Enterprise T5140 server)



6. Slide the DVD/USB module out of the hard drive cage.
7. Place the module on an antistatic mat.

Related Information

- [“Install the DVD/USB Module” on page 147](#)
- [“Servicing the Hard Drive Backplane” on page 156](#)


▼ Install the DVD/USB Module



Caution – Be certain the DVD type and Hard Drive backplane are compatible: both are SATA or both are PATA types. Special keying will resist installation of a PATA DVD into a SATA-type DVD bay. Do not force the module if you meet resistance or you may damage the backplane, DVD/USB Module, or both.

1. Slide the DVD/USB module into the front of the chassis until it seats.

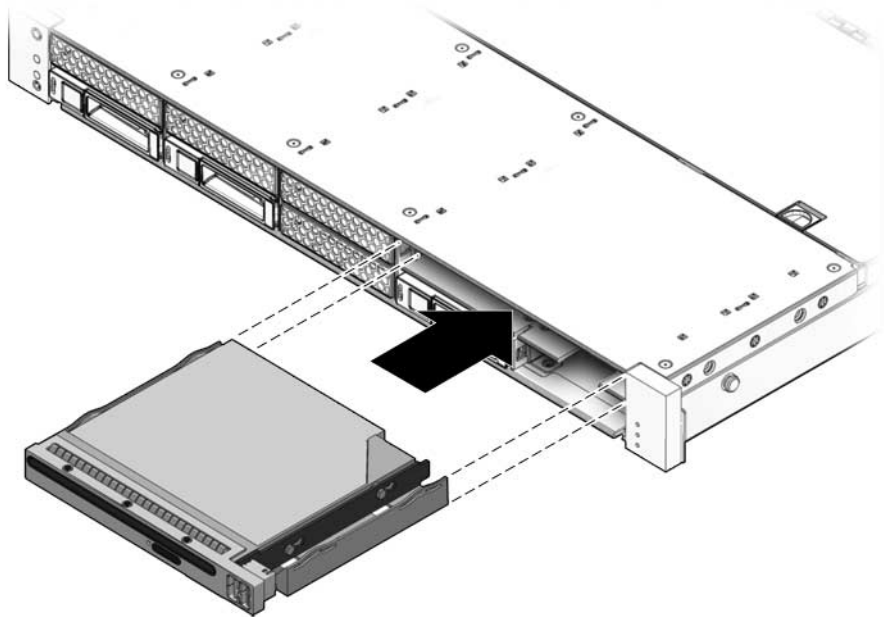FIGURE: Installing the DVD/USB Module (Illustrates installing in a SPARC Enterprise T5140 server)



2. Slide the pull tab back into the system.

3. Install the hard drive you removed during the DVD/USB module removal procedure.

4. Plug in the power cords.

5. Power on the system.

See [“Power On the Server Using the poweron Command” on page 181](#) or [“Power On the Server Using the Front Panel Power Button” on page 182](#).

Related Information

- [“Remove the DVD/USB Module” on page 145](#)
- [“Servicing the Hard Drive Backplane” on page 156](#)

Servicing Fan Power Boards

These topics explain how to remove and install fan power boards.

- [“Fan Power Board Overview” on page 148](#)
- [“Remove the Fan Power Board” on page 149](#)
- [“Install the Fan Power Board” on page 150](#)

Related Information

- [“Remove the Hard Drive Backplane” on page 157](#)

Fan Power Board Overview

Fan power boards carry power to the system fan modules. They also contain fan module status LEDs and carry status and control data for the fan modules.

You must remove both fan power boards in order to access the following components:

- Paddle card
- (SPARC Enterprise T5240 server) Hard drive data cables

Related Information

- [“Remove the Fan Power Board” on page 149](#)
- [“Install the Fan Power Board” on page 150](#)

- [“Servicing Paddle Cards” on page 174](#)

▼ Remove the Fan Power Board

If you are removing the fan power boards to access the paddle card or hard drive cage, you must remove the server from the rack. See [“Remove the Server From the Rack” on page 64](#).

1. **Power off the server.**

See [“Removing Power From the System” on page 60](#).

2. **Disconnect the power cables.**

3. **Extend the server into the maintenance position.**

See [“Extend the Server to the Maintenance Position” on page 63](#).

Note – If you are removing the fan power boards to service the paddle card or hard drive cage, you must remove the server from the rack. See the topic [“Remove the Server From the Rack” on page 64](#).

4. **Attach an antistatic wrist strap.**

5. **Remove the top cover.**

See [“Remove the Top Cover” on page 67](#).


6. **Remove the fan modules.**

Note – If you are replacing a defective fan power board, remove only the fan modules needed to access the fan power board.

See [“Remove a Fan Module” on page 131](#).

7. **Remove the Phillips screw that secures the fan power board to the chassis.**

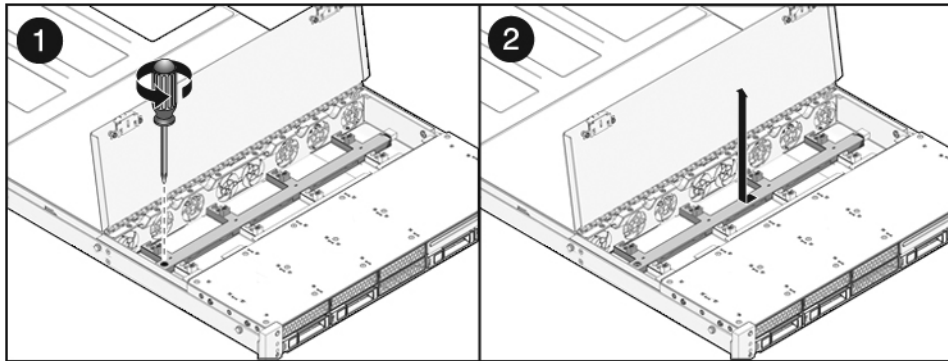FIGURE: Removing the Fan Power Board (Illustrates removal from a SPARC Enterprise T5140 server)



8. Slide the fan power board to the left to disengage it from the paddle card.
9. Remove the fan power board from the system and place it on an antistatic mat.


Related Information

- [“Install the Fan Power Board” on page 150](#)

▼ Install the Fan Power Board

1. Lower the board into its mushroom standoffs in the chassis floor and slide the board to the right into the paddle card.

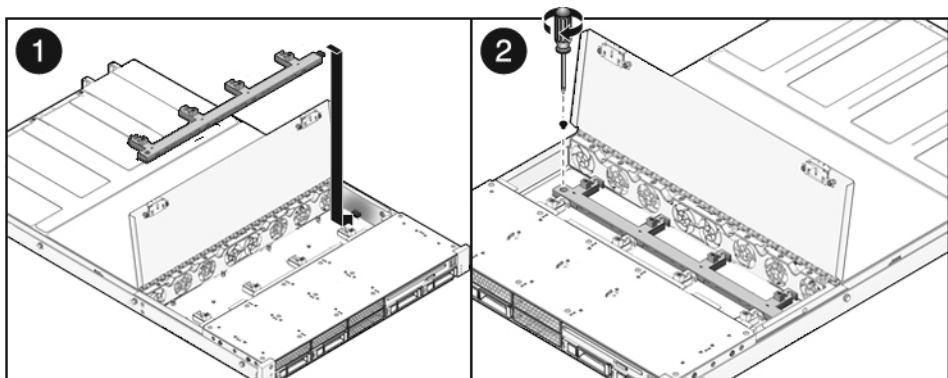FIGURE: Installing a Fan Power Board (Illustrates installation in a SPARC Enterprise T5140 server)



2. Secure the board to the chassis with a Phillips screw.

3. Install the fan modules.

See [“Install a Fan Module”](#) on page 133.

4. Install the top cover.

See [“Install the Top Cover”](#) on page 177.

5. If the server has been removed from the rack, return it to the rack as described in [“Reinstall the Server in the Rack”](#) on page 178.

6. Slide the server into the rack.

See [“Return the Server to the Normal Rack Position”](#) on page 180.

7. Connect the power cords.

See [“Connect Power Cords to the Server”](#) on page 181.

8. Power on the system.

See [“Power On the Server Using the poweron Command”](#) on page 181 or [“Power On the Server Using the Front Panel Power Button”](#) on page 182.

Related Information

- [“Remove the Fan Power Board”](#) on page 149

Servicing the Hard Drive Cage

These topics explain how to remove and install the hard drive cage.

- [“Hard Drive Cage Overview”](#) on page 151
- [“Remove the Hard Drive Cage”](#) on page 152
- [“Install the Hard Drive Cage”](#) on page 154

Related Information

- [“Remove the Hard Drive Backplane”](#) on page 157
- [“Remove the Front Control Panel Light Pipe Assemblies”](#) on page 161

Hard Drive Cage Overview

The hard drive cage is the mechanical assembly that contains the system hard drives, DVD/USB module, and hard drive backplane.

You must remove the hard drive cage to access the following components:

- Hard drive backplane
- Front control panel light pipe assemblies

Related Information

- [“Remove the Hard Drive Cage” on page 152](#)
- [“Install the Hard Drive Cage” on page 154](#)
- [“Remove the Hard Drive Backplane” on page 157](#)
- [“Remove the Front Control Panel Light Pipe Assemblies” on page 161](#)

▼ **Remove the Hard Drive Cage**

1. Power off the system.

See [“Removing Power From the System” on page 60](#).

2. Disconnect all external cables.

3. Remove the server from the rack. Place the server on a hard, flat surface.

See [“Remove the Server From the Rack” on page 64](#).

4. (SPARC Enterprise T5140) Remove the inner glides from the server.

Each inner glide is secured with a locking tab. Release the tab and slide each inner glide off the server mounting studs.

5. Attach an antistatic wrist strap.

6. Remove the top cover.

See [“Remove the Top Cover” on page 67](#).

7. If you are servicing the hard drive backplane, remove all hard drives.

See [“Remove a Hard Drive” on page 71](#).

Note – Make a note of the drive locations before removing them. You will need to install the hard drives in the same locations when reassembling the system.

8. If you are servicing the hard drive backplane, remove the DVD/USB module.


See [“Remove the DVD/USB Module” on page 145](#).

9. (SPARC Enterprise T5240 server) Remove the fan modules and fan power boards.

See “Remove the Fan Power Board” on page 149.

10. Remove the No. 2 Phillips screws securing the hard drive cage to the chassis.
Two screws secure the disk cage to each side of the chassis.

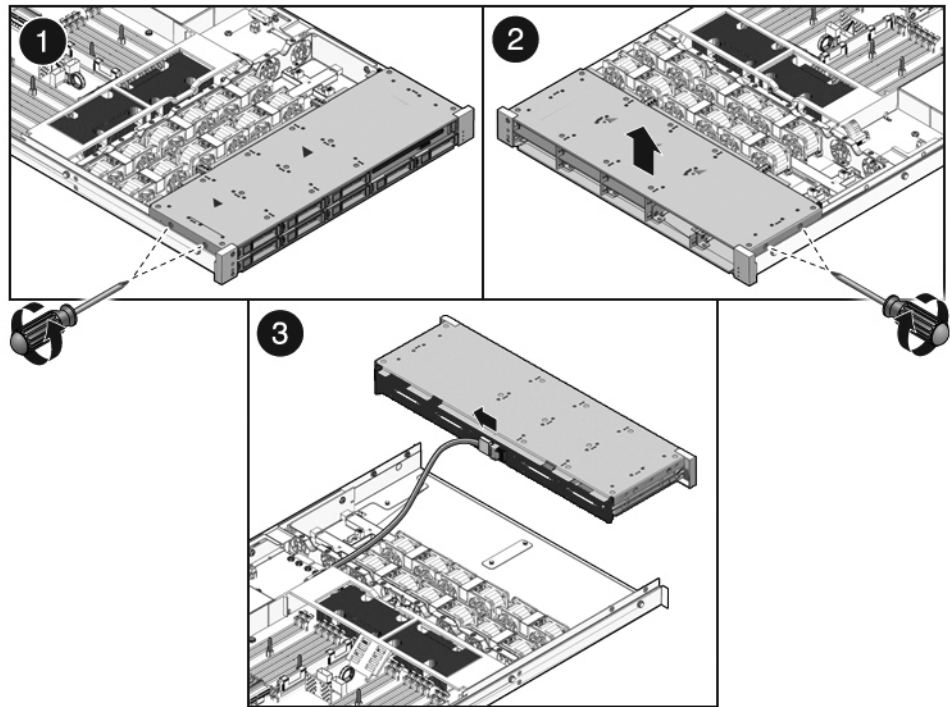FIGURE: Removing a Hard Drive Cage (Illustrating Removal From a SPARC Enterprise T5140 Server)



11. Slide the hard drive cage forward to disengage the backplane from the paddle cards.
12. Disconnect the hard drive data cables.
 - a. Press the release button.
 - b. Remove the plug from the connector on the hard drive backplane.



Caution – The hard drive data cables are delicate. Ensure that they are safely out of the way when servicing the motherboard.

13. Lift the hard drive cage up and out of the chassis.
14. Set the hard drive cage on an antistatic mat.

Related Information

- [“Install the Hard Drive Cage” on page 154](#)
- [“Remove the Hard Drive Backplane” on page 157](#)

▼ Install the Hard Drive Cage


Before performing any installation steps, review the proper cable routing and connections. The following topics contain detailed cable routing information.

- [“Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5140 Servers” on page 190](#)
- [“Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5240 Servers” on page 204](#)

1. **Position the hard drive cage in the chassis, over the chassis standoffs.**

This is shown in the following figure.

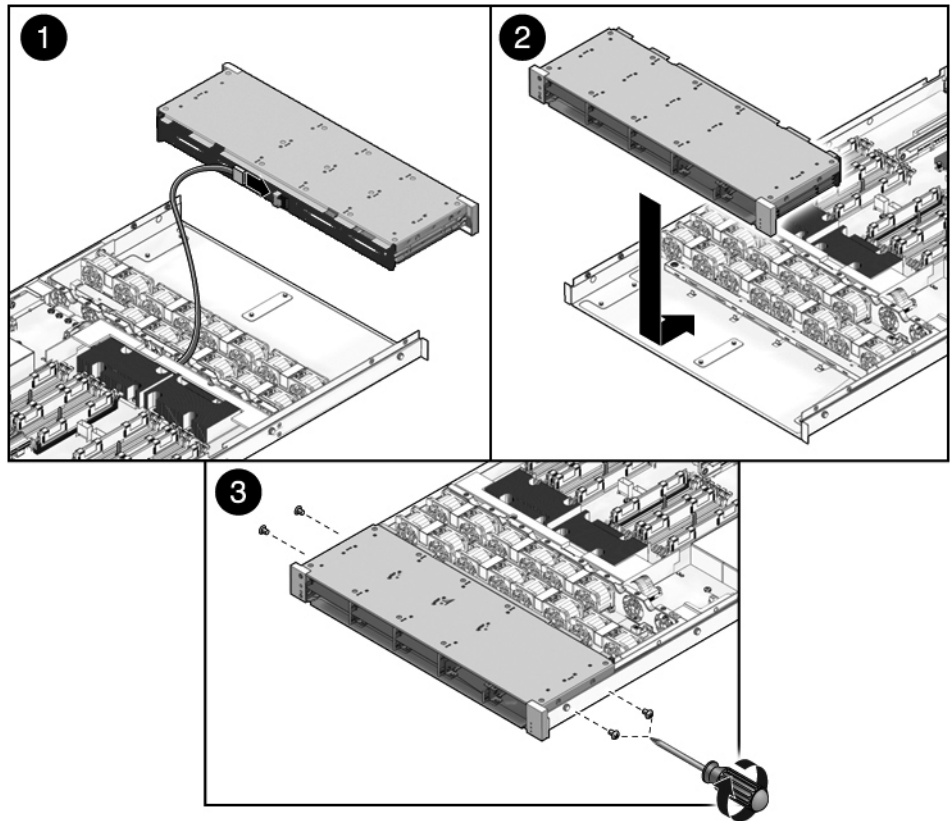FIGURE: Installing a Hard Drive Cage (Illustrating Installation in a SPARC Enterprise T5240 Server)



2. Connect the hard drive data cables.

Press the plug into its socket until the plug snaps into place.

If the cables do not reach the hard drive cage, perform this step after [Step 4](#).

3. (SPARC Enterprise T5140 server, 8 disk-capable) Remove fan FM1.

4. Slide the hard drive cage back until the hard drive backplane engages with the paddle card connector.

5. Replace the No. 2 Phillips screws securing the hard drive cage to the chassis.

Two screws secure the disk cage to each side of the chassis.

6. (SPARC Enterprise T5240 server) Install the fan power boards.

See [“Install the Fan Power Board”](#) on page 150.

7. (SPARC Enterprise T5240 server) Install the fan modules.

See [“Install a Fan Module” on page 133.](#)

8. Install the top cover.

See [“Install the Top Cover” on page 177.](#)

9. (SPARC Enterprise T5140) Install the inner glides.

Slide each inner glide onto the mounting studs on the server until the glide snaps into place.

10. (SPARC Enterprise T5140) Install the server into the rack.

See [“Reinstall the Server in the Rack” on page 178.](#)

11. Install the hard drives.

Note – Take care to be certain you are installing the hard drives in the correct drive bays.

See [“Install a Hard Drive” on page 73.](#)

12. Install the DVD/USB module.

See [“Install the DVD/USB Module” on page 147.](#)

13. Connect the power cords.

Note – As soon as the power cords are connected, standby power is applied. Depending on how the firmware is configured, the system might boot at this time.

14. Power on the system.

See [“Power On the Server Using the poweron Command” on page 181.](#)

Related Information

- [“Remove the Hard Drive Cage” on page 152](#)

Servicing the Hard Drive Backplane

These topics explain how to remove and install hard drive backplanes.

- [“Hard Drive Backplane Overview” on page 157](#)
- [“Remove the Hard Drive Backplane” on page 157](#)

- [“Install the Hard Drive Backplane” on page 159](#)

Hard Drive Backplane Overview

The hard drive backplane is housed in the hard drive cage. It provides data and control signal connectors for the hard drives. It also provides the interconnect for the front I/O board, power and locator buttons, and system/component status LEDs.

Note – Each drive has its own Power/Activity, Fault, and Ready-to-Remove LEDs.

Related Information

- [“Remove the Hard Drive Backplane” on page 157](#)
- [“Install the Hard Drive Backplane” on page 159](#)

▼ Remove the Hard Drive Backplane

1. Remove the hard drive cage.

See [“Remove the Hard Drive Cage” on page 152](#).

2. Remove the No. 1 Phillips screws securing the backplane to the hard drive cage.

- Two screws secure the backplane in the SPARC Enterprise T5140 server. See the first figure below.
- Four screws secure the backplane in the SPARC Enterprise T5240 server. See the second figure below.

FIGURE: Removing a Hard Drive Backplane (Illustrating removal from a SPARC Enterprise T5140 server)


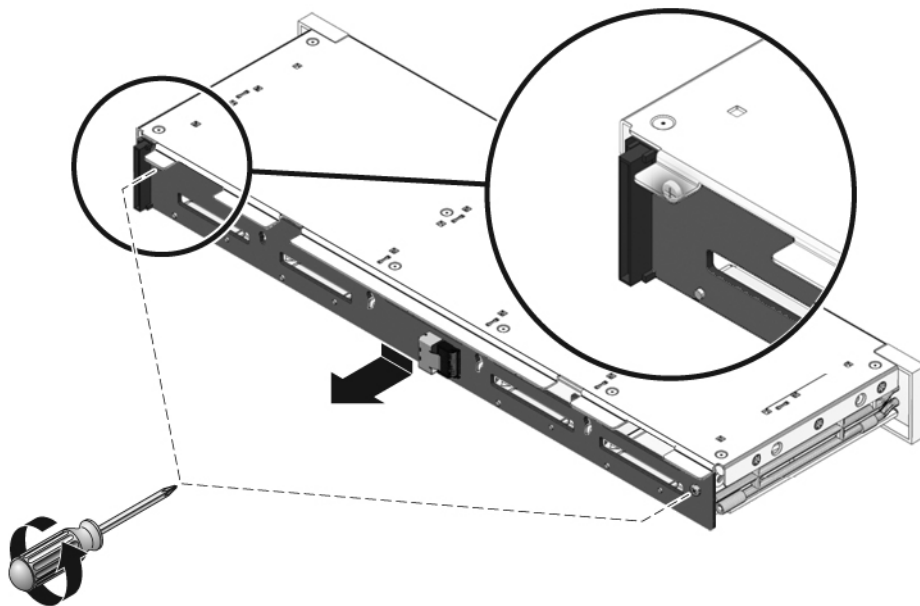


FIGURE: Removing a Hard Drive Backplane (Illustrating removal from a SPARC Enterprise T5240 server)

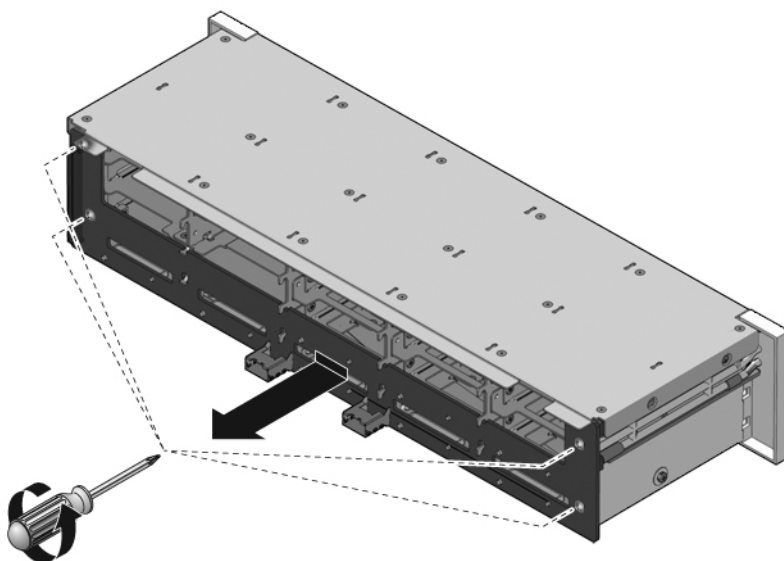

3. Slide the backplane down and off the hard drive cage retention hooks.
4. Place the hard drive backplane on an antistatic mat.

Related Information

- [“Install the Hard Drive Backplane” on page 159](#)

▼ Install the Hard Drive Backplane

1. Slide the backplane under the retention hooks on the hard drive cage.
2. Install the No. 1 Phillips screws that secure the backplane to the hard drive cage.
 - Two screws secure the backplane in the SPARC Enterprise T5140 server. See the first figure below.
 - Four screws secure the backplane in the SPARC Enterprise T5240 server. See the second figure below.

FIGURE: Installing a Hard Drive Backplane in a SPARC Enterprise T5140 Server


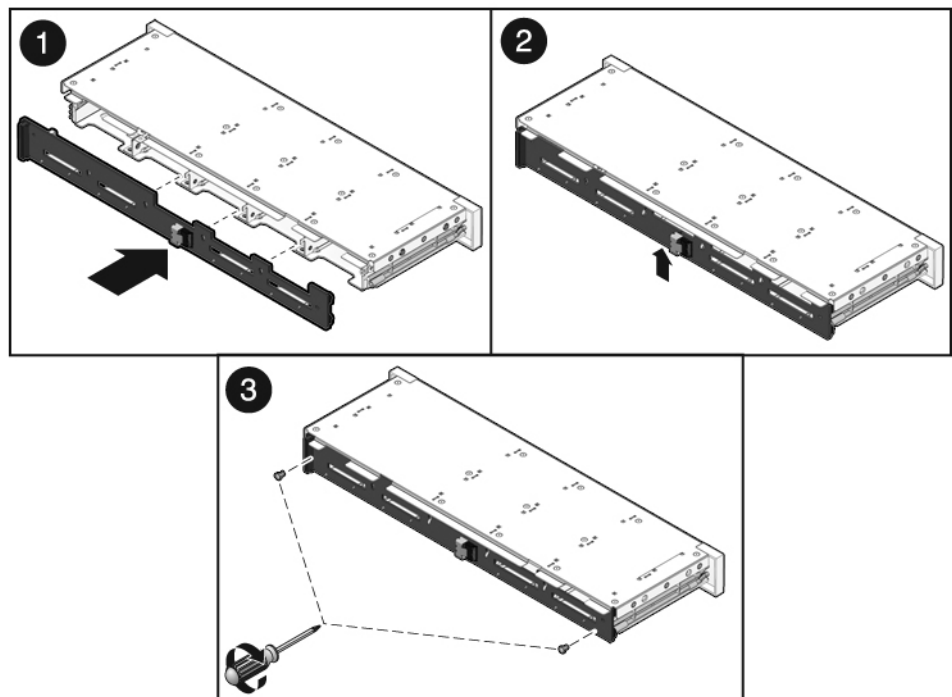


FIGURE: Installing a Hard Drive Backplane in a SPARC Enterprise T5240 Server

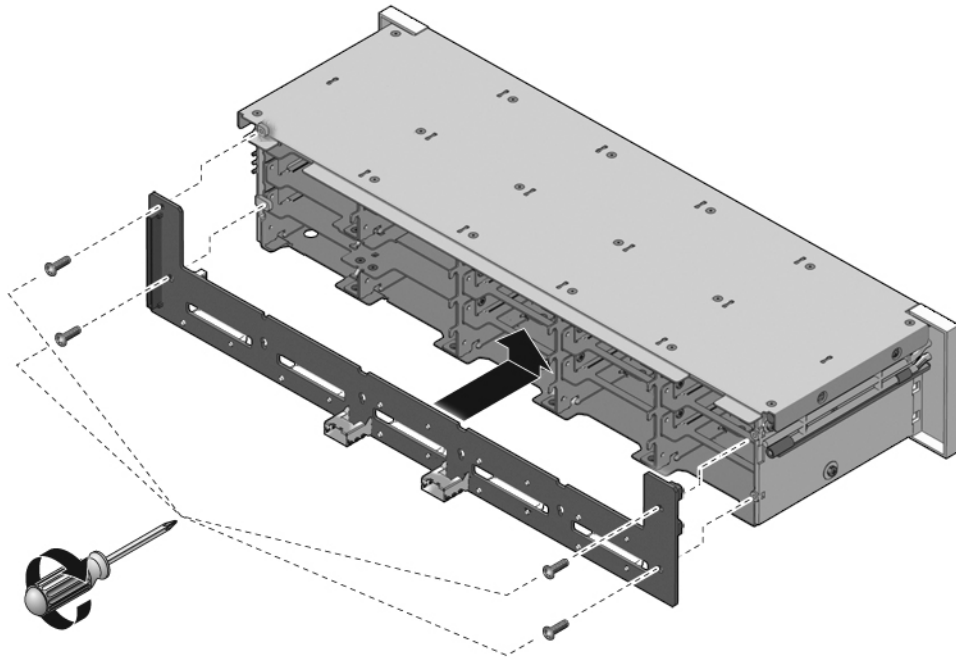

3. Install the hard drive cage.

See [“Install the Hard Drive Cage”](#) on page 154.

Related Information

- [“Remove the Hard Drive Backplane”](#) on page 157

Servicing Front Control Panel Light Pipe Assemblies

These topics explain how to remove and install front control panel light pipe assemblies.

- [“Front Control Panel Light Pipe Assemblies Overview”](#) on page 161
- [“Remove the Front Control Panel Light Pipe Assemblies”](#) on page 161
- [“Install the Front Control Panel Light Pipe Assemblies”](#) on page 162

Front Control Panel Light Pipe Assemblies

Overview

The front control panel light pipe assemblies are mounted on each side of the hard drive cage. You must remove the hard drive cage to access the screws that attach the light pipe assemblies to the hard drive cage.

▼ Remove the Front Control Panel Light Pipe Assemblies


1. Remove the hard drive cage.

See [“Remove the Hard Drive Cage” on page 152.](#)

2. Remove the No. 1 Phillips screws securing the front control panel light pipe assembly to the hard drive cage.

- Two screws secure the assembly to the hard drive cage in the SPARC Enterprise T5140 server.
- Three screws secure the assembly to the hard drive cage in the SPARC Enterprise T5240 server.

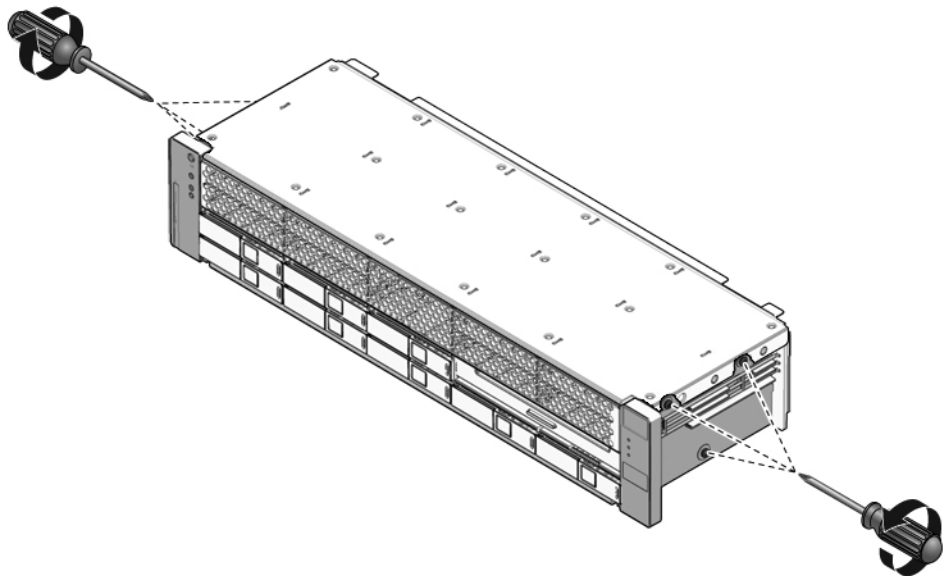FIGURE: Removing the Front Control Panel Light Pipe Assembly From a SPARC Enterprise T5240 Server



3. Slide the light pipe assembly out of the control panel.

Related Information


- [“Install the Front Control Panel Light Pipe Assemblies” on page 162](#)
- [“Remove the Hard Drive Cage” on page 152](#)

▼ Install the Front Control Panel Light Pipe Assemblies

1. Insert the light pipe assembly into the control panel.
2. Align the control panel light pipe assembly with the mounting holes on the hard drive cage.
 - Two screws secure the assembly to the hard drive cage in the SPARC Enterprise T5140 server.
 - Three screws secure the assembly to the hard drive cage in the SPARC Enterprise T5240 server.

The following figure illustrates installation of the front control panel light pipe on a SPARC Enterprise T5240 server. Except for minor differences, such as the number of screws, installation is the same for SPARC Enterprise T5140 servers.

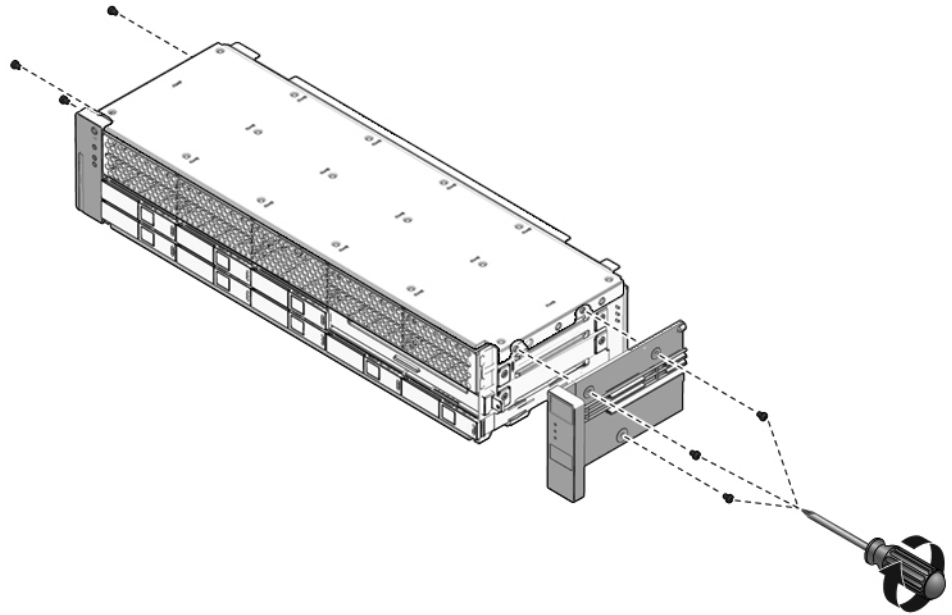FIGURE: Installing a Front Control Panel Light Pipe Assembly in a SPARC Enterprise T5240 Server



3. Secure the light pipe assembly with the No. 1 Phillips screws.

4. Install the hard drive cage.

See [“Install the Hard Drive Cage” on page 154.](#)

Related Information

- [“Remove the Front Control Panel Light Pipe Assemblies” on page 161](#)

Servicing Power Distribution Boards

The following topics explain how to remove and install power distribution boards. They also provide important safety information related to working with power distribution boards.

- [“Power Distribution Board Overview” on page 164](#)
- [“Remove the Power Distribution Board” on page 164](#)
- [“Install the Power Distribution Board” on page 167](#)

Related Information

- [“Servicing Power Supply Backplanes \(SPARC Enterprise T5240 Servers\)” on page 170](#)

Power Distribution Board Overview

The power distribution board distributes main 12V power from the power supplies to the rest of the system. It is directly connected to the paddle card and to the motherboard by means of a bus bar and ribbon cable. This board also supports a top cover safety interlock (“kill”) switch.

It is easier to service the power distribution board with the bus bar assembly attached. If you are replacing a faulty power distribution board, you must remove the bus bar assembly from the old board and attach the assembly to the new power distribution board.

If you replace a faulty power distribution board, you must program the new power distribution board with the chassis serial number and part number. These numbers are needed for obtaining product support.



Caution – The system supplies power to the power distribution board even when the server is powered off. To avoid personal injury or damage to the server, you must disconnect power cords before servicing the power distribution board.

▼ Remove the Power Distribution Board

Note the chassis serial number and server part number. There are printed on a label located on the side of the chassis.


1. Remove the motherboard assembly.

See [“Remove the Motherboard Assembly” on page 123](#).

2. (SPARC Enterprise T5140 server) Remove all power supplies.


- a. Grasp the power supply handle and press the release latch. See the following figure.
- b. Slide the power supply out of the system.

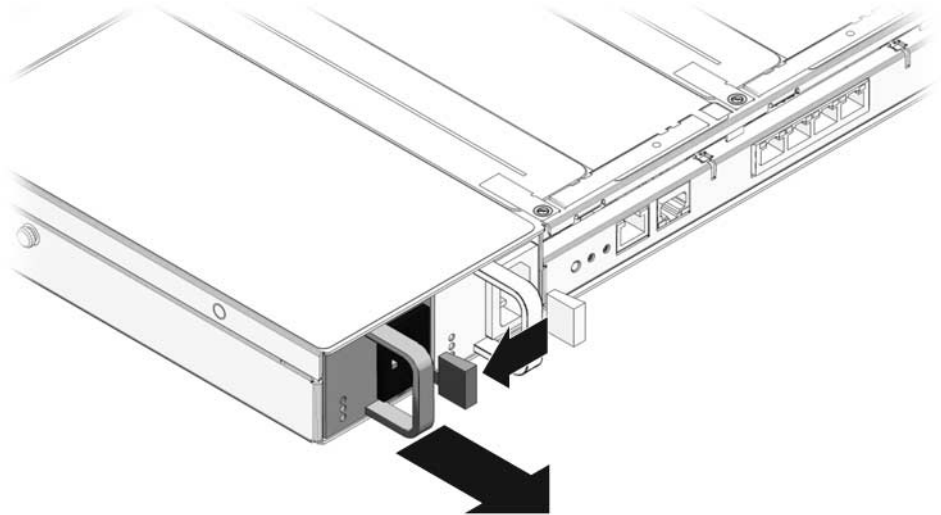FIGURE: Removing a Power Supply From a SPARC Enterprise T5140 Server




3. (SPARC Enterprise T5240 server) Remove the mezzanine riser guide.
See [“Remove a Memory Mezzanine Assembly” on page 118.](#)
4. Disconnect the top cover interlock cable from the power distribution board.
5. (SPARC Enterprise T5240 server) Disconnect the ribbon cable between the power distribution board and the power supply backplane. See Panel 1 in the following figure.

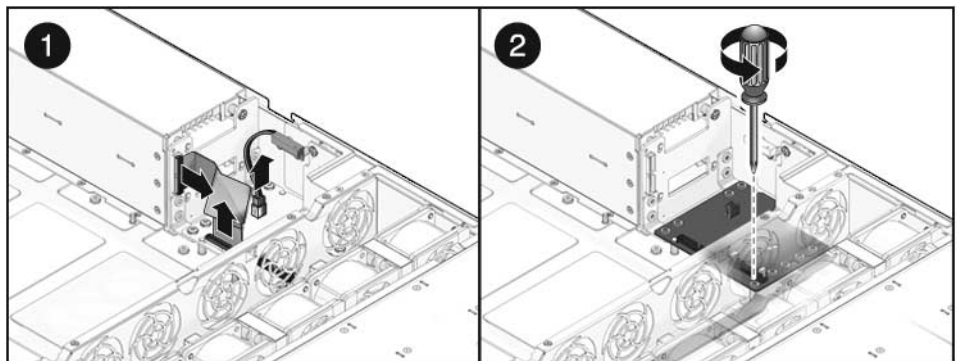FIGURE: Removing a Power Distribution Board From a SPARC Enterprise T5240 Server



6. (SPARC Enterprise T5240 server) Remove the four No. 2 Phillips screws securing the power distribution board to the power supply backplane.
7. Remove the No. 2 Phillips screw securing the power distribution board to the chassis as shown in the following figure.

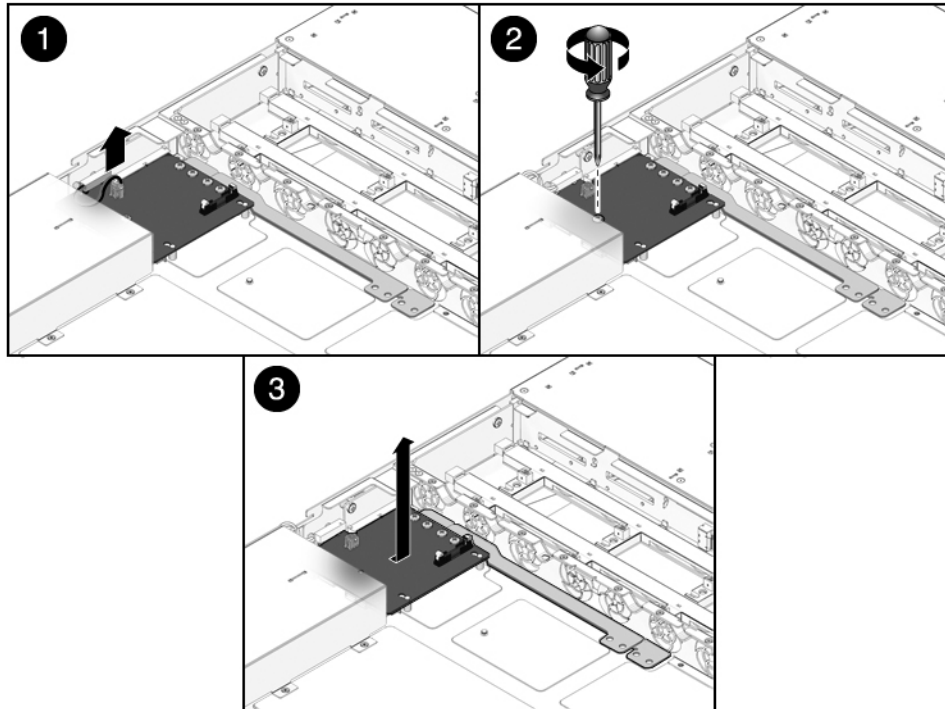FIGURE: Removing the Power Distribution Board From a SPARC Enterprise T5140 Server



8. Grasp the bus bar and pull the power distribution board/bus bar assembly to the left, away from the paddle card.
9. Lift the power distribution board/bus bar assembly up and out of the system.
10. Place the power distribution board/bus bar assembly on an antistatic mat.


Related Information

- [“Install the Power Distribution Board” on page 167](#)

▼ Install the Power Distribution Board


1. **Lower the power distribution board/bus bar assembly into the chassis.**
The power distribution board fits over a series of mushroom standoffs in the floor of the chassis.
2. **Slide the power distribution board/bus bar assembly to the right, until it plugs into the paddle card.**

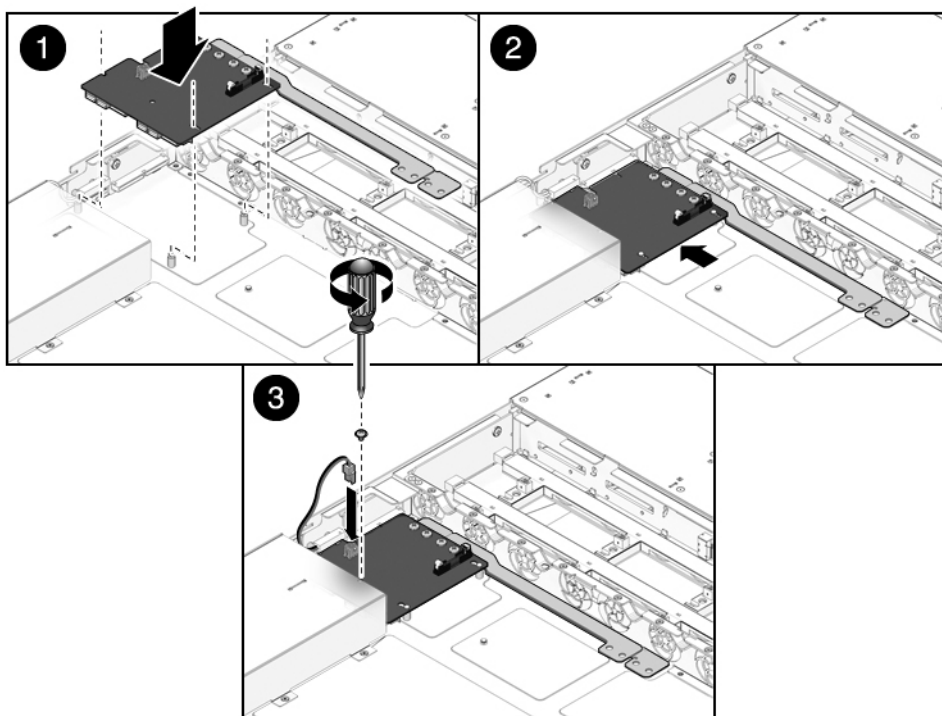FIGURE: Installing a Power Distribution Board in a SPARC Enterprise T5140 Server




3. **Install the No. 2 Phillips screw to secure the power distribution board to the chassis.**
4. **(SPARC Enterprise T5240 server) Attach the four No. 2 Phillips screws securing the power distribution board to the power supply backplane.**

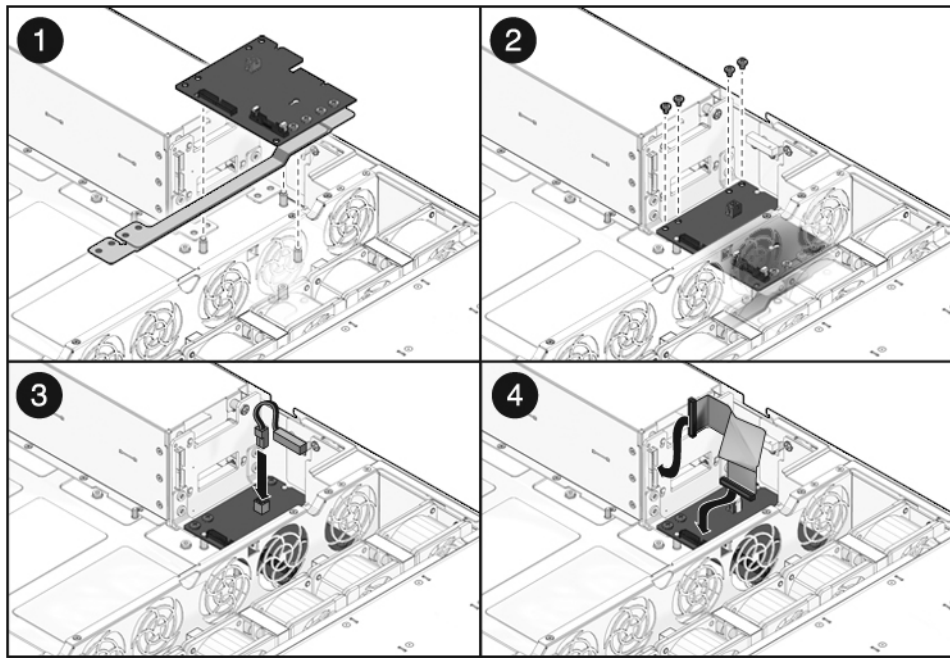FIGURE: Installing a Power Distribution Board in a SPARC Enterprise T5240 Server



5. (SPARC Enterprise T5240 server) Connect the power supply backplane ribbon cable to its plug on the power distribution board.
6. Connect the top cover interlock cable to the power distribution board.
7. (SPARC Enterprise T5140 server) Install the power supplies.
8. Slide each power supply into its bay until the power supply locks into place.

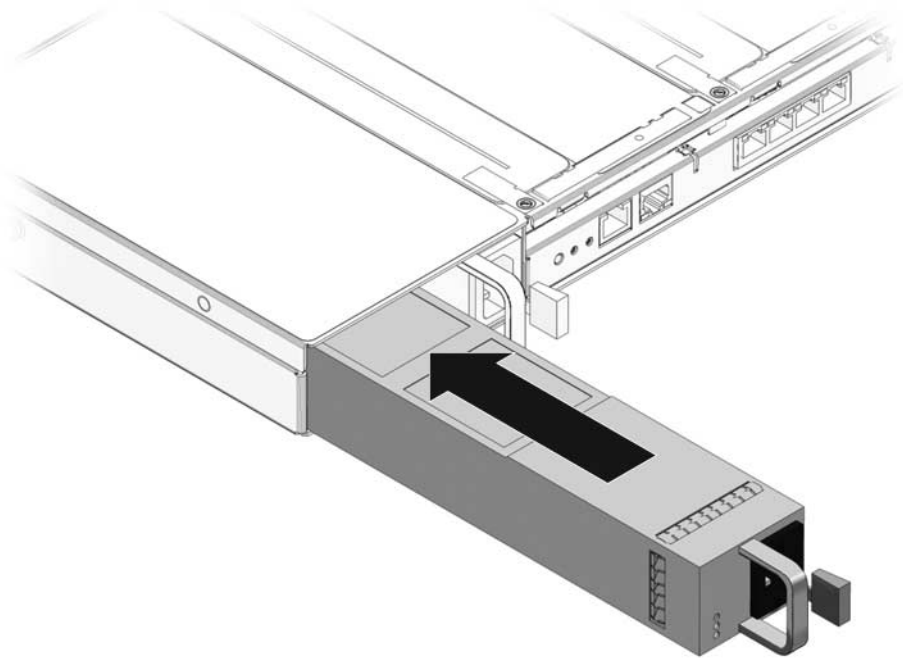FIGURE: Installing a Power Supply in a SPARC Enterprise T5140 Server



9. (SPARC Enterprise T5240 server) Install the mezzanine riser guide.

10. Install the motherboard assembly.

See [“Install the Motherboard Assembly”](#) on page 125.

Note – After replacing the power distribution board and powering on the system, you must run the ALOM CMT `setcsn` and `setcpn` commands to set the electronically readable chassis serial number and server part number.

11. At the ALOM CMT command line interface, use the `setcsn` command to set the chassis serial number and the `setcpn` command to set the server part number on the power distribution board.

The following is an example of the command-line dialog used to set the chassis serial number and server part number for a SPARC Enterprise T5140 server.



Caution – When performing the following steps, use special care to enter the correct numbers. Once the power distribution board has been programmed with a chassis serial number or server part number, the number cannot be changed.

```
sc> setsc sc_servicemode true
Warning: misuse of this mode may invalidate your warranty.
sc> setcsn -c chassis_serial_number
Are you sure you want to permanently set the Chassis Serial Number
to chassis_serial_number [y/n]? y
setcsn: Chassis serial number recorded.
sc> setcpn -p chassis_part_number
Are you sure you want to permanently set the Chassis Part Number
to chassis_part_number [y/n]? y
setcpn: Chassis part number recorded.
sc> showplatform
SPARC-Enterprise-T5140
Chassis Serial Number: chassis-serial-number
Domain Status
-----
SO Running
sc> setsc sc_servicemode false
```

Related Information

- [“Remove the Power Distribution Board” on page 164](#)

Servicing Power Supply Backplanes (SPARC Enterprise T5240 Servers)

The following topics explain how to remove and install power supply backplanes in SPARC Enterprise T5240 servers. Power supply backplanes are not used in SPARC Enterprise T5140 servers.

- [“Power Supply Backplane Overview” on page 171](#)

Related Information

- [“.“Servicing Power Distribution Boards” on page 163](#)

Power Supply Backplane Overview

The power supply backplane carries 12V power from the power supplies to the power distribution board over a pair of bus bars.

Note – SPARC Enterprise T5140 servers do not use a power supply backplane. In these systems, the power supplies connect directly to the power distribution board.



Caution – The system supplies standby power to the power supply backplane even when the server is powered off. To avoid personal injury or damage to the server, you must disconnect the power cords before servicing the power supply backplane.

▼ Remove the Power Supply Backplane

Note the chassis serial number and server part number. They are printed on a label located on the side of the chassis.


1. Remove the motherboard assembly.

See [“Remove the Motherboard Assembly” on page 123](#).

2. Remove the power supplies.

- a. Grasp the power supply handle and press the release latch.
- b. Slide the power supply out of the system. See the following figure.

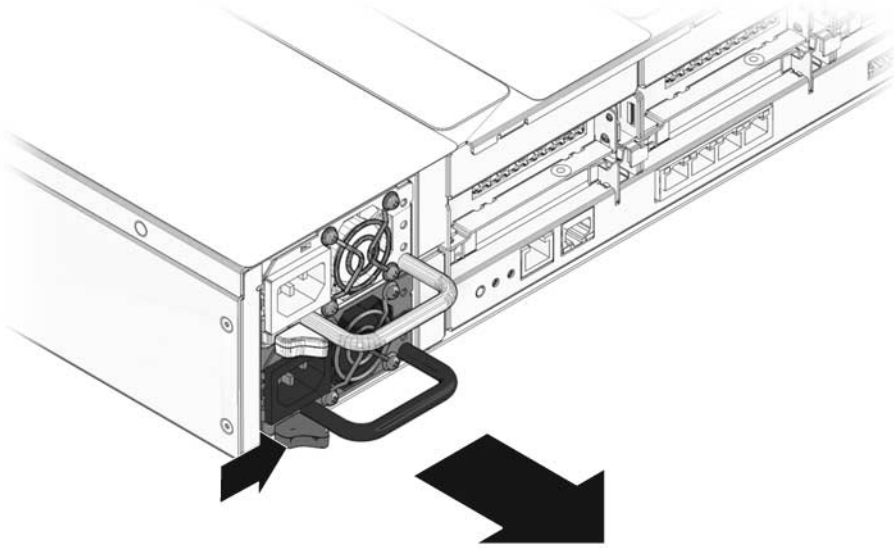FIGURE: Removing a Power Supply From a SPARC Enterprise T5240 Server




3. Remove the power distribution board.

See [“Remove the Power Distribution Board”](#) on page 164.

4. Remove the No. 2 Phillips screw securing the power supply backplane to the power supply bay.

5. Lift the power supply backplane up and off its standoffs and out of the system.

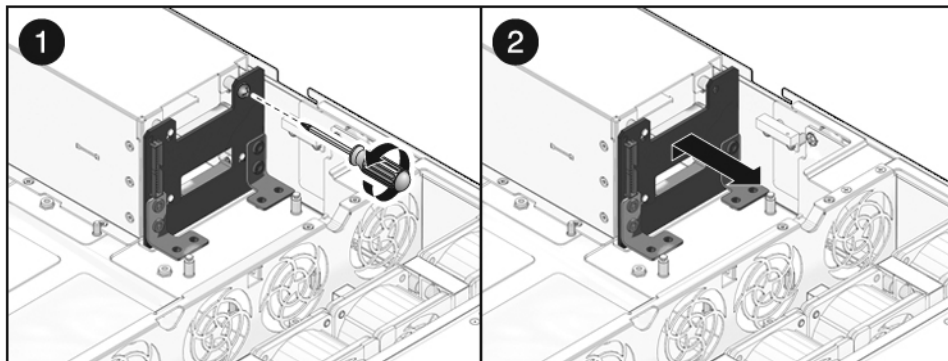FIGURE: Removing a Power Supply Backplane From a SPARC Enterprise T5240 Server



6. Place the power supply backplane on an antistatic mat.

Related Information


- [“Install the Power Supply Backplane” on page 173](#)

▼ Install the Power Supply Backplane

1. Mount the power supply backplane to the front of the power supply bay.

Place the backplane over its standoffs. Press down toward the floor of the chassis.

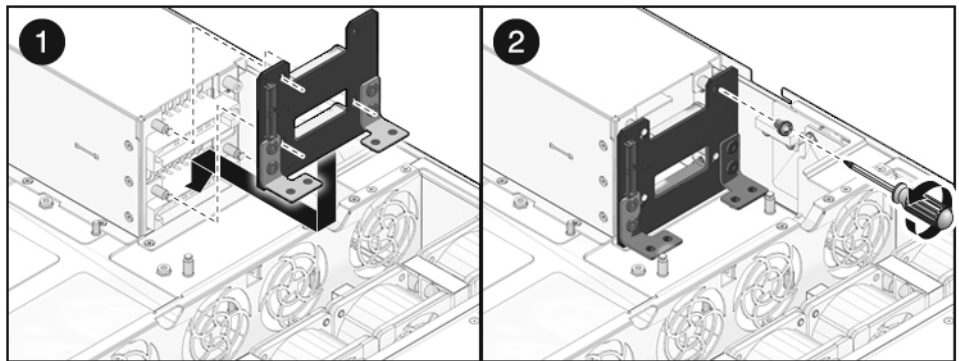FIGURE: Installing a Power Supply Backplane (Illustrating an Installation in a SPARC Enterprise T5240 Server)



2. Secure the power supply backplane with one No. 2 Phillips screw.


3. Install the power distribution board.

See [“Install the Power Distribution Board” on page 167](#).

4. Install the power supplies.

Slide each power supply into its bay until the power supply locks into place.

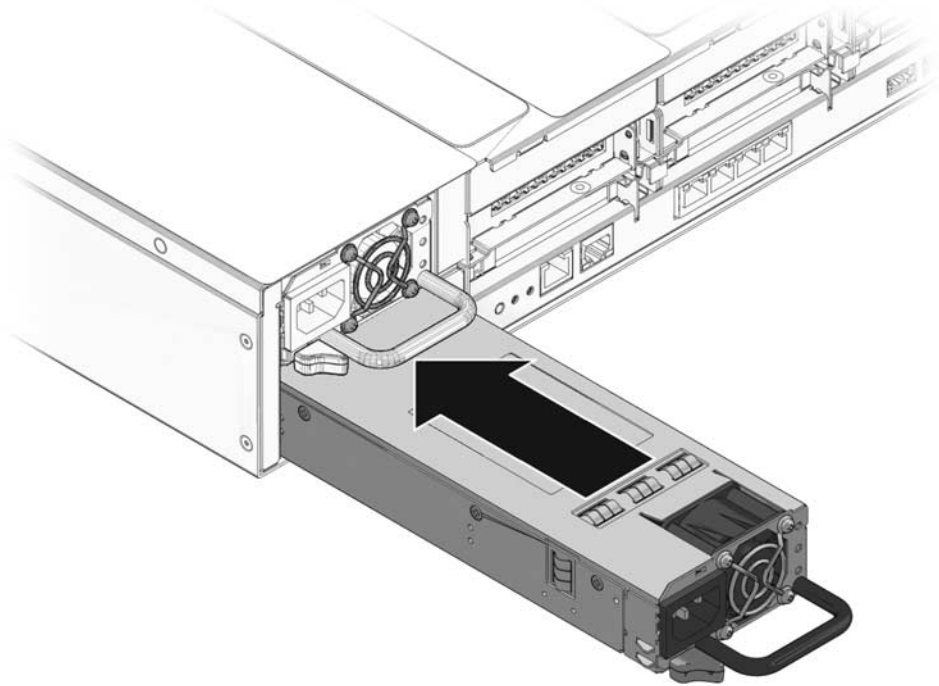FIGURE: Installing a Power Supply (Illustrating Installation of a Power Supply in a SPARC Enterprise T5240 Server)



5. Install the motherboard assembly.

See [“Install the Motherboard Assembly” on page 125.](#)

Related Information

- [“Remove the Power Supply Backplane” on page 171](#)

Servicing Paddle Cards

These topics explain how to remove and install paddle cards in SPARC Enterprise T5140 and T5240 servers.

- [“Paddle Card Overview” on page 175](#)
- [“Remove the Paddle Card” on page 175](#)
- [“Install the Paddle Card” on page 176](#)

Paddle Card Overview

The paddle card serves as the interconnect between the power distribution board and the fan power boards, hard drive backplane, and front panel I/O board.


Related Information

- [“Remove the Paddle Card” on page 175](#)

▼ Remove the Paddle Card

1. Remove the motherboard assembly.
See [“Remove the Motherboard Assembly” on page 123](#).
2. Remove the power distribution board.
See [“Remove the Power Distribution Board” on page 164](#).
3. Remove the fan power boards.
[“Remove the Fan Power Board” on page 149](#).
4. Remove the two No. 1 Phillips screws securing the paddle card to the chassis.

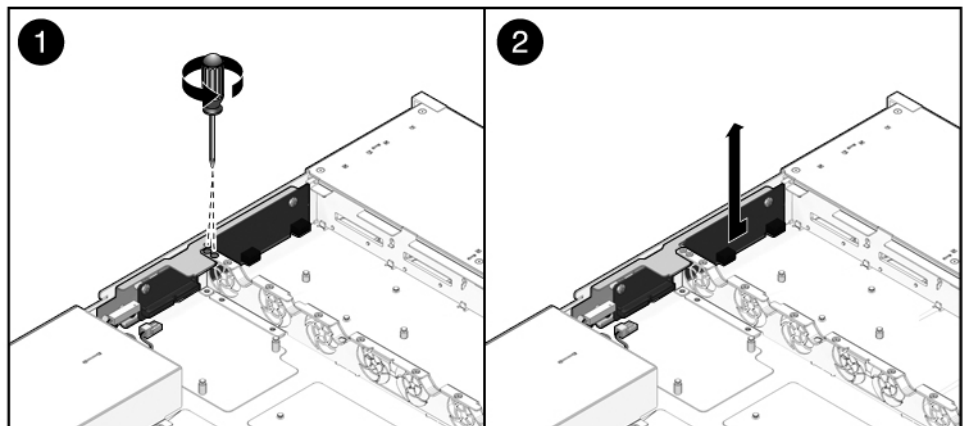FIGURE: Removing a Paddle Card (Illustrating Removal From a SPARC Enterprise T5140 Server)



5. Slide the paddle card back, away from its connector on the hard drive backplane.

6. Tilt the paddle card away from the side of the chassis and lift the paddle card up and out of the system.
7. Place the paddle card on an antistatic mat.


Related Information

- [“Install the Paddle Card” on page 176](#)

▼ Install the Paddle Card

1. Lower the paddle card into the chassis.

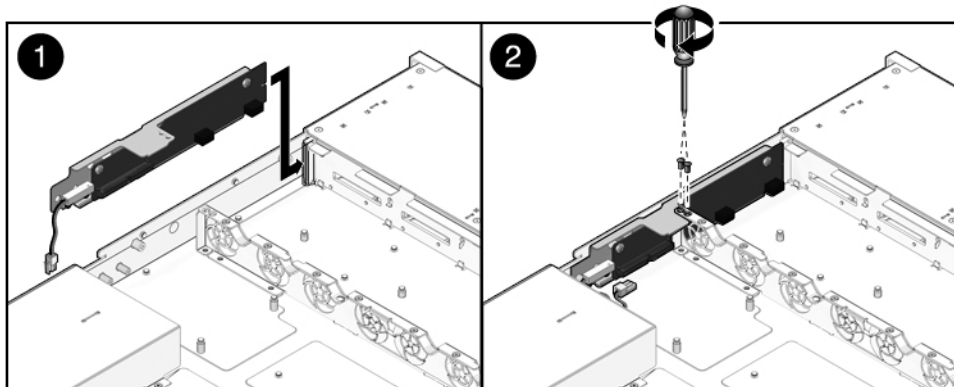FIGURE: Installing a Paddle Card (Illustrating Installation Into a SPARC Enterprise T5140 Server)



2. Slide the paddle card forward to plug it into the hard drive backplane.
3. Secure the paddle card with two No. 1 Phillips screws.
See [“Install the Fan Power Board” on page 150](#).
4. Install the fan power boards.
See [“Install the Power Supply Backplane” on page 173](#).
5. Install the power distribution board.
See [“Install a Memory Mezzanine Assembly” on page 120](#).
6. Install the motherboard assembly.
See [“Install a Memory Mezzanine Assembly” on page 120](#).

Related Information

- [“Remove the Paddle Card” on page 175](#)

Returning the Server to Operation

These topics explain how to return SPARC Enterprise T5140 and T5240 servers to operation after you have performed service procedures.

- [“Install the Top Cover” on page 177](#)
- [“Reinstall the Server in the Rack” on page 178](#)
- [“Return the Server to the Normal Rack Position” on page 180](#)
- [“Connect Power Cords to the Server” on page 181](#)
- [“Power On the Server Using the poweron Command” on page 181](#)
- [“Power On the Server Using the Front Panel Power Button” on page 182](#)


▼ Install the Top Cover

1. Place the top cover on the chassis.

Set the cover down so that it hangs over the rear of the server by about an inch (25.4 mm).

2. Slide the top cover forward until it seats.

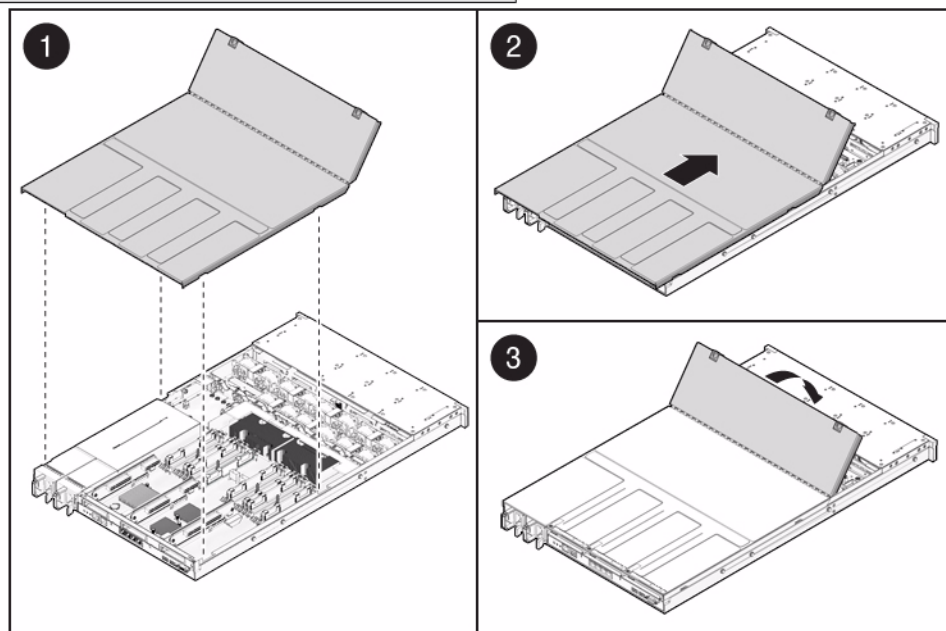FIGURE: Installing the Top Cover



Note – If an emergency shutdown occurred when the top cover was removed, you must install the top cover and use the `poweron` command to restart the system. See [“Power On the Server Using the `poweron` Command” on page 181](#) for more information about the `poweron` command.

Related Information

- [“Power On the Server Using the `poweron` Command” on page 181](#)


▼ Reinstall the Server in the Rack



Caution – The chassis is heavy. To avoid personal injury, use two people to lift it and set it in the rack.

1. Place the ends of the chassis mounting brackets into the slide rails. See

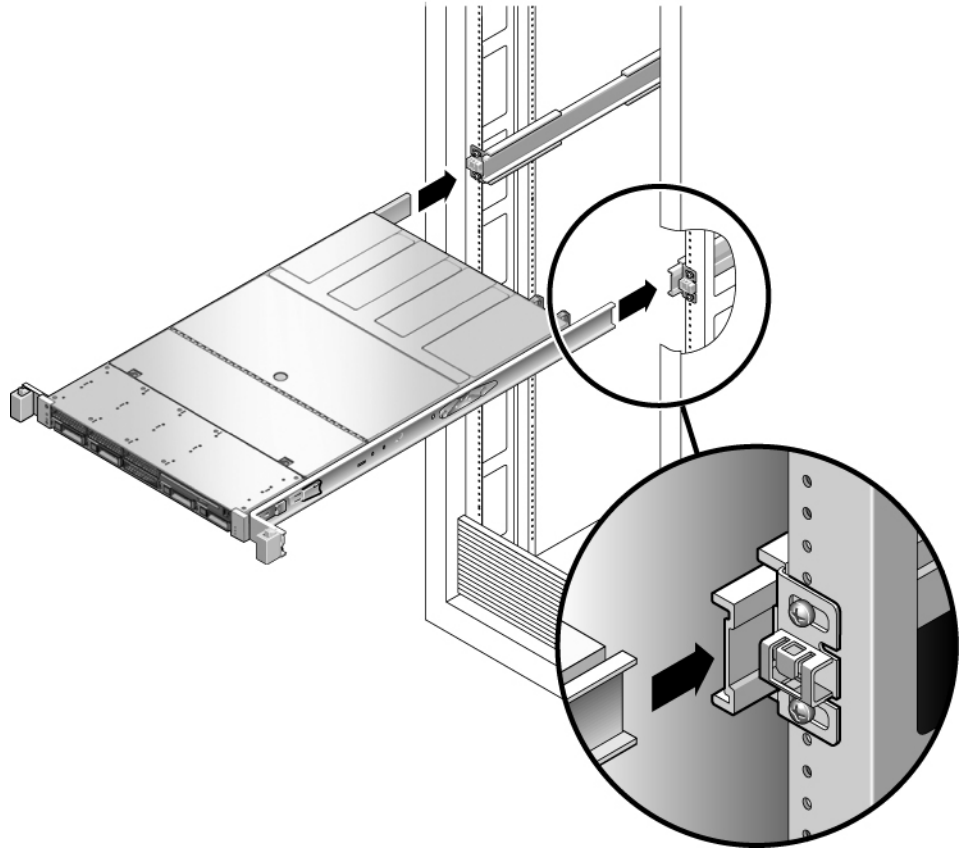FIGURE: Returning the Server to the Rack



2. **Slide the server into the rack until the brackets lock into place.**

The server is now in the extended maintenance position.


Related Information

- [“Return the Server to the Normal Rack Position” on page 180](#)
- [“Connect Power Cords to the Server” on page 181](#)

▼ Return the Server to the Normal Rack Position

1. Release the slide rails from the fully extended position by pushing the release tabs on the side of each rail.

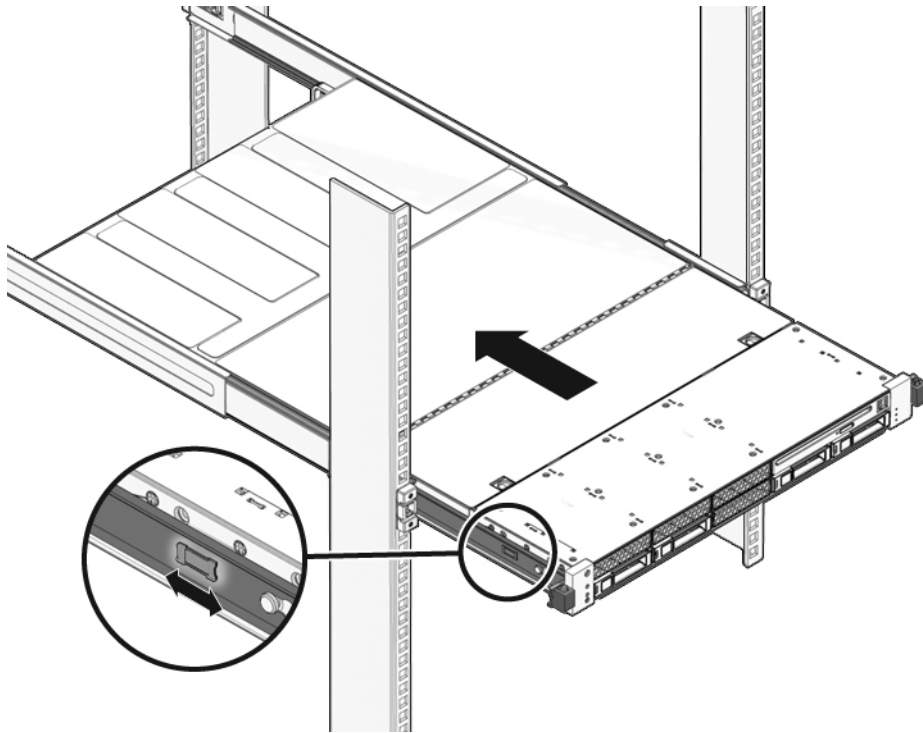FIGURE: Release Tabs on the Rail



2. While pushing on the release tabs, slowly push the server into the rack.
Ensure that the cables do not get in the way.
3. Reconnect the cables to the back of the server.
If the CMA is in the way, disconnect the left CMA release and swing the CMA open.
4. Reconnect the CMA.
Swing the CMA closed and latch it to the left rack rail.

Related Information

- [“Reinstall the Server in the Rack” on page 178](#)
- [“Connect Power Cords to the Server” on page 181](#)
- [“Power On the Server Using the poweron Command” on page 181](#)
- [“Power On the Server Using the Front Panel Power Button” on page 182](#)

▼ Connect Power Cords to the Server

- Reconnect both power cords to the power supplies.

Note – As soon as the power cords are connected, standby power is applied. Depending on how the firmware is configured, the system might boot at this time.

Related Information

- [“Power On the Server Using the poweron Command” on page 181](#)
- [“Power On the Server Using the Front Panel Power Button” on page 182](#)

▼ Power On the Server Using the poweron Command

Note – If you are powering on the server following an emergency shutdown that was triggered by the top cover interlock switch, you must use the poweron command.

- **Type `poweron` at the service processor prompt.**

```
-> poweron
```

You will see an -> Alert message on the system console. This message indicates that the system is reset. You will also see a message indicating that the VCORE has been margined up to the value specified in the default `.scr` file that was previously configured. For example:

```
-> start /SYS
```

Related Information

- [“Power On the Server Using the Front Panel Power Button” on page 182](#)

▼ Power On the Server Using the Front Panel Power Button

- **Use a pointed object, such as a pen or pencil, to press the Power button on the front panel.**

See [“Power On the Server Using the Front Panel Power Button” on page 182](#) for more information on the Power button.

Related Information

- [“Power On the Server Using the `poweron` Command” on page 181](#)

Identifying FRUs in SPARC Enterprise T5140 Servers

These topics identify and illustrate Field Replaceable Units (FRUs) contained in SPARC Enterprise T5140 servers.


- [“Motherboard Components in SPARC Enterprise T5140 Servers” on page 184](#)
- [“I/O Components in SPARC Enterprise T5140 Servers” on page 186](#)
- [“Power Distribution/Fan Module Components in SPARC Enterprise T5140 Servers” on page 188](#)
- [“Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5140 Servers” on page 190](#)
- [“HDD Data Cable Routing for SAS RAID Controller Cards in Four-Disk Capable SPARC Enterprise T5140 Servers” on page 193](#)
- [“HDD Data Cable Routing for SAS RAID Controller Cards in Eight-Disk Capable SPARC Enterprise T5140 Servers” on page 194](#)

Related Information

- [“Identifying FRUs in SPARC Enterprise T5140 Servers” on page 183](#)

Motherboard Components in SPARC Enterprise T5140 Servers

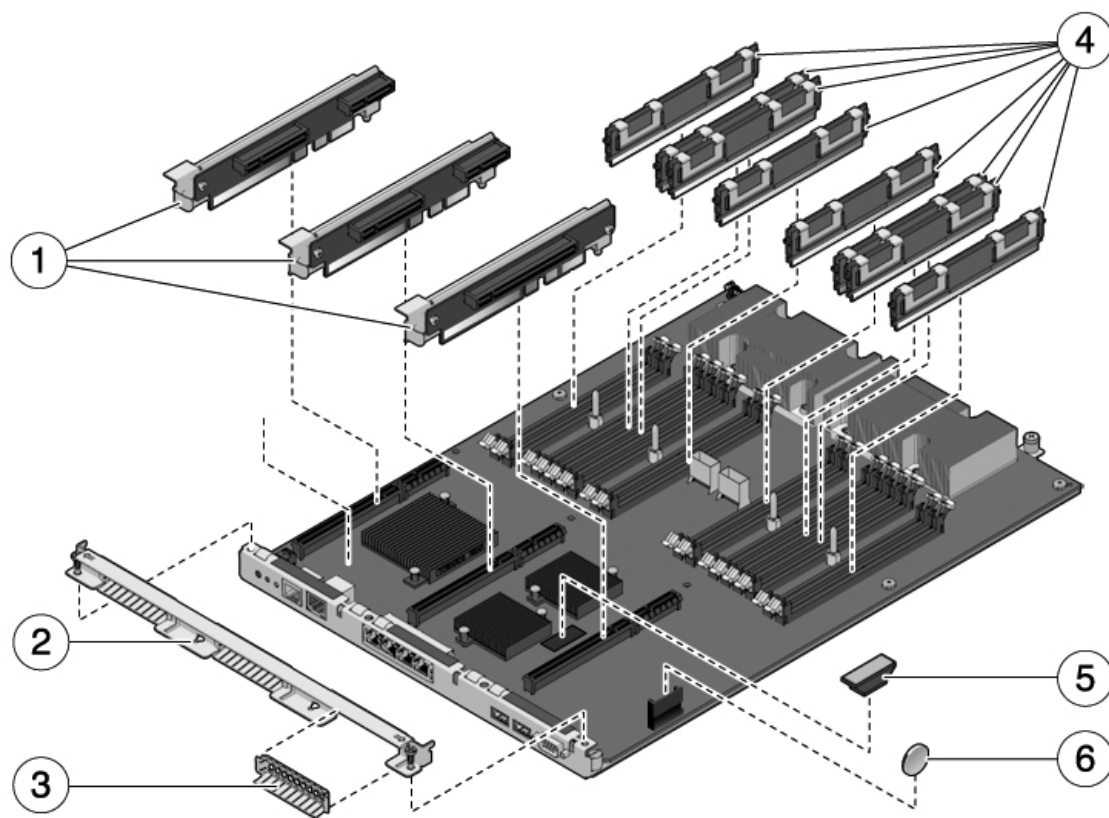FIGURE: Motherboard Components (SPARC Enterprise T5140 Servers)




The following table identifies the components located on the motherboard and points to instructions for servicing them.

TABLE: Motherboard Components (SPARC Enterprise T5140 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
1	PCIe/XAUI risers	“Servicing PCIe/XAUI Risers” on page 104	Back panel PCI cross beam must be removed to access risers.	/SYS/MB/RISER0 /SYS/MB/RISER1 /SYS/MB/RISER2
2	Removable rear panel cross beam	“Servicing PCIe/XAUI Risers” on page 104	Remove this component to service PCIe/XAUI risers and cards.	N/A
3	PCIe filler panel	“Servicing PCIe/XAUI Risers” on page 104	Must be installed in blank PCI slots.	N/A
4	FB-DIMMs	“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83 “Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83	See configuration rules before upgrading FB-DIMMs.	See “FB-DIMM Configuration Guidelines for SPARC Enterprise T5140 Servers” on page 94
5	SCC module	“Servicing the SCC Module” on page 116	Contains host ID, MAC addresses, and service processor configuration data.	/SYS/MB/SC/SCC_NV RAM
6	Battery	“Servicing the Battery” on page 114	Necessary for system clock and other functions.	/SYS/MB/BAT

I/O Components in SPARC Enterprise T5140 Servers

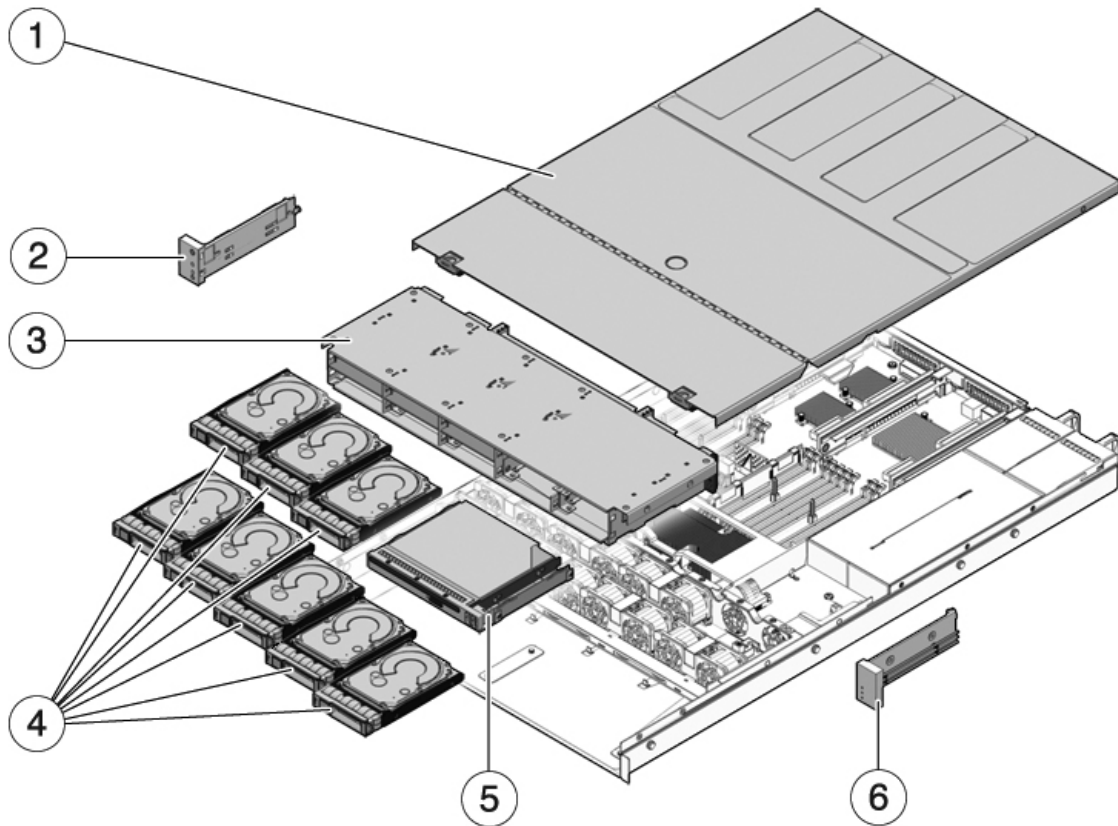FIGURE: I/O Components (SPARC Enterprise T5140 Servers)




The following table identifies the I/O components in the server and points to instructions for servicing them.

TABLE: I/O Components (SPARC Enterprise T5140 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
1	Top cover	“Remove the Top Cover” on page 67 “Install the Top Cover” on page 177	Removing top cover if the system is running will result in immediate shutdown.	N/A
2	Left control panel light pipe assembly	“Servicing Front Control Panel Light Pipe Assemblies” on page 160	Light pipe bracket is not a FRU.	N/A
3	Hard drive cage and hard drive backplane	“Servicing the Hard Drive Cage” on page 151, “Servicing the Hard Drive Backplane” on page 156	Hard drive cage must be removed to service hard drive backplane and front control panel light pipes.	/SYS/SASBP
4	Hard drives	“Remove a Hard Drive” on page 71 “Install a Hard Drive” on page 73	Hard drives must be removed to service the hard drive backplane.	See “Four-Drive Capable Backplane Configuration Reference” on page 77 or “Eight-Drive Capable Backplane Configuration Reference” on page 78
5	DVD/USB module	“Servicing DVD/USB Modules” on page 144	Must be removed to service the hard drive backplane.	/SYS/DVD /SYS/USBBD
6	Right control panel light pipe assembly	“Servicing Front Control Panel Light Pipe Assemblies” on page 160	Light pipe bracket is not a FRU.	N/A

Power Distribution/Fan Module Components in SPARC Enterprise T5140 Servers

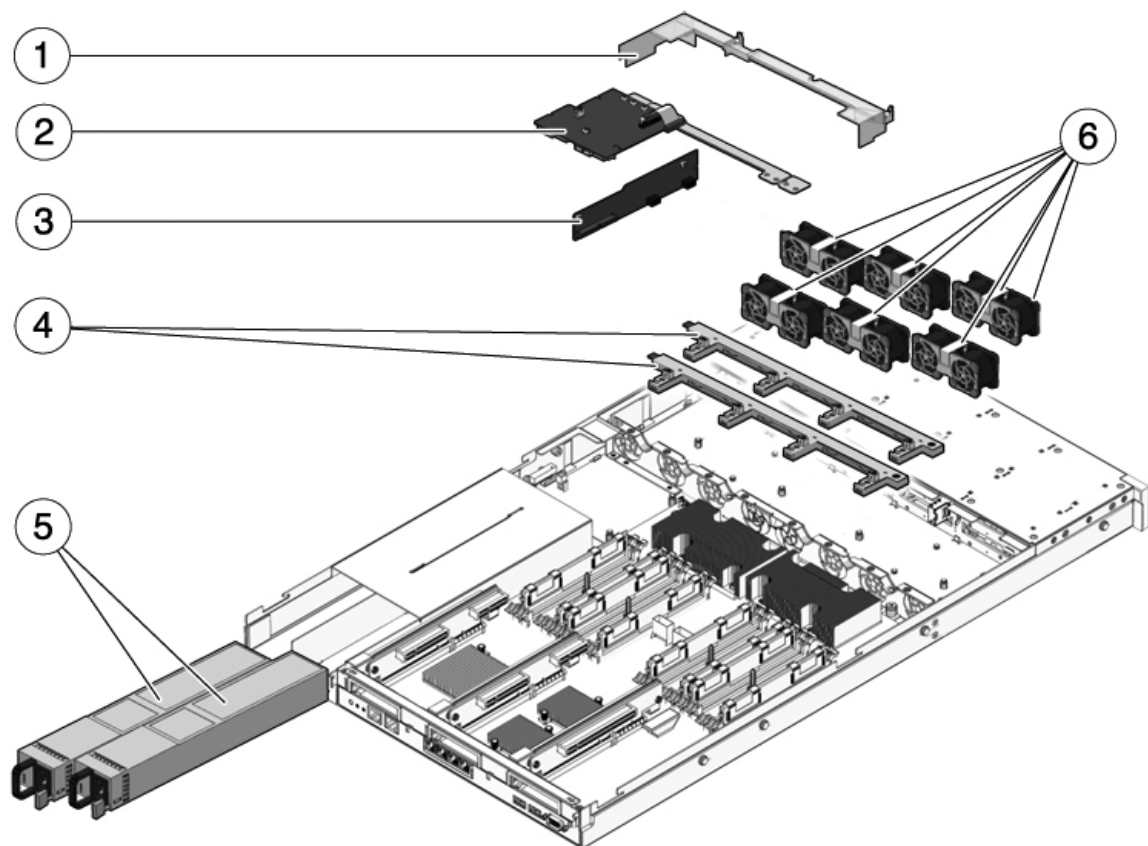FIGURE: Power Distribution/Fan Module Components (SPARC Enterprise T5140 Servers)



The following table identifies the power distribution and fan module components in the server and points to instructions for servicing them.

TABLE: Power Distribution/Fan Module Components (SPARC Enterprise T5140 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
	Air duct	“Remove the Air Duct” on page 103 “Install the Air Duct” on page 104	Must be installed to provide proper cooling to the system.	N/A
	Power distribution board/bus bar	“Servicing Power Distribution Boards” on page 163	Bus bar is attached to the PDB with four screws. If replacing a defective PDB, you must move the bus bar to the new board and program the chassis serial number using the <code>setscn</code> command.	/SYS/PDB
	Paddle card	“Servicing Paddle Cards” on page 174	Includes the top cover interlock switch.	/SYS/CONNBD
	Fan power boards	“Servicing Fan Power Boards” on page 148	Must be removed to service the paddle card.	/SYS/FANBD0 /SYS/FANBD1
	Power supplies	“Servicing Power Supplies” on page 135	Two power supplies provide N+1 redundancy.	/SYS/PS0 /SYS/PS1
	Fan modules	“Servicing Fan Modules” on page 129	At least six fan modules must be installed in the server.*	/SYS/FANBD0/FM0 /SYS/FANBD0/FM1 /SYS/FANBD0/FM2 /SYS/FANBD0/FM3† /SYS/FANBD1/FM0 /SYS/FANBD1/FM1 /SYS/FANBD1/FM2 /SYS/FANBD1/FM3‡

* The service processor checks for proper fan module configuration, and issues a service warning if a fan module is missing or inserted into an unsupported slot.

† A fan module might not be present in this slot for some configurations.

‡ A fan module might not be present in this slot for some configurations.

Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5140 Servers

There are two SAS controller card options for the SPARC Enterprise T5140 and T5240 servers (both options support RAID). The standard option uses the on-board SAS controller card preinstalled on every server. The second option is a StorageTek SAS RAID Internal Host Bus Adapter (HBA) PCIe card. The internal cabling of your server will be different depending on the SAS controller card option you choose.

FIGURE: Internal Cables for the Onboard SAS Controller Card (Four-Disk Capable SPARC Enterprise T5140 Servers)

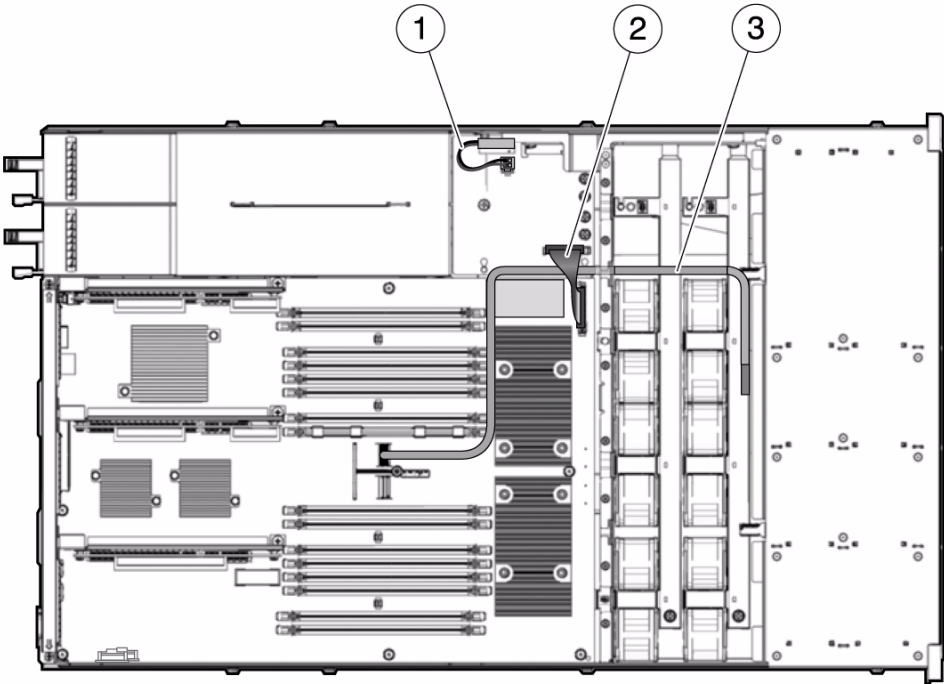


Figure Legend

- 1 Top cover safety interlock
- 2 Motherboard to PDB cable
- 3 Hard drive data cable

TABLE: Data Cable Routing Details (Four-Disk Capable SPARC Enterprise T5140 Servers)

Item	FRU	Connections	Routing notes
3	HDD data cable	From J4101(SAS0) on the motherboard to J0301 (P1) on the hard drive backplane.	Routed along CMP Module 1 (CMP1), then over the chassis center wall, and then over the fan power boards.

FIGURE: Internal Cables for the Onboard SAS Controller Card (Eight-Disk Capable SPARC Enterprise T5140 Servers)

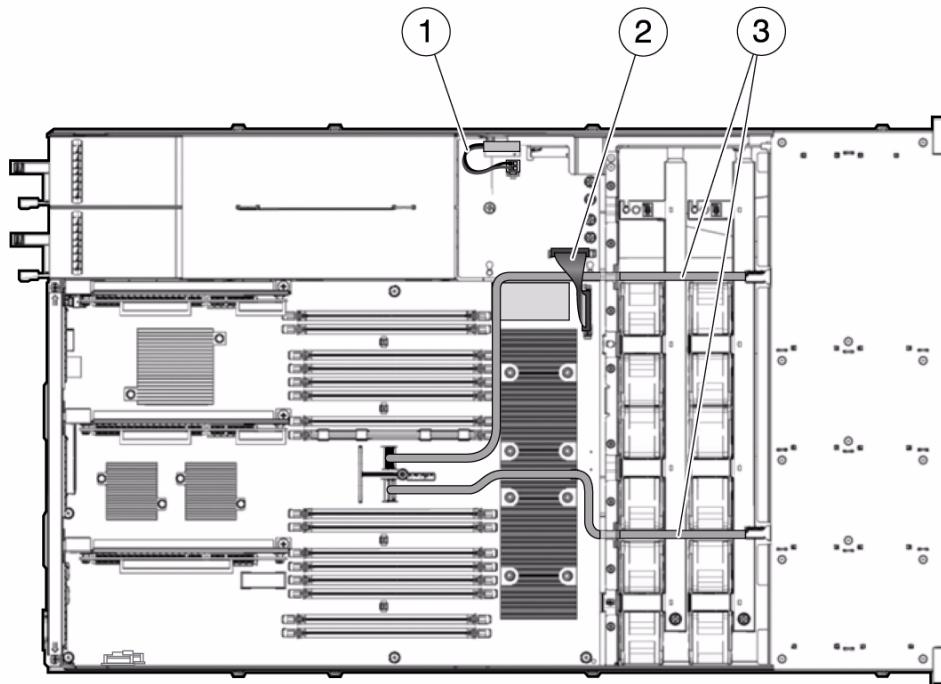


Figure Legend

- | | |
|---|----------------------------|
| 1 | Top cover safety interlock |
| 2 | Motherboard to PDB cable |
| 3 | Hard drive data cables |

TABLE: Data Cable Routing Details (Four-Disk Capable SPARC Enterprise T5140 Servers)

Item	FRU	Connections	Routing notes
3	HDD data cable	Lower cable in the figure: From J4101(SAS0) on the motherboard to J0301 (P2) on the hard drive backplane.	Routed between CMP Module 0 (CMP0) and CMP Module 1 (CMP1), then under the chassis center wall, and then under the fan power board.
3	HDD data cable	Upper cable in the figure: From J4102(SAS1) on the motherboard to J0302 (P3) on the hard drive backplane.	Routed along CMP Module 1 (CMP1), then under the chassis center wall, and then under the PDB board.

HDD Data Cable Routing for SAS RAID Controller Cards in Four-Disk Capable SPARC Enterprise T5140 Servers

There are two SAS controller card options for the SPARC Enterprise T5140 and T5240 servers (both options support RAID). The standard option uses the on-board SAS controller card preinstalled on every server. The second option is a StorageTek SAS RAID Internal Host Bus Adapter (HBA) PCIe card. The internal cabling of your server will be different depending on the SAS controller card option you choose.

FIGURE: Hard Drive Data Cable Routing for SAS RAID Controller Card in Four-Disk Capable SPARC Enterprise T5140 Servers

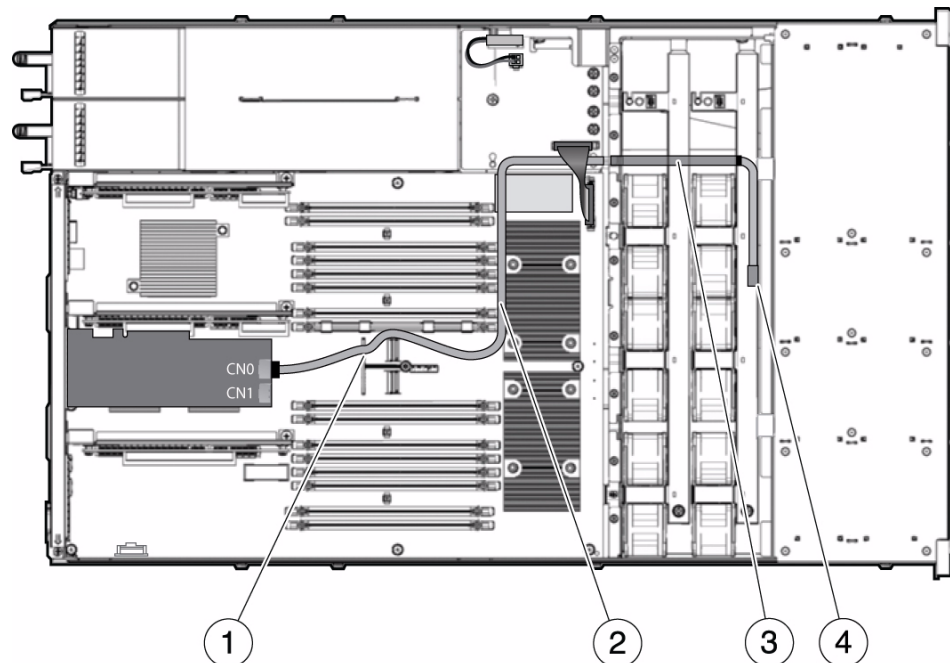


Figure Legend

- 1 Routing the cable through the right channel on the motherboard handle
- 2 Routing the cable between the FB-DIMMs and CMP1 processor
- 3 Heat-shrink tubing
- 4 Routing the cable through the fan midwall to the hard drive backplane

HDD Data Cable Routing for SAS RAID Controller Cards in Eight-Disk Capable SPARC Enterprise T5140 Servers

There are two SAS controller card options for the SPARC Enterprise T5140 and T5240 servers (both options support RAID). The standard option uses the on-board SAS controller card preinstalled on every server. The second option is a StorageTek SAS RAID Internal Host Bus Adapter (HBA) PCIe card. The internal cabling of your server will be different depending on the SAS controller card option you choose.

FIGURE: Hard Drive Data Cable Routing for SAS RAID Controller Card in Eight-Disk Capable SPARC Enterprise T5140 Servers

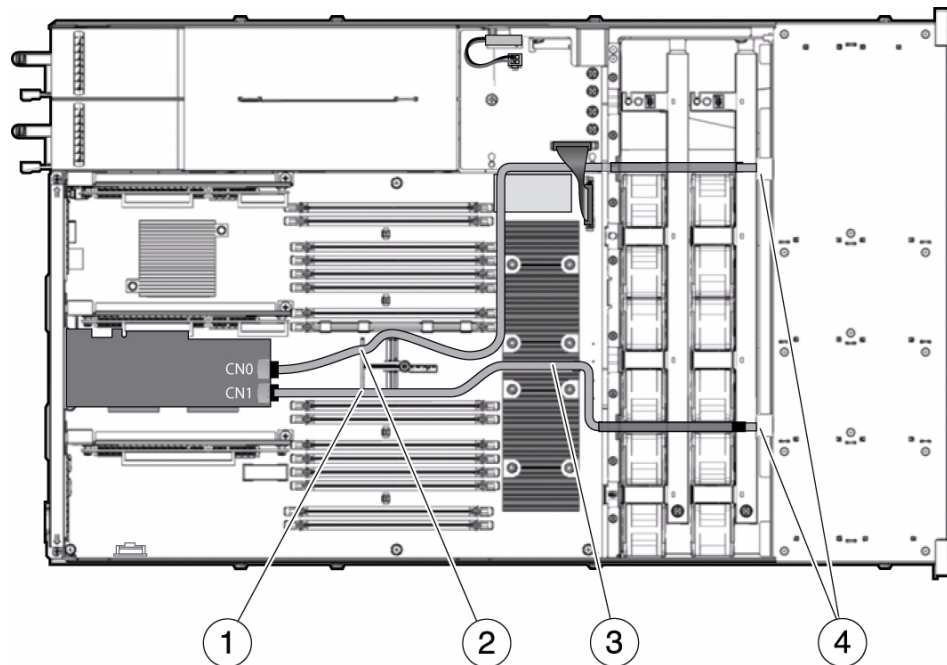


Figure Legend

- 1 Routing the data cable through the left channel on the motherboard handle
- 2 Routing the data cable through the right channel on the motherboard handle
- 3 Routing the cable between the two processors
- 4 Routing the cables through the fan midwall to the hard drive backplane

Identifying FRUs in SPARC Enterprise T5240 Servers

These topics identify and illustrate Field Replaceable Units (FRUs) contained in SPARC Enterprise T5240 servers.


- [“Motherboard Components in SPARC Enterprise T5240 Servers” on page 196](#)
- [“Memory Mezzanine Components in SPARC Enterprise T5240 Servers” on page 198](#)
- [“I/O Components in SPARC Enterprise T5240 Servers” on page 200](#)
- [“Power Distribution/Fan Module Components in SPARC Enterprise T5240 Servers” on page 202](#)
- [“Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5240 Servers” on page 204](#)
- [“HDD Data Cable Routing for SAS RAID Controller Cards in SPARC Enterprise T5240 Servers” on page 207](#)

Related Information

- [“Identifying FRUs in SPARC Enterprise T5140 Servers” on page 183](#)

Motherboard Components in SPARC Enterprise T5240 Servers

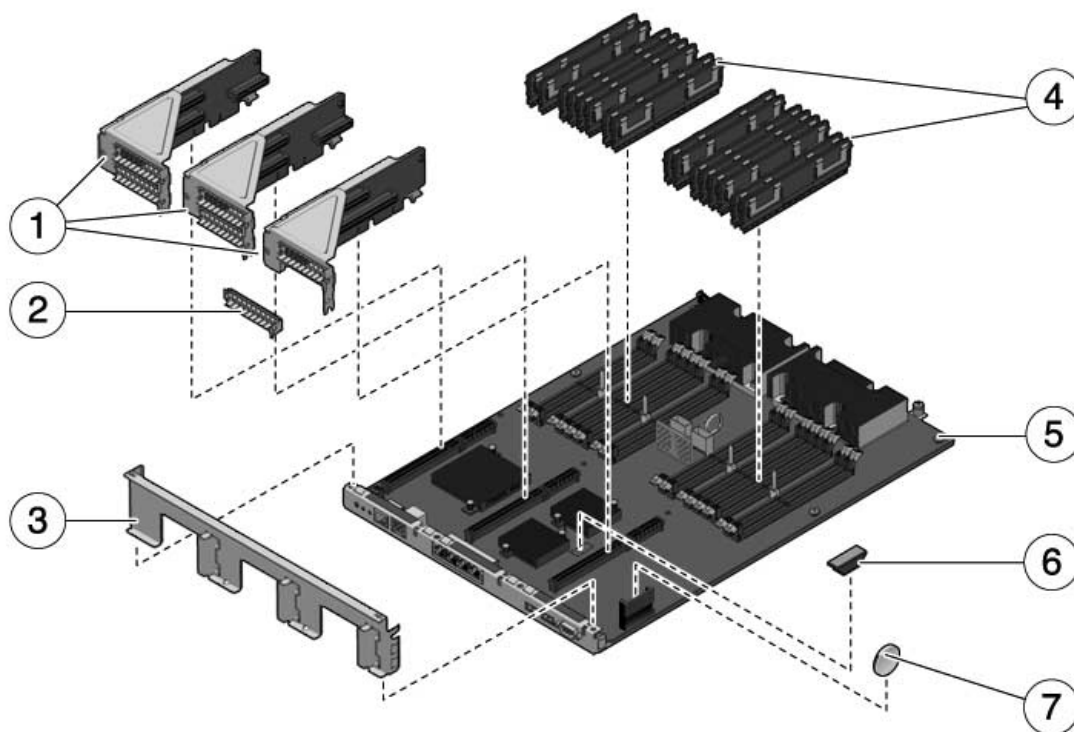FIGURE: Motherboard Components in SPARC Enterprise T5240 Servers




The following table identifies the components located on the motherboard and points to instructions for servicing them.

TABLE: Motherboard Components (SPARC Enterprise T5240 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
1	PCIe/XAUI risers	“Servicing PCIe/XAUI Risers” on page 104	Back panel PCI cross beam must be removed to access risers.	/SYS/MB/RISER0 /SYS/MB/RISER1 /SYS/MB/RISER2
2	PCIe filler panel	“Servicing PCIe/XAUI Risers” on page 104	Must be installed in blank PCI slots.	N/A
3	Removable back panel cross beam	“Servicing PCIe/XAUI Risers” on page 104	Remove this to service PCIe/XAUI risers and cards.	N/A
4	FB-DIMMs	“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83 “Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83	See configuration rules before upgrading FB-DIMMs.	See “FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98
5	Motherboard assembly	“Servicing the Motherboard Assembly” on page 122	Must be removed to access power distribution board, power supply backplane, and paddle card.	/SYS/MB
6	SCC module	“Servicing the SCC Module” on page 116	Contains host ID, MAC addresses, and service processor configuration data.	/SYS/MB/SC/SCC_NV RAM
7	Battery	“Servicing the Battery” on page 114	Necessary for system clock and other functions.	/SYS/MB/BAT

Memory Mezzanine Components in SPARC Enterprise T5240 Servers

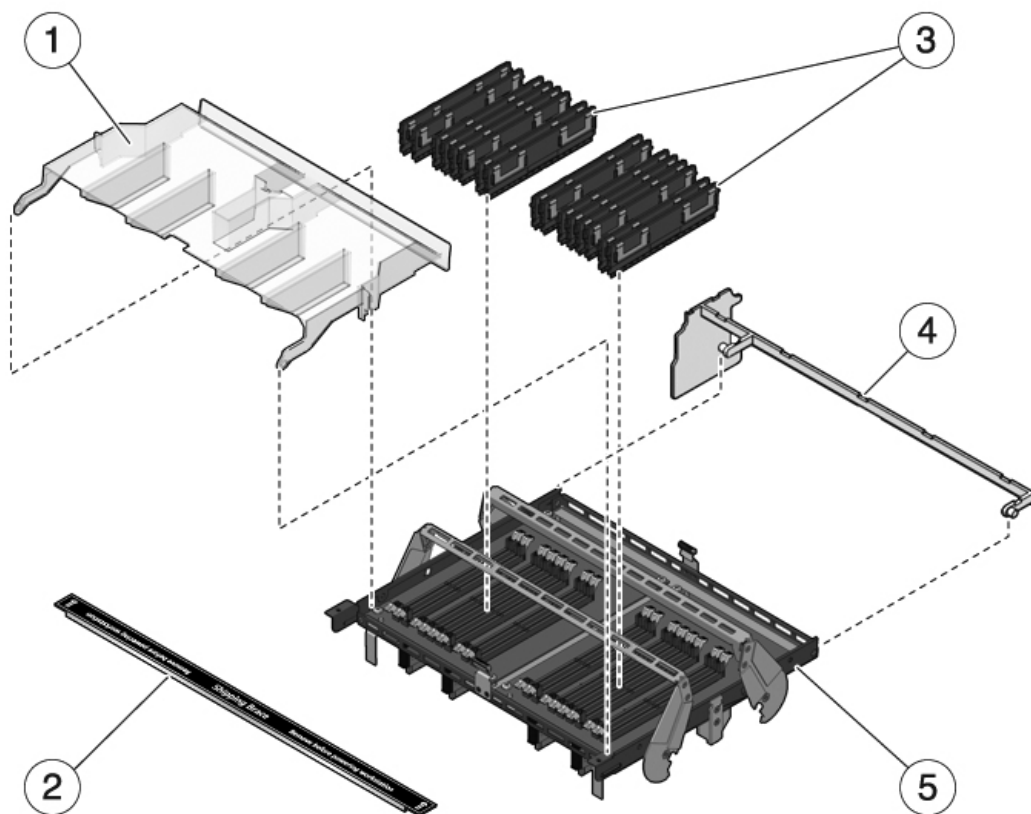FIGURE: Memory Mezzanine Assembly Components (SPARC Enterprise T5240 Servers)




The following table identifies the components located on the memory mezzanine assembly and points to instructions for servicing them.

TABLE: Memory Mezzanine Assembly Components (SPARC Enterprise T5240 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
1	Memory mezzanine assembly air duct	“Servicing the Memory Mezzanine Assembly (SPARC Enterprise T5240)” on page 118	Must be installed to ensure proper system cooling.	N/A
2	Shipping bracket	“Servicing the Memory Mezzanine Assembly (SPARC Enterprise T5240)” on page 118	Optional component. Must be installed if shipping the system to another location.	N/A
3	FB-DIMMs	“Identify Faulty FB-DIMMs Using the show faulty Command” on page 83 “Identify Faulty FB-DIMMs Using the FB-DIMM Fault Locator Button” on page 83	See configuration rules before upgrading FB-DIMMs.	See “FB-DIMM Configuration Guidelines for SPARC Enterprise T5240 Servers” on page 98
4	Auxiliary air vent	“Servicing the Memory Mezzanine Assembly (SPARC Enterprise T5240)” on page 118	Must be installed to ensure proper system cooling.	N/A
5	Memory mezzanine assembly	“Servicing the Memory Mezzanine Assembly (SPARC Enterprise T5240)” on page 118	Must be removed to access motherboard FB-DIMMs, motherboard, power distribution board, power supply backplane, and paddle card.	/SYS/MB/CMP0/MR0 /SYS/MB/CMP1/MR1

I/O Components in SPARC Enterprise T5240 Servers

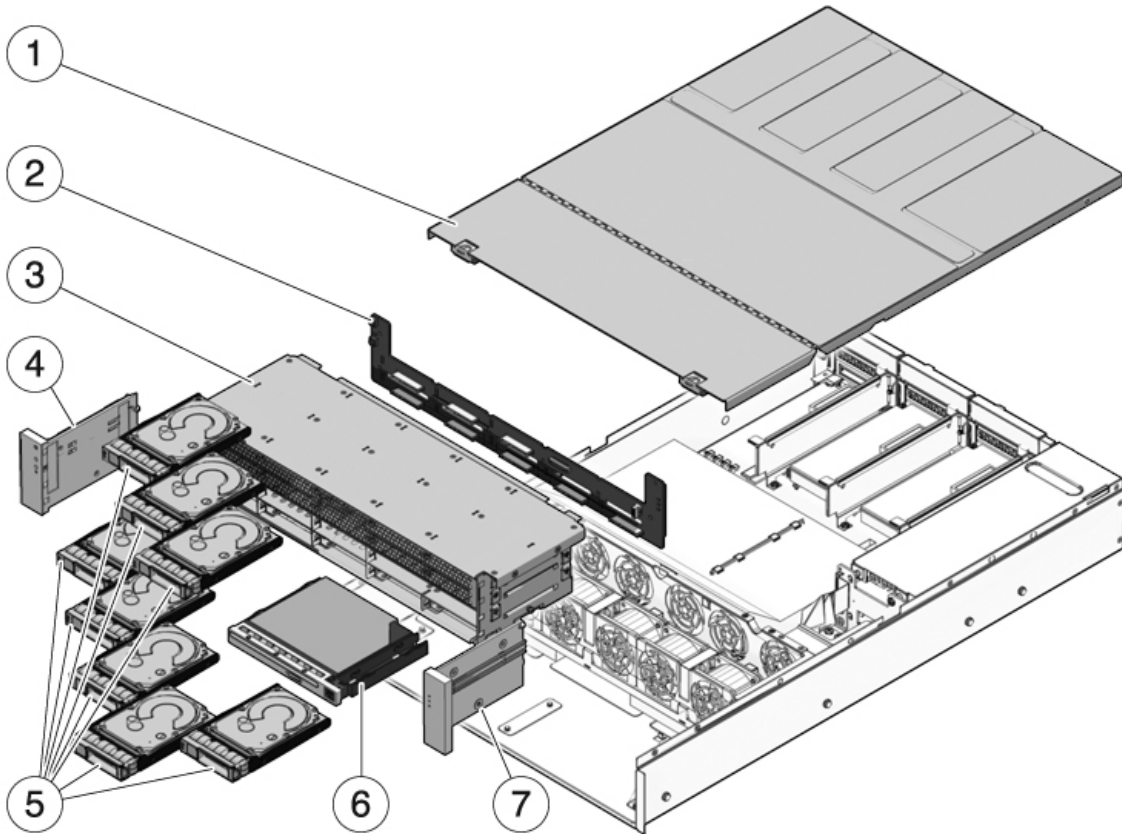FIGURE: I/O Components (SPARC Enterprise T5240 Servers)




The following table identifies the I/O components in the server and points to instructions for servicing them.

TABLE: I/O Components (SPARC Enterprise T5240 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
1	Top cover	“Remove the Top Cover” on page 67 “Install the Top Cover” on page 177	Removing top cover if the system is running will result in immediate shutdown.	N/A
2	Hard drive backplane	“Servicing the Hard Drive Backplane” on page 156		/SYS/SASBP
3	Hard drive cage	“Servicing the Hard Drive Cage” on page 151	Must be removed to service hard drive backplane and front control panel light pipes.	N/A
4	Left control panel light pipe assembly	“Servicing Front Control Panel Light Pipe Assemblies” on page 160	Metal light pipe bracket is not a FRU.	N/A
5	Hard drives	“Remove a Hard Drive” on page 71 “Install a Hard Drive” on page 73	Hard drives must be removed to service the hard drive backplane.	See “Eight-Drive Capable Backplane Configuration Reference” on page 78 or “Sixteen-Drive Capable Backplane Configuration Reference” on page 79
6	DVD/USB module	“Servicing DVD/USB Modules” on page 144	Must be removed to service the hard drive backplane.	/SYS/DVD /SYS/USBBD
7	Right control panel light pipe assembly	“Servicing Front Control Panel Light Pipe Assemblies” on page 160	Metal light pipe bracket is not a FRU.	N/A

Power Distribution/Fan Module Components in SPARC Enterprise T5240 Servers

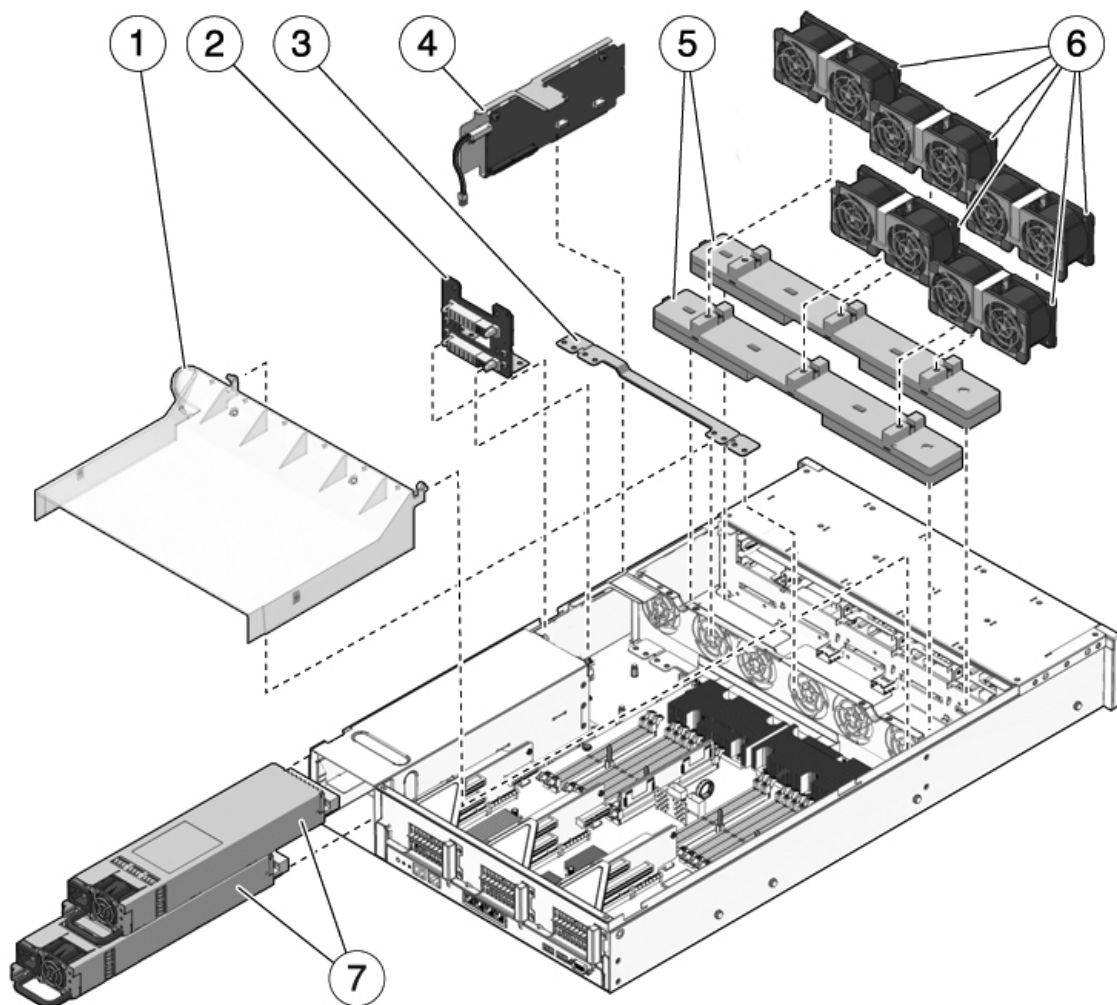FIGURE: Power Distribution/Fan Module Components (SPARC Enterprise T5240 Servers)



The following table identifies the power distribution and fan module components in the server and points to instructions for servicing them.

TABLE: Power Distribution/Fan Module Components (SPARC Enterprise T5240 Servers)

Item	FRU	Replacement Instructions	Notes	FRU Name (If Applicable)
1	Air duct	“Remove the Air Duct” on page 103 “Install the Air Duct” on page 104	Must be installed to provide proper cooling to the system. Must be removed to install the memory mezzanine assembly.	N/A
2	Power supply backplane	“Servicing Power Supply Backplanes (SPARC Enterprise T5240 Servers)” on page 170	This part is bundled with the power distribution board and bus bar.	N/A
3	Power distribution board/bus bar	“Servicing Power Distribution Boards” on page 163	Bus bar is attached to the PDB with four screws. If replacing a defective PDB, you must move the bus bar to the new board and program the chassis serial number.	/SYS/PDB
4	Paddle card	“Servicing Paddle Cards” on page 174	Includes the top cover interlock switch.	/SYS/CONNBD
5	Fan power boards	“Servicing Fan Power Boards” on page 148	Must be removed to service the paddle card.	/SYS/FANBD0 /SYS/FANBD1
6	Fan modules	“Servicing Fan Modules” on page 129	At least five fan modules must be installed in the server.	/SYS/FANBD0/FM0 /SYS/FANBD0/FM1 /SYS/FANBD0/FM2 /SYS/FANBD1/FM0 /SYS/FANBD1/FM1 /SYS/FANBD1/FM2*
7	Power supplies	“Servicing Power Supplies” on page 135	Two power supplies provide N+1 redundancy.	/SYS/PS0 /SYS/PS1

* A fan module might not be present in this slot for some configurations.

Internal Cables for Onboard SAS Controller Cards in SPARC Enterprise T5240 Servers

There are two SAS controller card options for the SPARC Enterprise T5140 and T5240 servers (both options support RAID). The standard option uses the on-board SAS controller card preinstalled on every server. The second option is a StorageTek SAS RAID Internal Host Bus Adapter (HBA) PCIe card. The internal cabling of your server will be different depending on the SAS controller card option you choose.

FIGURE: Internal Cables for Onboard SAS Controller Cards (Eight-Disk Capable SPARC Enterprise T5240 Servers)

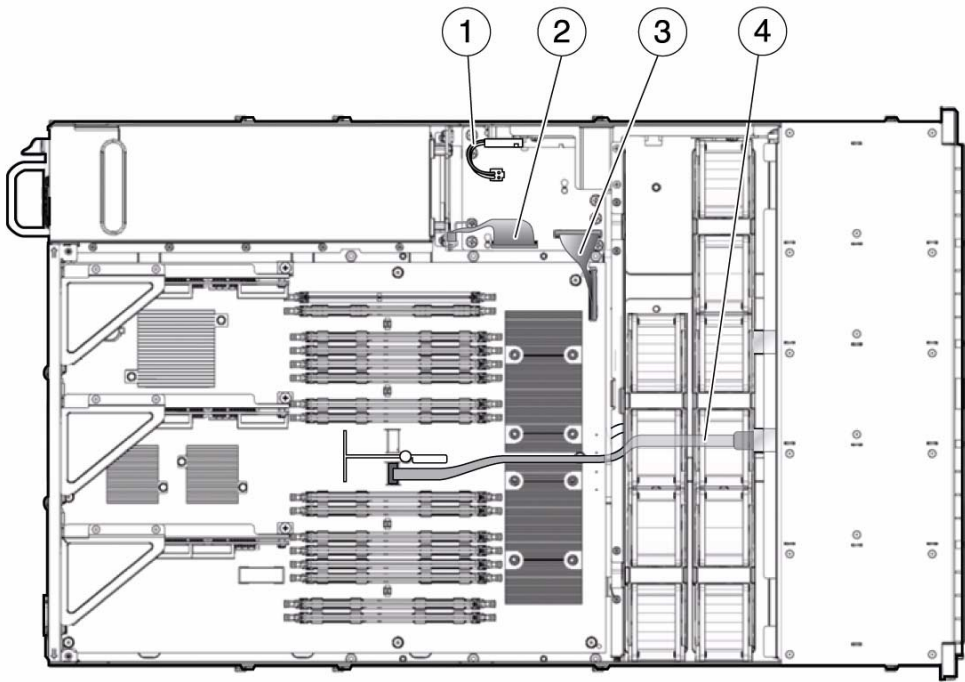


Figure Legend

- 1 Top cover safety interlock
- 2 PDB to power supply backplane cable
- 3 Motherboard-to-PDB cable
- 4 Hard drive data cables

TABLE: Data Cable Routing Details (Eight-Disk Capable SPARC Enterprise T5240 Servers)

Item	FRU	Connections	Routing notes
4	HDD data cable	Lower cable in the figure: From J4101(SAS0) on the motherboard to J0301 on the hard drive backplane.	Routed between CMP Module 0 (CMP0) and CMP Module 1 (CMP1), then under the chassis center wall, and then under the fan power board.
4	HDD data cable	Upper cable in the figure: From J4102(SAS1) on the motherboard to J0302 on the hard drive backplane.	Routed along CMP Module 1 (CMP1), then under the chassis center wall, and then under the fan power boards.

FIGURE: Internal Cables for Onboard SAS Controller Cards (Sixteen-Disk Capable SPARC Enterprise T5240 Servers)

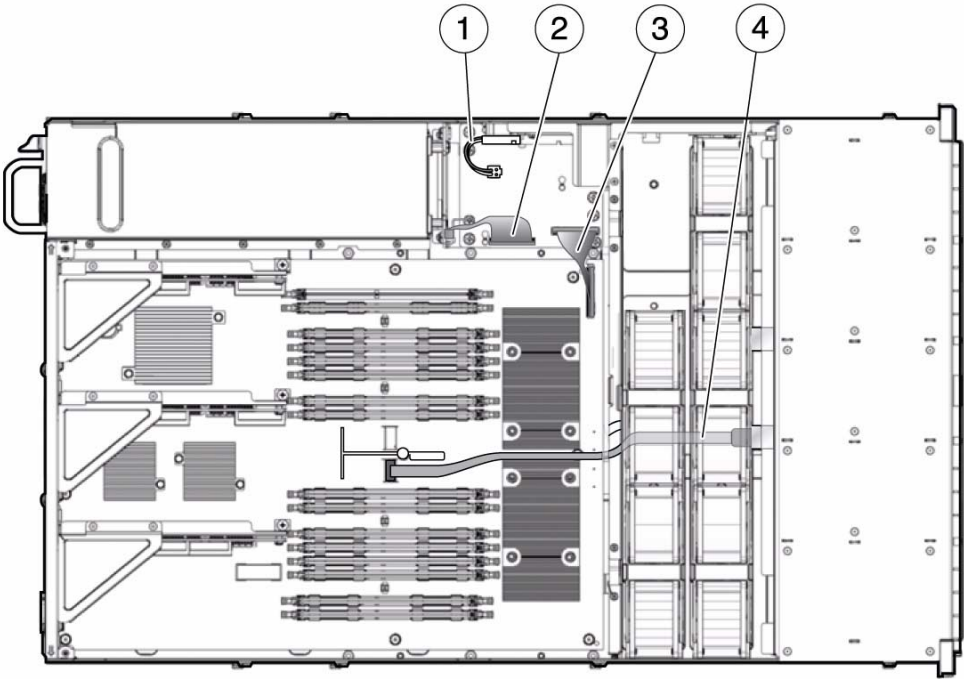


Figure Legend

- 1 Top cover safety interlock
- 2 PDB to power supply backplane cable
- 3 Motherboard-to-PDB cable
- 4 Hard drive data cable

TABLE: Data Cable Routing Details (Eight-Disk Capable SPARC Enterprise T5240 Servers)

Item	FRU	Connections	Routing notes
4	HDD data cable	From J4101(SAS0) on the motherboard to J0301 on the hard drive backplane.	Routed between CMP Module 0 (CMP0) and CMP Module 1 (CMP1), then under the chassis center wall, and then under the fan power board.

HDD Data Cable Routing for SAS RAID Controller Cards in SPARC Enterprise T5240 Servers

There are two SAS controller card options for the SPARC Enterprise T5140 and T5240 servers (both options support RAID). The standard option uses the on-board SAS controller card preinstalled on every server. The second option is a StorageTek SAS RAID Internal Host Bus Adapter (HBA) PCIe card. The internal cabling of your server will be different depending on the SAS controller card option you choose.

FIGURE: HDD Data Cable Routing for SAS RAID Controller Cards in Eight- or Sixteen-Disk Capable SPARC Enterprise T5240 Servers

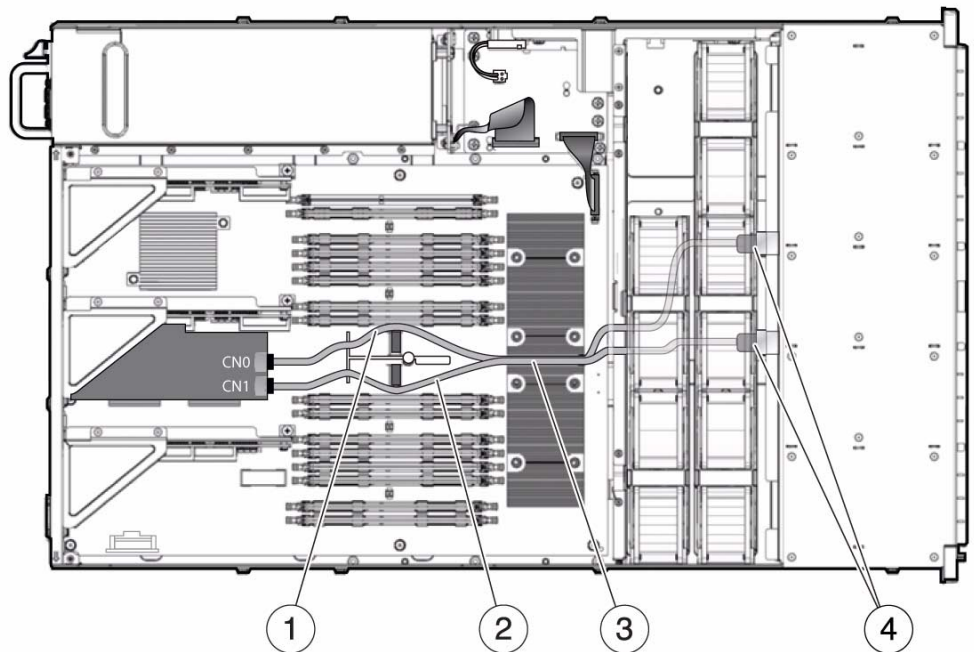


Figure Legend

- 1 Routing the first hard drive cable through the right notch on the motherboard handle
- 2 Routing the second hard drive cable through the left notch on the motherboard handle
- 3 Routing both hard drive cables between the two processors
- 4 Routing both cables through the fan midwall to the hard drive backplane

Index

A

about, 16
AC Present (power supply LED), 19, 141
airflow, blocked, 20
antistatic wrist strap, 58
ASR blacklist, 50
asrkeys (system components), 51

B

battery
 FRU name, 185, 197
 locating, 114
blacklist, ASR, 50
bootmode command, 27
break command, 26

C

cable management arm, 137
clearfault command, 26
clearing POST detected faults, 41
clearing PSH detected faults, 47
command
 fmdump, 45
 removefru, 27
 setdate, 116
 setlocator, 28, 63
 setscn, 189
 show faulty, 22
 showfaults, 28
 showfru, 28
component_state (ILOM component property), 42
components
 disabled automatically by POST, 50
 displaying state of, 50
 displaying using showcomponent command, 51

console command, 26, 39, 94
consolehistory command, 26

D

DC server models, 138, 141
diag_level parameter, 36
diag_mode parameter, 36
diag_trigger parameter, 36
diag_verbosity parameter, 36
diagnostics
 low level, 35
 running remotely, 23
dmesg command, 49
DVD drive FRU name, 187, 201

E

electrostatic discharge (ESD)
 preventing using an antistatic mat, 59
 preventing using an antistatic wrist strap, 58
 safety measures, 58
enablecomponent command, 42
environmental faults, 19, 20, 23
event log, checking the PSH, 46
EVENT_ID, FRU, 45

F

Fan Fault (system LED)
 interpreting to diagnose faults, 21
 verifying state with replacement fan module, 134
fan module
 determining fault state, 21
 Fault LED, 21, 134
 FRU name, 189, 203
fan module LEDs
 using to identify faults, 21

- fan power board
 - FRU name, 189, 203
- Fault (fan module LED), 134
- Fault (hard drive LED), 22
- Fault (power supply LED), 137
- fault manager daemon, fmd(1M), 44
- fault records, 48
- faults
 - clearing POST-detected faults, 41
 - clearing with ILOM set command, 31
 - detected by POST, 19
 - detected by PSH, 19
 - environmental, 19, 20
 - forwarded to ILOM, 23
 - recovery, 23
 - repair, 23
- FB-DIMM Fault LEDs, 22
- FB-DIMMs
 - troubleshooting, 82
- fmadm command, 48
- fmdump command, 45
- FRU event ID, 45
- FRU ID PROMs, 23

G

- graceful shutdown, 60, 61

H

- hard drive
 - determining fault state, 22
 - Fault LED, 22
- hard drive backplane
 - FRU name, 187, 201
- help command, 26

I

- I/O subsystem, 35, 50
- ILOM commands
 - set, 31
 - show faulty, 28
- installing
 - PCIe/XAUI riser, 107
 - SCC module, 117

L

- latch

- power supply, 138
- slide rail, 63

LED

- AC Present (power supply LED), 19, 141
- Fan Fault (system LED), 21, 134
- Fault (fan module LED), 21, 134
- Fault (hard drive LED), 22
- Fault (power supply LED), 21, 137
- FB-DIMM Fault (motherboard LEDs), 22
- Overtemp (system LED), 21
- Power OK (system LED), 19
- Power Supply Fault (system LED), 21, 141
- Service Required (system LED), 21, 22, 136

LEDs

- fan module, 21
- Service Required (system LED), 22

- log files, viewing, 49

M

- maintenance position, 65
- memory
 - fault handling, 82
- memory mezzanine air baffle, 121
- memory mezzanine assembly (2U)
 - and supported configurations, 100
- message ID, 44
- mezzanine air baffle, 120
- motherboard
 - FRU name, 197
- motherboard handles, 124

N

- Normal mode (virtual keyswitch position), 94
 - also see setkeyswitch command.*

O

- Overtemp (system LED), 21
- overtemperature condition, 21, 132

P

- paddle card
 - FRU name, 189, 203
- PCIe/XAUI riser
 - FRU name, 185, 197
 - installing, 107
- POST

see power-on self-test (POST)

power distribution board

FRU name, 189, 203

Power OK (system LED), 19

power supply

about, 135

AC Present LED, 19, 141

Fault LED, 21, 137

FRU name, 142, 189, 203

Power Supply Fault (system LED)

interpreting to diagnose faults, 21

using to verify successful power supply
replacement, 141

powercycle command, 27, 39

poweron command, 27

power-on self-test (POST)

about, 35

components disabled by, 50

fault clearing, 41

faults detected by, 19

faulty components detected by, 41

troubleshooting with, 20

using for fault diagnosis, 19

Predictive Self-Healing (PSH)

clearing faults, 47

faults detected by, 19

memory faults, 82

PSH

see Predictive Self-Healing (PSH)

PSU OK LED, 141

R

rear panel PCI cross beam

removing, 105

removefru command, 27

removing

rear panel PCI cross beam, 105

SCC module, 117

top cover, 68

reset command, 27

reset, system

using ILOM, 39

using POST commands, 39

resetsc command, 27

S

SCC module

FRU name, 185, 197

installing, 117

removing, 117

service processor prompt, 61

Service Required (system LED), 22

cleared by enablecomponent command, 42

interpreting to diagnose faults, 21, 22

triggered by ILOM, 23

triggered by power supply fault, 136

set command

and component_state property, 42

setdate command, 116

setkeyswitch parameter, 27, 93

setlocator command, 28, 63

setscn command, 189

show faulty command, 28

and Service Required LED, 22

using to check for faults, 19

showcomponent command, 51

showenvironment command, 28

showfaults command

syntax, 28

showfru command, 28

showkeyswitch command, 28

showlocator command, 28

showlogs command, 28

showplatform command, 28

shutdown

using powercycle command (graceful
shutdown), 27

using powercycle -f command (emergency
shutdown), 27

using poweroff command, 27

slide rail latch, 63

Solaris log files, 19

Solaris OS

checking log files for fault information, 19

Solaris Predictive Self-Healing (PSH)

see Predictive Self-Healing (PSH)

stop /SYS (ILOM command), 61

SunVTS

tests, 55

user interfaces, 55

- using for fault diagnosis, 19
- system components
 - see* components

T

- top cover
 - removing, 68
- topic guidelines, 1, 15, 57, 69, 81, 129, 135, 143, 177, 183, 195
- troubleshooting
 - AC OK LED state, 19
 - by checking Solaris OS log files, 19
 - FB-DIMMs, 82
 - Power OK LED state, 19
 - using POST, 19, 20
 - using SunVTS, 19
 - using the show faulty command, 19

U

- Universal Unique Identifier (UUID), 44
- USB ports
 - also see* DVD/USB module
- USB ports (front)
 - FRU name, 187, 201

V

- virtual keyswitch, 93

W

- Wago connector, 141

