


# INTERFACE BOARDS

## FOR 24V FTP-609 SERIES

### FTP-629DSL100/200 SERIES

#### ■ HIGHLIGHTS

- 24V FTP-609 series I/F board for 2-, 3- and 4-inch mechanisms
- Supports parallel, serial (RS-232C) or USB (V.1.1) I/F
- Supports 2-D bar codes and graphics
- Windows®2000/XP/Vista, Linux, OPOS drivers
- UL File No. E171434
- RoHS compliant

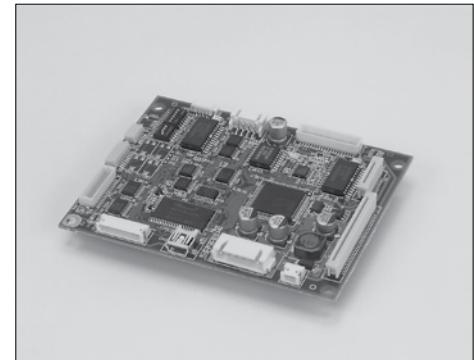

#### ■ PART NUMBERS

Part Number	Interface Type	Connection	Dots/Line	Drivers	Mechanism Part Number
FTP-629DSL112R	USB	Head extension cable	432 576	Windows® 2K/XP/Vista,  CE5.0  Linux	FTP-629MCL105 FTP-629MCL074/374 FTP-629MCL385#01, #02 FTP-639MCL105 FTP-639MCL074/374 FTP-639MCL385#01, #02
FTP-629DSL181R	Parallel & Serial (RS-232C)				
FTP-629DSL132R	USB	FPC	FTP-6x9MCL103 FTP-6x9MCL054 FTP-6x9MCL383#01, #02		
FTP-629DSL183R	Parallel & Serial (RS-232C)				
FTP-629DSL212R	USB	Head extension cable	640		FTP-639MCL115 FTP-639MCL395#01, #02
FTP-629DSL281R	Parallel & Serial (RS-232C)				
FTP-629DSL232R	USB	FPC	864		FTP-639MCL064 FTP-639MCL113 FTP-639MCL364 FTP-639MCL393#01, #02
FTP-629DSL283R	Parallel & Serial (RS-232C)				
FTP-649DSL191R	Parallel & Serial	Head cable	864		FTP-649MCL073/074 FTP-649MCL103/104
FTP-649DSL192R	USB				

#### ■ INTERFACE SPECIFICATION AT HOST SIDE


Item	Specifications
Centronics	Data speed: 28,000 bytes/sec. Synchronous method: Extended strobe pulse Handshake: BUSY/ACKNLG signal Input/output level: CMOS
RS-232C	Data speed: 115, 200 / 19,200 / 9,600 / 4,800 bps Synchronous method: Full duplex Handshake: DTR/DSR, XON/XOFF control Input/output level: RS-232C
USB V1.1	Data speed: Full speed 12Mbps Data input/output method: Referential data input/output

# FTP-629DSL100/200 Series

## ■ DIP SWITCH SETTING DSW1

Bit No.	Setting Function	Setting		Baud rate	Shipment setting
		Bit 1/ON	Bit 2/OFF		
1, 2	Baud rate	ON	ON	115,200 bps	OFF
		ON	OFF	9,600 bps	OFF
		OFF	ON	4,800 bps	OFF
		OFF	OFF	19,200 bps	OFF
3	Flow control	XON/XOFF	DTR/DSR		OFF
4	Receiving buffer size	45 byte	4k byte*		OFF
5	Even/Odd	Even	Odd		ON
6	Parity	Valid	Invalid		ON

## ■ DIMENSIONS

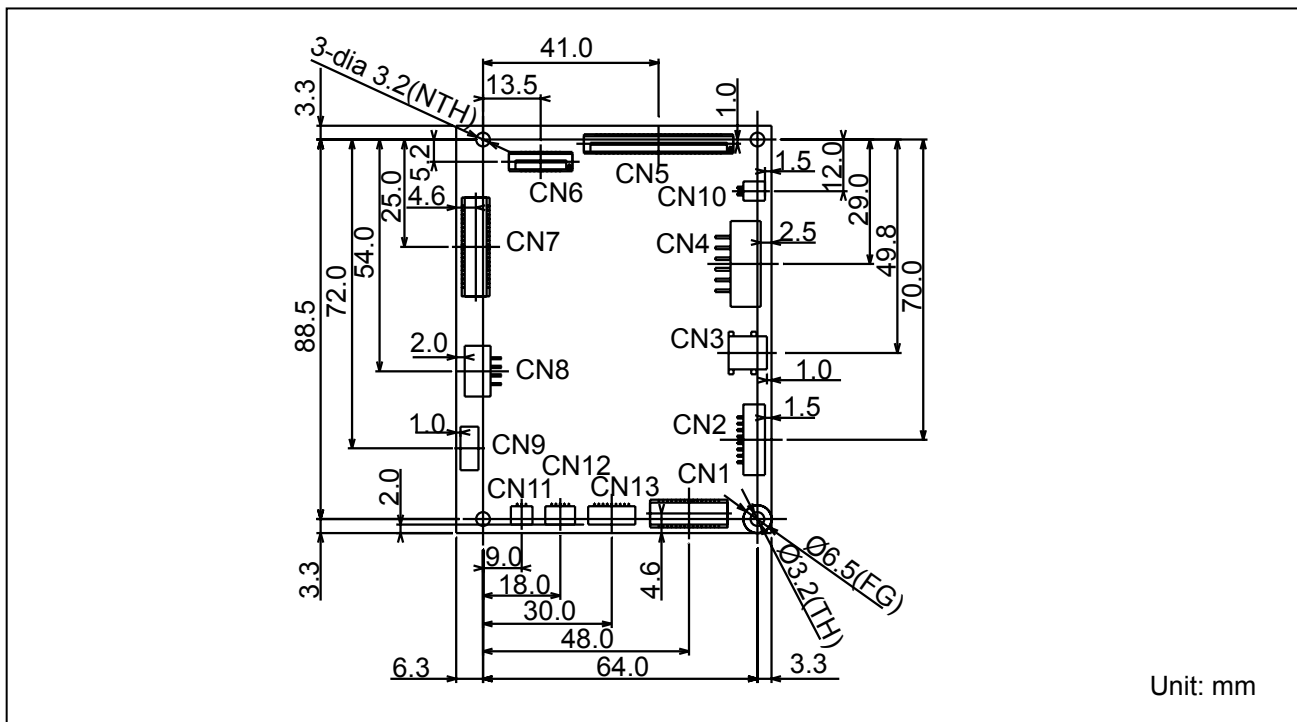

### 1.2 Control circuit board connector types

Symbol	Name	Function	FTP-629 DSLX12	FTP-629 DSLX81	FTP-629 DSLX32	FTP-629 DSLX83	FTP-629 DSL191	FTP-629 DSL192
CN1	Parallel (Centronics)	Parallel (centronic)connection	X	O	X	O	O	X
CN2	Serial I/F (RS232-C)	Serial (RS-232C) connection	O	O	O	O	O	X
CN3	USB I/F	Head motor (V 1.1)connection	O	X	O	X	X	O
CN4	Power	Power connection	O	O	O	O	O	O
CN5	Head	Head FPC connection	X	X	O	O	X	X
CN6	Motor	Motor FPC connection	X	X	O	O	X	X
CN7	Head/Motor	Extension cable connection	O	O	X	X	O	O
CN8	Cutter	Cutter motor connection	O	O	O	O	X	X
CN10	Near End Sensor	Near end switch connection	O	O	O	O	O	O

Note: CN 9 is not mounted

# FTP-629DSL100/200 Series

## INTERFACE

### 1. Centronics standard

#### (1) Connector (CN1)

Connector part number : BM30B-SRDS-G-TFC (J.S.T.) or equivalent


Mating connector part number : SHDR-30V-S-B (J.S.T.) or equivalent

#### (2) Connector pin assignment


No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	PRSTB	I	Data strobe	2	PRSTB-RET	—	Connected to logic GND
3	PRDT0	I	Data 0	4	PRDT0-RET	—	Connected to logic GND
5	PRDT1	I	Data 1	6	PRDT1-RET	—	Connected to logic GND
7	PRDT2	I	Data 2	8	PRDT2-RET	—	Connected to logic GND
9	PRDT3	I	Data 3	10	PRDT3-RET	—	Connected to logic GND
11	PRDT4	I	Data 4	12	PRDT4-RET	—	Connected to logic GND
13	PRDT5	I	Data 5	14	PRDT5-RET	—	Connected to logic GND
15	PRDT6	I	Data 6	16	PRDT6-RET	—	Connected to logic GND
17	PRDT7	I	Data 7	18	PRDT7-RET	—	Connected to logic GND
19	ACKNLG	O	Data input acknowledge	20	ACKNLG-RET	—	Connected to logic GND
21	BUSY	O	Busy	22	BUSY-RET	—	Connected to logic GND
23	RINF2	O	Printer status	24	INPRM-RET	—	Connected to logic GND
25	SLCTIN	I	Printer select	26	INPRM	I	Reset
27	RINF1	O	Printer status	28	RINF3	O	Printer status
29	ATF	I	Paper feed request	30	GND	—	Logic GND

- Notes:
- Symbol "—" means a negative logic signal.
  - "—RET" signal is a return signal of the twisted pair cable.
  - "I" or "O" means a signal direction from the interface board side.

#### (3) Connector pin number

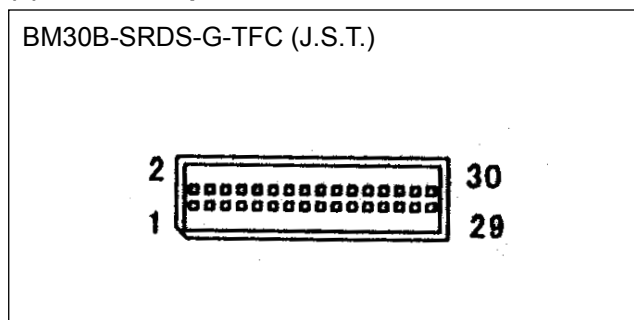

#### (4) Data input signal timing

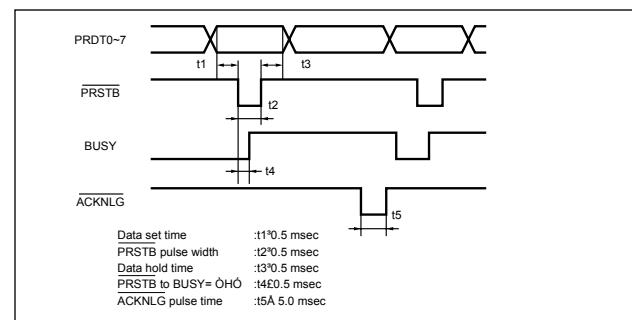

# FTP-629DSL100/200 Series

## (5) Printer Status Signal

	Error	RINF 1	RINF 2	RINF 3
1	Paper out	Low	High	Low
2	Paper near-end	High	High	Low
3	Head-up	High	Low	Low
4	Abnormal head temperature	High	Low	High
5	Abnormal head voltage	Low	High	High
6	Hardware abnormality	High	High	High
7	Mark detection abnormality	Low	Low	Low
8	Normal	Low	Low	High

## 2. RS-232C standard

### (1) Connector (CN2)

Connector part number : S9B-ZR-SM4A-TF (J.S.T.) or equivalent

Mating connector part number : ZHR-9 (J.S.T.) or equivalent

### (2) Connector pin assignment

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	FG	-	Frame ground	2	RD	I	Receive Data
3	TD	O	Transmission data	4	DTR	O	Data terminal ready
5	GND	-	Signal ground	6	DSR	I	Data set ready
7	$\overline{\text{SLCTIN}}$	I	Printer select	8	$\overline{\text{INPRM}}$	I	Reset
9	$\overline{\text{AFT}}$	I	Paper feed request				

## 3. USB standard

### (1) Connector (CN3)

Connector part number : UX60-MB-5ST (Hirose)

Mating connector part number : UX40-MB-5P-9 (Hirose)

### (2) Connector pin assignment

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	VBUS	I	Bus Power Supply	2	D-	I/O	Differential data-
3	D+	I/O	Differential data+	4	N.C.	-	No connection
5	GND	-	Signal ground				

Notes:

- Symbol “ $\overline{\text{—}}$ ” means a negative logic signal.
- “I” or “O” means a signal direction from the interface board side.

# FTP-629DSL100/200 Series

## CONNECTOR PIN ASSIGNMENT OF INTERFACE BOARD

### 1. Thermal head control circuit side (CN5)

Part number : 52610-3090 (Molex) or equivalent

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	HUP	I	Platen open signal	2	+5 V	-	Power for logic
3	+24V	-	Power for thermal head	4	+24 V	-	Power for thermal head
5	+24V	-	Power for thermal head	6	+24 V	-	Power for thermal head
7	HDO	O	Data out	8	$\overline{\text{STB2/STB3}}$	O	Print enable 2/3
9	$\overline{\text{STB3/STB4}}$	O	Print enable 3/4	10	+5 VDD	-	Power for thermal head
11	GND	-	Head GND	12	GND	-	Head GND
13	GND	-	Head GND	14	GND	-	Head GND
15	GND	-	Head GND	16	GND	-	Head GND
17	GND	-	Head GND	18	GND	-	Head GND
19	GND	-	Head GND	20	GND	-	Head GND
21	TMP	I	Thermistor input	22	$\overline{\text{STB1}}$	O	Print enable 1
23	NC / $\overline{\text{STB2}}$	O	Not connected / Head control signal 2*	24	$\overline{\text{LAT}}$	O	Print data latch
25	HCLK	O	Clock signal	26	HDI	I	Data input
27	+24V	-	Power for thermal head	28	+24V	-	Power for thermal head
29	+24V	-	Power for thermal head	30	+24V	-	Power for thermal head

\*: FTP629MCL: NC FTP-639MCL: STB4

### 2. Motor, Sensor (CN6)

Connector on circuit side : 52610-1090 (Molex) or equivalent

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	NC	-	Not connected	2	MTMP	I	Motor temperature signal
3	GND +5V	-	Logic ground	4	MT A	I/O	Motor coil excitation A
5	MT A	I/O	Motor coil excitation A	6	MT B	I/O	Motor coil excitation B
7	MT B	I/O	Motor coil excitation B	8	PESK	-	Logic
9	+5V	-	Power for logic	10	$\overline{\text{PES}}$	I	Paper out signal

# FTP-629DSL100/200 Series

## 3. Thermal head / printer motor connector

### (1) Connector (CN7)

Connector part number : Boardside: SM40B-SRDS-G-TF (J.S.T.)  
Other side: SHDR-40V-S-B (J.S.T.)

### (2) Connector pin assignment

No.	Signal Name		Data Direction	Explanation
	629MCL	639MCL 649MCL		
1	HUP		I	Platen open detection signal
2	+5V	+5V +3V	O	Logic power supply
3	+24V		O	Power supply for thermal head driving
4	+24V			
5	+24V			
6	+24V			
7	HDO		O	Printing data output signal
8	$\overline{\text{STB2}}$	$\overline{\text{STB3}}$	O	Head energizing control signal
9	$\overline{\text{STB3}}$	$\overline{\text{STB4}}$		
10	5VH		O	Power supply for control
11	GND (+24V)		---	Ground of power supply
12	GND (+24V)			
13	GND (+24V)			
14	GND (+24V)			
15	GND (+24V)			
16	GND (+24V)			
17	GND (+24V)			
18	GND (+24V)			
19	GND (+24V)			
20	GND (+24V)			

No.	Signal Name		Data Direction	Explanation
	629MCL	639MCL 649MCL		
21	TMP		I	Thermistor input
22	$\overline{\text{STB1}}$	$\overline{\text{STB1}}$	O	Head energizing control signal
23	N.C.	$\overline{\text{STB2}}$		
24	$\overline{\text{LAT}}$		O	Printing data latch signal
25	HCLK		O	Data communication synchronizing clock signal
26	HDI		I	Printing data input signal
27	+24V		O	Power supply for thermal head driving
28	+24V			
29	+24V			
30	+24V			
31	N.C.		---	No connection
32	MTMP		I	Motor temperature detection signal
33	GND (+5V)		---	Ground pin of logic power supply
34	MT $\overline{\text{A}}$		Sink/Source	Stepping motor driving signal
35	MT A			
36	MT $\overline{\text{B}}$			
37	MT B			
38	PESK		---	Cathode side of paper run out sensor
39	+5V	+3V	O	Logic power supply pin
40	$\overline{\text{PES}}$		I	Paper out detection signal

# FTP-629DSL100/200 Series

## CONNECTOR PIN ASSIGNMENT OF INTERFACE BOARD

### 3. Connector for Head, Motor Power Supply (CN4)

Connector part number: \*S6B-XH-SM4-TB (J.S.T) or equivalent (P.C.B. side)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	+24V	I	Power for head	2	+24V	I	Power for head
3	+24V	I	Ground for head	4	GND	-	Ground
5	GND	-	Ground	6	GND	-	Ground

### 4. Connector for Cutter (CN8)

Connector part number: S4B-PH-SM3-TP (J.S.T) or equivalent (P.C.B. side)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	CHP	I	Cutter home position signal	2	GND	-	Ground
3	MT+	O	Cutter motor driving signal	4	MT-	O	Cutter motor driving signal

### 5. Connector for Motor (CN9)

Connector part number: 53261-0490 (Molex) or equivalent

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	EX-MTA		Motor Phase A	2	EX-MT/A		Motor Phase / A
3	EX-MTB		Motor Phase B	4	EX-MT/B		Motor Phase / B

### 6. Connector for Paper Near-End Sensor (CN10)

Connector part number: \*S2B-ZR-SM4A-TF (J.S.T) or equivalent (P.C.B. side)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	+3V	O	Power for logic	2	NES	I	Paper near-end signal

### 7. Connector for Mark Sensor (CN12)

Connector part number: SM05B-SRSS-TB (J.S.T.) or equivalent

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	+3V	O	Logic for Power	2	/MRKS	I	Paper Near End Signal
3	/MRKK	I	Paper Near End Signal	4	/COVERS	I	Paper Near End Signal
5	GND	-	Ground				

### 7. Connector for Paper Jam (CN13)

Connector part number: SM09B-SRSS-TB (J.S.T.) or equivalent

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	+3V	O	Logic Power Supply	2	/PDSIS	I	Photo transistor emitter
3	/PDS1K	I	Photo diode cathode	4	+3V	O	Logic power supply pin
5	/PDS2S	I	Photo transistor emitter	6	/PDS2K	I	Photo diode cathode
7	+3V	O	Logic power supply pin	8	/PDS3S	I	Photo transistor emitter
9	/PDS3K	I	Photo diode cathode				

# FTP-629DSL100/200 Series

## COMMANDS

Command	Contents
HT	Moves print position to the next tab.
LF	Line feed.
FF	Feeds forms (new page).
ESC EM+n	Setting the amount of the feeding at automatic paper feed.
ESC FF	Data printing in page print mode.
ECS RS	Sets reverse printing.
ESC US	Resets reverse printing.
ESC SP+n	Character spacing setting.
ESC \$+n1+n2	Absolute position specification.
ESC ! + n	Sets print mode.
ESC % + n	External registration character specification/cancellation.
ESC & +y+c1+c2+x+d1to dn	External registration character definition.
ESC *+m+n1+n2+d1+dN	Sets bit image mode.
ESC -+n	Underline setting.
ESC 2	Sets 1/6 inch line feed length.
ESC 3+n	Sets the line feed length.
ESC ? + n	External registration character deletion.
ESC @	Printer initialization.
ESC A+n	Sets the space between the line.
ESC C+n	Sets the page length by character line.
ESC D+d1+dN +NUL	Sets the tab position.
ESC E +n	Highlighted printing specification/cancellation.
ESC G + n	Double printing specification/cancellation.
ESC J+n	Feeds paper in forward direction and prints.
ESC K+n	Reverse paper feed.
ESC L	Page printing mode selection.
ESC Q + n +! + j	Frame overlay function (page mode selection)
ESC R+n	Selects international character.
ESC S	Line printing mode.
ESC T + n	Page print mode print direction setting.
ESC V+n	Right Rotation 90° specification / cancellation.



# FTP-629DSL100/200 Series

Command	Contents
ESC X+n+m	Setting the turning time of the motor excitation.
ESC a+n	Position alignment.
ESC c+1+n	Sets internal processing.
ESC c+4+n	Paper out detector selector.
ESC c+5+n	Paper feed key valid/invalid setting.
ESC d+n	Printing and n-line feeding.
ESC e+n	Prints and reverse feeds n-lines.
ESC s+n	Sets printing speed.
ESC I	Full cut.
ESC t+n	Character code table selection.
ESC u+n	Status of peripherals.
ESC v	States of paper sensor notification.
ESC {+n	Sets/resets upside down printing.
GS !+n	Kanji printing mode collective specification.
FS &	Kanji printing mode specification.
FS*+m+n1+n2+d1 to dn	High speed collective image printing specified.
FS .	Kanji printing mode cancellation.
FS 2+c1+c2+d1 to dn	External character definition.
FS 9+n	Sets the detection functions.
FS C+n	Kanji code system selection.
FS E+n	Correction of impressed energy.
FS S+n1+n2	Kanji spacing setting.*1
FS W+n	Kanji double height and width printing specification/cancellation.
FS r+n*1	Parameter transmission (serial mode).
FS!+n	Character size specification.
GS &+m+x+y1+y2+d1 to dN	Registered bit image definition.
GS '+m+n	Registered bit image printing.
GS *+x+y+d to dx	Registered bit definition.
GS/+m	Registered bit image printing.
GS :	Macro definition start /end.
GS <	Line feeds to the next mark.

# FTP-629DSL100/200 Series

Command	Contents
GS A+m+n	Sets the line feed length after mark detection.
GS B+n	Angle setting of bar code.
GS E+n	Sets print quality.
GS R+n	Printer ID demand.
GS V+n+m	Paper cutting (this command is only available for chip).
GS a+n *1	Setting and cancellation of auto status transmission (serial mode).
GS f+n	HRI character font selection.
GS e+n+m	Sets bar code width.
GS h+n	Sets bar code height.
GS k+m +N+nd1+dN	Selects bar code type and prints
GS v	Notification of firmware version.
GS w+n	Sets bar code length.
GS !+n	Kanji printing mode collective specification.

\*1: These commands are valid with FTP-629DSL series.

## ■ OPTIONS

### 1. Cables

Name		Part Number	Length (mm)
Thermal head cable	Extension (CN7)	FTP-629Y001	270 (10.6 inches)
Interface Cable (between board and equipment)	For Centronics (CN1)	FTP-628Y202	500 (19.7 inches)
	For RS232C (CN2)	FTP-629Y302	500 (19.7 inches)
	USB (CN3)	FTP-629Y301	1000 (34.4 inches)
Power supply cable	Logic / head / motor (CN4)	FTP-629Y601	300 (11.8 inches)

### 2. Driver LSI of Control Board

Name	Part Number	Quantity / Tray	Remarks
ROM	FTP-629SR201	96	
MCU and SRAM	MB91101A	-	

### 3. Paper holder

Name	Part number
Paper Flange	FTP-040HF
Paper Stand	FTP-040HS

# FTP-629DSL100/200 Series

## Fujitsu Components International Headquarter Offices

### Japan

Fujitsu Component Limited  
Gotanda-Chuo Building  
3-5, Higashigotanda 2-chome, Shinagawa-ku  
Tokyo 141 8630, Japan  
Tel: (81-3) 5449-7010  
Fax: (81-3) 5449-2626  
Email: [promothq@fcl.fujitsu.com](mailto:promothq@fcl.fujitsu.com)  
Web: [www.fcl.fujitsu.com](http://www.fcl.fujitsu.com)

### North and South America

Fujitsu Components America, Inc.  
250 E. Caribbean Drive  
Sunnyvale, CA 94089 U.S.A.  
Tel: (1-408) 745-4900  
Fax: (1-408) 745-4970  
Email: [components@us.fujitsu.com](mailto:components@us.fujitsu.com)  
Web: <http://us.fujitsu.com/components/>

### Europe

Fujitsu Components Europe B.V.  
Diamantlaan 25  
2132 WV Hoofddorp  
Netherlands  
Tel: (31-23) 5560910  
Fax: (31-23) 5560950  
Email: [info@fceu.fujitsu.com](mailto:info@fceu.fujitsu.com)  
Web: [emea.fujitsu.com/components/](http://emea.fujitsu.com/components/)

### Asia Pacific

Fujitsu Components Asia Ltd.  
102E Pasir Panjang Road  
#01-01 CitiLink Warehouse Complex  
Singapore 118529  
Tel: (65) 6375-8560  
Fax: (65) 6273-3021  
Email: [fcsl@fcal.fujitsu.com](mailto:fcsl@fcal.fujitsu.com)  
Web: <http://www.fujitsu.com/sg/services/micro/components/>

©2010 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice.

Rev. January 13, 2010.