

Integrated Lights Out Manager (ILOM) 3.0 Supplement  
For SPARC Enterprise T5440 Server







# Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise™ T5440 Server

---

Copyright © 2009 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

FUJITSU LIMITED provided technical input and review on portions of this material.

Sun Microsystems, Inc. and Fujitsu Limited each own or control intellectual property rights relating to products and technology described in this document, and such products, technology and this document are protected by copyright laws, patents and other intellectual property laws and international treaties. The intellectual property rights of Sun Microsystems, Inc. and Fujitsu Limited in such products, technology and this document include, without limitation, one or more of the United States patents listed at <http://www.sun.com/patents> and one or more additional patents or patent applications in the United States or other countries.

This document and the product and technology to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of such product or technology, or of this document, may be reproduced in any form by any means without prior written authorization of Fujitsu Limited and Sun Microsystems, Inc., and their applicable licensors, if any. The furnishing of this document to you does not give you any rights or licenses, express or implied, with respect to the product or technology to which it pertains, and this document does not contain or represent any commitment of any kind on the part of Fujitsu Limited or Sun Microsystems, Inc., or any affiliate of either of them.

This document and the product and technology described in this document may incorporate third-party intellectual property copyrighted by and/or licensed from suppliers to Fujitsu Limited and/or Sun Microsystems, Inc., including software and font technology.

Per the terms of the GPL or LGPL, a copy of the source code governed by the GPL or LGPL, as applicable, is available upon request by the End User. Please contact Fujitsu Limited or Sun Microsystems, Inc.

This distribution may include materials developed by third parties.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun™, Sun Microsystems™, the Sun logo®, Java™, Netra™, Solaris™, Sun StorageTek™, docs.sun.com<sup>SM</sup>, OpenBoot™, SunVTS™, Sun Fire™, SunSolve<sup>SM</sup>, CoolThreads™, and J2EE™, are trademarks or registered trademarks of Sun Microsystems, Inc. or its subsidiaries in the U.S. and other countries.

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu Limited.

All SPARC trademarks are used under license and are registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon architecture developed by Sun Microsystems, Inc.

SPARC64 is a trademark of SPARC International, Inc., used under license by Fujitsu Microelectronics, Inc. and Fujitsu Limited.

SSH is a registered trademark of SSH Communications Security in the United States and in certain other jurisdictions.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

United States Government Rights - Commercial use. U.S. Government users are subject to the standard government user license agreements of Sun Microsystems, Inc. and Fujitsu Limited and the applicable provisions of the FAR and its supplements.

Disclaimer: The only warranties granted by Fujitsu Limited, Sun Microsystems, Inc. or any affiliate of either of them in connection with this document or any product or technology described herein are those expressly set forth in the license agreement pursuant to which the product or technology is provided.

EXCEPT AS EXPRESSLY SET FORTH IN SUCH AGREEMENT, FUJITSU LIMITED, SUN MICROSYSTEMS, INC. AND THEIR AFFILIATES MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND (EXPRESS OR IMPLIED) REGARDING SUCH PRODUCT OR TECHNOLOGY OR THIS DOCUMENT, WHICH ARE ALL PROVIDED AS IS, AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Unless otherwise expressly set forth in such agreement, to the extent allowed by applicable law, in no event shall Fujitsu Limited, Sun Microsystems, Inc. or any of their affiliates have any liability to any third party under any legal theory for any loss of revenues or profits, loss of use or data, or business interruptions, or for any indirect, special, incidental or consequential damages, even if advised of the possibility of such damages.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.



Please  
Recycle



Adobe PostScript

Copyright © 2009 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Entrée et revue tecnicaI fournies par FUJITSU LIMITED sur des parties de ce matériel.

Sun Microsystems, Inc. et Fujitsu Limited détiennent et contrôlent toutes deux des droits de propriété intellectuelle relatifs aux produits et technologies décrits dans ce document. De même, ces produits, technologies et ce document sont protégés par des lois sur le copyright, des brevets, d'autres lois sur la propriété intellectuelle et des traités internationaux. Les droits de propriété intellectuelle de Sun Microsystems, Inc. et Fujitsu Limited concernant ces produits, ces technologies et ce document comprennent, sans que cette liste soit exhaustive, un ou plusieurs des brevets déposés aux États-Unis et indiqués à l'adresse <http://www.sun.com/patents> de même qu'un ou plusieurs brevets ou applications brevetées supplémentaires aux États-Unis et dans d'autres pays.

Ce document, le produit et les technologies afférents sont exclusivement distribués avec des licences qui en restreignent l'utilisation, la copie, la distribution et la décompilation. Aucune partie de ce produit, de ces technologies ou de ce document ne peut être reproduite sous quelque forme que ce soit, par quelque moyen que ce soit, sans l'autorisation écrite préalable de Fujitsu Limited et de Sun Microsystems, Inc., et de leurs éventuels bailleurs de licence. Ce document, bien qu'il vous ait été fourni, ne vous confère aucun droit et aucune licence, expresses ou tacites, concernant le produit ou la technologie auxquels il se rapporte. Par ailleurs, il ne contient ni ne représente aucun engagement, de quelque type que ce soit, de la part de Fujitsu Limited ou de Sun Microsystems, Inc., ou des sociétés affiliées.

Ce document, et le produit et les technologies qu'il décrit, peuvent inclure des droits de propriété intellectuelle de parties tierces protégés par copyright et/ou cédés sous licence par des fournisseurs à Fujitsu Limited et/ou Sun Microsystems, Inc., y compris des logiciels et des technologies relatives aux polices de caractères.

Par limites du GPL ou du LGPL, une copie du code source régi par le GPL ou LGPL, comme applicable, est sur demande vers la fin utilisateur disponible; veuillez contacter Fujitsu Limited ou Sun Microsystems, Inc.

Cette distribution peut comprendre des composants développés par des tierces parties.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux États-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun<sup>TM</sup>, Sun Microsystems<sup>TM</sup>, le logo Sun<sup>®</sup>, Java<sup>TM</sup>, Netra<sup>TM</sup>, Solaris<sup>TM</sup>, Sun StorageTek<sup>TM</sup>, docs.sun.com<sup>SM</sup>, OpenBoot<sup>TM</sup>, SunVTS<sup>TM</sup>, Sun Fire<sup>TM</sup>, SunSolve<sup>SM</sup>, CoolThreads<sup>TM</sup>, et J2EE<sup>TM</sup> sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc., ou ses filiales aux États-Unis et dans d'autres pays.

Fujitsu et le logo Fujitsu sont des marques déposées de Fujitsu Limited.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux États-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

SPARC64 est une marque déposée de SPARC International, Inc., utilisée sous le permis par Fujitsu Microelectronics, Inc. et Fujitsu Limited.

SSH est une marque déposée registre de SSH Communications Security aux États-Unis et dans certaines autres juridictions.

L'interface d'utilisation graphique OPEN LOOK et Sun<sup>TM</sup> a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui, en outre, se conforment aux licences écrites de Sun.

Droits du gouvernement américain - logiciel commercial. Les utilisateurs du gouvernement américain sont soumis aux contrats de licence standard de Sun Microsystems, Inc. et de Fujitsu Limited ainsi qu'aux clauses applicables stipulées dans le FAR et ses suppléments.

Avis de non-responsabilité: les seules garanties octroyées par Fujitsu Limited, Sun Microsystems, Inc. ou toute société affiliée de l'une ou l'autre entité en rapport avec ce document ou tout produit ou toute technologie décrit(e) dans les présentes correspondent aux garanties expressément stipulées dans le contrat de licence régissant le produit ou la technologie fourni(e).

SAUF MENTION CONTRAIRE EXPRESSÉMENT STIPULÉE DANS CE CONTRAT, FUJITSU LIMITED, SUN MICROSYSTEMS, INC. ET LES SOCIÉTÉS AFFILIÉES REJETENT TOUTE REPRÉSENTATION OU TOUTE GARANTIE, QUELLE QU'EN SOIT LA NATURE (EXPRESSE OU IMPLICITE) CONCERNANT CE PRODUIT, CETTE TECHNOLOGIE OU CE DOCUMENT, LESQUELS SONT FOURNIS EN L'ÉTAT. EN OUTRE, TOUTES LES CONDITIONS, REPRÉSENTATIONS ET GARANTIES EXPRESSES OU TACITES, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON, SONT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE.

Sauf mention contraire expressément stipulée dans ce contrat, dans la mesure autorisée par la loi applicable, en aucun cas Fujitsu Limited, Sun Microsystems, Inc. ou l'une de leurs filiales ne sauraient être tenues responsables envers une quelconque partie tierce, sous quelque théorie juridique que ce soit, de tout manque à gagner ou de perte de profit, de problèmes d'utilisation ou de perte de données, ou d'interruptions d'activités, ou de tout dommage indirect, spécial, secondaire ou consécutif, même si ces entités ont été préalablement informées d'une telle éventualité.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON.



# Contents

---

**Preface** ix

**Understanding ILOM for the SPARC Enterprise T5440 Server** 1

ILOM Overview 1

Platform-Specific ILOM Features 2

ILOM Features Not Supported 2

**Managing the Host** 3

Resetting the Host 4

Managing Host Boot Mode 4

Boot Mode 4

▼ Manage the Host Boot Mode LDOMs Configuration (CLI) 5

▼ Change the Host Boot Mode Behavior at Reset (CLI) 5

▼ Manage the Host Boot Mode Script (CLI) 6

▼ Display Host's Boot Mode Expiration Date (CLI) 7

▼ View or Configure Boot Mode Settings (Browser Interface) 7

Viewing and Configuring Host Control Information 8

▼ Display the Host's MAC Address (CLI) 8

▼ Display the Host's OpenBoot Version (CLI) 9

▼ Display the Host's POST Version (CLI) 9

▼ Specify Host Behavior After the Host Resets (CLI) 9

▼ Specify Host Behavior If OS is Hung (CLI) 10

Managing Automatic Restart 10

- ▼ Set the Boot Timeout Interval 10
- ▼ Specify System Behavior at Boot Timeout 10
- ▼ Specify System Behavior if Restart Fails 11
- ▼ Specify Maximum Restart Attempts 11
- ▼ View and Configure Host Control Information (Browser Interface) 11

#### Managing System User Interactions 13

- ▼ Enable the System to Send a Break Signal or Force a Core Dump (CLI) 13
- ▼ Display Host Status Information (CLI) 14

### **Managing the Service Processor 15**

#### Storing Customer Information 15

- ▼ Change Customer FRU Data (CLI) 16
- ▼ Change System Identification Information (CLI) 16
- ▼ Change System Contact Information (CLI) 16
- ▼ Change Physical Location Information (CLI) 17
- ▼ Change Customer Identification Information (Web Interface) 18
- ▼ Display Console History (CLI) 19
- ▼ Change Console Escape Characters (CLI) 20

#### Changing Configuration Policy Settings 20

- ▼ Specify Backup of the User Database (CLI) 20
- ▼ Restore Host Power State at Restart (CLI) 21
- ▼ Specify Automatic Host Poweron After SP Reset (CLI) 22
- ▼ Disable or Re-Enable Power-On Delay (CLI) 22
- ▼ Manage Configuration Policy Settings (Web Interface) 23

#### Managing Network Access 23

- ▼ Disable or Re-Enable Network Access to the SP (CLI) 24
- ▼ Display the DHCP Server's IP Address (CLI) 24

### **Managing Devices 27**



- Managing Virtual Keyswitch Settings 27
  - ▼ Specify Host Behavior 27
  - ▼ Control the Virtual Keyswitch (Browser Interface) 28

## **IPMI Sensor Reference 29**

- Sensors on SPARC Enterprise T5440 Server 30
- Indicators on the SPARC Enterprise T5440 Server 31

## **ALOM CMT Compatibility Shell 33**

- Limits to Backward Compatibility 33
  - Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties 33
    - ▼ Commit a Change to a Network Configuration Property 34
    - ▼ Commit a Change to a Serial Port Configuration Property 34
  - ▼ Create an ALOM CMT Compatibility Shell 35
- ILOM and ALOM CMT Command Comparison 37

## **ALOM CMT Variables 47**

- ALOM CMT Variable Comparison 47

## **Event Messages Available Through the ALOM Compatibility Shell 49**

- Event Message Overview 49
- Event Severity Levels 50
- Service Processor Usage Event Messages 50
- Environmental Monitoring Event Messages 53
- Host Monitoring Event Messages 57

## **SCC Backup and Restore 59**

- Information Stored on The SCC 60

## **Index 63**



# Preface

---

This manual provides information about the Integrated Lights Out Manager (ILOM) service processor (SP). The SP enables you to remotely manage and administer your servers. You should be an experienced system administrator with a knowledge of UNIX® commands.

---

## For Safe Operation

This manual contains important information regarding the use and handling of this product. Read this manual thoroughly. Use the product according to the instructions and information available in this manual. Keep this manual handy for further reference.

Fujitsu makes every effort to prevent users and bystanders from being injured or from suffering damage to their property. Use the product according to this manual.

---

## Structure and Contents of This Manual

This manual is organized as described below:

- [“Understanding ILOM for the SPARC Enterprise T5440 Server” on page 1](#)  
Introduces ILOM 3.0 for the SPARC Enterprise™ T5440 server.
- [“Managing the Host” on page 3](#)  
Describes managing SPARC specific features of the host.
- [“Managing the Service Processor” on page 15](#)  
Describes managing SPARC specific features of the SP.
- [“Managing Devices” on page 27](#)  
Describes managing SPARC specific features of system devices.

- “IPMI Sensor Reference” on page 29  
Identifies IPMI sensor data (the /SYS namespace).
- “ALOM CMT Compatibility Shell” on page 33  
Lists and describes ALOM CMT compatibility shell equivalents for ILOM commands.
- “ALOM CMT Variables” on page 47  
Lists and describes ALOM CMT compatibility shell variable equivalents for ILOM properties.
- “Event Messages Available Through the ALOM Compatibility Shell” on page 49  
Lists and describes ALOM CMT compatibility shell event messages.
- “SCC Backup and Restore” on page 59  
Lists information stored on the SCC.

---

## Related Documentation

The latest versions of all the SPARC Enterprise Series manuals are available at the following Web sites:

Global Site

(<http://www.fujitsu.com/sparcenterprise/manual/>)

Japanese Site

(<http://primeserver.fujitsu.com/sparcenterprise/manual/>)

Title	Description	Manual Code
<i>SPARC Enterprise T5440 Server Getting Started Guide</i>	Minimum steps to power on and boot the server for the first time	C120-E504
<i>SPARC Enterprise T5440 Server Product Notes</i>	Information about the latest product updates and issues	C120-E508
<i>Important Safety Information for Hardware Systems</i>	Safety information that is common to all SPARC Enterprise series servers	C120-E391
<i>SPARC Enterprise T5440 Server Safety and Compliance Guide</i>	Safety and compliance information that is specific to the server	C120-E509

<b>Title</b>	<b>Description</b>	<b>Manual Code</b>
<i>SPARC Enterprise/PRIMEQUEST Common Installation Planning Manual</i>	Requirements and concepts of installation and facility planning for the setup of SPARC Enterprise and PRIMEQUEST	C120-H007
<i>SPARC Enterprise T5440 Server Site Planning Guide</i>	Server specifications for site planning	C120-H029
<i>SPARC Enterprise T5440 Server Overview Guide</i>	Product features	C120-E507
<i>SPARC Enterprise T5440 Server Installation and Setup Guide</i>	Detailed rackmounting, cabling, power on, and configuring information	C120-E510
<i>SPARC Enterprise T5440 Server Service Manual</i>	How to run diagnostics to troubleshoot the server, and how to remove and replace parts in the server	C120-E512
<i>SPARC Enterprise T5440 Server Administration Guide</i>	How to perform administrative tasks that are specific to the server	C120-E511
<i>External I/O Expansion Unit Installation and Service Manual</i>	Procedures for installing the External I/O Expansion Unit on the SPARC Enterprise T5120/T5140/T5220/T5240/T5440 servers	C120-E543
<i>External I/O Expansion Unit Product Notes</i>	Important and late-breaking information about the External I/O Expansion Unit	C120-E544

For more information about how to work with ILOM features that are common to all platforms managed by ILOM, the following documentation provides information.

<b>Title</b>	<b>Description</b>	<b>Manual Code</b>
<i>Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide</i>	Information that describes ILOM 3.0 features and functionality	C120-E573
<i>Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide</i>	Information and procedures for network connection, logging in to ILOM 3.0 for the first time, and configuring a user account or a directory service	C120-E576
<i>Integrated Lights Out Manager (ILOM) 3.0 Web Interface Procedures Guide</i>	Information and procedures for accessing ILOM 3.0 functions using the ILOM web interface	C120-E574
<i>Integrated Lights Out Manager (ILOM) 3.0 CLI Procedures Guide</i>	Information and procedures for accessing ILOM 3.0 functions using the ILOM CLI	C120-E575

<b>Title</b>	<b>Description</b>	<b>Manual Code</b>
<i>Integrated Lights Out Manager (ILOM) 3.0 SNMP and IPMI Procedures Guide</i>	Information and procedures for accessing ILOM 3.0 functions using SNMP or IPMI management hosts	C120-E579
<i>Integrated Lights Out Manager (ILOM) 3.x Feature Updates and Release Notes</i>	Enhancements that have been made to ILOM firmware since the ILOM 3.0 release	C120-E600
<i>Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5440 Server</i>	How to use the ILOM 3.0 software on the server	C120-E587

For more information about how to work with your host server, the following documentation provides information about how to perform certain tasks related to ILOM.

<b>Title</b>	<b>Description</b>
<i>SunVTS User's Guide</i>	Performing diagnostic tests
<i>SunVTS Test Reference Manual</i>	
<i>SunVTS Quick Reference Guide</i>	
<i>Sun Management Center Software User's Guide</i>	
<i>Solaris System Administrator Guide</i>	System and network administration
<i>SPARC: Installing Solaris Software</i>	
<i>Solaris User's Guide</i>	Using operating system

## UNIX Commands

This document might not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices. Refer to the following for this information:

- Software documentation that you received with your system
- Solaris™ Operating System documentation, which is at

(<http://docs.sun.com>)

---

# Text Conventions

Typeface*	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. To delete a file, type <b>rm</b> <i>filename</i> .

\* The settings on your browser might differ from these settings.

---

# Prompt Notations

The following prompt notations are used in this manual.

Shell	Prompt Notations
C shell	<i>machine-name</i> %
C shell superuser	<i>machine-name</i> #
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#
ILOM service processor	->
ALOM compatibility shell	sc>
OpenBoot PROM firmware	ok

---

# Fujitsu Welcomes Your Comments

If you have any comments or requests regarding this document, or if you find any unclear statements in the document, please state your points specifically on the form at the following URL.

For Users in U.S.A., Canada, and Mexico:

(<https://download.computers.us.fujitsu.com/>)

For Users in Other Countries:

([http://www.fujitsu.com/global/contact/computing/sparce\\_index.html](http://www.fujitsu.com/global/contact/computing/sparce_index.html))



# Understanding ILOM for the SPARC Enterprise T5440 Server

---

This chapter introduces ILOM for the SPARC Enterprise T5440 Server.

This chapter contains the following sections:

- [“ILOM Overview” on page 1](#)
- [“Platform-Specific ILOM Features” on page 2](#)
- [“ILOM Features Not Supported” on page 2](#)

---

## ILOM Overview

Integrated Lights Out Manager (ILOM) is system management firmware that is preinstalled on some SPARC servers. ILOM enables you to actively manage and monitor components installed in your server. ILOM provides a browser-based interface and a command-line interface, as well as an SNMP and IPMI interfaces. For general information about ILOM, see the *Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide*.

---

**Note** – For information about upgrading, installing, and configuring ILOM on your service processor see the firmware installation instructions in the *SPARC Enterprise T5440 Server Installation Guide* and the product notes for your server.

---

---

# Platform-Specific ILOM Features

ILOM operates on many platforms, supporting features that are common to all platforms. Some ILOM features belong to a subset of platforms and not to all. This document describes features that belong to SPARC Enterprise T5440 Server, augmenting the set of features described in the Integrated Lights Out Manager 3.0 base documentation.

---

**Note** – To perform some procedures documented in the Integrated Lights Out Manager 3.0 base documentation, you must create a serial connection to the server and activate the Physical Presence switch on the server. The Physical Presence switch on the SPARC Enterprise T5440 server is the Locator button. For information about creating a serial connection to your server, see the *SPARC Enterprise and T5440 System Administration Guide*.

---

---

# ILOM Features Not Supported

Among the ILOM features supported on other platforms, ILOM does not support the following features on SPARC Enterprise T5440 server:

- The KVMS features of ILOM Remote Console. However, ILOM Remote Console does provide remote serial console on SPARC Enterprise T5440 server.
- Chassis Monitoring Module (CMM) features, such as single sign on

# Managing the Host

---

This chapter contains information on ILOM features on the SPARC Enterprise T5440 server that augment the array of properties that are common to ILOM on other platforms. In particular, this chapter describes the properties in the /HOST namespace. This chapter consists of:

Description	Links
Resetting the Host	<a href="#">“Resetting the Host” on page 4</a>
Managing Host Book Mode	<a href="#">“Boot Mode” on page 4</a> <a href="#">“Manage the Host Boot Mode LDOMs Configuration (CLI)” on page 5</a> <a href="#">“Change the Host Boot Mode Behavior at Reset (CLI)” on page 5</a> <a href="#">“Manage the Host Boot Mode Script (CLI)” on page 6</a> <a href="#">“Display Host’s Boot Mode Expiration Date (CLI)” on page 7</a> <a href="#">“View or Configure Boot Mode Settings (Browser Interface)” on page 7</a>
Viewing and Configuring Host Control Information	<a href="#">“Display the Host’s MAC Address (CLI)” on page 8</a> <a href="#">“Display the Host’s OpenBoot Version (CLI)” on page 9</a> <a href="#">“Display the Host’s POST Version (CLI)” on page 9</a> <a href="#">“Specify Host Behavior If OS is Hung (CLI)” on page 10</a> <a href="#">“Specify Host Behavior After the Host Resets (CLI)” on page 9</a> <a href="#">“View and Configure Host Control Information (Browser Interface)” on page 11</a>
Managing System User Interactions	<a href="#">“Enable the System to Send a Break Signal or Force a Core Dump (CLI)” on page 13</a> <a href="#">“Display Host Status Information (CLI)” on page 14</a>

---

---

# Resetting the Host

The reset command generates a graceful or forced hardware reset of the host server. By default, the reset command gracefully resets the host. If a graceful reset is not possible, a forced reset is performed. For a list of available options for the reset command in both the ILOM and ALOM compatibility CLIs, see [TABLE: ALOM CMT Shell Miscellaneous Commands](#) on page 45.

---

# Managing Host Boot Mode

Use the boot mode properties to specify how ILOM handles boot.

- [“Boot Mode”](#) on page 4
- [“Manage the Host Boot Mode LDOMs Configuration \(CLI\)”](#) on page 5
- [“Manage the Host Boot Mode Script \(CLI\)”](#) on page 6
- [“Change the Host Boot Mode Behavior at Reset \(CLI\)”](#) on page 5
- [“Display Host’s Boot Mode Expiration Date \(CLI\)”](#) on page 7
- [“View or Configure Boot Mode Settings \(Browser Interface\)”](#) on page 7

## Boot Mode

Boot mode (bootmode) properties enable you to override the default method the server uses when it boots. This ability is useful to override particular OpenBoot or LDOMs settings that might be incorrect, to set up OpenBoot variables using a script, or similar tasks.

For example, if the OpenBoot settings have become corrupt, you can set the bootmode state property to `reset_nvram` then reset the server to its factory default OpenBoot settings.

Service personnel might instruct you to use the bootmode script property for problem resolution. The full extent of script capabilities are not documented and exist primarily for debugging.

Because bootmode is intended to be used to correct a problem with the OpenBoot or LDOMs settings, the bootmode takes effect for a single boot only. Additionally, to prevent an administrator from setting a bootmode state property and forgetting about it, a bootmode state property expires if the host is not reset within 10 minutes of the bootmode state property being set.

## ▼ Manage the Host Boot Mode LDOMs Configuration (CLI)

- At the `->` prompt, type:

```
-> set /HOST/bootmode config=confname
```

where the `config` property takes a *confname* value such as a named logical domain configuration downloaded to the SP using the Logical Domains software. For example, if you have created a logical domain configuration called `ldm-set1`:

```
-> set bootmode config=ldm-set1
```

To return the boot mode `config` to the factory default configuration, specify `factory-default`.

For example:

```
-> set bootmode config=factory-default
```

---

**Note** – If you set `/HOST/bootmode config=""`, ILOM sets the config to none.

---

## ▼ Change the Host Boot Mode Behavior at Reset (CLI)

The `/HOST/bootmode` state property controls how OpenBoot nonvolatile random access memory (NVRAM) variables are used. Normally the current settings of these variables are retained. Setting `/HOST/bootmode state=reset_nvram` changes the OpenBoot NVRAM variables to their default settings at the next reset.

- At the `->` prompt, type:

```
-> set /HOST/bootmode script=value
```

where *value* is one of the following:

- `normal` – At next reset, retains current NVRAM variable settings.
- `reset_nvram` – At next reset, returns OpenBoot variables to default settings.

---

**Note** – `state=reset_nvram` will return to `normal` after the next server reset or 10 minutes (see `expires` property in [“Display Host’s Boot Mode Expiration Date \(CLI\)” on page 7](#)). `config` and `script` properties do not expire and will be cleared upon the next server reset or manually by setting *value* to `""`.

---

## ▼ Manage the Host Boot Mode Script (CLI)

- At the `->` prompt, type:

```
-> set /HOST/bootmode script=value
```

where `script` controls the host server OpenBoot PROM firmware method of booting. `script` does not affect the current `/HOST/bootmode` setting. *value* can be up to 64 bytes in length. You can specify a `/HOST/bootmode` state and set and set the script within the same command.

For example:

```
-> set /HOST/bootmode state=reset_nvram script="setenv diag-switch? true"
```

After the server resets, variables and the bootmode `reset_nvram` state will result in the OpenBoot variables being reset to defaults, then the script will be read setting the variable `diag-switch?` to the user-requested value of `true`.

---

**Note** – If you set `/HOST/bootmode script=""`, ILOM sets the script to empty..

---


## ▼ Display Host's Boot Mode Expiration Date (CLI)

- At the -> prompt, type:

```
-> show /HOST/bootmode expires
Properties:
  expires = Thu Oct 16 18:24:16 2008
```

where expires is the date and time when the current boot mode will expire.

## ▼ View or Configure Boot Mode Settings (Browser Interface)

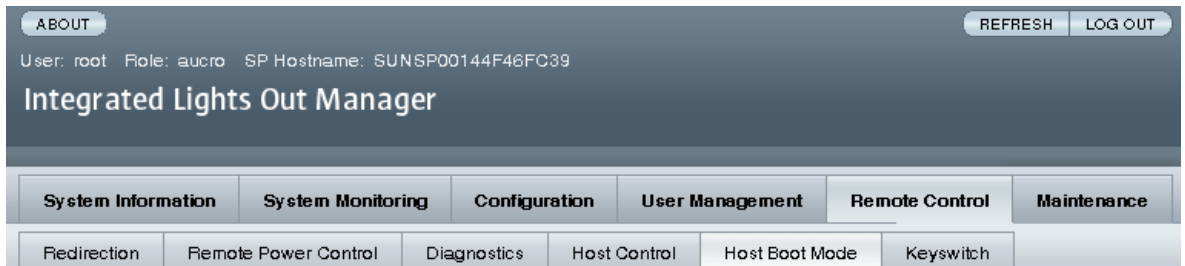

### Host Boot Mode Settings

Configure boot mode settings. Select an option for state, either 'Normal' or 'Reset NVRAM'. Enter the boot script and LDOM configuration.

State:

Expiration Date: *(none)*

Script:

LDOM Config:

You can use the iLOM web interface to view or configure the four aspects of boot mode control:

- State
- Expiration Date
- Script
- LDom Configuration

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select Remote Control -> Boot Mode Settings.
3. Select the Boot Mode State, if desired.
4. View the Expiration Date.
5. Specify a boot script, if desired.
6. Specify an LDoms configuration file, if desired.
7. Click Save.

---

## Viewing and Configuring Host Control Information

Use the host information properties to view system configuration and firmware version information.

- [“Display the Host’s MAC Address \(CLI\)” on page 8](#)
- [“Display the Host’s OpenBoot Version \(CLI\)” on page 9](#)
- [“Display the Host’s POST Version \(CLI\)” on page 9](#)
- [“Specify Host Behavior If OS is Hung \(CLI\)” on page 10](#)
- [“Specify Host Behavior After the Host Resets \(CLI\)” on page 9](#)
- [“View and Configure Host Control Information \(Browser Interface\)” on page 11](#)

### ▼ Display the Host’s MAC Address (CLI)

The `/HOST macaddress` property is automatically configured by the system software, so you cannot set or change the property. The value is read and determined from the server’s removable system configuration card (SCC PROM) and then stored as a property in ILOM.

`/HOST macaddress` is the MAC address for the `net0` port. The MAC addresses for each additional port increments from the `/HOST macaddress`. For example, `net1` is equal to the value of `/HOST macaddress` plus one (1).



- View the current setting for this property:

```
-> show /HOST macaddress
```

## ▼ Display the Host's OpenBoot Version (CLI)

The `/HOST obp_version` property displays information about the version of OpenBoot on the host.

- View the current setting for this property:

```
-> show /HOST obp_version
```

## ▼ Display the Host's POST Version (CLI)

The `/HOST post_version` property displays information about the version of POST on the host.

- View the current setting for this property:

```
-> show /HOST post_version
```

## ▼ Specify Host Behavior After the Host Resets (CLI)

Use the `/HOST autorunonerror` property to specify whether the system should powercycle the host after the host has encountered a non-fatal reset. If `autorunonerror` is set to `true`, the system checks the value of the `/HOST/diag trigger` property after powercycling the host. If `/HOST/diag trigger` is set to `power-on-reset` or `user-reset`, the system runs POST.

- Set this property:

```
-> set /HOST autorunonerror=value
```

where *value* can be:

- `false` – The SP powers off the host after the host has reset (the default).
- `true` – The SP powercycles the host after the host has reset.

## ▼ Specify Host Behavior If OS is Hung (CLI)

Use the `/HOST autorestart` property to specify what action ILOM should do when the host system OS is hung.

- **Set this property:**

```
-> set /HOST autorestart=value
```

where *value* can be:

- none – ILOM takes no action other than to issue a warning.
- reset – ILOM attempts to reset the system when the Solaris watchdog timer expires (the default).
- dumpcore – ILOM attempts to force a core dump of the OS when the watchdog timer expires.

## Managing Automatic Restart

Your server supports automatic restart.

### ▼ Set the Boot Timeout Interval

- **Set the number of seconds allowed for boot timeout:**

```
-> set /HOST boottimeout=seconds
```

The default value of `boottimeout` is 0 (zero seconds) or no timeout. Possible values are in the range from 0 to 36000 seconds.

### ▼ Specify System Behavior at Boot Timeout

- **Specify system behavior if `boottimeout` is exceeded:**

```
-> set /HOST bootrestart=value
```

where *value* can be:

- none (the default)
- reset

## ▼ Specify System Behavior if Restart Fails

- Set the recovery action after maximum boot failures are exceeded:

```
-> set /HOST bootfailrecovery=value
```

where *value* can be:

- powercycle
- poweroff (the default)

## ▼ Specify Maximum Restart Attempts

- Set the maximum number of Solaris boot continual failures allowed:

```
-> set /HOST maxbootfail=attempts
```

The default value of `maxbootfail` is 3 (three attempts).

If the host does not boot successfully within the number of tries indicated by `maxbootfail`, the host is powered off or powercycled (depending upon the setting of `bootfailrecovery`). In either case, `boottimeout` is set to 0 (zero seconds), disabling further attempts to restart the host.

## ▼ View and Configure Host Control Information (Browser Interface)

This procedure describes how to view and configure several kinds of host information.

ABOUT REFRESH LOG OUT

User: root Role: auroc SP Hostname: SUNSP00144F46FC39

## Integrated Lights Out Manager

System Information	System Monitoring	Configuration	User Management	Remote Control	Maintenance
Redirection	Remote Power Control	Diagnostics	Host Control	Host Boot Mode	Keyswitch

### Host Control

View and configure the host control information. Auto Run on Error determines whether the host should continue to boot in the event of a non-fatal POST error. Auto Restart Policy determines what action the Service Processor should take when it discovers the host is hung. Boot Timeout defines the time out value for boot timer (0 will disable the timer). Boot Restart Policy defines boot timer restart action. Max Boot Fails Allowed defines the number of max boot fails allowed. Boot Fail Recovery defines the timer action upon reaching max boot fails.

MAC Address: 00:14:4f:46:fc:30

Hypervisor Version: Hypervisor 1.8.x-nightly 2009/03/18 03:51

OBP Version: OBP 4.31.0.build\_04\*\*\*PROTOTYPE BUILD\*\*\* 2009/03/10 14:50

POST Version: POST 4.31.0.build\_04\*\*\*PROTOTYPE BUILD\*\*\* 2009/03/10 15:36

SysFW Version: Sun System Firmware : dev build terpstra@burpen-rh4-0 (r43250) Wed Mar 18 10:23:20 EDT 2009

Host Status: Powered off

Auto Run On Error:

Auto Restart Policy:

Boot Timeout:

Boot Restart Policy:

Max Boot Fails Allowed:

Boot Fail Recovery:

ILOM enables you to view or configure several host control features.

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select Remote Control -> Host Control.
3. View the MAC address.
4. View the Hypervisor version.
5. View the OpenBoot version.

6. View the POST version.
7. View the System Firmware version.
8. View the Host status.
9. Select a value for Auto Run On Error, if desired.
10. Select a value for Auto Restart Policy, if desired.
11. Select a value for IO Reconfigure Policy, if desired.
12. Select a value for Boot Timeout, if desired.
13. Select a value for Boot Restart Policy, if desired.
14. Select a value for Maximum Boot Failures Allowed, if desired.
15. Select a value for Boot Failure Recovery, if desired.
16. Click on Save.

---

## Managing System User Interactions

The system user properties enable you to customize the way ILOM identifies and interacts with the host server.

- [“Enable the System to Send a Break Signal or Force a Core Dump \(CLI\)” on page 13](#)
- [“Display Host Status Information \(CLI\)” on page 14](#)

### ▼ Enable the System to Send a Break Signal or Force a Core Dump (CLI)

Use the `set /HOST send_break_action` command to bring the server to a menu from which you can choose to go to the OpenBoot PROM prompt (`ok`). If you have configured the `kmdb` debugger, then specifying the `send_break_action=break` command brings the server into debug mode.

Specify `send_break_action=dumpcore` to force a core dump.

- At the -> prompt, type:

```
-> set /HOST send_break_action=value
```

where *value* can be:

- break – Sends a break to the host.
- dumpcore – Forces a panic core dump of the managed system OS (not supported by all OS versions).

## ▼ Display Host Status Information (CLI)

Use the show /HOST status command to display information about the host server's platform ID and status.

- At the -> prompt, type:

```
-> show /HOST status
```

For example:

```
-> show /HOST status
/HOST
  Properties:
    status = Solaris running

  Commands:
    cd
    set
    show
->
```

# Managing the Service Processor

---

This chapter contains information on ILOM properties on the SPARC Enterprise T5440 server that augment the array of properties that are common to ILOM on other platforms. In particular, this chapter covers properties in the /SP namespace. This chapter consists of:

Description	Links
Storing Customer Information	<a href="#">“Change Customer FRU Data (CLI)”</a> on page 16 <a href="#">“Change System Identification Information (CLI)”</a> on page 16 <a href="#">“Change System Contact Information (CLI)”</a> on page 16 <a href="#">“Change Physical Location Information (CLI)”</a> on page 17 <a href="#">“Change Customer Identification Information (Web Interface)”</a> on page 18
Displaying Console History	<a href="#">“Display Console History (CLI)”</a> on page 19
Modifying Console Escape characters	<a href="#">Change Console Escape Characters (CLI)</a>
Changing Configuration Policy Settings	<a href="#">“Specify Backup of the User Database (CLI)”</a> on page 20 <a href="#">“Restore Host Power State at Restart (CLI)”</a> on page 21 <a href="#">“Specify Automatic Host Poweron After SP Reset (CLI)”</a> on page 22 <a href="#">“Disable or Re-Enable Power-On Delay (CLI)”</a> on page 22 <a href="#">“Manage Configuration Policy Settings (Web Interface)”</a> on page 23
Managing Network Access	<a href="#">“Disable or Re-Enable Network Access to the SP (CLI)”</a> on page 24 <a href="#">“Display the DHCP Server’s IP Address (CLI)”</a> on page 24

---

## Storing Customer Information

This section describes ILOM features that enable you to store information (for purposes such as inventory control or site resource management) on the SP and FRU PROMs.

- “Change Customer FRU Data (CLI)” on page 16
- “Change System Identification Information (CLI)” on page 16
- “Change System Contact Information (CLI)” on page 16
- “Change Physical Location Information (CLI)” on page 17
- “Change Customer Identification Information (Web Interface)” on page 18

## ▼ Change Customer FRU Data (CLI)

Use the `/SP customer_frudata` property to store information in FRU PROMs.

- At the `->` prompt, type:

```
-> set /SP customer_frudata="data"
```

---

**Note** – The data string (*data*) must be enclosed in quote marks.

---

## ▼ Change System Identification Information (CLI)

Use the `/SP system_identifier` property to store customer identification information.

- At the `->` prompt, type:

```
-> set /SP system_identifier="data"
```

---

**Note** – The data string (*data*) must be enclosed in quote marks.

---

## ▼ Change System Contact Information (CLI)

Use the `/SP system_contact` property to store system contact information.

- At the `->` prompt, type:

```
-> set /SP system_contact="data"
```



---

**Note** – The data string (*data*) must be enclosed in quote marks.

---

## ▼ Change Physical Location Information (CLI)

Use the `/SP system_location` property to store information about the system's physical location.

- At the `->` prompt, type:

```
-> set /SP system_location="data"
```

---

**Note** – The data string (*data*) must be enclosed in quote marks.

---

## ▼ Change Customer Identification Information (Web Interface)

ABOUT REFRESH LOG OUT

User: root Role: auro SP Hostname: SUNSP00144F46FC39

### Integrated Lights Out Manager

System Information System Monitoring Configuration User Management Remote Control Maintenance

Versions Session Time-Out Components Fault Management Identification Information

### Identification Information

Configure identification information. The setting for Physical Presence Check indicates whether a button press will be required for security related actions such as password recovery.

Customer FRU Data:

SP Hostname:

SP System Identifier:

SP System Contact:

SP System Location:

SP System Description: Sun-Fire-MarambaDev, ILOM v3.0.0.0, r43250

Physical Presence Check:  Enabled

Save

ILOM provides features that enable you to store information on FRUs and the SP.

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select System Information -> Identification Information.
3. Edit the Customer FRU data field, if desired.
4. Edit the SP Hostname, if desired.
5. Edit the SP System Identifier field, if desired.
6. Edit the SP System Contact field, if desired.
7. Edit the SP System Location field, if desired.

8. View the SP System Description.
9. Click Save.

---

## ▼ Display Console History (CLI)

This section describes displaying the host server console output buffer.

The console buffer is a circular buffer that can contain up to 1 Mbyte of information. The buffer captures all POST and boot information as well as any OS information that is controlled through the ILOM host console, for example, start `/SP/console`.

---

**Note** – You must have Administrator level user permission to use this command.

---

- At the `->` prompt, type:

```
-> set /SP/console/history property=option[...]
-> show /SP/console/history
```

where *property* can be:

- `line_count` – This option accepts a value within the range of 1 to 2048 lines. Specify "" for an unlimited number of lines. The default is all lines.
- `pause_count` – This option accepts a value of 1 to any valid integer or "" for infinite number of lines. The default is not to pause..
- `start_from` – The options are:
  - `end` – The last line (most recent) in the buffer (the default).
  - `beginning` – The first line in the buffer.

If you type the `show /SP/console/history` command without having set any arguments with the `set` command, ILOM displays all lines of the console log, starting from the end.

---

**Note** – Timestamps recorded in the console log reflect server time. These timestamps reflect local time, and the ILOM console log uses UTC (Coordinated Universal Time). The Solaris OS system time is independent of the ILOM time.

---

---

## ▼ Change Console Escape Characters (CLI)

Use the `/SP/console escapechars` property to change the escape character sequence to switch from a system console session back to ILOM.

- At the `->` prompt, type:

```
-> set /SP/console escapechars=xx
```

where *property* can be any printable characters.

The sequence is limited to two characters. The default value is `#`. (Hash-Period). You can customize the sequence.

---

**Note** – Changing the escape character does not take effect in a currently active console session.

---

---

## Changing Configuration Policy Settings

This section describes managing configuration system policies using ILOM.

- [“Specify Backup of the User Database \(CLI\)”](#) on page 20
- [“Restore Host Power State at Restart \(CLI\)”](#) on page 21
- [“Specify Automatic Host Poweron After SP Reset \(CLI\)”](#) on page 22
- [“Disable or Re-Enable Power-On Delay \(CLI\)”](#) on page 22
- [“Manage Configuration Policy Settings \(Web Interface\)”](#) on page 23

## ▼ Specify Backup of the User Database (CLI)

The `/SP/policy BACKUP_USER_DATA` property specifies whether the local user database on ILOM (that is, user, password, and permission information) should be backed up. When this property is set to enabled, this data is backed up on the removable system configuration card (SCC PROM) on the system.

- At the -> prompt, type:

```
-> set /SP/policy BACKUP_USER_DATA=value
```

where *value* can be:

- enabled – Backs up the user database to the SCC (This is the default value).
- disabled – No backup.

For example, if you want the local user database on ILOM to be backed up, type the following command:

```
-> set /SP/policy BACKUP_USER_DATA=enabled
```

## ▼ Restore Host Power State at Restart (CLI)

Use the `/SP/policy HOST_LAST_POWER_STATE` property to control the behavior of the server after an unexpected power outage. When external power is restored, the ILOM service processor starts to run automatically. Normally, the host power is not turned on until you use ILOM to turn it on.

ILOM records the current power state of the server in nonvolatile storage. If the `HOST_LAST_POWER_STATE` policy is enabled, ILOM can restore the host to the previous power state. This policy is useful in the event of a power failure, or if you physically move the server to a different location.

For example, if the host server is running when power is lost and the `/SP/policy HOST_LAST_POWER_STATE` property is set to disabled, the host server remains off when power is restored. If the `/SP/policy HOST_LAST_POWER_STATE` property is set to enabled, the host server restarts when the power is restored.

- At the -> prompt, type:

```
-> set /SP/policy HOST_LAST_POWER_STATE=enabled
```

where *value* can be:

- enabled – When power is restored, returns the server to the state it was in before the power was removed.
- disabled – Keeps the server off when power is applied (the default).

If you enable `HOST_LAST_POWER_STATE`, you should also configure `/SP/policy HOST_POWER_ON_DELAY`. For further information, see [“Disable or Re-Enable Power-On Delay \(CLI\)”](#) on page 22.

## ▼ Specify Automatic Host Power on After SP Reset (CLI)

Use `/SP/policy HOST_AUTO_POWER_ON` to power on the host automatically when the service processor has been booted. If this policy is set to enabled, the service processor sets `HOST_LAST_POWER_STATE` to disabled.

- At the `->` prompt, type:

```
-> set /SP/policy HOST_AUTO_POWER_ON=value
```

where *value* can be:

- enabled – When power is applied, automatically powers on the host when the SP has been booted.
- disabled – Keeps the host power off when power is applied (the default).

## ▼ Disable or Re-Enable Power-On Delay (CLI)

Use the `/SP/policy HOST_POWER_ON_DELAY` property to cause the server to wait for a short time before powering on automatically. The delay is a random interval of one to five seconds. Delaying the server power on helps minimize current surges on the main power source. This power-on delay is important when multiple servers in racks power on after a power outage.

- At the `->` prompt, type:

```
-> set /SP/policy HOST_POWER_ON_DELAY=value
```

where *value* can be:

- enabled
- disabled (the default).

## ▼ Manage Configuration Policy Settings (Web Interface)

The screenshot shows the iLOM web interface. At the top, there is a navigation bar with 'ABOUT', 'REFRESH', and 'LOG OUT' buttons. Below this, the user information is displayed: 'User: root Role: auro SP Hostname: SUNSP00144F46FC39'. The main title is 'Integrated Lights Out Manager'. A menu bar contains 'System Information', 'System Monitoring', 'Configuration', 'User Management', 'Remote Control', and 'Maintenance'. Under 'Configuration', there are sub-menus: 'System Management Access', 'Alert Management', 'Network', 'DNS', 'Serial Port', 'Clock', 'Timezone', 'Syslog', 'SMTP Client', and 'Policy'. The 'Policy Configuration' section is active, showing a heading 'Service Processor Policies' and a dropdown menu for 'Actions'. Below this is a table with columns 'Description' and 'Status'.

Description	Status
Auto power-on host on boot (enabling this policy disables Set host power to last power state policy)	Disabled
Set host power to last power state on boot (enabling this policy disables Auto power-on host policy)	Disabled
Set to delay host power on	Disabled
Set to enable backing up of user account info to SCC card	Enabled

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select Configuration -> Policy.
3. Select an Action value to apply the Action (enable or disable) you have chosen.

---

## Managing Network Access

This section describes managing network access to the SP using ILOM.

- “Disable or Re-Enable Network Access to the SP (CLI)” on page 24
- “Display the DHCP Server’s IP Address (CLI)” on page 24

## ▼ Disable or Re-Enable Network Access to the SP (CLI)

Use the `/SP/network state` property to enable or disable the service processor's network interface.

- At the `->` prompt, type:

```
-> set /SP/network state=value
```

where *value* can be:

- enabled (the default)
- disabled

## ▼ Display the DHCP Server's IP Address (CLI)

To display the IP address of the DHCP server that provided the dynamic IP address requested by the service processor, view the `dhcp_server_ip` property. To see the `dhcp_server_ip` property, use the following procedure.

- Type:

```
-> show /SP/network

/SP/network
  Targets:

  Properties:
    commitpending = (Cannot show property)
    dhcp_server_ip = 10.8.31.5
    ipaddress = 10.8.31.188
    ipdiscovery = dhcp
    ipgateway = 10.8.31.248
    ipnetmask = 255.255.252.0
    macaddress = 00:14:4F:7E:83:4F
    pendingipaddress = 10.8.31.188
    pendingipdiscovery = dhcp
    pendingipgateway = 10.8.31.248
    pendingipnetmask = 255.255.252.0
    state = enabled

  Commands:
```



```
cd  
set  
show
```



# Managing Devices

---

This chapter contains information on ILOM properties on the SPARC Enterprise T5440 server that augment the array of properties that are common to ILOM on other platforms. In particular, this chapter covers properties in the `/SYS` namespace.

- [“Managing Virtual Keyswitch Settings” on page 27](#)

---

## Managing Virtual Keyswitch Settings

- [“Specify Host Behavior” on page 27](#)
- [“Control the Virtual Keyswitch \(Browser Interface\)” on page 28](#)

### ▼ Specify Host Behavior

Use the `/SYS setkeyswitch_state` property to control the position of the virtual keyswitch.

- **At the `->` prompt, type:**

```
-> set /SYS keyswitch_state=value
```


where *value* can be:

- `normal` – The system can power itself on and start the boot process (the default).
- `standby` – The system cannot power itself on.
- `diag` – The system can power itself on using preset values of diagnostic properties: (`/HOST/diag level=max`, `/HOST/diag mode=max`, `/HOST/diag verbosity=max`) to provide thorough fault coverage. This option overrides the values of diagnostic properties that you might have set.

- locked – The system can power itself on, however you are prohibited from updating any of the flash devices or setting `/HOST send_break_action=break`.

## ▼ Control the Virtual Keyswitch (Browser Interface)

You can use the web interface to control the virtual keyswitch position of the system.

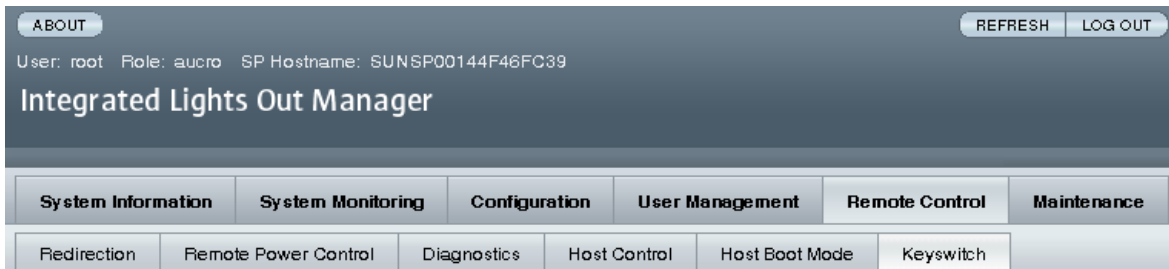

### Keyswitch

Configure keyswitch.

Keyswitch:

Save

1. Log in to the ILOM web interface as Administrator (root) to open the web interface
2. Select Remote Control -> Keyswitch.
3. Select the Keyswitch state value.
4. Click Save.

# IPMI Sensor Reference

---

Your server includes a number of IPMI-compliant sensors and indicators. Sensors measure voltages, temperature ranges, and detection of when components are installed and removed. Indicators, such as Light Emitting Diodes (LEDs), notify you of important server conditions, such as when service is required.

This section contains the following topics:

- [“Sensors on SPARC Enterprise T5440 Server” on page 30](#)
- [“Indicators on the SPARC Enterprise T5440 Server” on page 31](#)

# Sensors on SPARC Enterprise T5440 Server

**TABLE:** Temperature Sensors

Path	Description
/SYS/MB/T_*	Motherboard
/SYS/MB/DVRM_*/T_*	Motherboard Voltage Regulator
/SYS/MB/CPU <sub>n</sub> /T_*	CPU Board (0-3)
/SYS/MB/CPU <sub>n</sub> /DVRM_*/T_*	CPU Board (0-3) Voltage Regulator
/SYS/MB/MEM <sub>n</sub> /DVRM_*/T_*	Memory Board (0-3) Voltage Regulator

**TABLE:** Voltage Sensors

Path	Description
/SYS/MB/V_*	Motherboard
/SYS/MB/DVRM_*/V_*	Motherboard Voltage Regulator
/SYS/MB/CPU <sub>n</sub> /V_*	CPU Board (0-3)
/SYS/MB/CPU <sub>n</sub> /DVRM_*/V_*	CPU Board (0-3) Voltage Regulator
/SYS/MB/MEM <sub>n</sub> /DVRM_*/V_*	Memory Board (0-3) Voltage Regulator
/SYS/MB/SP/V_*	Service Processor

**TABLE:** Load (Current) Sensors

Path	Description
/SYS/PS <sub>n</sub> /I_*	Power Supply (0-3)
/SYS/MB/CPU <sub>n</sub> /DVRM_*/I_*	CPU Board (0-3) Voltage Regulator

**TABLE:** Power Supply Status Sensors

Path	Description
/SYS/PS <sub>n</sub> /*_POK	Power Supply (0-3) Power OK
/SYS/PS <sub>n</sub> /*_FAULT	Power Supply (0-3) Fault

# Indicators on the SPARC Enterprise T5440 Server

**TABLE:** Indicators on the Server

Name	Path	Description
System Level Indicators		
LOCATE	/SYS/LOCATE	Locate indicator
ACT	/SYS/ACT	System Power Activity indicator
SERVICE	/SYS/SERVICE	Service indicator
Individual Component Indicators		
PS_FAULT	/SYS/PS_FAULT	Power Supply Fault indicator
TEMP_FAULT	/SYS/TEMP_FAULT	Temperature Fault indicator
FAN_FAULT	/SYS/FAN_FAULT	Fan Fault indicator
HDDn/FAULT	/SYS/HDDn/FAULT	Hard Disk (0-3) Fault indicator
HDDn/OK2RM	/SYS/HDDn/OK2RM	Hard Disk (0-3) Okay to Remove indicator
FTn/FAULT	/SYS/MB/FTn/FAULT	Fan Module Fault indicator
CPUn/FAULT	/SYS/MB/CPUn/FAULT	CPU Board Fault indicator
MEMn/FAULT	/SYS/MB/MEMn/FAULT	Memory Board Fault indicator
/CPUn/CMPn/BRn/CHn/D0	/SYS/MB/CPUn/CMPn/BRn/CHn/D0	CPU Board DIMM Fault indicator
/MEMn/CMPn/BRn/CHn/Dn	/SYS/MB/MEMn/CMPn/BRn/CHn/Dn	Memory Board DIMM Fault indicator





# ALOM CMT Compatibility Shell

---

ILOM supports some of the features of the ALOM CMT command-line interface by means of a compatibility shell. There are significant differences between ILOM and ALOM CMT. This section describes those differences. This appendix includes the following topics:

- [“Limits to Backward Compatibility” on page 33](#)
- [“Create an ALOM CMT Compatibility Shell” on page 35](#)
- [“ILOM and ALOM CMT Command Comparison” on page 37](#)

---

## Limits to Backward Compatibility

The backward compatibility shell supports some, but not all features of ALOM CMT. Some of the more significant differences between ILOM and ALOM CMT are described in this section or in the product notes for your server.

### Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties

In the original ALOM CMT environment, when changing the values of some ALOM CMT variables (such as network and serial port configuration variables), it was necessary to reset the service processor (called the system controller in ALOM CMT) before the changes took effect. By comparison, in ILOM (and the ALOM CMT Compatibility shell) you must commit the changed values rather than resetting the service processor.



---

**Caution** – In ILOM, if you change the value of the property and reset the SP without committing the change, the new property setting will not be retained.

---

## ▼ Commit a Change to a Network Configuration Property

1. Change the value of the target network configuration property.
2. Commit the change.

For example, set a static IP address using the ALOM compatibility CLI:

```
sc> setsc netsc_ipaddr xxx.xxx.xxx.xxx  
sc> setsc netsc_commit true
```

To set the same property using the ILOM CLI:

```
-> set /SP/network pendingipaddress=xxx.xxx.xxx.xxx  
Set 'pendingipaddress' to 'xxx.xxx.xxx.xxx'  
-> set /SP/network commitpending=true  
Set 'commitpending' to 'true'
```

## ▼ Commit a Change to a Serial Port Configuration Property

1. Change the value of the target serial port configuration property.
2. Use either the ALOM CMT command `setsc ser_commit true` or the ILOM command `set /SP/serial/external commitpending=true` to commit the change.

Refer to [“ILOM and ALOM CMT Command Comparison”](#) on page 37 for a list of variables and corresponding properties.

---

ALOM CMT Variable	Comparable ILOM Property
<code>netsc_commit</code>	<code>/SP/network commitpending</code>
<code>ser_commit</code>	<code>/SP/serial/external commitpending</code>

---

---

## ▼ Create an ALOM CMT Compatibility Shell

Your server is configured to operate under an ILOM shell, by default. You can create an ALOM compatibility shell if you prefer to use commands that resemble ALOM CMT commands to administer your server.

---

**Note** – If you have performed an upgrade of the firmware from an earlier version and selected the option to preserve the settings of your earlier version of ILOM, you can continue to use your prior settings (including the username `admin` and password) without re-creating the `admin` username, described in this section. If you use the original password for the username `root` supplied with ILOM firmware, ILOM warns you that the password is still set to the factory default.

---

1. **Log onto the service processor with a username that has been assigned the user management (u) role.**

When powered on, the SP boots to the ILOM login prompt.

```
XXXXXXXXXXXXXXXXXXXX login: username
Password:
Waiting for daemons to initialize...
Daemons ready

Integrated Lights Out Manager

Version 3.0.x.x

Copyright 2008 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms.

Warning: password is set to factory default.

->
```

2. **Create a user named `admin`, and set the admin account role to Administrator and the CLI mode to `alom`.**

```
-> create /SP/users/admin
Creating user...
Enter new password: *****
Enter new password again: *****
```

```
Created /SP/users/admin
```

```
-> set /SP/users/admin role=aucro
```

```
Set 'role' to 'aucro'
```

```
->set /SP/users/admin cli_mode=alom
```

```
Set 'cli_mode' to 'alom'
```

---

**Note** – The asterisks in the example will not appear when you enter your password.

---

You can combine the create and set commands on a single line:

```
-> create /SP/users/admin role=aucro cli_mode=alom
```

```
Creating user...
```

```
Enter new password: *****
```

```
Enter new password again: *****
```

```
Created /SP/users/admin
```

**3. Log out of the root account after you have finished creating the admin account.**

```
-> exit
```

4. Log in to the ALOM CLI shell (indicated by the `sc>` prompt) from the ILOM login prompt,

```
XXXXXXXXXXXXXXXXXXXX login: admin
Password:
Waiting for daemons to initialize...

Daemons ready

Integrated Lights Out Manager

Version 3.0.4.x

Copyright 2008 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms.

sc>
```

In the ALOM CMT compatibility shell (with a few exceptions) you can use commands that resemble the commands of ALOM CMT. Remember that the ALOM CMT compatibility shell is an ILOM interface. The comparisons between the ILOM CLI and the ALOM CMT compatibility CLI are described in [“ILOM and ALOM CMT Command Comparison” on page 37](#).

---

## ILOM and ALOM CMT Command Comparison

The following table provides a command-by-command comparison between the command sets of ALOM CMT and the default ILOM CLI command set. Only the supported ALOM CMT command options are listed in the tables below. Where there are ALOM CMT command-line arguments that have no corresponding ILOM properties, those ALOM CMT arguments have been omitted. The command set of the ALOM compatibility shell provides a close approximation of the equivalent commands and arguments (where supported) in ALOM CMT.

---

**Note** – By default, when displaying information ALOM CMT commands limit their output to a terse format, offering more verbose output if a `-v` flag is supplied with the command. ILOM's `show` commands do not have a terse output format. These commands always provide verbose output.

---

**TABLE:** ALOM CMT Shell Configuration Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>password</code>	Changes the login password of the current user.	<code>set /SP/users/username password</code>
<code>restartssh</code>	Restarts the SSH server so that new host keys generated by the <code>ssh-keygen</code> command are reloaded.	<code>set /SP/services/ssh restart_sshd_action=true</code>
<code>setdate [[mmdd]HHMM  mmddHHMM[cc]yy][.SS]</code>	Sets ALOM CMT date and time.	<code>set /SP/clock datetime=<i>value</i></code>
<code>setdefaults</code>	Resets all ALOM CMT configuration parameters and the ILOM SP user database to default values.	<code>set /SP reset_to_defaults=[none factory all]</code>
<code>setkeyswitch [normal stby diag locked]</code>	Sets the status of the virtual keyswitch. Setting the virtual keyswitch to standby ( <code>stby</code> ) powers off the server. Before powering off the host server, ALOM CMT asks for a confirmation.	<code>set /SYS keyswitch_state=<i>value</i></code>
<code>setsc [param] [value]</code>	Sets the specified ALOM CMT parameter to the assigned value.	<code>set target property=<i>value</i></code>
<code>setupsc</code>	Runs the interactive configuration script. This script configures the ALOM CMT configuration variables.	No equivalent in ILOM

---

**TABLE:** ALOM CMT Shell Configuration Commands (*Continued*)

ALOM CMT Command	Summary	Comparable ILOM Command
<code>showplatform [-v]</code>	Displays information about the host system's hardware configuration, and whether the hardware is providing service. The <code>-v</code> option displays verbose information about the displayed components.	<code>show /HOST</code>
<code>showfru</code>	Displays information about the field-replaceable units (FRUs) in a host server.	Use the ILOM <code>show [FRU]</code> command to display static FRU information. (For dynamic FRU information, use the ALOM CMT <code>showfru</code> command.)
<code>showusers</code>	Displays a list of users currently logged in to ALOM CMT. The display for this command has a similar format to that of the UNIX command <code>who</code> . The <code>-g</code> option pauses the display after the number of lines you specify for <code>lines</code> .	<code>show -level all -o table /SP/sessions</code>
<code>showusers -g lines</code>		No equivalent in ILOM for <code>-g</code> option
<code>showhost version</code>	Displays version information for host-side components. The <code>version</code> option displays the same information as the <code>showhost</code> command with no option.	<code>show /HOST</code>
<code>showkeyswitch</code>	Displays status of virtual keyswitch.	<code>show /SYS keyswitch_state</code>
<code>showsc [param]</code>	Displays the current nonvolatile random access memory (NVRAM) configuration parameters.	<code>show target property</code>
<code>showdate</code>	Displays the ALOM CMT date. ALOM CMT time is expressed in Coordinated Universal Time (UTC) rather than local time. The Solaris OS and ALOM CMT time are not synchronized.	<code>show /SP/clock datetime</code>

**TABLE:** ALOM CMT Shell Configuration Commands (*Continued*)

<b>ALOM CMT Command</b>	<b>Summary</b>	<b>Comparable ILOM Command</b>
ssh-keygen -l	Generates Secure Shell (SSH) host keys and displays the host key fingerprint on the SC.	show /SP/services/ssh/keys rsa dsa
ssh-keygen -r		set /SP/services/ssh generate_new_key_action=true
ssh-keygen -t {rsa dsa}		set /SP/services/ssh generate_new_key_type={rsa dsa}
usershow [username]	Displays a list of all user accounts, permission levels, and whether passwords are assigned.	show /SP/users
useradd username	Adds a user account to ALOM CMT.	create /SP/users/username
userdel -y username	Deletes a user account from ALOM CMT. The -y option enables you to skip the confirmation question.	delete [-script] /SP/users/username
userpassword [username]	Sets or changes a user password.	set /SP/users/username password
userperm [username] [c] [u] [a] [r] [o] [s]	Sets the permission level for a user account.	set /SP/users/username role=permissions [a u c r o]



**TABLE:** ALOM CMT Shell Log Commands

ALOM CMT Command	Summary	Comparable ILOM Command
showlogs -p [r p] [-b lines   -e lines   -v] [-g lines]	Displays the history of all events logged in the event log, or major and critical events in the event log. The -p option selects whether to display entries only major and critical events from the event log (r) or to display all of the events from the event log (p). -g lines specifies the number of lines to display before pausing. -e lines displays n lines from the end of the buffer. -b lines displays n lines from the beginning of the buffer. -v displays the entire buffer.	show /SP/logs/event/list  No equivalent in ILOM
consolehistory [-b lines   -e lines   -v] [-g lines]	Displays the host server console output buffers. -g lines specifies the number of lines to display before pausing. -e lines displays n lines from the end of the buffer. -b lines displays n lines from the beginning of the buffer. -v displays the entire buffer.	set /SP/console/history property=value [set /SP/console/history property=value] [set /SP/console/history property=value] show /SP/console/history where property can be: line_count=[lines] default value is "" (none), meaning there is no limit to the total number of lines retrieved from the buffer. pause_count=[count] default value is "" (none), meaning there is no limit to the count of lines displayed per pause. start_from=[end beginning] default value is end.

**TABLE:** ALOM CMT Shell Status and Control Commands

ALOM CMT Command	Summary	Comparable ILOM Command
showenvironment	Displays the environmental status of the host server. This information includes system temperatures, power supply status, front panel LED status, hard disk drive status, fan status, voltage, and current sensor status.	show -o table -level all /SYS
showpower [-v]	Displays power metrics for the host server.	show /SP/powermgmt
shownetwork [-v]	Displays the current network configuration information. The -v option shows additional information about your network, including information about your DHCP server.	show /SP/network
console [-f]	Connects to the host system console. The -f option forces the console write lock from one user to another. In ILOM, the -force option terminates the console, permitting you to start a new console.	start [-force] /SP/console
break [-D -c]	Drops the host server from running the Solaris OS software into OpenBoot PROM or kmdb depending upon the mode in which the Solaris software was booted.	set /HOST send_break_action=[break dumpcore]  [start /SP/console]
bootmode [normal] [reset_nvram] [config=configname] [bootscript = string]	Controls the host server OpenBoot PROM firmware method of booting.	set /HOST/bootmode <i>property=value</i> (where <i>property</i> is state, config, or script)

**TABLE:** ALOM CMT Shell Status and Control Commands (*Continued*)

ALOM CMT Command	Summary	Comparable ILOM Command
<code>flashupdate -s IPAddr -f pathname [-v] [-y] [-c]</code>	<p>Downloads and updates system firmware (both host firmware and ALOM CMT firmware). For ILOM, <i>ipaddr</i> must be a TFTP server. If you use DHCP, you can replace <i>ipaddr</i> with the name of the TFTP host.</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-c</code> option enables you to update system firmware on your server without preserving configuration information.</p> <p>After configuration information has been deleted (by having used the <code>-c</code> option or the <code>set /SP reset_to_defaults=factory</code> command), you <i>must</i> use the <code>-c</code> option when replacing system firmware that includes ILOM 3.0 with firmware that includes ILOM 2.0. If you omit the <code>-c</code> option, the <code>flashupdate</code> command attempts to restore preserved configuration information, halting the firmware downgrade because that configuration information is absent.</p>	<p><code>load -source tftp://ipaddr/pathname</code></p>
<code>reset [-y] [-c] [-d] [-f] [-n]</code>	<p>Generates a hardware reset on the host server or control domain. By default the system is gracefully reset.</p> <p>The <code>-d</code> option specifies a reset for the control domain.</p> <p>The <code>-n</code> option specifies domains should stop at the <code>ok</code> prompt after reset (applies to <code>-d</code> only).</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-f</code> option forces an immediate reset.</p> <p>The <code>-c</code> option automaticclay connects to the HOST console after reset.</p>	<p><code>reset [-script] [-force] /SYS [start /SP/console]</code></p> <p><code>[set /HOST/domain/control auto-boot=disable]</code></p> <p><code>reset [-script] [-force] /HOST/domain/control [start /SP/console]</code></p>
<code>powercycle [-y] [-f]</code>	<p><code>poweroff</code> followed by <code>poweron</code>. The <code>-f</code> option forces an immediate <code>poweroff</code>, otherwise the command attempts a graceful shutdown.</p>	<p><code>stop [-script] [-force] /SYS</code></p> <p><code>start [-script] [-force] /SYS</code></p>

**TABLE:** ALOM CMT Shell Status and Control Commands (*Continued*)

<b>ALOM CMT Command</b>	<b>Summary</b>	<b>Comparable ILOM Command</b>
<code>poweroff [-y][-f]</code>	Removes the main power from the host server. The <code>-y</code> option enables you to skip the confirmation question. ALOM CMT attempts to shut the server down gracefully. The <code>-f</code> option forces an immediate shutdown.	<code>stop [-script][-force] /SYS</code>
<code>poweron</code>	Applies the main power to the host server or FRU.	<code>start /SYS</code>
<code>setlocator [on/off]</code>	Turns the Locator LED on the server on or off.	<code>set /SYS/LOCATE value=<i>value</i></code>
<code>showfaults [-v]</code>	Displays current valid system faults.	<code>show /SP/faultmgmt</code>
<code>clearfault <i>UUID</i></code>	Manually repairs system faults. Use the ILOM <code>show faulty</code> command to identify faulted components.	<code>set /SYS/<i>component</i> clear_fault_action=true</code>
<code>showlocator</code>	Displays the current state of the Locator LED as either on or off.	<code>show /SYS/LOCATE</code>

**TABLE:** ALOM CMT Shell FRU Commands

<b>ALOM CMT Command</b>	<b>Summary</b>	<b>Comparable ILOM Command</b>
<code>setfru -c <i>data</i></code>	The <code>-c</code> option enables you to store information (such as inventory codes) on all FRUs in a system.	<code>set /SYS customer_frudata= <i>data</i></code>
<code>showfru -g lines [-s -d] [<i>FRU</i>]</code>	Displays information about the FRUs in a host server.	<code>show [<i>FRU</i>]</code>
<code>removefru [-y] [<i>FRU</i>]</code>	Prepares a FRU (for example, a power supply) for removal. The <code>-y</code> option enables you to skip the confirmation question.	<code>set /SYS/PS0 prepare_to_remove_action= true</code>

**TABLE:** ALOM CMT Shell Automatic System Recovery (ASR) Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>enablecomponent <i>component</i></code>	Re-enables a component that has been disabled using the <code>disablecomponent</code> command.	<code>set /SYS/<i>component</i> component_state=enabled</code>
<code>disablecomponent <i>component</i></code>	Disables a component.	<code>set /SYS/<i>component</i> component_state=disabled</code>
<code>showcomponent <i>component</i></code>	Displays system components and their test status.	<code>show /SYS/<i>component</i> component_state</code>
<code>clearasrdb</code>	Removes all entries from the the list of disabled components.	No equivalent in ILOM

**TABLE:** ALOM CMT Shell Miscellaneous Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>help [<i>command</i>]</code>	Displays a list of all ALOM CMT commands with their syntax and a brief description of how each command works. Specifying a command name as an option enables you to view the help for that command.	<code>help</code>
<code>reset [-y]</code>	Reboots ALOM CMT. The <code>-y</code> option enables you to skip the confirmation question.	<code>reset [-script] /SP</code>
<code>userclimode <i>username shelltype</i></code>	Sets the type of shell to <i>shelltype</i> , where <i>shelltype</i> is default or alom.	<code>set /SP/users/<i>username</i> cli_mode=<i>shelltype</i></code>
<code>logout</code>	Logs out from an ALOM CMT shell session.	<code>exit</code>
<code>setsc <i>sys_ioreconfigure value</i></code>	Sets the ioreconfiguration parameter to <i>value</i> , where <i>value</i> is true,false, or next-boot	<code>set /HOST ioreconfigure=<i>value</i></code>



# ALOM CMT Variables

---

This chapter contains the following topic:

- [“ALOM CMT Variable Comparison” on page 47](#)

---

## ALOM CMT Variable Comparison

**TABLE:** ALOM CMT Variables and Comparable ILOM Properties

ALOM CMT Variable	Comparable ILOM Properties
diag_level	/HOST/diag level
diag_mode	/HOST/diag mode
diag_trigger	/HOST/diag trigger
diag_verbosity	/HOST/diag verbosity
if_connection	/SP/services/ssh state
if_emailalerts	/SP/clients/sntp state
if_network	/SP/network state
mgt_mailalert	/SP/alertmgmt/rules
mgt_mailhost	/SP/clients/sntp address
netsc_dhcp	/SP/network pendingipdiscovery
netsc_commit	/SP/network commitpending
netsc_enetaddr	/SP/network macaddress
netsc_ipaddr	/SP/network pendingipaddress
netsc_ipgateway	/SP/network pendingipgateway
netsc_ipnetmask	/SP/network pendingipnetmask
sc_backupuserdata	/SP/policy BACKUP_USER_DATA
sc_clieventlevel	N/A

**TABLE:** ALOM CMT Variables and Comparable ILOM Properties (*Continued*)

<b>ALOM CMT Variable</b>	<b>Comparable ILOM Properties</b>
sc_cliprompt	N/A
sc_clitimeout	N/A
sc_clipasswdecho	N/A
sc_customerinfo	/SP system_identifier
sc_escapechars	/SP/console escapechars
sc_powerondelay	/SP/policy HOST_POWER_ON_DELAY
sc_powerstatememory	/SP/policy HOST_LAST_POWER_STATE
ser_baudrate	/SP/serial/external pendingspeed
ser_data	N/A
sys_autorestart	/SP autorestart
sys_autorunonerror	/SP autorunonerror
sys_boottimeout	/HOST boottimeout
sys_bootrestart	/HOST bootrestart
sys_bootfailrecovery	/HOST bootfailrecovery
sys_eventlevel	N/A
sys_enetaddr	/HOST macaddress



# Event Messages Available Through the ALOM Compatibility Shell

---

This chapter contains information about event messages. Topics include:

- “Event Message Overview” on page 49
- “Event Severity Levels” on page 50
- “Service Processor Usage Event Messages” on page 50
- “Environmental Monitoring Event Messages” on page 53
- “Host Monitoring Event Messages” on page 57

---

## Event Message Overview

The firmware on the service processor (known in ALOM CMT as the SC or system controller) sends event messages to several destinations:

- Messages are sent to all logged-in users, based on the configuration of the `sc_clieventlevel` variable.
- Messages are recorded in the event log. View logged messages using the ALOM compatibility shell `showlogs` command.
- Messages recorded in the event log can be identified according to the severity of the event. If the severity of the event is major or critical, you can view the messages for those events using the ALOM compatibility shell `showlogs -p r` command. View all messages in the event log using the ALOM compatibility shell `showlogs -p p` command.
- Messages are sent in email messages based on the configuration of the `mgt_mailalert` variable. Individual email addresses can be configured to receive messages of different severities.
- If the event represents a fault, the event message appears in the output of the ALOM compatibility shell `showfaults` command.

- Messages are sent to the managed system operating system for logging into the Solaris syslog facility. Not all versions of the Solaris Operating System support this capability.

---

## Event Severity Levels

Each event has a severity level and corresponding number:

- Critical (1)
- Major (2)
- Minor (3)

ALOM compatibility shell configuration parameters use these severity levels to determine which event messages are displayed.

---

## Service Processor Usage Event Messages

The table displays usage event messages from the service processor (system controller).

**TABLE:** System Controller Usage Event Messages

Severity	Message	Description
Critical	Host has been powered off	ALOM compatibility shell sends this message when the host power has turned off. It is also normal for this event to be sent when the host has reset itself.
Major	Host has been powered on	ALOM compatibility shell sends this message when the SC requests a host power on, either because of <code>sc_powerstatememory</code> or when a user types the <code>poweron</code> command.
Critical	Host System has Reset.	ALOM compatibility shell sends this message when the SC detects that the host has reset.

**TABLE:** System Controller Usage Event Messages (*Continued*)

Severity	Message	Description
Minor	"root : Set : object = /clock/datetime : value = "datetime": success	ALOM compatibility shell sends this message when a user types the setdate command to modify the SC date or time.
Major	Upgrade succeeded	ALOM compatibility shell sends this message after the SC firmware has been reloaded after operation of the flashupdate command.
Minor	"root : Set : object = /HOST/bootmode/state: value = "bootmode-value": success	ALOM compatibility shell sends this message after a user changes the bootmode to normal using the bootmode normal command.
Minor	"root : Set : object = /HOST/bootmode/state: value = "reset_nvram": success	ALOM compatibility shell sends this message after a user changes the boot mode to reset_nvram with the bootmode command.
Minor	"root : Set : object = /HOST/bootmode/script: value = "text": success	ALOM compatibility shell sends this message after a user changes the boot mode boot script. The boot script = "text" is the text of the boot script provided by the user.
Minor	Keyswitch position has been changed to <i>keyswitch_position</i> .	ALOM compatibility shell sends this message after a user changes the keyswitch position with the setkeyswitch command. The <i>keyswitch_position</i> is the new keyswitch position.
Minor	"user" : open session : object = /session/type: value = www/shell: success	ALOM compatibility shell sends this message when users log in. <i>user</i> is the name of the user who just logged in.
Minor	"user" : close session : object = /session/type: value = www/shell: success	ALOM compatibility shell sends this message when users log out. <i>user</i> is the name of the user who just logged out.
Minor	"root : Set: object = /HOST/send_break_action: value = dumpcore : success	ALOM compatibility shell sends this message when an ALOM compatibility shell user sends a request to the host to dump core by typing the break -D command.

**TABLE:** System Controller Usage Event Messages (*Continued*)

<b>Severity</b>	<b>Message</b>	<b>Description</b>
Critical	Host Watchdog timeout.	ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to none. The SC will not perform any corrective measures.
Critical	SP Request to Dump core Host due to Watchdog.	ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to <code>dumpcore</code> . The SC attempts to perform a core dump of the host to capture error state information. The dump core feature is not supported by all OS versions.
Critical	SP Request to Reset Host due to Watchdog.	ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to <code>reset</code> . Then the SC attempts to reset the host.

---

# Environmental Monitoring Event Messages

The following table displays environmental monitoring event messages from the service processor (system controller).

**TABLE:** Environmental Monitoring Event Messages

Severity	Message	Description
Critical	SP detected fault at time <i>time</i> . Chassis cover removed.	ALOM compatibility shell sends this message if the chassis cover has been removed. The platform hardware turns managed system power off immediately as a precautionary measure. The event message System poweron is disabled should accompany this message to prevent the use of the poweron command while the chassis cover is removed.
Major	System poweron is disabled.	ALOM compatibility shell sends this message when the SC refuses to power on the system, either through the user poweron command or by the front panel power button. The SC disables power on because of an accompanying event, such as the event indicated by the message Chassis cover removed. Other possibilities include a device failure or insufficient fan cooling.
Major	System poweron is enabled.	ALOM compatibility shell sends this message after the condition that caused power on to be disabled (indicated by the preceding System poweron is disabled message) has been rectified. For example, by replacing the chassis cover or installing sufficient fans to cool the system.

**TABLE:** Environmental Monitoring Event Messages (*Continued*)

<b>Severity</b>	<b>Message</b>	<b>Description</b>
Major	SP detected fault at time <i>time</i> "fault_type 'fault' at location asserted"	<p>ALOM compatibility shell sends this message when a failure or a fault is detected. A fault is a lower priority condition that indicates the system is operating in a degraded mode.</p> <p><i>fault_type</i> is the type of failure that has occurred, such as temperature, voltage, current, or power supply.</p> <p>The location is the location and name of the device that has the error condition. The location and name of the device match the output of the ALOM compatibility shell showenvironment command.</p> <p>This fault event message appears in the output of the ALOM compatibility shell showfaults command.</p>
Minor	SP detected fault cleared at <i>time</i> time current fault at <i>device</i> asserted.	<p>ALOM compatibility shell sends this message to indicate that a prior fault or failure has recovered or been repaired. The fields (time and device) are the same as the prior fault or failure event.</p>

**TABLE:** Environmental Monitoring Event Messages (*Continued*)

<b>Severity</b>	<b>Message</b>	<b>Description</b>
Major	<i>Device_type</i> at <i>location</i> has exceeded low warning threshold.	ALOM compatibility shell sends these messages when analog measurement sensors have exceeded the specified threshold.
Critical	<i>Device_type</i> at <i>location</i> has exceeded low critical shutdown threshold.	The threshold that was exceeded is included in the message.
Critical	<i>Device_type</i> at <i>location</i> has exceeded low nonrecoverable shutdown threshold	<i>Device_type</i> is the type of device that has failed, such as VOLTAGE_SENSOR or TEMP_SENSOR. The <i>location</i> is the location and name of the device that has the error condition. The location and name of the device match the output of the ALOM compatibility shell showenvironment command.
Major	<i>Device_type</i> at <i>location</i> has exceeded high warning threshold	
Critical	<i>Device_type</i> at <i>location</i> has exceeded high soft shutdown threshold	For TEMP_SENSOR events, this message could indicate a problem outside of the server, such as the temperature in the room or blocked airflow in or out of the server. For VOLTAGE_SENSOR events, this message indicates a problem with the platform hardware or possibly with add-on cards installed.
Critical	<i>Device_type</i> at <i>location</i> has exceeded high hard shutdown threshold	These fault event messages appear in the output of the ALOM compatibility shell showfaults command.
Minor	<i>Device_type</i> at <i>location</i> is within normal range.	ALOM compatibility shell sends this message when an analog measurement sensor no longer exceeds any warning or failure thresholds. This message is sent only if the sensor reading recovers sufficiently within the boundaries of the failure parameters. The message might not match the current output of the ALOM compatibility shell showenvironment command.

**TABLE:** Environmental Monitoring Event Messages (*Continued*)

<b>Severity</b>	<b>Message</b>	<b>Description</b>
Critical	Critical temperature value: host should be shut down	ALOM compatibility shell sends this message to indicate that the SC has started a shutdown because there are not enough working fans necessary to keep the system cooled. The number of fans necessary to maintain system cooling depends on the platform. See your platform documentation for more information.
Critical	Host system failed to power off.	ALOM compatibility shell sends this message if the SC is unable to power off the system. This message indicates a problem with either the platform hardware or the SC hardware. The system should be manually unplugged to prevent damage to the platform hardware.  This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.
Major	<i>FRU_type</i> at <i>location</i> has been removed.	ALOM compatibility shell sends these messages to indicate that a FRU has been removed or inserted. The field <i>FRU_type</i> indicates the type of FRU, such as <code>SYS_FAN</code> , <code>PSU</code> , or <code>HDD</code> . The field <i>location</i> indicates the location and name of the FRU, as shown in the output of the <code>showenvironment</code> command.
Minor	<i>FRU_type</i> at <i>location</i> has been inserted.	
Major	Input power unavailable for PSU at <i>location</i> .	ALOM compatibility shell sends this message to indicate that a power supply is not receiving input power. This message normally indicates that the power supply is not plugged in to AC power. If the power cords are plugged in to an outlet that is provided power, this message indicates a problem with the power supply itself.  This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.



---

# Host Monitoring Event Messages

The following table displays host monitoring event messages from the service processor (system controller).

**TABLE:** Host Monitoring Event Messages

Severity	Message	Description
Critical	SP detected fault at time <i>time</i> <i>component</i> disabled	ALOM compatibility shell sends this message when a component has been disabled, either automatically by POST discovering a fault or by a user typing the <code>disablecomponent</code> command. <i>component</i> is the disabled component, which will be an entry from the <code>platform showcomponent</code> command. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.
Minor	SP detected fault cleared at <i>component</i> reenabled	ALOM compatibility shell sends this message when a component is enabled. A component can be enabled by a user typing the <code>enablecomponent</code> command or by FRU replacement if the component itself is a FRU (such as a DIMM). <i>component</i> is the name of the component shown in the output of the <code>platform showcomponent</code> command.

**TABLE:** Host Monitoring Event Messages (*Continued*)

Severity	Message	Description
Major	Host detected fault, MSGID: SUNW-MSG-ID	ALOM compatibility shell sends this message when the Solaris PSH software diagnoses a fault. The SUNW-MSG-ID of the fault is an ASCII identifier that can be entered at <a href="http://www.sun.com/msg">http://www.sun.com/msg</a> for more information about the nature of the fault and the steps to repair. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.
Major	<i>Location</i> has been replaced; faults cleared.	ALOM compatibility shell sends this message after the replacement of a FRU that contained a host-detected fault. <i>Location</i> is the location and name of the FRU which was replaced. This event can be received at SC boot or after FRUs have been swapped and the chassis cover is closed.
Major	Existing faults detected in FRU_PROM at <i>location</i> .	ALOM compatibility shell sends this message to indicate that the SC has detected a new FRU with pre-existing faults logged into its FRU PROM. This event can occur when either a FRU or the SC card is moved from one system to another. The location is the name of the SEEPROM on the replaced FRU, such as MB/SEEPROM. The most recent existing fault will be imported from the FRU PROM onto the <code>showfaults</code> list. The entry on the <code>showfaults</code> list is the fault imported, not this message.

# SCC Backup and Restore

---

SPARC servers store in the SCC (system configuration card) a subset of the information backed up and restored by ILOM 3.0. In case of a server failure in which there is no ILOM backup of SP data, transferring the SCC to the replacement server can provide partial restoration of the failed server's configuration data.

This chapter contains the following topic:

- [“Information Stored on The SCC” on page 60](#)

---

# Information Stored on The SCC

---

**Note** – The version of the data on the SCC must match the version of the SCC daemon running on the SP. If the versions differ, the version on the SCC is ignored. After SP reset, the SCC data is overwritten.

---

**TABLE:** ILOM Properties Stored on the SCC

Properties	Targets
/SP/users/username/	name password role cli_mode
/SP/network/	ipaddress ipdiscovery ipgateway ipnetmask state
/HOST/diag/	trigger level verbosity mode
/HOST/	autorunonerror autorestart
/SP/policy/	HOST_LAST_POWER_STATE HOST_POWER_ON_DELAY BACKUP_USER_DATA
/SP/services/ssh/state	N/A
/SP/clients/smtp/	address port state
/SP/alertmgmt/rules/[1-15]/ (if the alert is an email alert)	destination level type
/SP/system_identifier	N/A
/SYS/keyswitch	N/A

---

**TABLE:** ALOM CMT Conditional Variables

---

<b>Variable</b>
sc_clipasswecho
sc_cliprompt
sc_clitimeout
sc_clieventlevel
sc_eschapechars

---



# Index

---

## Symbols

- /HOST autorestart property, 10
- /HOST autorunonerror property, 9
- /HOST macaddress property, 8
- /HOST send\_break\_action property, 13
- /HOST status property, 14
- /HOST/bootmode config property, 5
- /HOST/bootmode expires property, 7
- /HOST/bootmode script property, 6
- /HOST/bootmode state property, 5
- /SP customer\_frudata property, 16
- /SP system\_identifier property, 16, 17
- /SP/console escapechars property, 20
- /SP/policy BACKUP\_USER\_DATA property, 20
- /SP/policy HOST\_AUTO\_POWER\_ON property, 22
- /SP/policy HOST\_LAST\_POWER\_STATE property, 21
- /SP/policy HOST\_POWER\_ON\_DELAY property, 22
- /SYS keyswitch\_state property, 27

## A

- ALOM CMT commands, comparison with ILOM commands, 37
- ALOM CMT compatibility shell
  - creating, 35
  - limits to backward compatibility, 33
- ALOM CMT variables
  - to commit, ?? to 34

## B

- backing up user data, 20
- boot mode
  - managing configuration, 5
  - managing reset, 5

- managing script, 6

## C

- commit network configuration properties, ?? to 34

## H

- host status information, displaying
  - with CLI, 14

## I

### ILOM properties

- /HOST autorestart, 10
- /HOST autorunonerror, 9
- /HOST macaddress, 8
- /HOST send\_break\_action, 13
- /HOST status, 14
- /HOST/bootmode config, 5
- /HOST/bootmode expires, 7
- /HOST/bootmode script, 6
- /HOST/bootmode state, 5
- /SP customer\_frudata, 16
- /SP system\_identifier, 16, 17
- /SP/console escapechars, 20
- /SP/policy BACKUP\_USER\_DATA, 21
- /SP/policy HOST\_AUTO\_POWER\_ON, 22
- /SP/policy HOST\_LAST\_POWER\_STATE, 21
- /SP/policy HOST\_POWER\_ON\_DELAY, 22
- /SYS keyswitch\_state
  - , 27
- /SP/serial/external commitpending, 34
- to commit, ?? to 34

- IPMI indicators, 31

## N

- network configuration properties, to commit, ?? to 34

## O

OpenBoot version, displaying  
with CLI, 9  
with web interface, 11

## P

Physical Presence switch, 2  
platform, showing, 14  
POST version, displaying  
with web interface, 11  
property  
backup data, 20  
system user, 13

## R

remote control settings  
changing with the CLI, 4  
changing with the web interface, 7

## S

server  
platform information, 14  
`/SP/serial/external` `commitpending`  
property, 34  
switch, Physical Presence, 2

## T

timer, watchdog, 10

## W

watchdog timer, 10





FUJITSU