

INTERFACE BOARDS FOR 24V

FTP-627DSL600 SERIES

DISCONTINUED: FTP-627DSL603 & FTP-627DSL605

■ HIGHLIGHTS

- 24V FTP-607 series I/F board for Kiosk printer unit
- Supports USB (V 1.1) and high speed serial (115kbps) I/F
- Supports 2-D barcodes and graphics
- Windows® CE5.0/2000/XP/Vista, Linux, OPOS drivers
- UL File No. E171434
- RoHS compliant



■ PART NUMBERS


Board Part Numbers	Voltage / Power	Interface	Drawer Kick	Mech Part Number	Near End
FTP-627DSL601	24V	USB/RS-232C (Windows®, Linux, OPOS)	Yes	FTP-627MCL401 FTP-627MCL601 FTP-637MCL401/421 FTP-637MCL601	Yes
FTP-627DSL602	5V, 24V	USB (OPOS)	Yes	FTP-627MCL401	No
<i>FTP-627DSL603*</i>		USB (Windows®, Linux)	No		Yes
<i>FTP-627DSL605*</i>		Serial (Windows®, Linux, OPOS)	Yes		
FTP-637DSL622		USB (OPOS)	Yes	FTP-637MCL401	No
FTP-637DSL623		USB (Windows®, Linux)	No		Yes
FTP-637DSL625		Serial (Windows®, Linux, OPOS)	Yes		
FTP-627DSL612	5V, 24V	USB (OPOS)	Yes	FTP-627MCL601	No
FTP-627DSL613		USB (Windows®, Linux)	No		Yes
FTP-627DSL615		RS-232C (Windows®, Linux, OPOS)	Yes		
FTP-637DSL632		USB (OPOS)	Yes	FTP-637MCL601	No
FTP-637DSL633		USB (Windows®, Linux)	No		Yes
FTP-637DSL635		RS-232-C (Windows®, Linux, OPOS)	Yes		

Item	Specifications
RS-232C	Data send receive speed: 19.2, 9.6, 4.8 Kbps Synchronous method: Full duplex Handshake: DTR/DSR, XON/XOFF control Parity: Non, even, odd
USB V1.1	Transmission route: Full speed 12Mbps Interface class: C-MOS

*: FTP-627DSL603 & FTP-627DSL605: Discontinued

EXTERNAL SPECIFICATIONS

1.1 External View of control circuit board

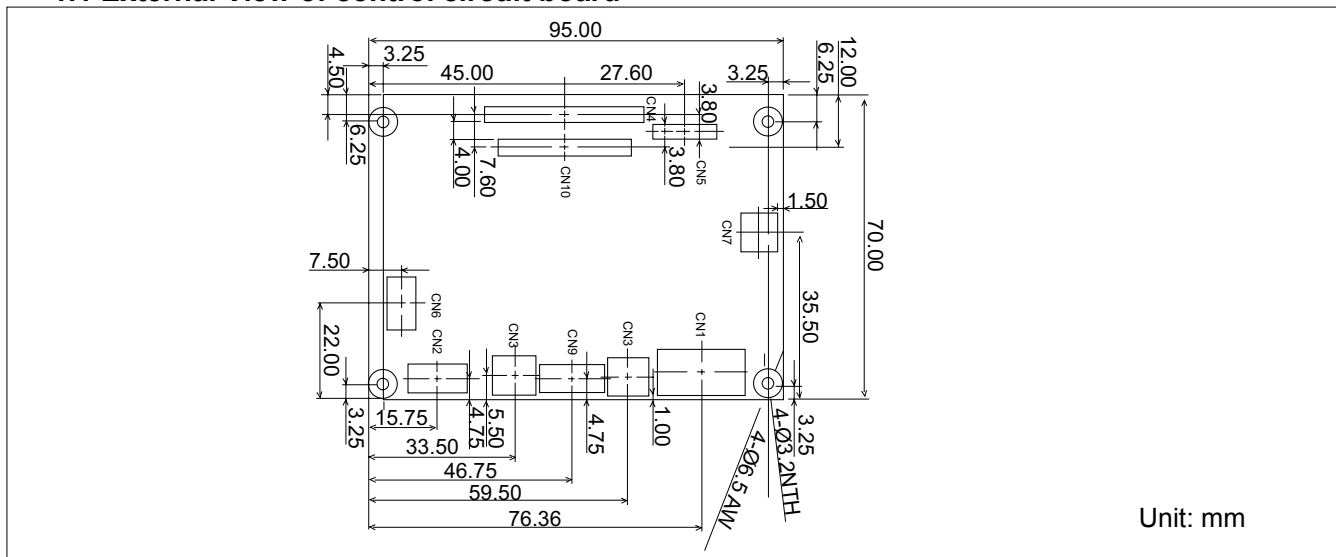

1.2 Control circuit board connector types

No	Name	Function
CN1	+24V power supply connector	Connection for +24V power supply
CN2	RS232C I/F, control signal connector	Connection for RS232C interface and control signals *2
CN3	USB I/F connector	Connection for USB interface
CN4	Head, motor connector	Connection for thermal head and paper feed motor (30 pin connector for 3 inch)*2
CN5	Cutter connector	Connection for paper cutter
CN6	Operation panel connector	Connection for operation panel*1
CN7	Near end detection connector	Connection for near end detection SW*2
CN8	Drawer kick connector	Connection for drawer kick*2
CN9	+5V power supply connector	Connection for +5V power supply*2
CN10	Head, motor connector	Connection for thermal head and paper feed motor (24 pin connector for 2 inch)*2

Notes: *1: Option / *2: Depends on specifications

1. DSW 1 Factory settings: all OFF

Bit No.	Setting contents	OFF	ON	Remarks
1	Interface setting	USB	RS-232C	
2	Head setting	FTP-637MCL	FTP-627MCL	
3	Communications mode	USB com DTR/DSR	USB printer XON/XOFF	Based on setting in section 1
4	Not used	FTP-6x7MCL40x	FTP-6x7MCL601	Reserve

2. DSW 2 FTP-627DSL has this DSW2. Others are zero ohm resistance.

Bit No.	Setting contents	OFF	ON	Remarks
1	Cutter set	Cut	No cut	Don't change
2	Not used	-	-	Reserve

■ INTERFACE

1. Head motor power supply

(1) Connector (CN1)

Connector part number : S6B-XH-SM3-TB (J.S.T.) or equivalent

Mating connector part number : XHP-6 (J.S.T.) or equivalent

(2) Connector pin assignment

No.	Signal	I/O	Contents	No.	Signal	I/O	Contents
1	+24V	I	24V power supply	2	+24V	I	24V power supply
3	+24V	I	24V power supply	4	GND	—	Ground
5	GND	-	Ground	6	GND	—	Ground

(5) Printer Status Signal

	Error	RINF 1	RINF 2	RINF 3
1	Paper out	Low	High	Low
2	Paper near-end	High	High	Low
3	Head-up	High	Low	Low
4	Abnormal head temperature	High	Low	High
5	Abnormal head voltage	Low	High	High
6	Hardware abnormality	High	High	High
7	Mark detection abnormality	Low	Low	Low
8	Normal	Low	Low	High

1. RS-232C standard

(1) Connector (CN2)

Connector part number : S8B-ZR-SM3A-TF (J.S.T.) or equivalent

Mating connector part number : ZHR-8 (J.S.T.) or equivalent

(2) Connector pin assignment

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	RD	I	Receive data	2	TD	O	Transmission data
3	DTR	O	Data terminal ready	4	GND	-	Signal ground
4	DSR	I	Data signal ready	6	SLCTIN	I	Detection function setting signal
7	INPRM	I	Initialization signal	8	ATF	I	Paper feed signal

2. USB standard

(1) Connector (CN3)

Connector part number : UX60-MB-5ST (Hirose)

Matching connector p/n : UX40-MP-SP (Hirose)

(2) Connector pin assignment

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	VBUS	I	Bus Power Supply	2	D-	I/O	Differential data-
3	D+	I/O	Differential data+	4	N.C.	-	No connection
5	GND	-	Signal ground				

Notes:

- Symbol “—” means a negative logic signal.
- “I” or “O” means a signal direction from the interface board side.

■ CONNECTOR PIN ASSIGNMENT OF INTERFACE BOARD

1. Thermal head/motor control circuit side (CN4) (for 3 inch mechanism)*2

Part number : 52610-3071 (Molex) or equivalent

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	PHK		Paper sensor cathode	2	VSEN	O	Paper sensor power supply
3	PHE		Paper sensor output	4	+24V	O	Power for thermal head
5	+24V	O	Power for thermal head	6	+24V	O	Power for thermal head
7	DI	O	Data in	8	STB3	O	Print enable 3
9	STB4	O	Print enable 4	10	+5 VDD	O	Logic power
11	GND	-	Head GND	12	GND	-	Head GND
13	GND	-	Head GND	14	GND	-	Head GND
15	GND	-	Head GND	16	GND	-	Head GND
17	TM		Head temperature detection	18	STB1	O	Print enable 1
19	STB2	O	Print enable 2	20	LAT	O	Print data latch
21	CLK	O	Clock signal	22	+24V	O	Power for thermal head
23	+24V	O	Power for thermal head	24	+24V	O	Power for thermal head
25	SW	O	Platen open/motor temp detect	26	SW		Platen open / motor temperature detect
27	MT-A	O	Motor /A phase excitation signal	28	MT-A	O	Motor A phase excitation signal
29	MT-B	O	Motor /B phase excitation signal	30	MT-B	O	Motor B phase excitation signal

*2 depends on specifications

■ CONNECTOR PIN ASSIGNMENT OF INTERFACE BOARD

2. Connector for Cutter (CN5)

52610-0871 (Molex) or equivalent (P.C.B. side)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	VSEN	O	Cutter home position sensor	2	PHE		Cutter home position sensor output
3	PHK		Cutter home position sensor cathode	4	MT- \bar{A}	O	Motor Phase A excitation
5	MTA	O	Motor Phase A	6	MTB	O	Motor Phase B excitation
7	MTB	O	Motor Phase B	8	N.C.	-	No connections

3. Connector for Operation Panel (CN6)*1

Board side: *S7B-ZR-SM4-TFT (J.S.T) or equivalent (P.C.B. side)

Remote side: ZHR-7 (J.S.T)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	ATF		Paper ...switch detection	2	I N PRM		Reset switch detection
3	GND	-	Ground	4	LED1	O	LED1 output connection
5	LED2	O	LED-2 output connection	6	BZ ON	O	Buzzer control signal
7	+3V	O	+3V power supply				

4. Connector for Paper Near-End Sensor (CN7)*2

Board side: *S2B-PH-SM4A-TF (J.S.T) or equivalent (P.C.B. side)

Remote side: PHR-2 (J.S.T.)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	+3V	O	Power for near end detection switch	2	NES		Paper near end signal

5. Connector for Drawer Kick (CN8)*2

Board side: S6B-ZR-SM4A-TF (J.S.T.)

Remote side: ZHR-6 (J.S.T.)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	Power supply +24V	O	Drawer kick	2	Drawer kick1 control		Drawer kick 1 control
3	Drawer kick2 control		Control Z terminal	4	Drawer kick1 sensor		Drawer kick 2 control
5	Drawer kick 2 sensor		Sensor 2	6	+3V GND	-	Ground terminal for sensor

6. Connector for Logic Power (CN9)*2

Board side: S3B-PH-SM4A-TF (J.S.T.)

Remote side: PHR-3 (J.S.T.)

No	Signal	I/O	Contents	No	Signal	I/O	Contents
1	+5V		Logic Power supply	2	N.C.		No connections
3	GND	-	+5V ground				

*1 Optional

*2 Depends on specifications

7. Thermal head / printer motor connector (for 2-inch mechanism) *2

(1) Connector (CN10)

Connector part number : 52610 - 2471 (Molex)

(2) Connector pin assignment

No.	Signal Name	Data Direction	Explanation
1	PHK		Paper sensor cathode
2	VSEN	O	Paper sensor power
3	PHE		Paper sensor output
4	VH	O	24V power supply
5	DI	O	Head data input
6	$\overline{\text{STB2}}$	O	Head energizing control signal
7	$\overline{\text{STB3}}$	O	
8	VDD	-	Logic power supply
9	GND	-	Power supply ground
10	GND	-	Power supply ground
11	GND	-	Power supply ground
12	TM		Head temperature detection
13	$\overline{\text{STB1}}$	O	Head energizing control signal
14	$\overline{\text{LAT}}$	O	Printing data latch signal
15	CLK	O	Data communication synchronizing clock signal
16	VH	O	24V power supply for thermal head driving
17	VH	O	
18	SW	O	Platen open / motor temperature detection
19	SW		
20	$\overline{\text{MT-A}}$	O	Stepping motor driving signal
21	MT-A	O	
22	$\overline{\text{MT-B}}$	O	
23	MT-B	O	
24	N.C.	-	No connection

*2 Depends on specifications

FTP-627DSL600 Series

■ COMMANDS

Command	Contents
HT	Moves print position to the next tab.
LF	Line feed.
FF	Feeds forms (new page).
ESC BEL	Buzzer ON/OFF.
ESC FF	Data printing in page printing mode
ESC RS	Sets reverse printing.
ESC US	Resets reverse printing.
ESC SP+n	Character spacing setting.
ESC ! + n	Sets print mode.
ESC \$+n1+n2	Absolute position spacing.
ESC % + n	External registration character specification/cancellation.
ESC & +y+c1+c2+x+d1to dn	External registration character definition.
ESC *+m+n1+n2+d1+dN	Sets bit image mode.
ESC -+n	Undeline setting.
ESC 2	Sets 1/6 inch line feed length.
ESC 3+n	Sets the line feed length.
ESC ? + n	External registration character deletion.
ESC @	Printer initialization.
ESC A+n	Sets the space between the line.
ESC C+n	Sets the page length by character line.
ESC D+d1+dN +NUL	Sets the tab position.
ESC E+n	Highlighted printing specification/cancellation.
ESC J+n	Feeds paper in forward direction and prints.
ESC K+n	Reverse paper feed.
ESC L	Page printing mode selection.
ESC Q+n+!+j	Frame overlay function (page mode).
ESC R+n	Selects international character.
ESC S	Line printing mode.
ESC T+n	Print direction setting (only the page mode).
ESC V+n	Right Rotation 90° specification / cancellation.

FTP-627DSL600 Series

Commands continued

Command	Contents
ESC W+X1+X2+1+Y2+dX1+dX2+dX1+dY2	Page printing mode printing area setting.
ESC X+n+m	Setting of time to turn off motor.
ESC Y+01h+ESC+x+a+m+d~	Program download.
ESC \+n1+n2	Relative position setting.
ESC a+n	Positional alignment.
ESC c+1+n	Sets internal processing.
ESC c+5+n	Panel switch enable/disable setting.
ESC d+n	Printing and n-line feeding.
ESC e+n	Prints and reverse feeds n-lines.
ESC i	Full cut.
ESC m	Partial cut.
ESC p+m+t1+t2	Specified pulse generation.
ECS s+n	Sets printing speed.
ECS t+n	Character code table selection.
ESC u+n	Status of peripherals.
ESC v	The status of paper sensor is notified.
ESC {+n	Sets/resets upside down printing.
ESC DEL+n	Flash memory delete
FS !+n	Kanji printing mode collective specification.
FS &	Kanji printing mode specification.
FS*+m+n1+n2+d1 to dn	Bit image printing.
FS -+n	Kanji underline specification/cancellation.
FS .	Kanji printing mode cancellation.
FS 2+c1+c2+d1 to dn	External character definition.
FS 9+n	Sets the detection functions.
FS C+n	Kanji code system selection.
FS E+n	Correction of impressed energy.
FS S+n+n1+n2	Kanji spacing setting.
FS W+n	Kanji double height and width printing specification/cancellation.
FS r+n* ¹	Parameter transmission.
GS ! + n	Character size specification.
GS \$ + n1 + n2	Vertical absolute position specification in page printing mode.

FTP-627DSL600 Series

Commands continued

Command	Contents
GS &+m+x+y1+y2+d1 to d2	Registered bit image defined.
GS '+m+n	Registered bit image printing.
GS *+x+y+d1 to dx*	Registered bit image definition.
GS / +m	Registered bit image printing.
GS <	Line feeds to the next mark.
GS A+m+n	Sets the line feed length after mark detection.
GS B+n	Angle setting of barcode
GS E+n	Sets print quality.
GS H+n	HRI character printing position selection.
GS L+n1+n2	Left margin position setting.
GS M+n	Mark detection correction.
GS W + n1 + n2	Printing area width setting.
GS \ +n1 + n2	Vertical relative position specification in page printing mode (vertical direction of characters).
GS a+n	Automatic notification setting of status.
GS e+n+m	Sets bar code width.
GS f + n	HRI character font selection.
GS h+n	Sets bar code height.
y) GS k+m +d1to dk + NUL x) GS k+m+n+ d1 to dn	Bar code printing,
GS k+m+k1+k2+k3+k4+{[p1][d(1,1)~ [i,j]]~{[p1][d(i,1)]~[d(i,j)]}[00]16	Print of 2D code (QR).
GS k+m+k1+k2+k3+k4+k5+d1~dn	Print of 2D code (Maxi).
GS k+m+k1+k2+k3+k4+k5+k6+d1~dn	Print of 2D code (PDF417).
GS v	Notification of firmware version
GS w+n	Bar code horizontal size setting
GS (+c+m1, n2, m+fn+b+d1~dn	Customize printer

FTP-627DSL600 Series

■ OPTIONS

1. Cables

Name		Part Number	Length (mm)
Operation panel cable	(CN6)	FTP-627Y203	300 (11.8 inches)
Interface Cable (between board and equipment)	For RS232C (CN2)	FTP-628Y302	500 (19.7 inches)
	USB (CN3)	FTP-629Y301	1000 (34.4 inches)
Drawer kick cable	(CN8)	TBA	
Power supply cables	Logic (CN9)	FTP-629Y401	300 (11.8 inches)
	Head/motor (CN1)	FTP-629Y601	300 (11.8 inches)

2. Driver LSI of Control Board

Name	Part Number	Quantity / Tray	Remarks
ROM	FTP-627SR601	90	
MCUandSRAM	MB91101A	-	

3. Paper holder

Name	Part number
Paper Flange	FTP-040HF
Paper Stand	FTP-040HS

Contact

Japan

FUJITSU COMPONENT LIMITED
Shinagawa Seaside Park Tower
12-4, Higashi-shinagawa 4-chome,
Tokyo 140 0002, Japan
Tel: (81-3) 3450-1682
Fax: (81-3) 3474-2385
Email: fcl-contact@cs.jp.fujitsu.com
Web: www.fujitsu.com/jp/group/fcl/en/

Europe

FUJITSU COMPONENTS EUROPE B.V.
Diamantlaan 25
2132 WV Hoofddorp
Netherlands
Tel: (31-23) 5560910
Fax: (31-23) 5560950
Email: info@fceu.fujitsu.com
Web: emea.fujitsu.com/components/

China

FUJITSU ELECTRONIC COMPONENTS
(SHANGHAI) CO., LTD.
Unit 4306, InterContinental Center
100 Yu Tong Road, Shanghai 200070, China
Tel: (86 21) 3253 0998 / Fax: (86 21) 3253 0997
Email: fcal@sg.fujitsu.com
www.fujitsu.com/sg/products/devices/
components/

Korea

FUJITSU COMPONENTS KOREA, LTD.
Alpha Tower #403,
645 Sampyeong-dong,
Bundang-gu, Seongnam-si,
Gyeonggi-do, 13524 Korea
Tel: (82 31) 708-7108
Fax: (82 31) 709-7108
Email: fcal@sg.fujitsu.com
www.fujitsu.com/sg/products/
devices/components/

North and South America

FUJITSU COMPONENTS AMERICA, INC.
2290 North First Street, Suite 212
San Jose, CA 95131 U.S.A.
Tel: (1-408) 745-4900
Fax: (1-408) 745-4970
Email: components@us.fujitsu.com
Web: http://us.fujitsu.com/components/

Asia Pacific

FUJITSU COMPONENTS ASIA, Ltd.
102E Pasir Panjang Road
#01-01 Citilink Warehouse Complex,
Singapore 118529
Tel: (65) 6375-8560 / Fax: (65) 6273-3021
Email: fcal@sg.fujitsu.com
www.fujitsu.com/sg/products/devices/
components/

Hong Kong

FUJITSU COMPONENTS HONG KONG Co., Ltd.
Room 06, 28/F, Greenfield Tower, Concordia
Plaza, No.1 Science Museum Road,
Tsim Sha Tsui East, Kowloon, Hong Kong
Tel: (852) 2881 8495 Fax: (852) 2894 9512
Email: fcal@sg.fujitsu.com
www.fujitsu.com/sg/products/devices/
components/

Copyright

All trademarks or registered trademarks are the property of their respective owners. Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice. Copyright ©2018 Fujitsu Components America, Inc. All rights reserved. Revised March 26, 2018.